

TOOLS NEEDED:


Drill with #2 Phillips Bit, 1/4" and 3/32" Drill Bits 2 - 7/16" Wrenches or Sockets File

TABLE ASSEMBLY

TABLETOP ASSEMBLY

(Refer to Drawing 1)

11126 6' PICNIC TABLE W/ UNATTACHED BENCHES ASSEMBLY INSTRUCTIONS

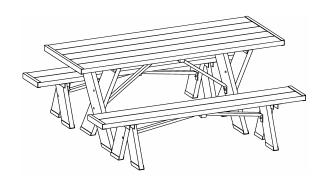

On a flat, non-abrasive surface lay out the five tabletop rails found in Box 2 as shown. Rails with wood inserts should be the center rail and the 2 outer rails; leave a 1/8" gap between rails. Set the four Brackets over pilot holes, making sure brackets are offset as shown. Fasten brackets to tabletop rails using $\frac{3}{4}$ " screws. Apply glue to the inside edges of the $\frac{7}{8}$ x $\frac{1}{2}$ " molded end caps and push onto the ends of tabletop center brace. Lay the brace over pilot holes in center of tabletop rails and fasten using 2" Screws. Apply glue to the inside edges of the $\frac{7}{8}$ x $\frac{1}{2}$ x $\frac{2}{8}$ " end caps and $\frac{9}{8}$ onto the ends of tabletop assembly, make sure edges are flush. **Do not slide end caps on from ends of tabletop.**

LEG ATTACHMENT AND TABLE FINISHING

(Refer to Drawing 2) (Make 2)

Loosely bolt two legs together, using 3 ½" bolts, washers and nylock nuts (make sure pilot holes for brackets are at the same end).

Place one set of legs into the bracket slots; line up pilot holes and fasten legs to tabletop using 2 ¼" bolts, washers and nylock nuts as shown. Repeat for opposite side.

Remove bottom nylock nut on one leg and slide bolt through the hole on diagonal brace, replace nut and tighten snugly. Repeat for opposite side. Overlap the two diagonal braces in the center of table, drill two 3/32" pilot holes through the diagonal braces and into center brace. Fasten with 2" screws to the center tabletop brace.

Apply glue to the inside edges of the $7/8 \times 1 \frac{1}{2} \times 7 \frac{1}{4}$ " angled end caps and <u>push</u> onto the bottoms of each table leg.

BENCH ASSEMBLY

SEAT ASSEMBLY

(Refer to Drawing 3) (Make 2)

Lay out two of the bench rails found in Box 1as shown, leaving a 1/8" gap between rails. Set the two brackets over pilot holes and fasten brackets to bench rails using $\frac{3}{4}$ " screws. Apply glue to the $\frac{7}{8}$ x 1 $\frac{1}{2}$ " molded end caps and push onto ends of center bench brace. Lay the brace over the pilot holes in center of rails and fasten using 2" screws.

LEG ATTACHMENT AND FINISHING

(Refer to Bench Drawing 4)

Set one of the bench legs with pilot holes into bracket as shown, place a second leg on the inside of the bracket and loosely fasten bracket with 4" bolts, washers and nylock nuts. Set the angled bench brace in place on inside of legs, slide two washers in between legs and fasten with 4" bolt, washers and nylock nuts. Repeat for opposite end of bench.


Join the diagonal bench braces, so they are overlapping in center, drill two 3/32" holes through the diagonal braces and into the center brace. Fasten using 2" screws.

Apply glue to the $7/8 \times 1\frac{1}{2} \times 11\frac{1}{8}$ " end caps and <u>push</u> onto both ends of bench.

Tighten all bolts snugly. Apply glue to the eight 7 1/4" angled end caps and <u>push</u> onto the bottom of each leg.

Upon completion of table be sure to file or sand any sharp edges on the end caps to prevent cuts and scrapes.

If you encounter missing or defective parts, please contact manufacturer direct at toll free # below.

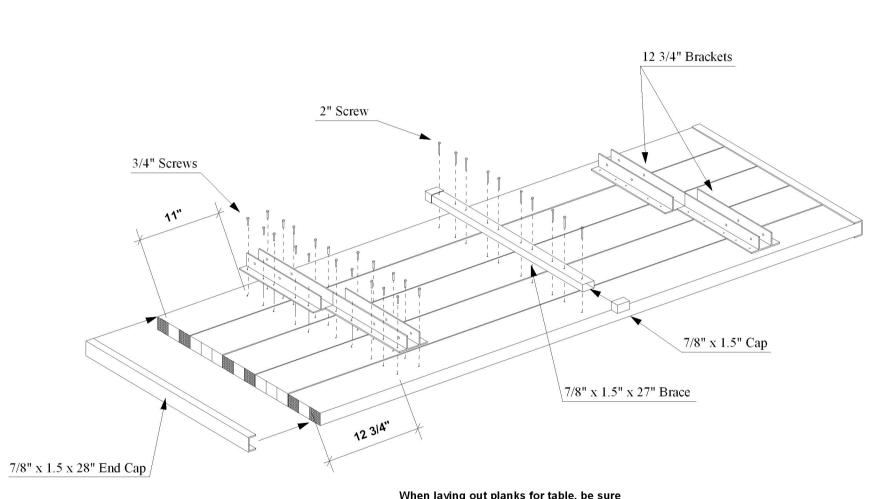

When laying out planks for table, be sure to use 5 planks from Box 1. The planks in Box 1 have holes that are not evenly spaced from each end. Lay out the planks as seen above.

Dura-Trel, Inc.


P.O. Box 122, Sheboygan Falls, WI 53085


6' Table with Benches
Drawing 1

Scale: 1'-0" = 1"

Date: 8-27-99

Drawn By: RJS III

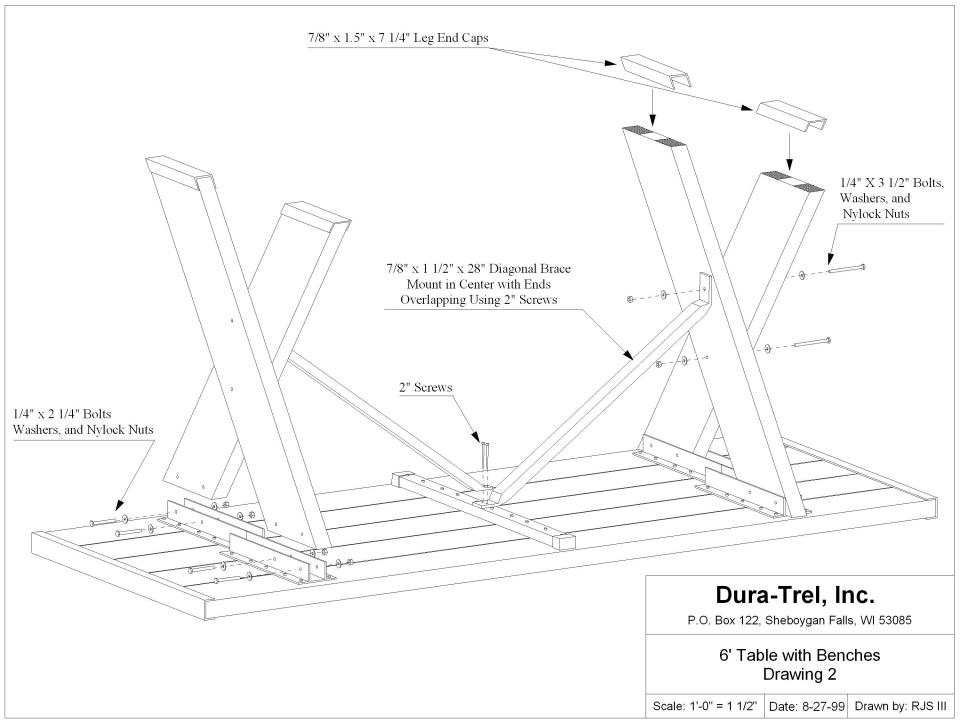

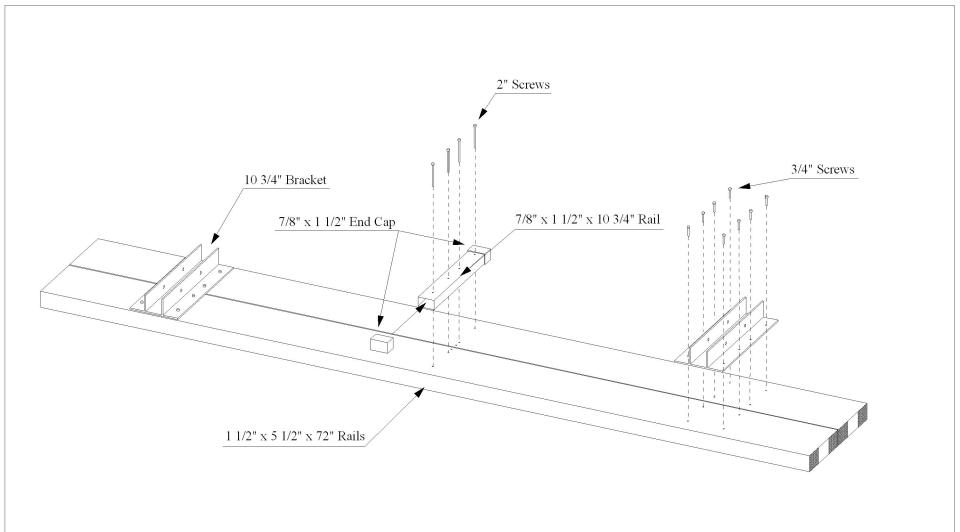

Dura-Trel, Inc.


P.O. Box 122, Sheboygan Falls, WI 53085

6' Table with Benches Drawing 3

Scale: 1'-0" = 1 1/2"

Date: 4-21-02 D

Drawn by: RJS III

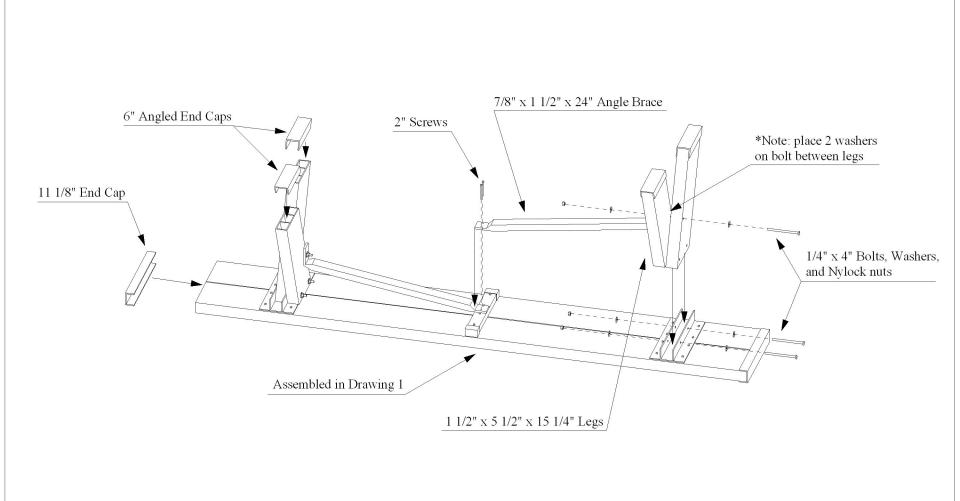

Dura-Trel, Inc.

P.O. Box 122, Sheboygan Falls, WI 53085

6' Table with Benches Drawing 4

Soalo: 1' 0" = 1" | Dato: 4 21 02 | Dr



PACKING LIST

#11126 6' TABLE W/ BENCHES

PARTS CONTAINED:

PART #	PART DESCRIPTION	BOX#
41555-72002W	1½ x 5½ x 72" TABLE RAIL (w/wood inserts)	1
41555-72002	1½ x 5½ x 72" TABLE RAIL	1
41555-72003W	1½ x 5½ x 72" CENTER TABLE RAIL w/ (wood inserts)	1
41555-15750	1½ x 5½ x 15¾" BENCH LEG	1
4TBCK-12750	12¾" TABLE BRACKET	1
4TBCK-10250	10¼" BENCH BRACKET	1
47815-27000	⅓ x 1½ x 27" TABLE CROSS BRACE	1
47815-10250	7/8 x 11/2 x 101/4" BENCH CROSS BRACE	1
57815-26500	7/8 x 11/2 x 261/2" TABLE ANGLE BRACE	1
57815-24750	⁷ / ₈ x 1 ½ x 24 ³ / ₄ " BENCH ANGLE BRACE	1
5ECAP-28000	7/8 x 11/2 x 28" TABLE END CAP	1
5ECAP-11180	⁷ / ₈ x 1 ½ x 11 ½ " BENCH END CAP	1
5ECAP-07250	7/8 x 11/2 x 71/4" TABLE LEG END CAP	1
5ECAP-06000	7/8 x 11/2 x 6" BENCH LEG END CAP	1
7GLUE-4OZCN	4 oz PVC GLUE CAN	1
	Hardware Bag Includes:	1
7CAPS-7815E	7⁄8 x 11∕2" END CAP	
7HDWR-06034	³¼" SCREW	
7HDWR-06200	2" SCREW	
7HDWR-14225	¹/4 x 2¹/4" BOLT	
7HDWR-14350	½ x 3½" BOLT	
7HDWR-14400	¹/₄ x 4" BOLT	
7HDWR-14WSH	1/4" WASHER	
24 7HDWR-14NUT	1/4" NYLOCK NUT	
	6' TABLE W/ BENCHES INSTRUCTIONS	
41555-72004W	W 1½ x 5½ x 72" BENCH RAIL (w/ wood inserts)	2
	,	2
	41555-72002W 41555-72002 41555-72003W 41555-15750 4TBCK-12750 4TBCK-10250 47815-27000 47815-10250 57815-26500 57815-24750 5ECAP-28000 5ECAP-11180 5ECAP-07250 5ECAP-06000 7GLUE-4OZCN 7CAPS-7815E 7HDWR-06034 7HDWR-14225 7HDWR-14350 7HDWR-14400 7HDWR-144WSH	41555-72002W 1½ x 5½ x 72" TABLE RAIL (w/wood inserts) 41555-72002 1½ x 5½ x 72" TABLE RAIL 41555-72003W 1½ x 5½ x 72" CENTER TABLE RAIL w/ (wood inserts) 41555-15750 1½ x 5½ x 15¾" BENCH LEG 4TBCK-12750 12¾" TABLE BRACKET 4TBCK-10250 10¼" BENCH BRACKET 47815-27000 ½ x 1½ x 27" TABLE CROSS BRACE 47815-10250 ½ x 1½ x 10¾" BENCH CROSS BRACE 57815-26500 ½ x 1½ x 26½" TABLE ANGLE BRACE 57815-26500 ½ x 1½ x 24¾" BENCH ANGLE BRACE 57815-24750 ½ x 1½ x 24¾" BENCH ANGLE BRACE 57815-24750 ½ x 1½ x 28" TABLE END CAP 5ECAP-28000 ½ x 1½ x 28" TABLE END CAP 5ECAP-11180 ½ x 1½ x 11½" BENCH END CAP 5ECAP-07250 ½ x 1½ x 7½" TABLE LEG END CAP 5ECAP-06000 ½ x 1½ x 6" BENCH LEG END CAP 7GLUE-4OZCN 4 oz PVC GLUE CAN Hardware Bag Includes: 7CAPS-7815E ½ SCREW 7HDWR-06034 ¼" SCREW 7HDWR-06030 2" SCREW 7HDWR-14225 ¼ x 2½" BOLT 7HDWR-14250 ¼ x 3½" BOLT 7HDWR-14400 ¼ x 4" BOLT 7HDWR-144WSH ¼" WASHER 7HDWR-14WSH ¼" WASHER 7HDWR-14WSH ¼" WASHER 7HDWR-14WUT ¼" NYLOCK NUT 6' TABLE w/ BENCH RAIL (w/ wood inserts)

NOTE: Some parts may be packed inside of others.

If you encounter missing or defective parts, please contact manufacturer direct at toll free # below.

VINYL LAWN & GARDEN PRODUCTS

Please call manufacturer direct with questions concerning missing or defective parts at Toll Free: 877-258-6020.

Dura-Trel, Inc. products are warranted to be free from manufacturing defects resulting in delaminating, peeling, flaking corroding, rusting cracking, crazing, or extreme amounts of fading or bleaching causing the PVC or hardware to change from it's original state for a period of 20 years from the date of purchase.

Normal Weathering is definted as exposure to sunlight and extremes of weather and atmosphere which will cause any colored surface to gradually fade.

CONDITIONS NOT COVERED BY THIS WARRANTY:

- A. Physical abuse, misuse, neglect, or improper storage.
- B. Improper installation or installation not in strict adherence to instructions written by Dura-Trel, Inc.
- C. This warranty does not apply if materials are painted, varnished or coated with any substance.
 - D. Dura-Trel, Inc. is not responsible for damages to product during shipping.
- E. Damage attributable to atmospheric pollutants, hail, lightning, hurricane, tornado, wind borne objects, earthquake, fire, mildew, casualty, act of God, building or ground settlement, or subjection to stress or weight.

CLAIMS AND REMEDIES:

If a Dura-Trel, Inc. product is determined to have a manufacturing defect which is covered by this warranty, Dura-Trel will replace the material containing the defect(labor not included) F.O.B from the point of manufacture.

Dura-Trel, Inc. will not be responsible for any cost incurred in the removal or reinstallation of the product.

Important: Any claims under this warranty must be made within 30 days after the defect was first discovered or reasonably could have been discovered.

All warranty claims must be sent to the follwing address and should describe the defect claim.

Dura-Trel, Inc., P.O. Box 122, Sheboygan Falls, WI 53085

Dura-Trel, Inc. reserves the right to discontinue or change its design, and or color. If the original color or style is not available, Dura-Trel, Inc. shall have the right to substitute a product designated by Dura-Trel, Inc.

Dura-Trel, Inc. shall not be liable for any incidental, special, or consequential damages arising out of the use of these products.

20 yr Warranty