


ITEM NO.: MCDL

LED MEDICINE CABINET

BEVEL DESIGN

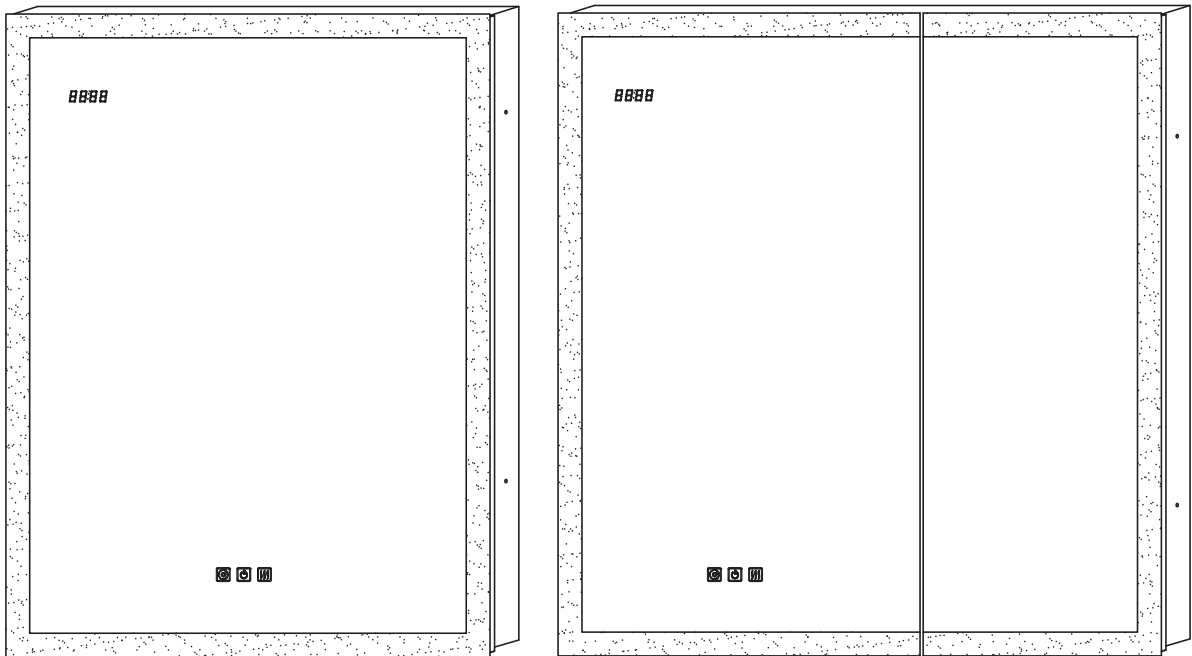

MCDL-US V1-2528

INSTALLATION INSTRUCTION

Please read this instruction carefully before the installation and keep it for the future use and the warranty.

BRAND SUPPORT

Thank you for choosing us !

We are a brand that specializes in producing mirrors professionally.

Your suggestions are important to us. We would greatly appreciate it if you could share your ideas with us so that we can improve our products and better satisfy our customers.



Manufacturer warranty for 2 years from date of purchase.

General Guidelines

1. Please carefully read the following instructions and use the product accordingly.
 2. Keep this manual and pass it on when transferring the product.
 3. This summary may not include every detail of all variations and considered steps.
- If you need further information or assistance, please feel free to contact us at our official email address:



homefixassist@outlook.com

Warnings

1. Children are not allowed to assemble the product. During assembly, please ensure that small parts are kept out of the reach of children, as they may pose a choking hazard if swallowed or inhaled.
2. Keep plastic packing bags out of reach of children to prevent suffocation or other potential dangers.
3. Avoid using sharp objects or corrosive chemicals on the product, as they can cause damage to both the product and the user.

Use Tips

1. Please use in safe voltage range. (100V-120V)
2. Do not strike the mirror with hard or pointed items.
3. WARNING: The installation must be performed by a qualified licensed electrician.



DANGER: Before installation, make sure the main power is cut off.

PRE-ASSEMBLY

1. Important Safety Instructions:

- Please read all instructions carefully before assembling the item.
- Assembly by two or more adults is highly recommended.
- To connect the wires to electrical junction box, a qualified technician or electrician is highly recommended.
- Before installation, component addition or replacement, please make sure the main power has already cut off.
- Ensure the assembly location(solid stone / brick walls) can bear the weight of the complete fitting.
- To prevent injury, the mirror must be installed according to this instruction.


2. Pre-assembly:

- After opening the package, please inspect the accessories according to the packing list in order to ensure the received accessories are complete.
- Ensure the assembled voltage is between 100V and 120V.


If the voltage exceeds 120V, please use a transformer.

- You can connect the wires directly to your junction box or a plug.
- Before assemble the mirror on wall, please try to plug and power the product at first, to make sure that the lighting effects and the functions mentioned in section 3 work.

If so, you can start to install.

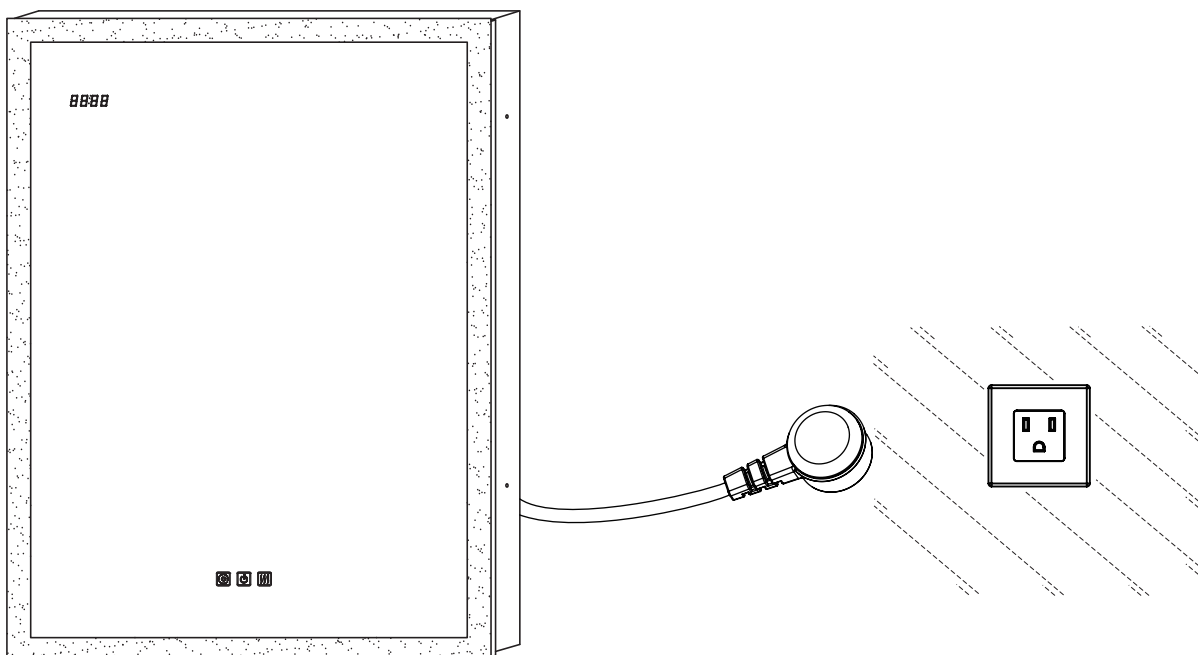

BUTTONS FUNCTION EXPLANATION

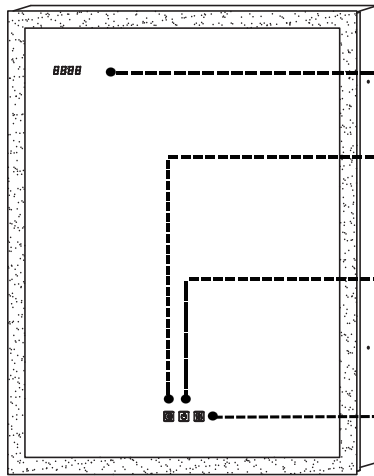

Time Screen



Color temperature touch



Light touch



Anti-fog touch

① Left button: Color temperature adjustment.

There are 3 C.T. to select, make a short press to switch them.

White light(6000K) - Natural light(4000K) - Yellow light(3000K).

Press and hold the touch to make the color temperature stepless adjustment(6000K to 3000K).

Memory function: The color temperature will keep the last choice.

② Middle button: Light Brightness adjustment.

Press and hold the button to make the brightness stepless adjustment(100% to 20%).

Memory function: The light brightness will keep the last choice, hardwire Installation(wall switches)also work.

③ Right button: Anti-fog function.

Note: The anti-fog film will automatically turned off one hour.

Remember to turn off the switch to prevent the energy waste when you don't use it.

The switch 20% backlight can be turned off after long pressing the anti-fog button for 5S,and the switch 20% backlight is turned on after long pressing the defogging button for 5S.

④ Left/Right button: Time function. - / +

In standby state, when the lights are not turned on (off), long press the color temperature button for 5S to wake up the clock adjustment function.

At this time, the hour can be adjusted.

After 5 seconds, the minutes can be adjusted.

The color temperature key is -, and the light Brightness key is +.

In standby mode (i.e., when the cabinet is plugged in but the lights are not illuminated), long-press the Brightness control key for 5-8 seconds to toggle the clock display on or off.



⑤ Induction Led Strip.

The top light bar will automatically on and off as the door open and close.

ATTENTION



Not Offering

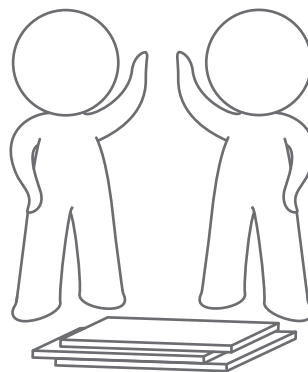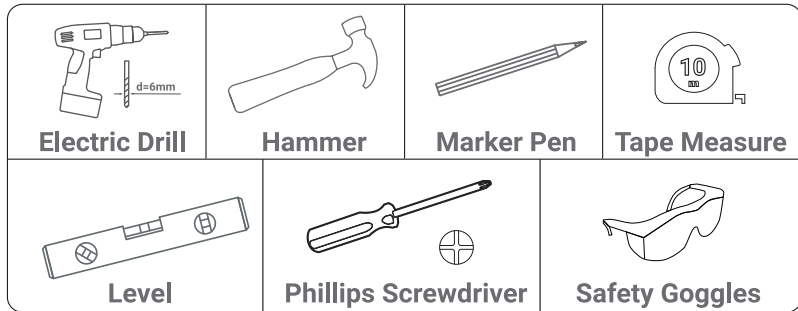

homefixassist@outlook.com



KEEP DRY





NO SUN EXPOSURE



SOFT DRY CLOTH

PARTS LIST-ARCHED

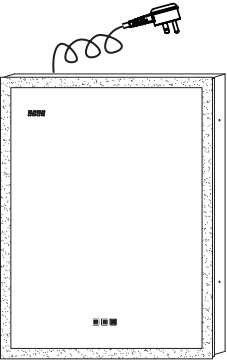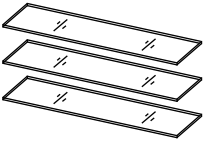 Medicine Cabinet x 1	 Bracket x 1	 Tempered glass shelf x 3	 Shelf Clip x 8
	 Lower Bracket x 2	 1/4" (φ6*40mm) A x (4+2+1)	 5/32" (φ4*40mm) B x (4+2+1)

*Taking MCDL2432 as an example.

*The quantity of A/B screws varies according to the size of the product.

* MCDL1624/2026/2032 needs 5+1 screws,

MCDL3032 needs 7+1 screws,

MCDL3630 needs 8+1 screws,

MCDL4030/4830 needs 10+1 screws,

MCDL5430 needs 12+1 screws, MCDL6030/MCDL7230 needs 14+1 screws.

*We offer additional 1 screws to prevent screw missing in case.

*MCDL1624/2026 has only 2 Tempered glass shelf.

⚠ BEFORE INSTALLATION

- For safety and ease of mounting, installation is recommended using two people.
- Please confirm the installation position and installation height of the hang racket supplied, and use a spirit level to make sure the bracket be leveled. Then mark the hole positions on the wall.

METHOD 1: FOR HANGING WALLS

Method 1.1 : For Solid or Concrete Walls.


(Please refer to step 1 to step 4、 8、 9, P8-P10, P16.)

METHOD 2: FOR RECESSED

(Please refer to step 5 to step 9, P11-P16.)


*Taking MCAL2432 as an example.

*The spacing between each two holes is 4 in (100mm).

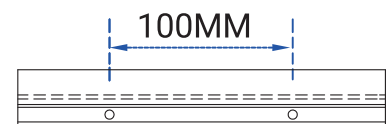




ILLUSTRATIVE GRAPH




"Left Skewed Installation"

MCDL1624
MCDL2026/2026R
MCDL2032/2032R




MCDL2432/2432R

"Left Skewed Installation"

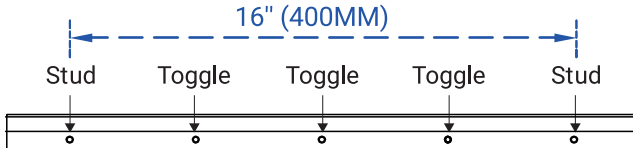


MCDL3032

"Centered Installation"

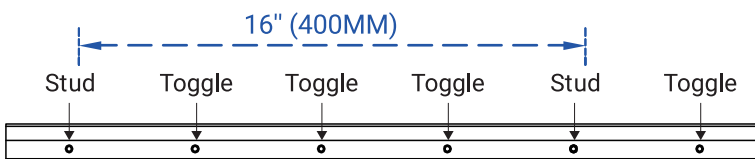


MCDL3630

"Left Skewed Installation"

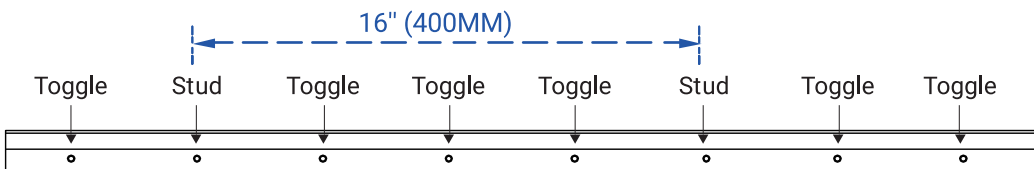


MCDL4030
MCDL4830

"Left Skewed Installation"

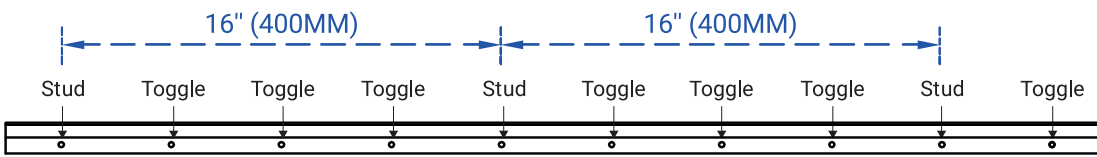

MCDL5430

"Left Skewed Installation"

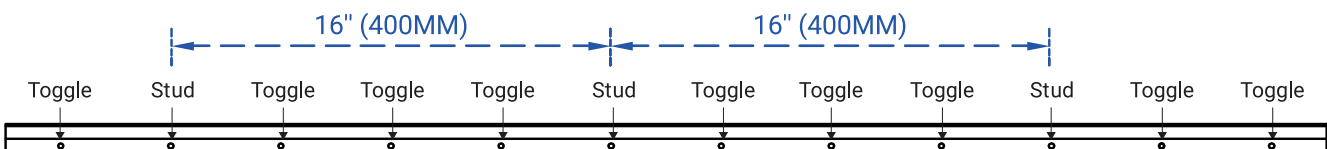

"Left Skewed Installation"

MCDL6030/7230

*The spacing between each two holes is 4 in (100mm).



- If walls are stud or dry Wall, or use toggle anchor please consult a licensed contractor and your local hardware store for assistance.
 - Using the electronic stud finder and mark stud locations using the pencil.
- (Note: It is best to mount the bracket to at least (1) stud, using the illustrative graph shown below for reference. Wood studs are typically located every 16", on center.)

METHOD 1: FOR HANGING WALLS


Method 1.1 : For Solid or Concrete Walls.

1




ATTENTION

- The distance between the bottom of bracket to the top of the mirror is 2 inch (50mm).
- The recommended installation safety distance is 3 inch (at least) from the faucet.

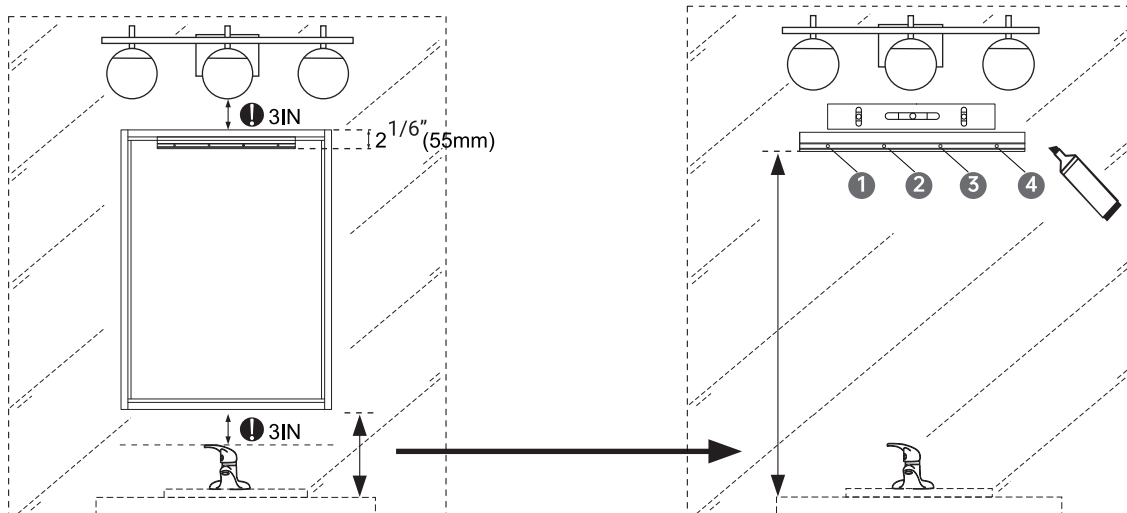

2

Use a 1/4" (6mm) drill to drill holes at the marked points to a depth of 1 3/4" (45mm), then apply the wall anchors with a hammer. Mount the lower bracket to the wall with screws.

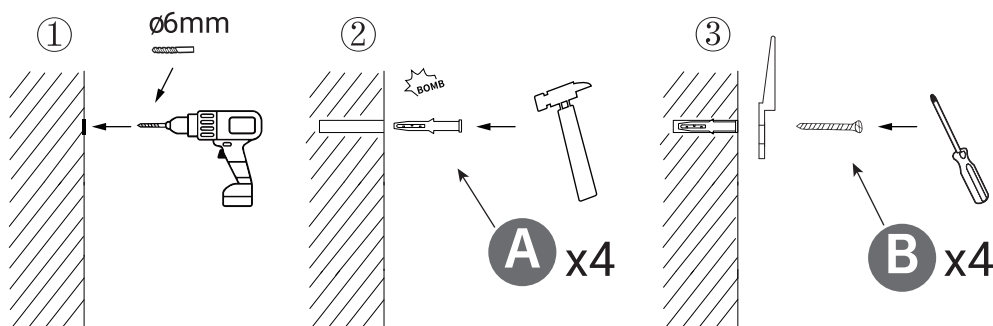

A  4 PCS

B  4 PCS




Note: Please wear goggles and pay attention on your safety.

3

Lift the medicine cabinet and place it securely in the upper bracket. Holding the cabinet in an upright position, secure the lower bracket in the grooves on the bottom of the cabinet.

A  2 PCS

B  2 PCS

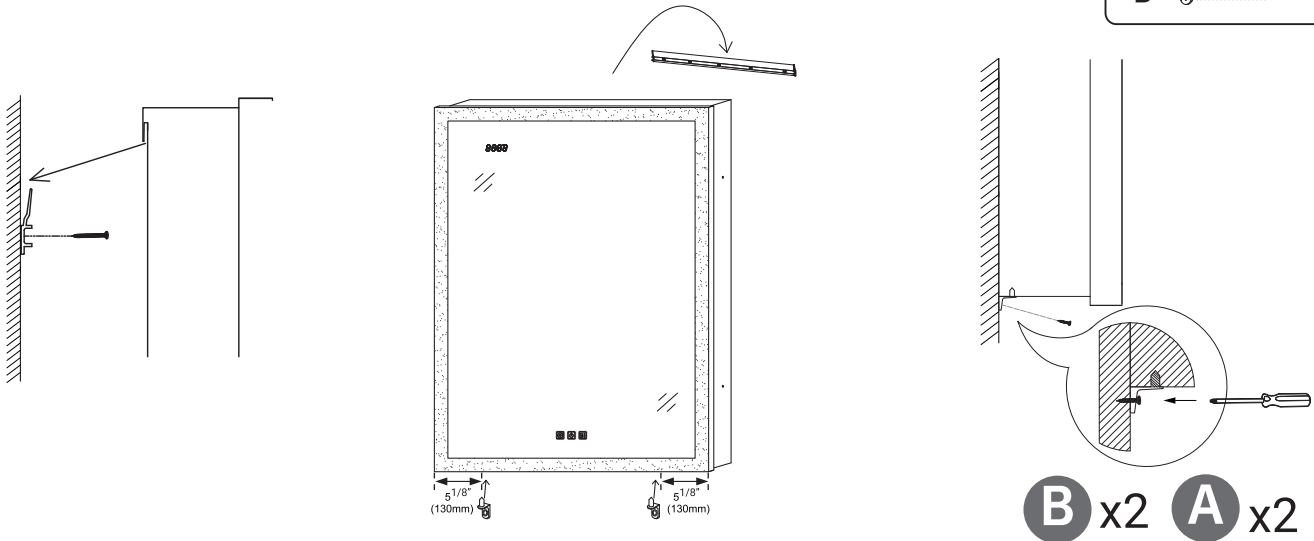


 Lower brackets: 4"(100mm) from cabinet edge, 130mm from door edge.
Note: Gently shake the mirror to ensure that the mirror is securely installed.

Additional Accessories

Install side mirrors

Not offering: Side Mirror Kits

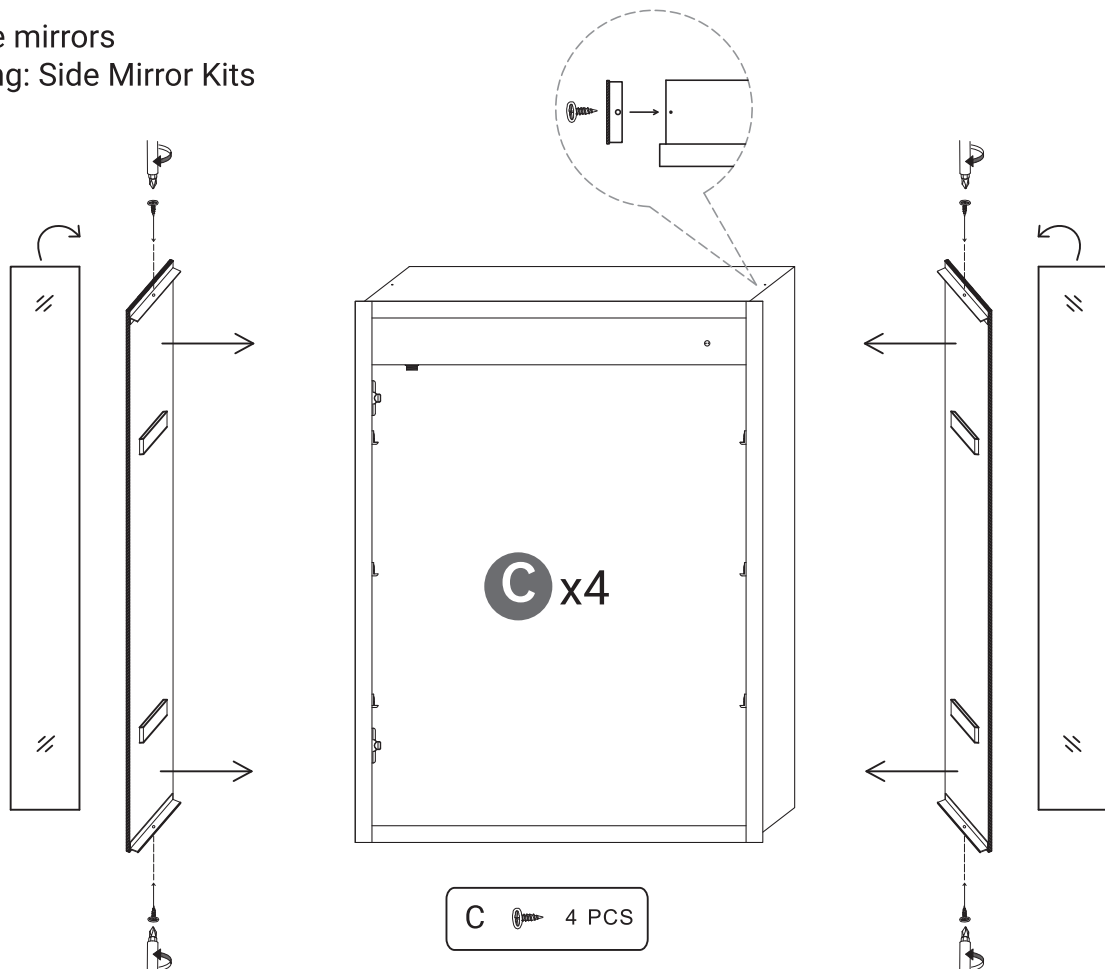

C  4 PCS



 **Note:** a.No need to install side mirrors if recessed.
b.Our side kits can be purchased separately if needed.

4

Plug the mirror. You can use the plug directly or connect the wire to a standard switch lighting circuit.

●Use the plug

After hanging the mirror, plug it directly.

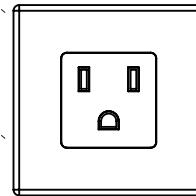
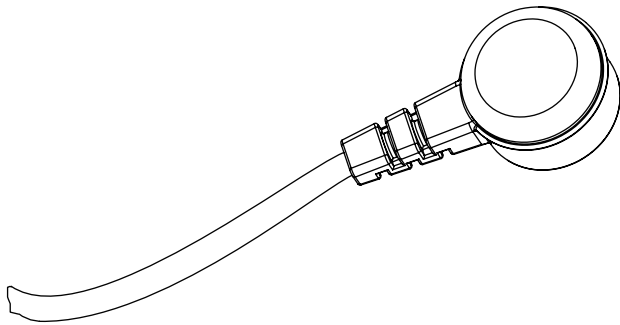


●Hardwire Installation

Cut the plug and connect the mirror's wire to the power by the wire connectors.

⚠ DANGER: Before installation, make sure the main power is cut off.

BLACK WIRE --- POWER SUPPLY L (LIVE)
 WHITE WIRE --- POWER SUPPLY N (NEUTRAL)
 GREEN WIRE --- POWER SUPPLY E (EARTH)



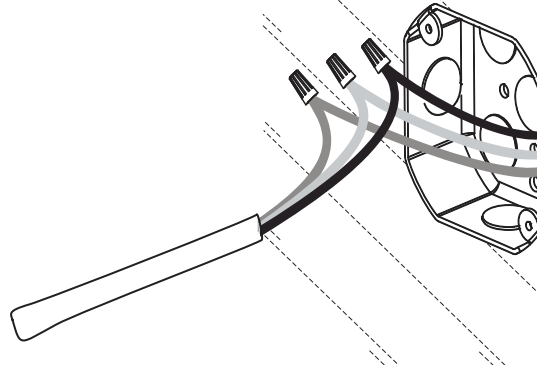
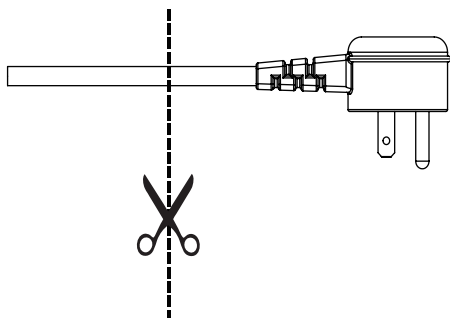


METHOD 2: FOR RECESSED



5

- The wall space is set aside in advance based on the size of the recessed led medicine cabinet


Single door

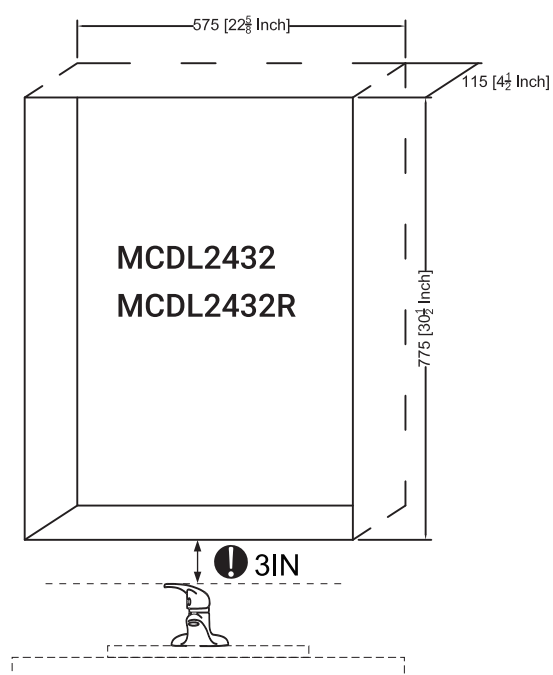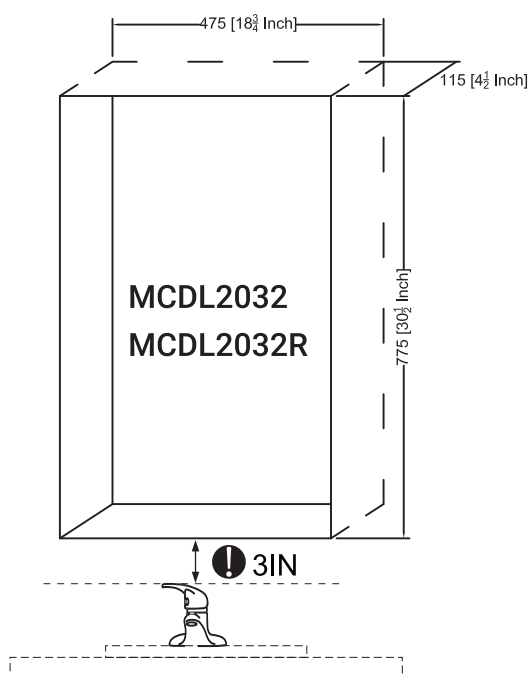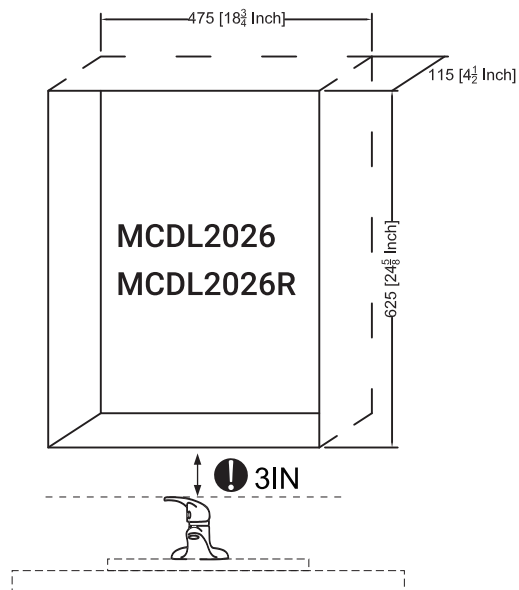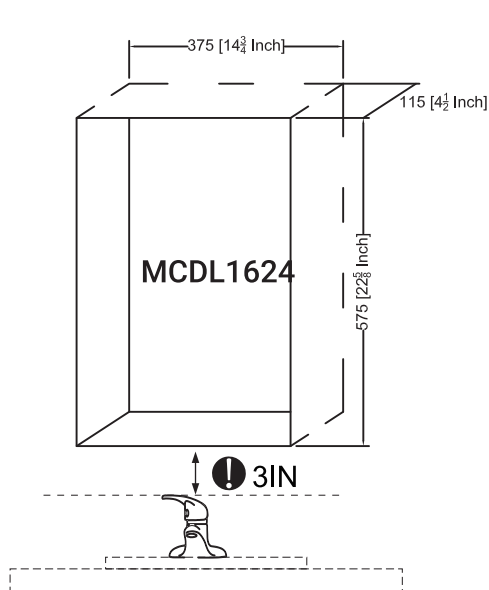


Double door

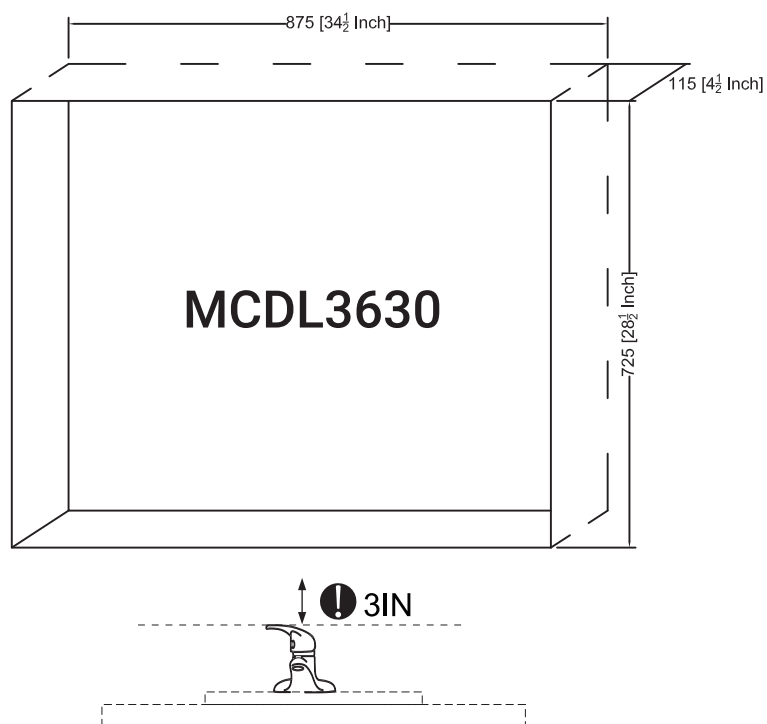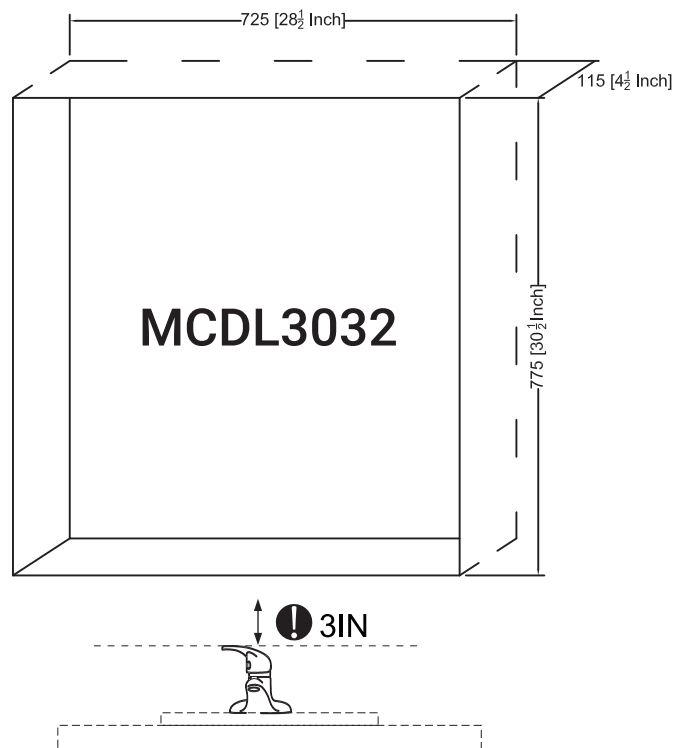



Double door

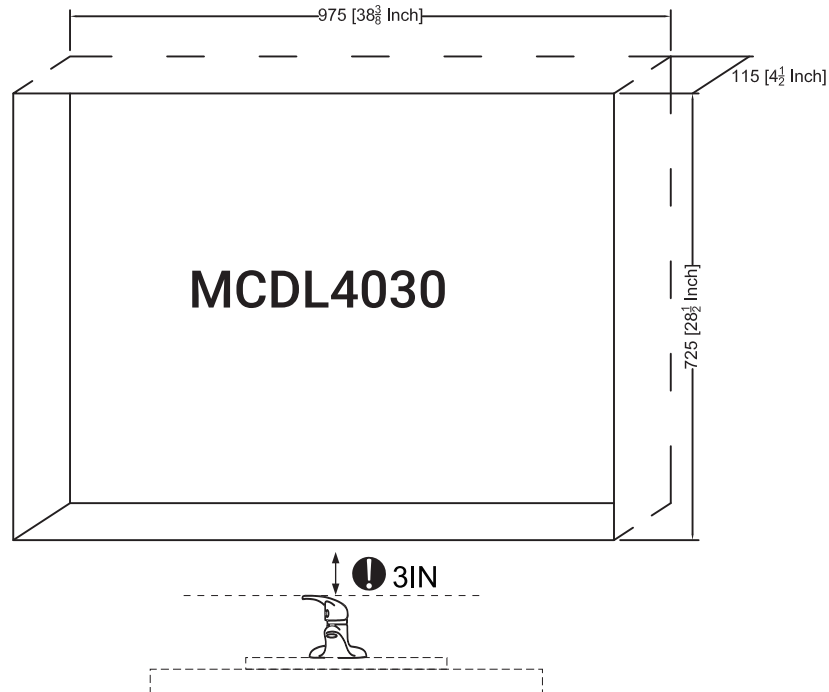

Three door

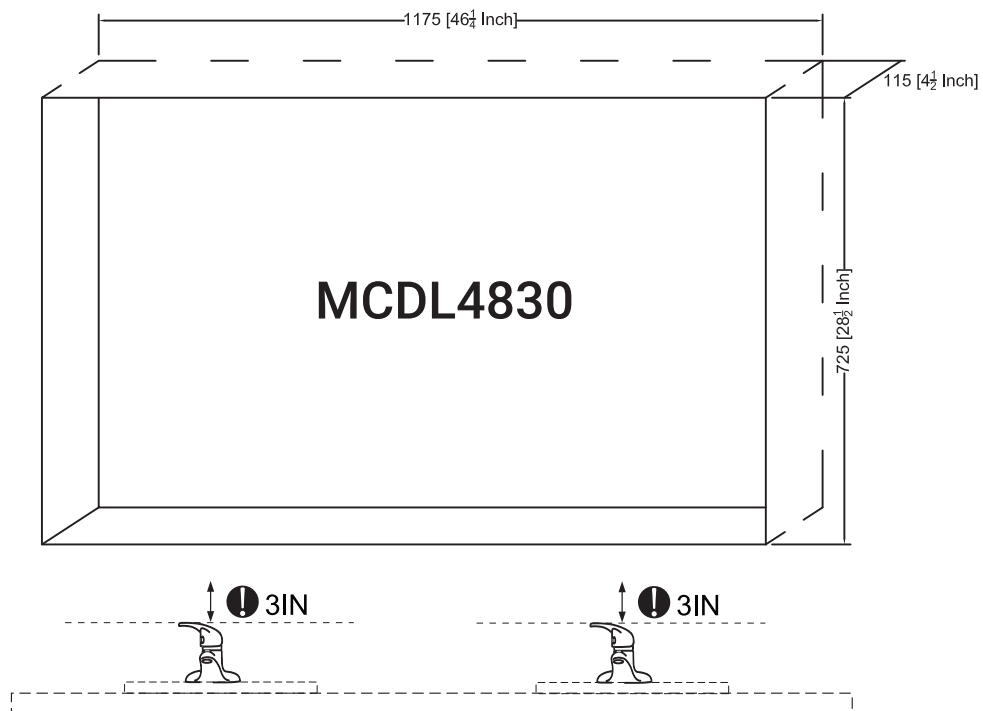

Three door

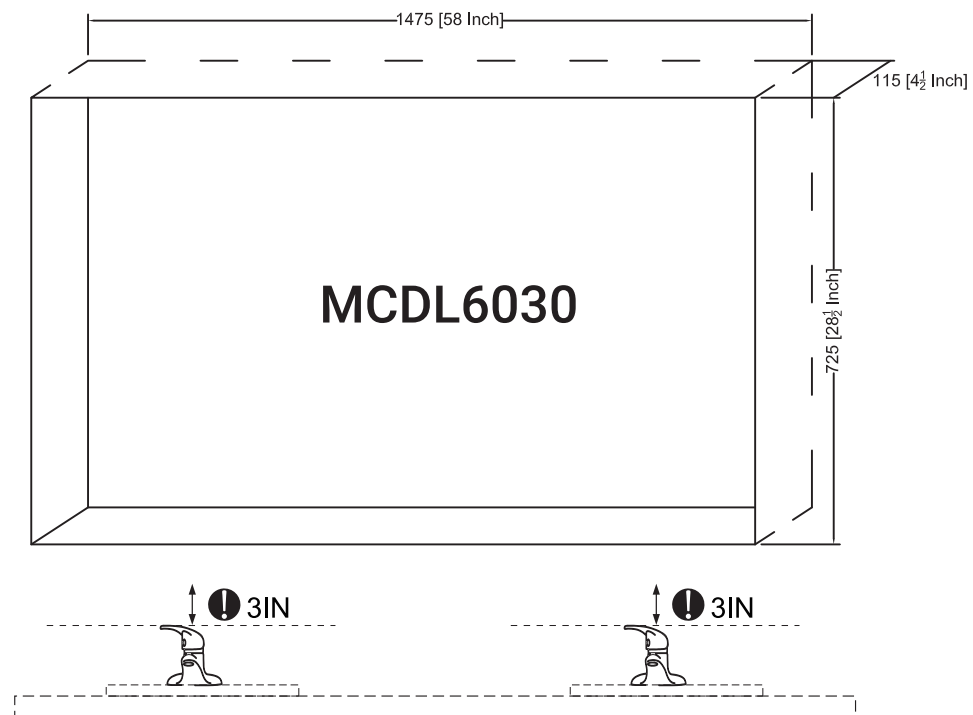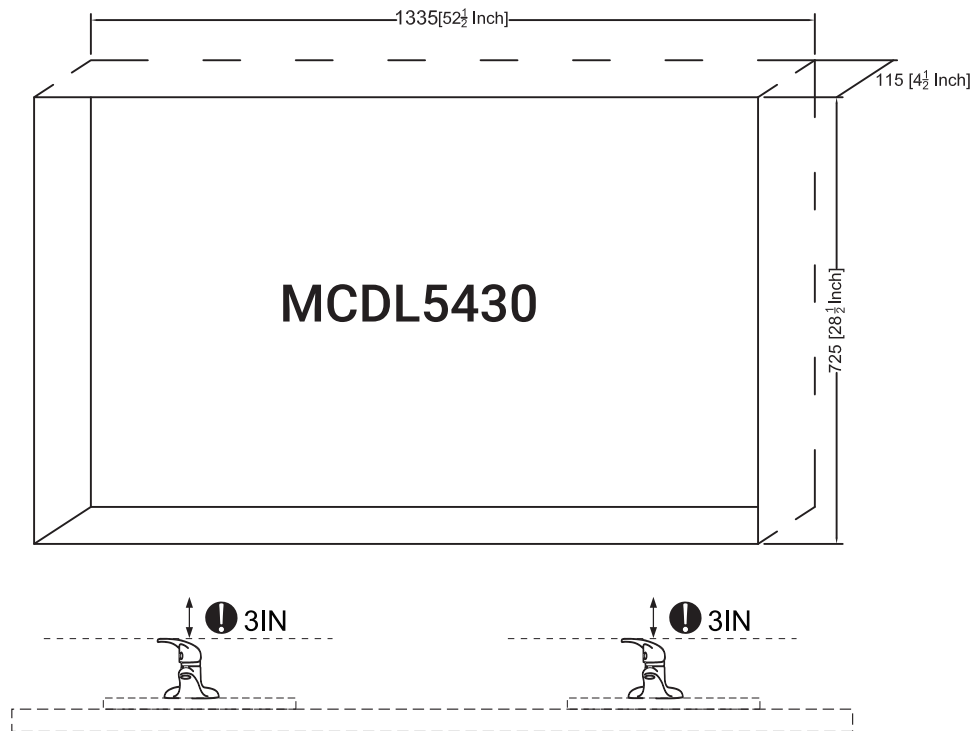

6



Plug the recessed led medicine cabinet.

●Hardwire Installation

Cut the plug and connect the mirror's wire to the power by the wire connectors.


⚠ DANGER: Before installation, make sure the main power is cut off.

BLACK WIRE --- POWER SUPPLY L (LIVE)
WHITE WIRE --- POWER SUPPLY N (NEUTRAL)
GREEN WIRE --- POWER SUPPLY E (EARTH)

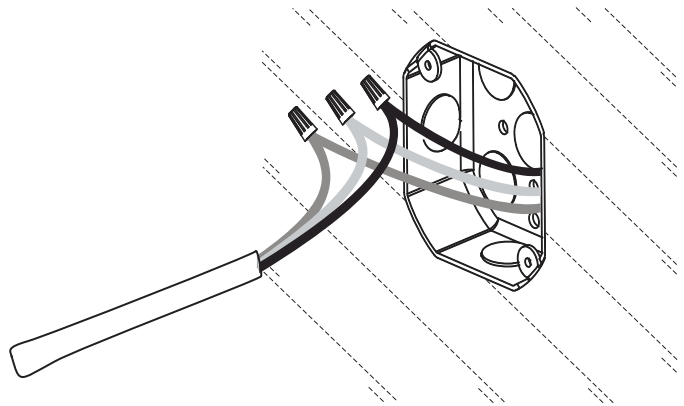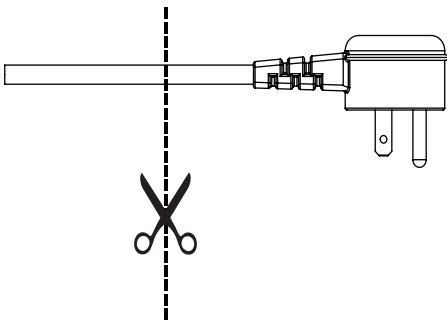

7


Install the recessed led medicine cabinet.

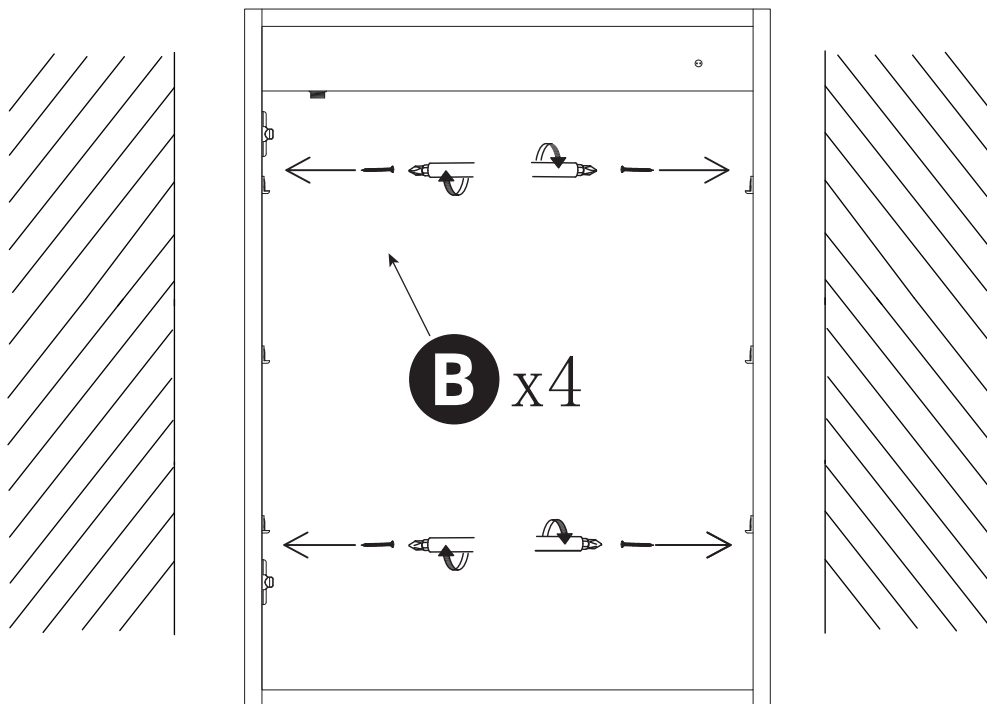

Note: Gently shake the mirror to ensure that the mirror is securely installed.

8


Insert the glass shelves

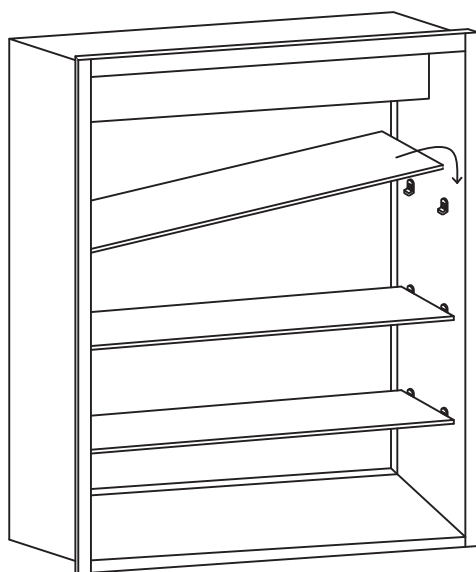

Note: The glass shelves varies according to the height of the product. MCDL1624/2026 has only two glass shelves.

9

The installation has completed!

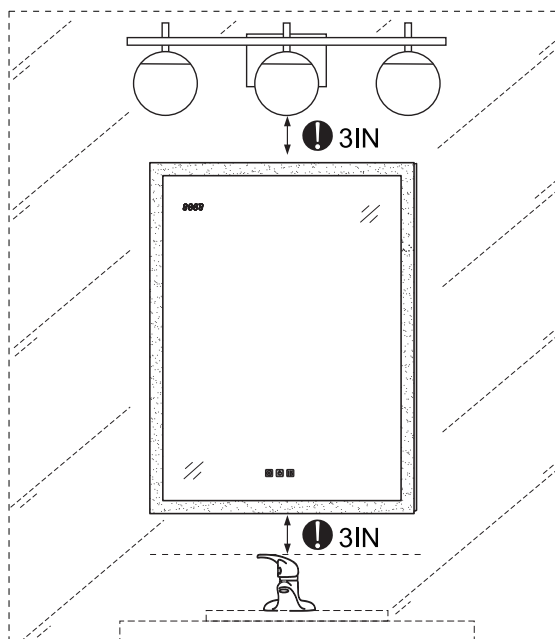


Congratulations!

PRODUCT SPECIFICATION

ITEM NO.:	Dimension	Watts	Lumens
MCDL1624	16 x 24 x 5 in	36W	1,700
MCDL2026	20 x 26 x 5 in	36W	2,000
MCDL2026R	20 x 26 x 5 in	36W	2,000
MCDL2032	20 x 32 x 5 in	48W	2,300
MCDL2032R	20 x 32 x 5 in	48W	2,300
MCDL2432	24 x 32 x 5 in	48W	2,500
MCDL2432R	24 x 32 x 5 in	48W	2,500
MCDL3032	30 x 32 x 5 in	48W	2,800
MCDL3630	36 x 30 x 5 in	48W	3,000
MCDL4030	40 x 30 x 5 in	60W	3,200
MCDL4830	48 x 30 x 5 in	60W	3,600
MCDL5430	54 x 30 x 5 in	60W	3,800
MCDL6030	60 x 30 x 5 in	60W	4,200

PARAMETER	SPECIFICATION
Wiring Method	Hardwired / Plug In
Input Voltage	AC100-120V
Output Voltage	12V DC
Switch	Touch Sensor Switch
Color Temperature	6000K-3000K
CRI	≥ 90 Ra
Nema Rate	3
Anti-fog	Yes\Automatically Powers Off
Life Span	25000 hours
Working Temperature	14~113°F


PRODUCT SPECIFICATION

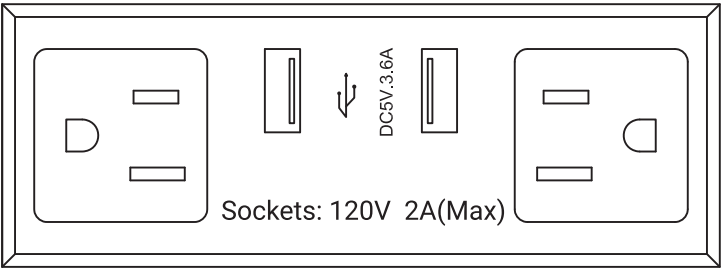

! Note: Sockets: 120Vac, 2A(Max), 240W; Usb: 5Vac, 3.6A(Max), 18W;
Not suitable for high power appliances.

HYDRAULIC HINGE ADJUSTMENT METHOD

- ①: Adjust the door counterclockwise to move to the right,
Turn clockwise to adjust the door to move to the left.
- ②: Twist counterclockwise to loosen it,You can adjust the front and rear
direction of the door.
Tighten clockwise after adjustment.

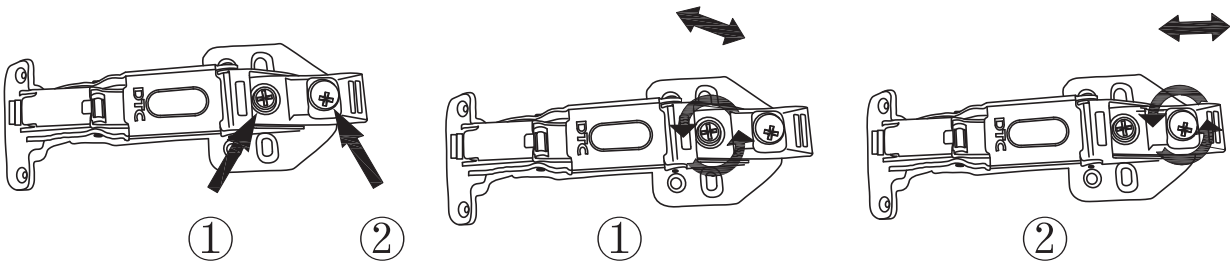

SURFACE-MOUNT SIDE MIRROR KITS

*When performing surface mounting,
The side mirror kits will make the entire room brighter.
*Our side kits can be purchased separately if needed.
Feel free to contact our customer service at any time for any questions.

SK ITEM NO.:	AM ITEM NO.:	Side kits Size	Side Kits Parts List	
MCDLSK0424	MCDL1624	24"H x4"D	Side mirror x 2	 Φ4*8 C x (4+1)
MCDLSK0426	MCDL2026	26"H x4"D		
MCDLSK0432	MCDL2032/2432/3032	32"H x4"D		
MCDLSK0430	MCDL3630/4030/4830	30"H x4"D		
MCDLSK0430	MCDL5430/6030/7230	30"H x4"D		