


RV STEPS

Product ID. Q3DT5



Scan for Support
support@garvee.com

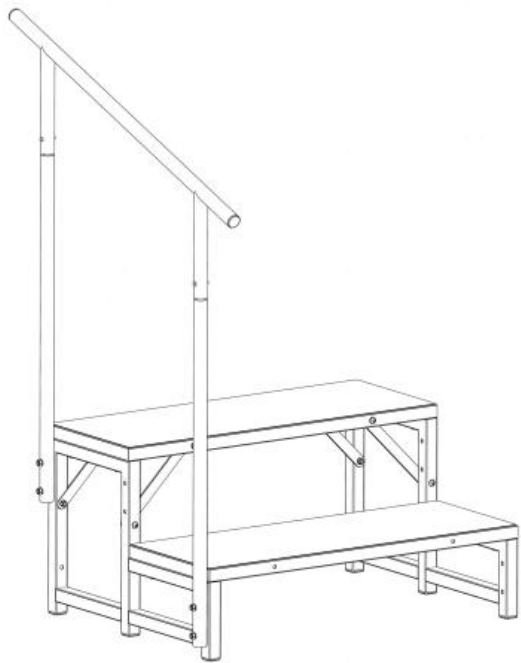

FORWARD

Thank you for purchasing and using our rv steps!

The steps are sturdy, stable and slip-resistant, made of high-quality steel with a rust-proof surface. It can adapt to complex indoor and outdoor environments, providing both security and convenience for indoor and outdoor use.


SAFETY AND PRECAUTIONS

Please read the these installation instructions carefully before using your rv steps. Keep these instructions where users can read them for ready reference.

1. Before use, please make sure that the steps are securely installed to prevent injury and accidents.
2. Before use, please make sure that the steps are securely placed on a flat surface, and not on a sloping or uneven place.
3. When climbing up and down the steps, please grasp the handrail with both hands and walk slowly to prevent falling or bumping the steps in an accident.
4. When using, please do not overload, please do not carry overweight or oversized items up and down the steps to avoid personal injury or accidents.
5. Prohibit jumping or other dangerous behavior on the steps to avoid causing personal injury or accidents.
6. When not in use, clean the dust and debris on the surface of the steps in time and keep the surface of the steps dry.
7. Minors may only use the steps under the guidance of their guardians.
8. If the steps are found to be damaged or malfunctioning during use, please stop using them immediately and have them repaired.

PRODUCT DIAGRAM

Take 2 step as an example:

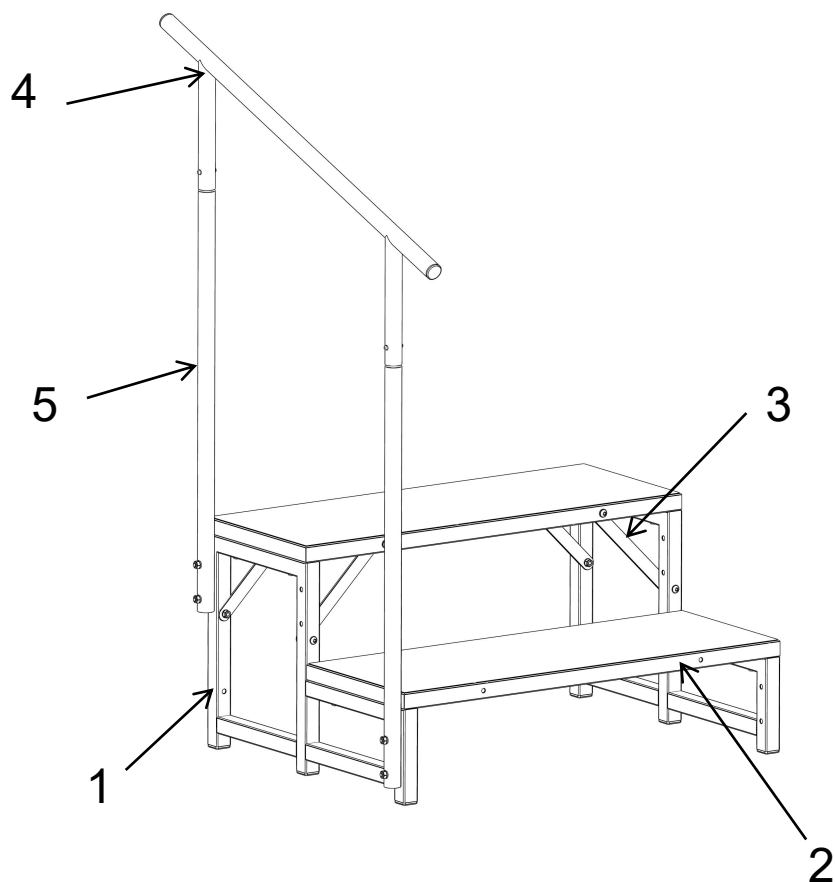

COMPONENTS

	NO.	Name	Picture	Q'ty of 2 step
1	A	Two-layer main frame		2
2	B	Two-layer main frame		2
3	C	Slanted Strip 01		4
4	D	handrail 01		1
5	E	Handrail post		2
6	F	Mushroom head bolt M6x60		4
7	G	Flat washer M6		28
8	H	Nut M6		12
9	I	Mushroom head bolt M6x40		8
10	J	Mushroom head bolt M6x35		8
11	K	Allen Key		1
12	L	Wrench		1


INSTALLATION PREPARATION

1. One or two people to move and assemble the step.
2. Please prepare a carpet or mat to protect your floor you need to spread out all the accessories.
3. Please prepare gloves to avoid being scratched by sharp parts that may occur during installation.
4. Please open all the boxes to check that the accessories are complete and in good condition.
5. If you need to use power tools to install this product, please set the speed to low speed in advance.
6. When installing, please align all the holes and do not tighten all the screws first, otherwise, it may make the installation difficult.


INSTALLATION STEPS

(Take 2 step as an example)


STEP 1: As shown in the figure, use screw (I) to fix the panel (B) onto the rectangular bracket (A).

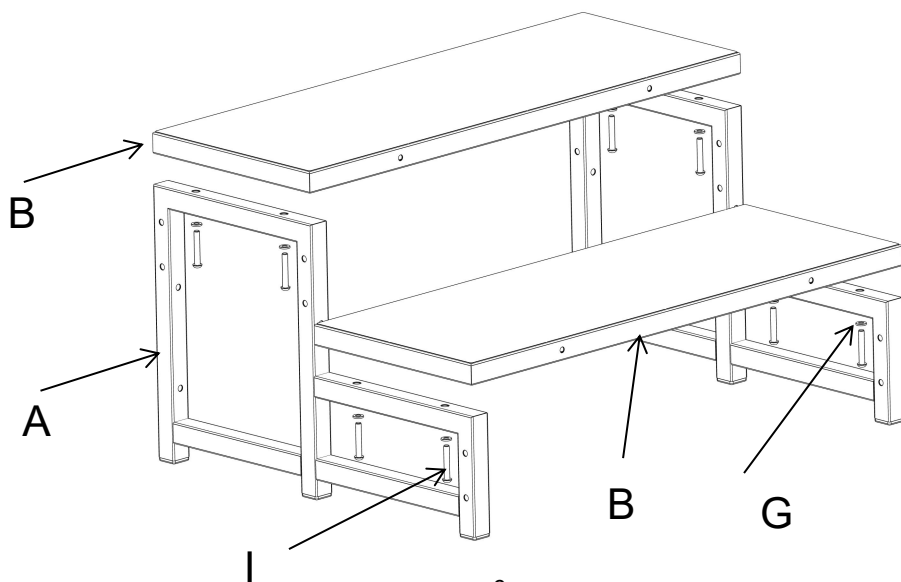


STEP 2: As shown in the figure, first, use screws (J) to fix the inclined sheet metal 01 (C) onto the rectangular bracket (A) and the panel (B).

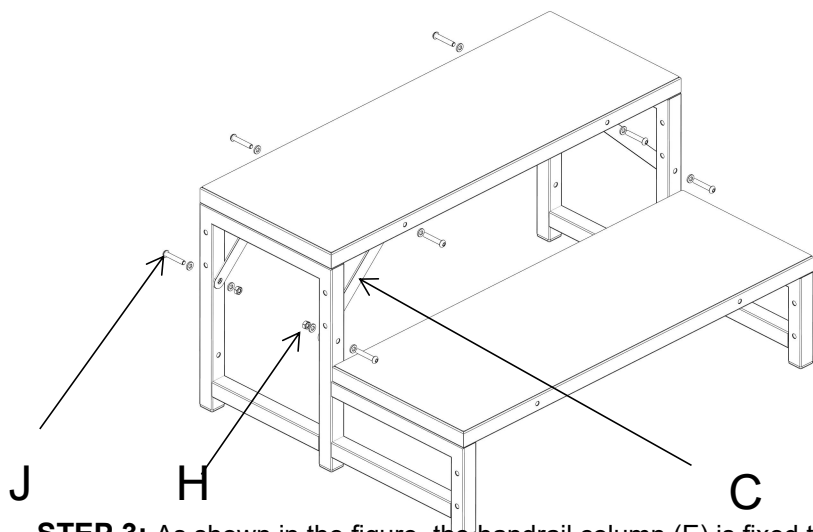

STEP 3: As shown in the figure, the handrail column (E) is fixed to the main frame by long screws (F) and nuts (H).

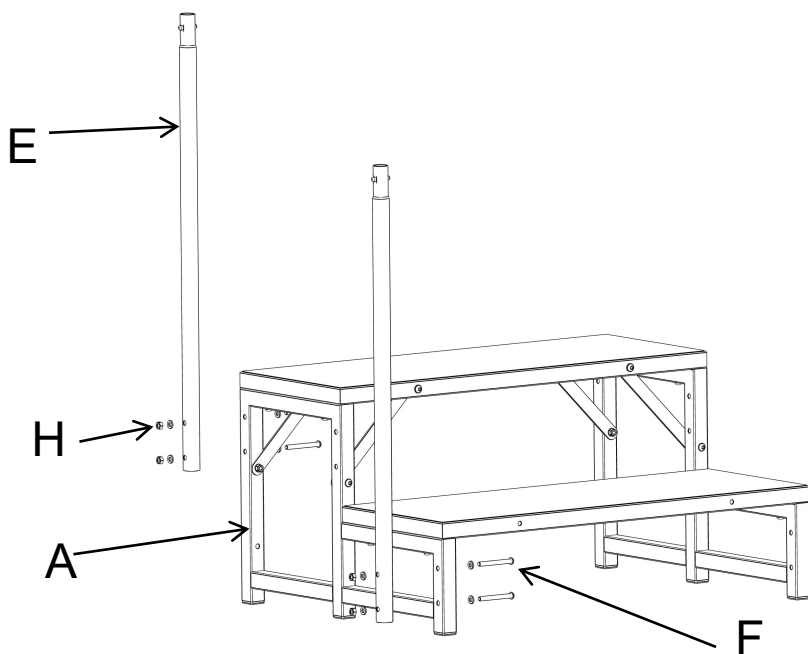

STEP 4: As shown in the figure, the straight armrest (D) is fixed to the straight armrest (E).

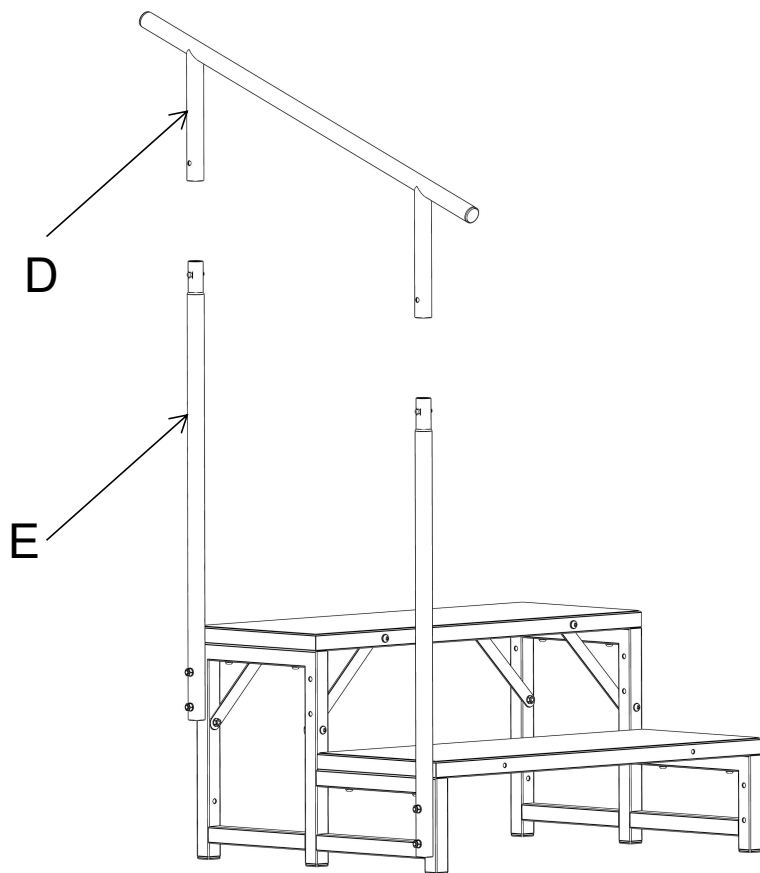

MAINTENANCE

1. Use a soft cloth to wipe the surface of the steps to remove dust and dirt, do not use strong acid or alkaline cleaners to prevent damage to the steps.
2. Periodically inspect the support legs, panels, handrails, screws and other parts of the iron steps for looseness or damage. If any problems are found, immediate repair or replacement should be done.
3. For parts that have lost paint after a few years of use, the exposed surface should be treated with graphite oil or paint to prevent rusting and extend the life of the steps.
4. Avoid hitting the steps with sharp objects to prevent damage. If you find impact marks on the steps, they should be repaired in time.
5. Before storing the steps, clean and dry it, then store it in a dry, ventilated area.
6. In case of emergency, such as breakage or severe rusting, they should be repaired or replaced immediately. In emergency situations, temporary supports should be used to support the steps to avoid injury to persons.

GARVEE
support@garvee.com