Item Number: A04811H4G

WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a **licensed electrician**.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.
 - » Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
 - » Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is **120V**. The maximum wattage is **40W** per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT: Image for finished product:</td

Before starting assembly and installation please prepare the needed tools as below picture


				A Contraction of the second se
Ladder	Philips Head or Flat Blade Screwdriver	Electrical Tape	Pilers	Wire Cutter/Stripper

PARTS TYPE & QTY INCLUDING:

- (C) Mounting plate (1)
- (D) Green ground screw (1)
- (E) Canopy (1)
- (F) Swivel joint (1)
- (G) Knob nut (2)
- (H) Tube
- (I) Stent base (1)
- (J) Flat iron stent (4)
- (K) Screw (4)
- (L) Upper ring (1)
- (M) Wood bead strand
- (N) Stem (1)
- (O) Sockets assembly (1)
- (P) Lower ring (1)

ACCESSORIES & QTY ENCLOSED:

- (A) Plastic wire connector (3)
- (B) Mounting screw (2)

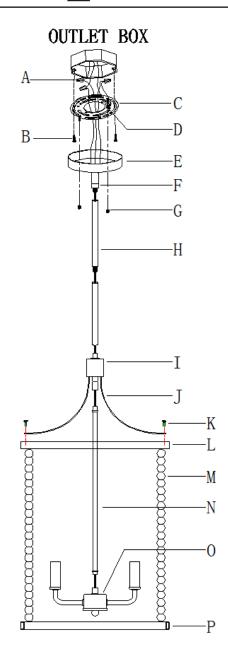


ASSEMBLY & INSTALLATION INSTRUCTIONS:

- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
- 2. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- **»** Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
- » Place the wall switch in the "OFF" position.
- 3 » Unscrew knob nuts (G) from canopy (E) then remove mounting plate (C).

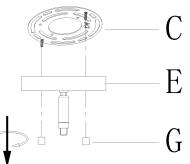

4 » Pass fixture wires through stem (N) and stent base (I). Screw stem (N) onto sockets assembly (O) and stent base (I).

5 » Carefully align upper ring (L) and flat iron stents (J), then secure them with screws (K).

- 6 » 1) According to your desired hanging height to choose and use tubes (H). Then pass the fixture wires through the chosen tubes (H), swivel joint (F) and canopy (E).
 - 2) Be sure that all the threaded pipes are tightened, then screw the chosen tubes (H) onto swivel joint (F) and the top of stent base (I). Hand tighten till snug.

7 » Attach mounting plate (C) to the outlet box with mounting screws (B).


Connect wires as below wires connection shown. PLEASE NOTE THAT GROUND WIRE IS BARE

COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.

8 » Make wire connections

- I J ¢ N 0 J K Ŀ F Η \$ T
- OUTLET BOX

homecustomercare@outlook.com

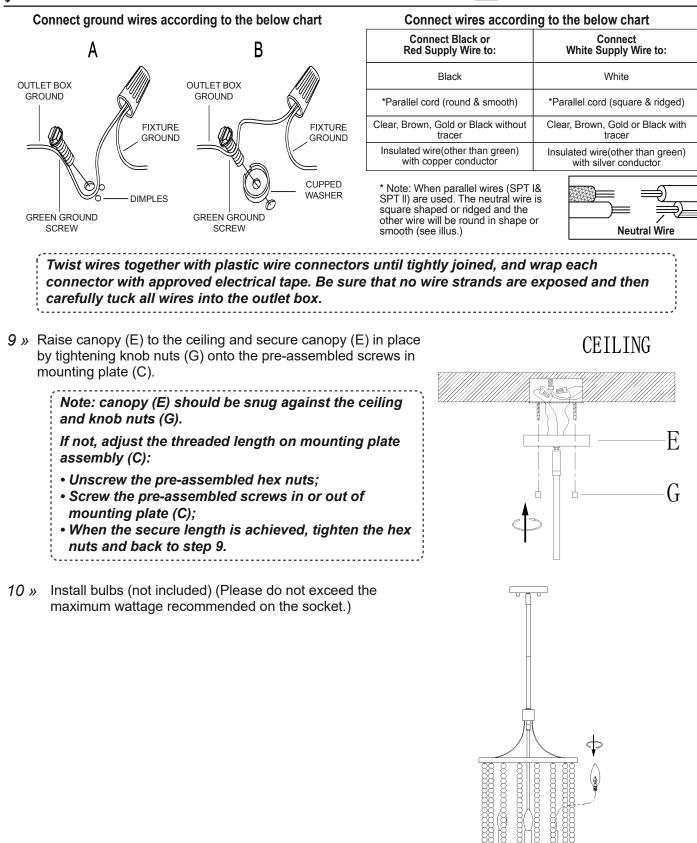

11. Check everything is already installed properly, then you could turn on the light. Enjoy! ORDERING PARTS CLEANING

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts. To clean, wipe the fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.