




Stainless Steel Grab Bar

Installation Instructions

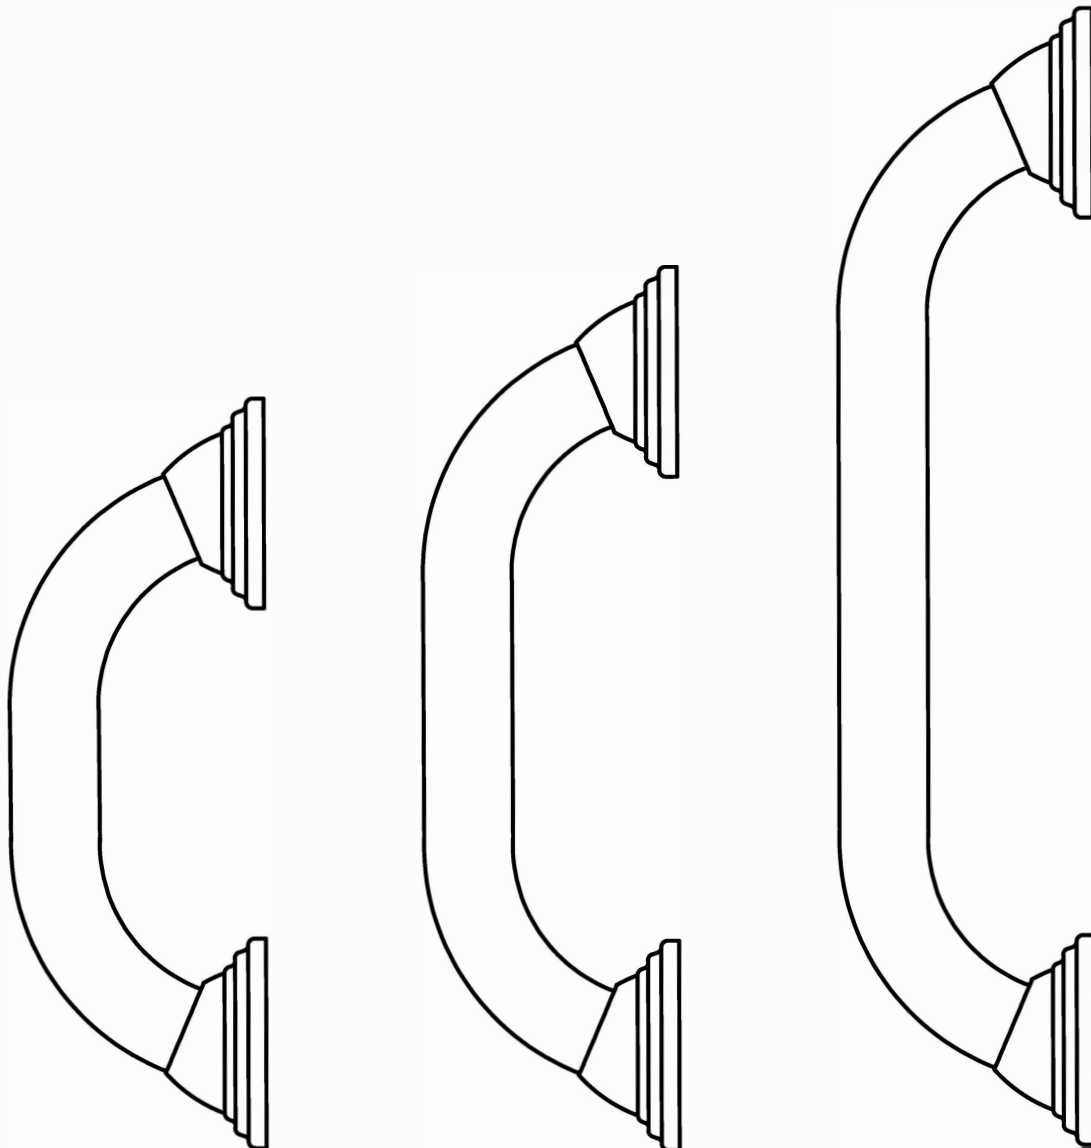

12"

16"

24"

Thank you for purchasing Utopia Alley Products. Please contact us if you have difficulty with assembly or need replacement parts. Utopia Alley customer service is here to assist you.

Email: CustomerService@utopiaalley.com

Please attach your name and Order ID so that we can assist you better .

IMPORTANT

- It is advisable to keep these instructions in a safe place for future reference.
- Grab bars are only as strong as the wall to which they are fixed and the mounting hardware which are used.
- For different wall types you will need to ensure that you are using the correct type of mounting hardware for that material. Using the incorrect mounting hardware may inhibit the holding power of the grab bar.
- structures may be required to provide adequate wall strength.
- NOTE: If the wall is made of lightweight thermal blocks, aerated hollow brickwork or prefabricated partitions even the most appropriate fixings may not be able to withstand the loads which can be suddenly applied to grab rails.

GENERAL SAFETY INSTRUCTIONS

- It is recommended that two people fit this product to ensure that it is fitted safely.
- Always take care when using power tools, particularly in the bathroom.
- Always check for hidden cables and pipework before drilling and take extreme care if there is any water in the working area.
- It is advisable to use a residual current circuit breaker (RCCB).
- Always wear suitable eye protection when working with power tools.
- If the product is to be fitted on a ceramic tiled wall, a ceramic drill bit should be used.
- Always ensure that the drill hole passes through the central tiled area rather than through the grouted area. To prevent damage to the tile, mask the area around the hole with tape before drilling.
- Do not strike the product with hard or sharp objects.

TOOLS REQUIRED NOT SUPPLIED

Drill and Masonry Bit		Pencil	
Screwdriver		Tape Measure	
Spirit Level			

PARTS INCLUDED


GRAB BAR



6 SCREWS



6 WASHERS



ASSEMBLY INSTRUCTIONS

1. Separate the wall bracket covers from the wall brackets by twisting the covers in an anticlockwise direction.
2. Place the grab bar in position on the wall and using the hole centres of each wall bracket as a template, mark the screw fixing positions on the wall surface. If fitting the product in a vertical or horizontal orientation it is important to ensure the grab bar is level. (See Fig.2)
3. Drill the holes in the marked positions using a masonry drill. If the product is to be fitted onto a ceramic tiled wall, a ceramic drill bit should be used.
4. Insert wall plugs (if applicable) flush to the surface of the wall. If fitting to a tiled surface, the wall plugs should be inserted below the surface of the tile to avoid cracking.

5. Insert the screws through the holes of the wall brackets and screw to the wall. (See Fig.2) For textured walls that have deep pits, the anchor plate may recess too much to adequately grab the end cap. On the slim chance you encounter this problem, put one each of the attached washers behind the anchor plate before inserting the screws. Extra washers are included but probably not necessary.
6. Slide the bracket covers back onto the wall brackets and twist in a clockwise direction to lock the covers in position. Not tightening the cap cover too much.(See Fig.1)

This product must only be fitted to solid brick, concrete block walls or similarly strong materials offering appropriate support for the maximum safe working load.

Maximum safe working load for the grab rail is 100kg


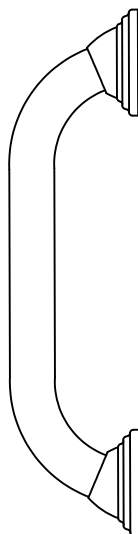


Fig.1



Fig.2

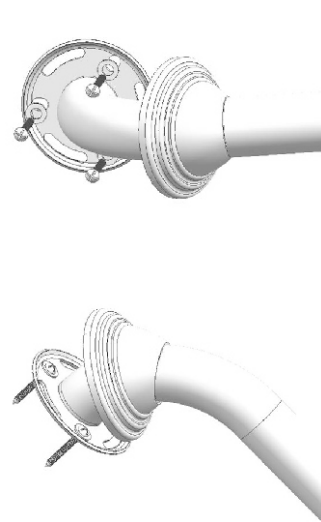

CARE & MAINTENANCE

- To retain the best quality finish, clean product regularly with a soft damp cloth.
- Do not use abrasive or chemical cleaners as these will damage the product.
- Warning: Be careful when installing the bracket to the wall, it might hurt or cut.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

We have taken great care to ensure that this product reaches you in perfect condition. However should any parts be damaged or missing please contact your point of purchase. This does not affect your statutory rights. In addition if you require replacement parts your point of purchase will be happy to assist.