

# JACKEL™

Trusted Since 1972


## Installation Guide

### Slotted Sump Basin Cover

Model: SF60913



#### Package Contents

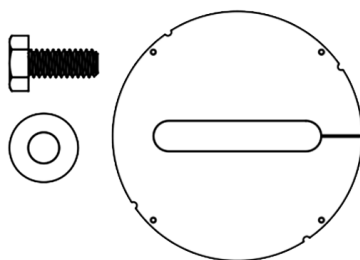

#### Tools Required




Safety Goggles



7/16" Wrench

#### Installation:

1. Unplug your pump.
2. Remove pipe and cord seals from cover.
3. Apply seal tape to basin rim inside the bolt circle.
4. Pull your pump's power cord through the cover's cord hole.
5. Slide the cover over the pump's discharge pipe through the discharge opening.
6. Bolt the cover down with the discharge pipe positioned in the center of the discharge opening. Do not overtighten. Slide the discharge pipe seal over the discharge pipe and snap in place in the cover.
7. Slide the vent pipe seal up over your vent pipe. Position the vent pipe in the center of the vent opening extending into the basin at least one inch. The vent pipe will need to be self-supporting in this position as the seal will not support the vent pipe. Snap the vent seal into the cover.
8. Pull the pump's power cord through the cord opening, eliminating slack inside the basin. Insert the cord through the cord hole in the cord seal and press the cord seal into the cover.
9. Install your check valve and the rest of your discharge plumbing to complete your installation.

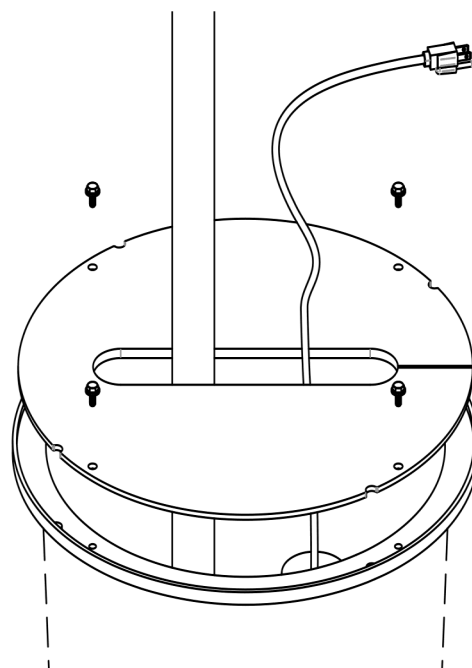

#### Safety Information:



**WARNING:** Failure to install basin cover as shown will create a safety risk. Install cover as shown.

**Warranty:** For more information please visit our website: [www.jackelinc.com/warranty](http://www.jackelinc.com/warranty)

[www.jackel.com](http://www.jackel.com)

574-256-5635