ancona


Arezzo



Deck Lavatory Bathroom Faucet

STANDARDS


- ASME A112.18.1/CSA B125.1
- ASME A112.18.2/CSA B125.2
- LISTED IAPMO/cUPC
- 1.2 gpm/4.5 L/min

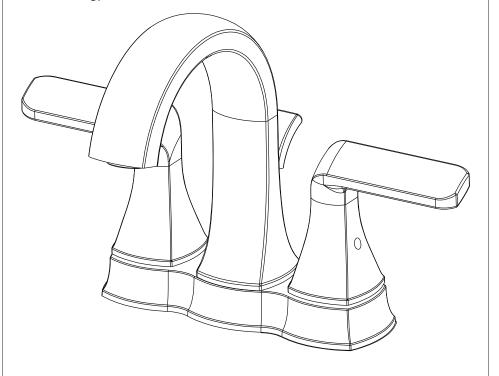

Helpful Information

Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing. Check with your local hardware store on the requirements of your installation situation.

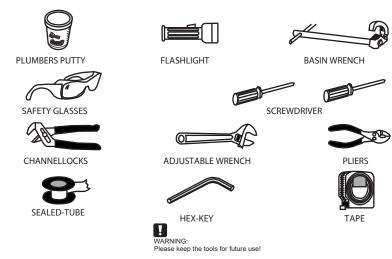

Attention:

For easy installation, you will need:

- To read all the installation instructions completely before beginning.
- To read all the warning, attention and maintenance information.
- To purchase the proper supply lines.

Important



Tighten connection with two wrench to prevent damage to tube body. Be careful not to bend the stem as this will void the product warranty.


Connect to water supply lines with either:
(A) 3/8" O.D.copper tubing (ball nose risers with the coupling nuts or;
(B) IPS faucet connectors (1/2").











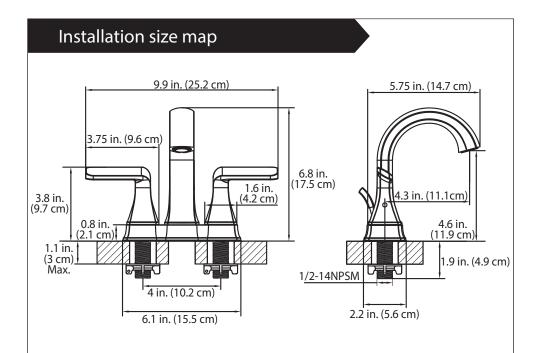


Tools might be applied to the following places:

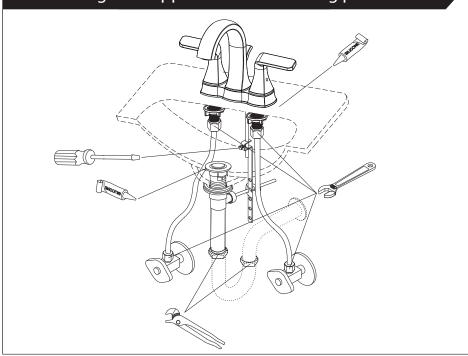

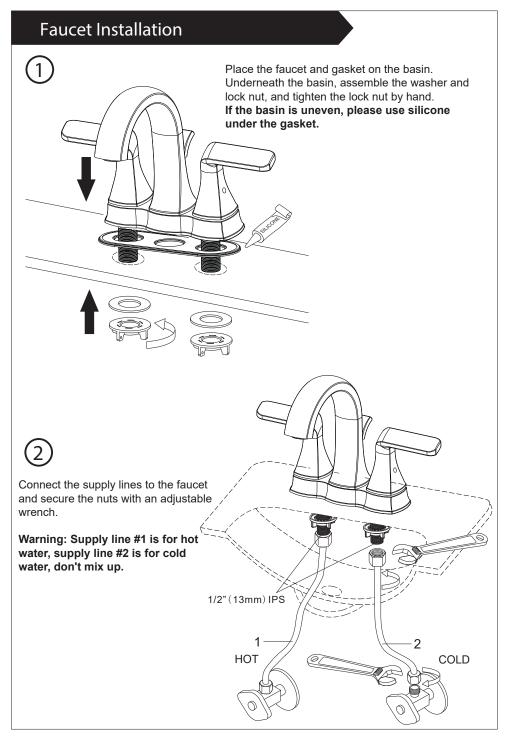





You can use 1/2" IPS faucet connections **A**, or use the coupling nuts with 3/8" O.D. ball-nose risers **B**.

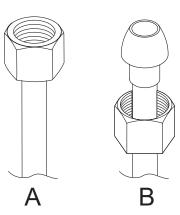

Checking and Testing

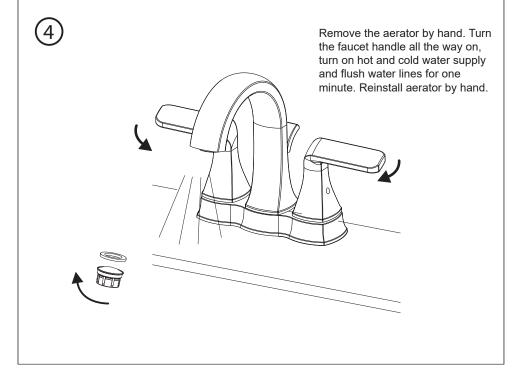

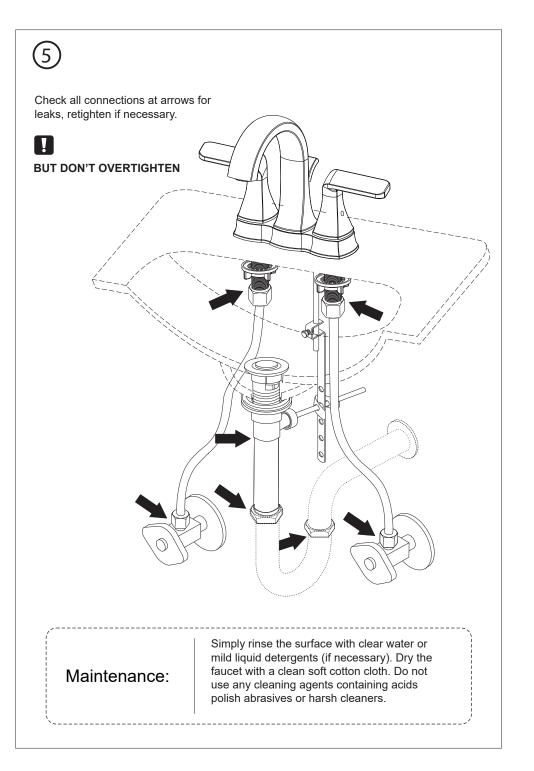

Cleaning and care

Daily cleaning and care are required in order to keep the product shining and working properly.

- 1. Clean it with water and dry it with soft cloth.
- 2. Clean the product with gentle liquid or glass cleaner.
- 3. Don't use acid cleaner.
- 4. Don't clean with abrasive material, abrasive paper or knife.




⚠ WARNING




ATTENTION

Ensure hoses are tightly screwed in positon as they may move during transportation and installation.

Assurez-vous de bien serrer les embouts de chaque Tuyau car ils peuvent se dévisser lors du transport – bien valider après l'installation aussi

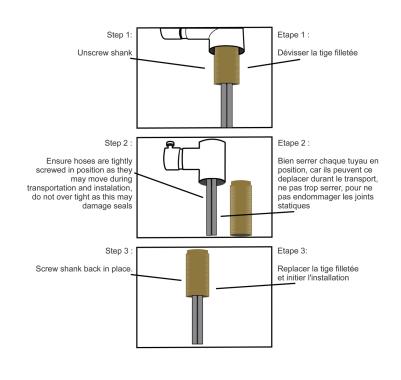

Parts list

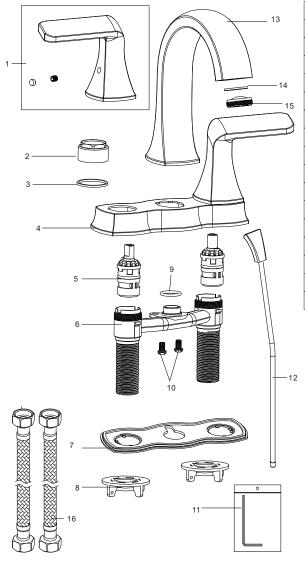

| NO. | PART NAME |
|-----|-----------------------|
| 1 | Handle assembly |
| 2 | Lock nut |
| 3 | Washer |
| 4 | Plate |
| 5 | Cartridge (hot water) |
| 6 | Shank |
| 7 | Gasket |
| 8 | Lock nut |
| 9 | O-ring |
| 10 | Screw |
| 11 | Allen key |
| 12 | Lift rod |
| 13 | Spout |
| 14 | Washer |
| 15 | Aerator collar |
| 16 | Inlet pipe |