



Assembly

1 Installation of arm unit (on both sides)


- 1 Align the holes on the arm unit convex with the mounting holes on the side panel of the unit.

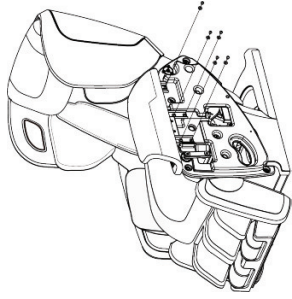


- 2 Fasten the arm unit with flat washer $\varnothing 8.2 \times \varnothing 18.0 \times 1.4T$ and round-head hexagonal socket screw M8 x 1.25P x 10L firmly in five positions.

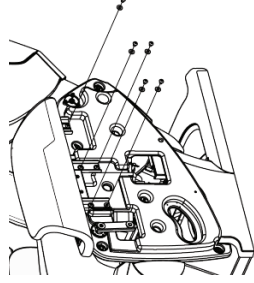


- 3 Connect the air plug for the arm unit. By matching the same air pipe color, firmly insert the air plug into the air pipe of the arm unit.

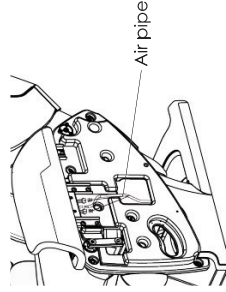

- 4 Connect the shortcut keys connector.

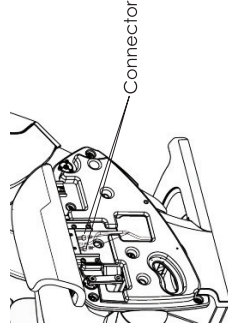


- 5 Repeat steps 1 to 4 to install the armrest unit on the right side. Connect the shortcut keys connector on the right side.

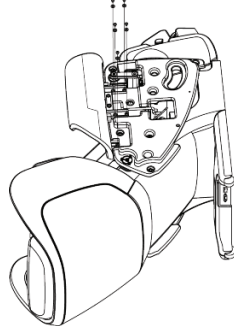

2 Installation of remote controller stand (on the left or right side of the unit)


- 1 Mount the stand on the side panel.
- 2 Fasten the stand with flat washer $\varnothing 8.2 \times \varnothing 18.0 \times 1.4T$ and round-head hexagonal socket screw M8 x 1.25P x 10L firmly in 2 positions.

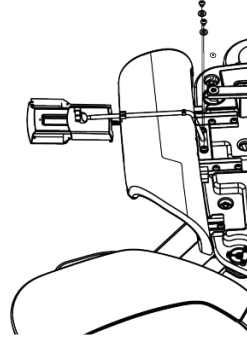


3 Installation of armrest cover (on both sides)

Install the armrest cover after the arm unit and the remote controller stand have been installed.

- 1 Mount the right armrest cover from the side of the chair, and align the armrest cover holes with the mounting holes on the side panel. Fasten the fasteners behind the side panel firmly in four positions.

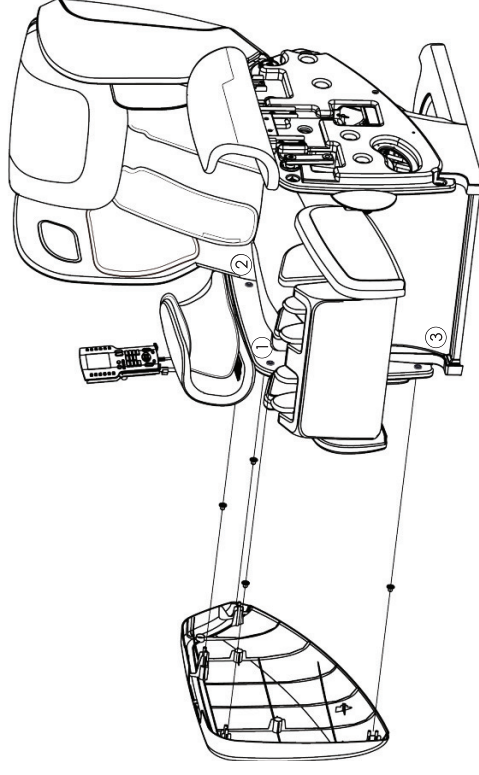


- 2 Repeat step 1 to install the armrest cover on the left side.

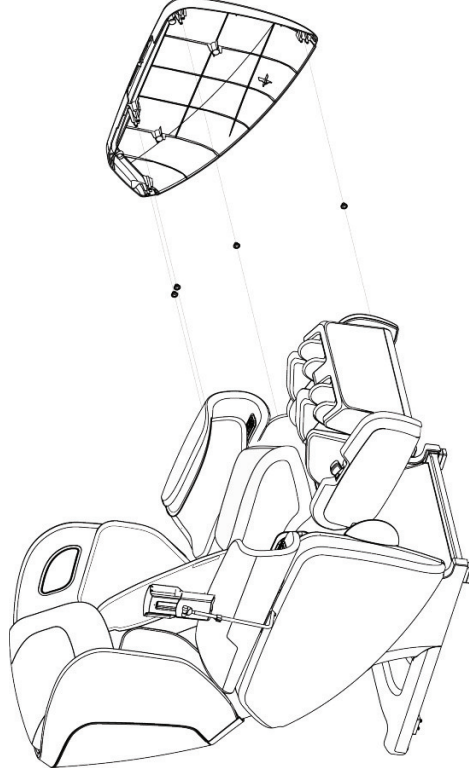

3 Installation completed.

- When massaging, remove the large pillow and adjust the small pillow to an appropriate position.
- If you feel the massaging strength is less strong, remove the back pad to enhance contact of the knead balls with your back.
- When the unit is not used for massaging purpose, it can be used as a leisure chair with the back pad and pillows installed.

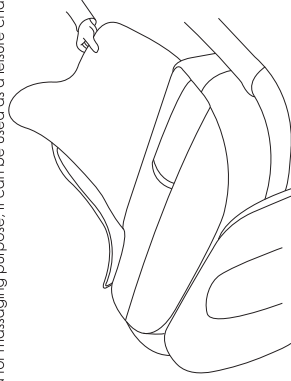


WARNING


! Before use, lift up the back pad to make sure that there is no tear on the backrest cover cloth as well as on the other parts. (Should there be any tear, no matter how small it is, immediately unplug the power cord and contact the service center for repair.)

4 Connect the power cord to the unit.

Make sure to completely insert the connector into the appliance inlet.

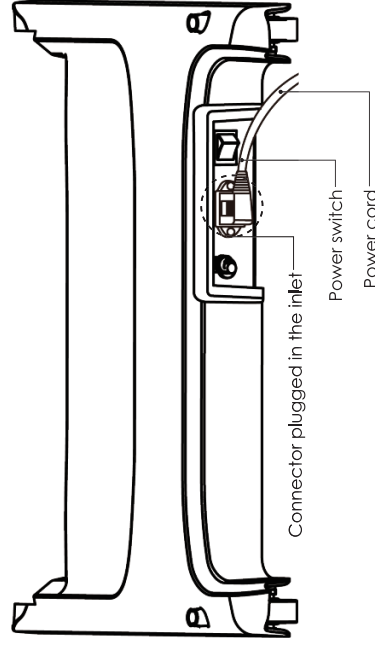


4 After installation is completed, insert the power plug into the power outlet. Turn on the power switch and press ON/OFF button on the remote controller to start select the massage functions.

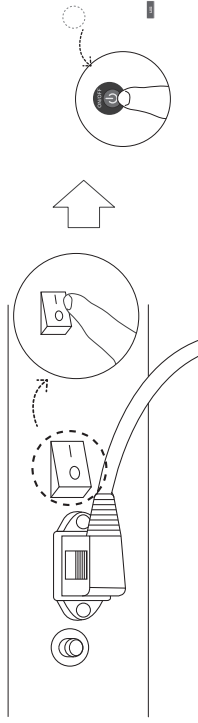

Moving the massage chair

1 Move the chair with the casters

Push down the upper part of the backrest, tilt up the front side of the chair and put it forward.

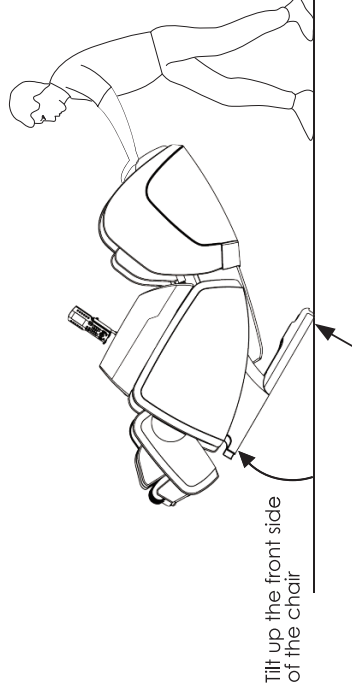

Tilt up the front side of the chair and use the casters to move the chair forward.

CAUTION



- Do not move the chair with a person or any object seated on it to avoid upset, to scratching.
- Do not hold the seat, the footrest and the shoulder unit to move the chair.
- Balance the weight with care while lifting up the front side of the chair.

2 Handling by 2 persons

When the unit is being handled by 2 persons, recline the backrest and move the chair by one person holding the back and the other person holding onto the side of the footrest.

CAUTION



- The power cord should be properly arranged and placed on the seat to avoid any damage during moving.
- Move and place the chair down slowly with care to avoid damage to the internal parts.
- Do not move the chair with its casters on the uneven surface.
- Do not move the chair with its casters on the wooden floor or other slippery surface to prevent scratches. If necessary, the chair should be carried by two or more persons.