


Ottoman Storage Bed

(Full / Queen)

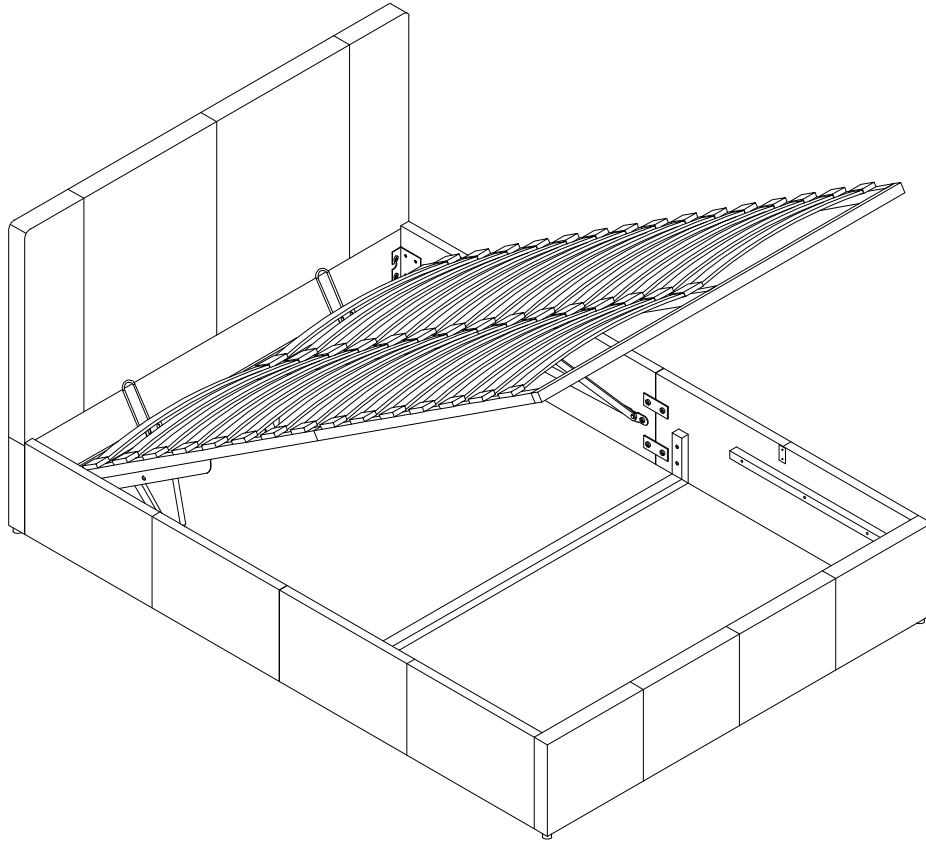

Care & Instruction Manual

Please read and retain these instructions for future reference

STOCK CODES : JWKJ3002-F (Full)

: JWKJ3002-Q (Queen)

IMPORTED BY FORWARD INDUSTRIES, 33401, USA



Safety and Care Advice

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.


- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- This product has been constructed to be used in the domestic environment only and not for commercial purposes.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

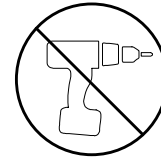

as this could damage the unit. Only use hand screwdrivers.

- We do not recommend the use of power drill/drivers for inserting screws

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.


- Use a dry cloth to clean the product, furniture polish is not recommended.

- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Important Ottoman Safety Warnings

- Caution. This bed uses a pressurised mechanism.
- Use caution when operating - Always use two hands at arm's length, and only where illustrated on the product.
- You must ensure the mattress is on the bed frame before lifting the mechanism - Failure to do so may result in injury.
- Please ensure Children and pets are kept away from the bed when operating the bed mechanism.
- If removing the mattress, make sure that the frame is secured as it could flip open.
- Only use the storage compartment when the frame is fully raised in the 'up' position.
- No children or animals are left unattended when the frame is in the 'up' position.
- Do not remain on the bed whilst the lifting mechanism is in use.
- Beware of Entrapment - Keep both hands clear of mechanism when operating the mechanism.
- When lifting the bed remove all bedding - Except the fitted sheet.

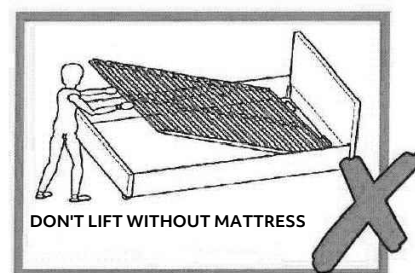


Main Components


Please check you have all the parts listed below

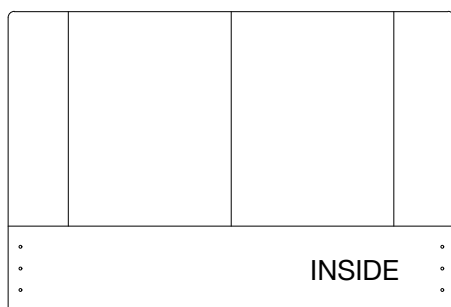


- 1 Headboard (4'6-57 × 38.9in)
(5'-63 × 38.9in)




- 2 Footboard (4'6-57 × 12in)
(5'-63 × 12in)




- 3 Side Rail (Right) Headboard End
(4'6-38 × 12.5in)(5'-40.1 × 12.5in)




- 4 Side Rail (Right) Footboard End
(4'6-38 × 12.5in)(5'-40.1 × 12.5in)




- 5 Side Rail (Left) Headboard End
(4'6-38 × 12.5in)(5'-40.1 × 12.5in)




- 6 Side Rail (Left) Footboard End
(4'6-38 × 12.5in)(5'-40.1 × 12.5in)

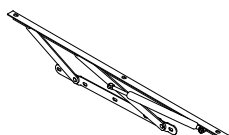

- 7 Hinge Mechanism (x 1 pair)
NOTE: PISTON ATTACHED

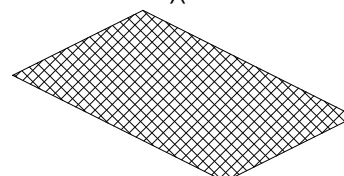

- 8 Fabric base x 1 (4'6-77.1 × 55.9in)
(5'-81.5 × 61.8in)



- 9 Ottoman end frame (Headboard) x 1
(4'6-53.6 × 3.3in)(5'-59.5 × 3.3in)
NOTE: EXTRA HOLES



- 10 Ottoman end frame (Footboard) x 1
(4'6-53.6 × 3.3in)(5'-59.5 × 3.3in)



- 11 Ottoman frame centre support
Headboard End x 1
(4'6/5'-35.2 × 1.1in)
NOTE: EXTRA HOLES




- 12 Ottoman frame centre support
Footboard End x 1
(4'6/5'-40.3 × 1.1in)


For missing or damaged parts, call our Customer Helpline: (561) 465-0030, option 0. or email customerservice@forwardindustries.com.

Main Components


Please check you have all the parts listed below




- 13** Ottoman frame (Sides Left)
Headboard End x 1
(4'6/5'-40.3 x 1.1in)
NOTE: EXTRA HOLES



- 15** Ottoman frame (Sides Right)
Headboard End x 1
(4'6/5'-40.3 x 1.1in)
NOTE: EXTRA HOLES



- 17** Stretcher x 1 (4'6-54.7 x 0.98in)
(5'-60.8 x 0.98in)



- 19** Connecting Bracket
(Ottoman Frame Sides) x 2
(11 x 1.1 x 1.1in)



- 21** Double slat caps x 14 (4'6-2.16in)
Double slat caps x 15 (5'-2.16in)



- 23** Ottoman frame support x 1
(5.11 x 1.18in)




- 25** Support Leg (Flat) x 1 (0.98 x 7.87in)




- 27** Connecting Plate (Side Rails) x 4
(1.57 x 3.54in)



- 14** Ottoman frame (Sides Left)
Footboard End x 1
(4'6/5'-35.2 x 1.1in)



- 16** Ottoman frame (Sides Right) x 1
Footboard End x 1
(4'6/5'-35.2 x 1.1in)




- 18** Mattress support bracket x 2



- 20** Bentwood slats x 28 (4'6-26.5 x 0.35 x 2in)
Bentwood slats x 30 (5'-29.5 x 0.35 x 2in)



- 22** Single slat caps x 28 (4'6-2.16in)
Single slat caps x 30 (5'-2.16in)



- 24** Support Leg (U Shape) x 1 (0.98 x 7.87in)














- 26** Foot x 4 (ø0.13 x 0.59in)

For missing or damaged parts, call our Customer Helpline: (561) 465-0030, option 0. or email customerservice@forwardindustries.com.

Fixings, Fittings And Tools

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  (0.98in) M8 Bolt Qty 36	B  (1.18in) M8 Bolt Qty 22	C  (1.77in) M8 Bolt Qty 8
D  (1.18in) M4 Screws Qty 4	E  (1.77in) M4 Screws Qty 4	F  (0.66in) M8 Flat washer Qty 66
G  (0.47in) M8 Spring washer Qty 32	H  M8 Nut Qty 6	J  M5 Allen key Qty 1
K  Spanner Qty 1	L  Box spanner Qty 1	


For missing or damaged parts, call our Customer Helpline: (561) 465-0030, option 0. or email customerservice@forwardindustries.com.

Assembly Steps


Step 1

Prepare headboard and Footboard.

Ensure surface is protected to prevent marking.

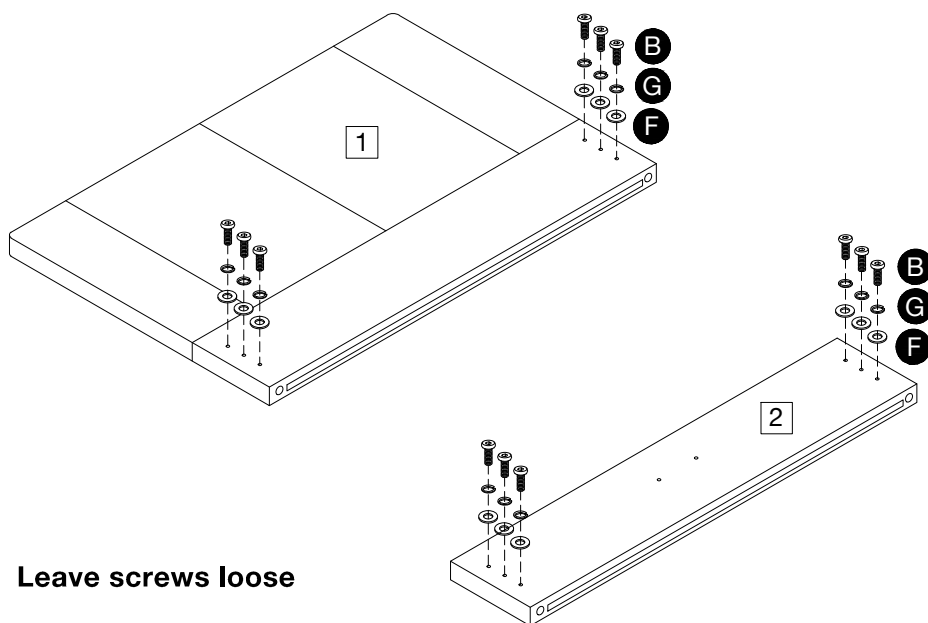

B x 12



G x 12




F x 12



Step 2

Assemble support.

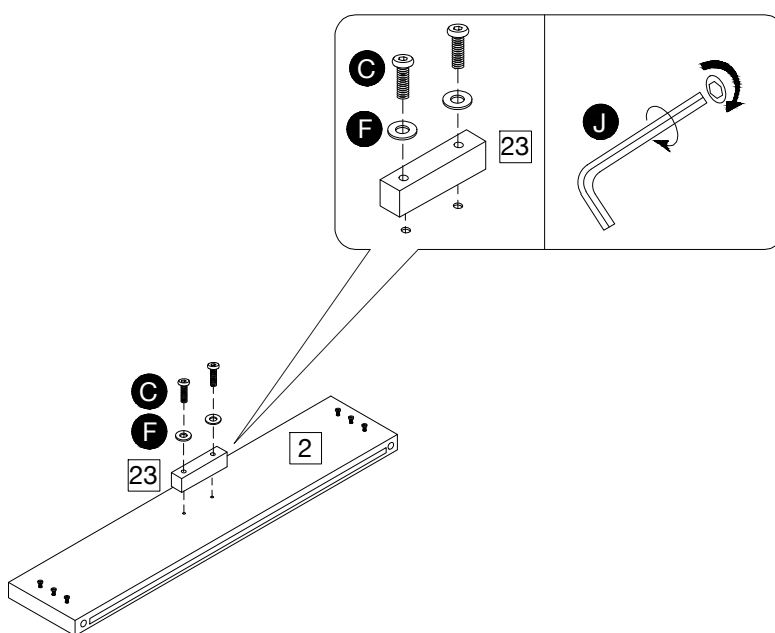

C x 2



F x 2



J x 1




Assembly Steps


Step 3

Connect side rails using connecting plates **27**.

Repeat for both side rails.

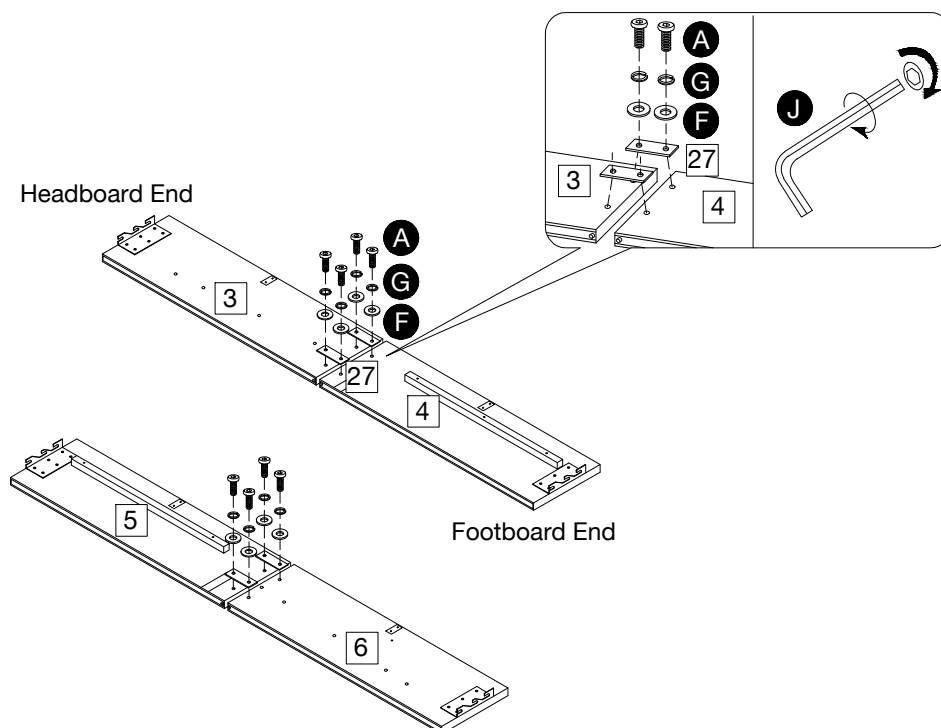

A x 8




G x 8



F x 8



J x 1




Step 4


Loosely assemble bed frame.

Two people will be required.

Two people required

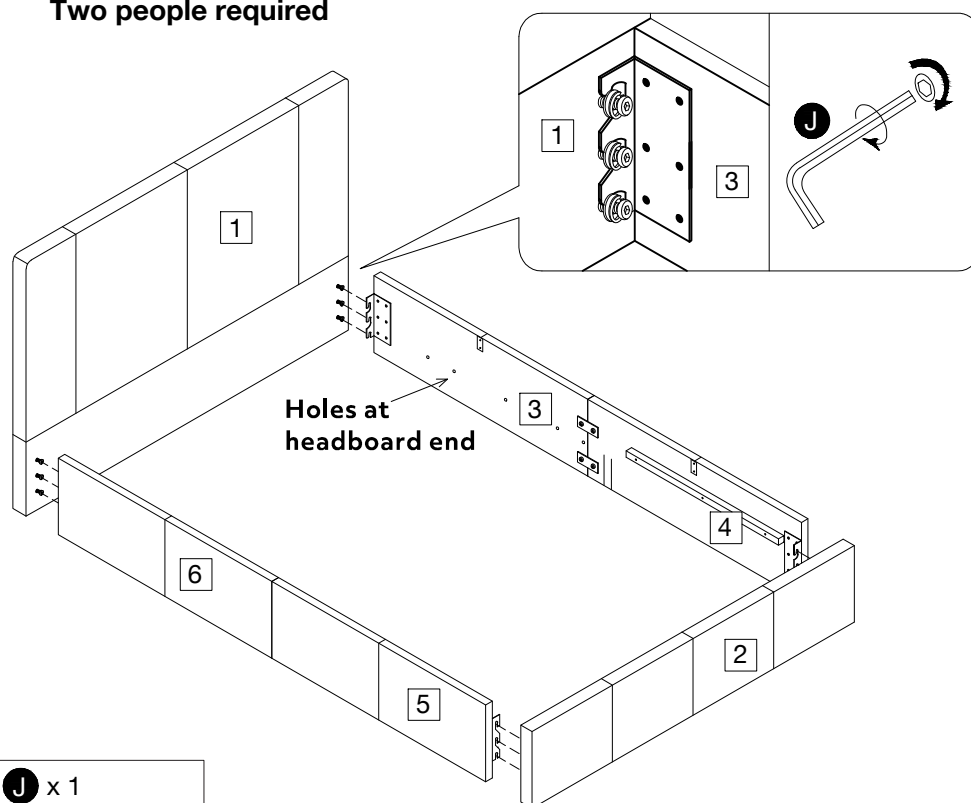

J x 1



Do not fully tighten fixings!


Assembly Steps

Step 5




Assemble stretcher.

Ensure frame is square.

Tighten all fixings before proceeding to step 6.

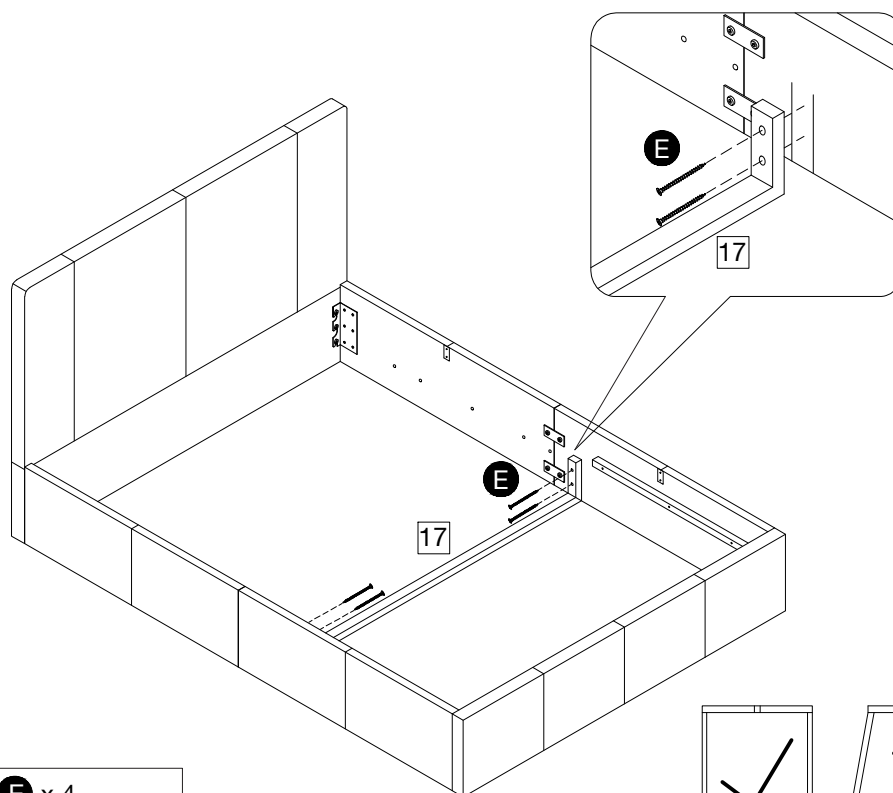

E x 4

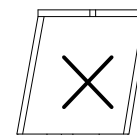


Ensure frame is square

Step 6

Fit fabric base using velcro strips.

Two people required to carefully turn the frame.


Two people required

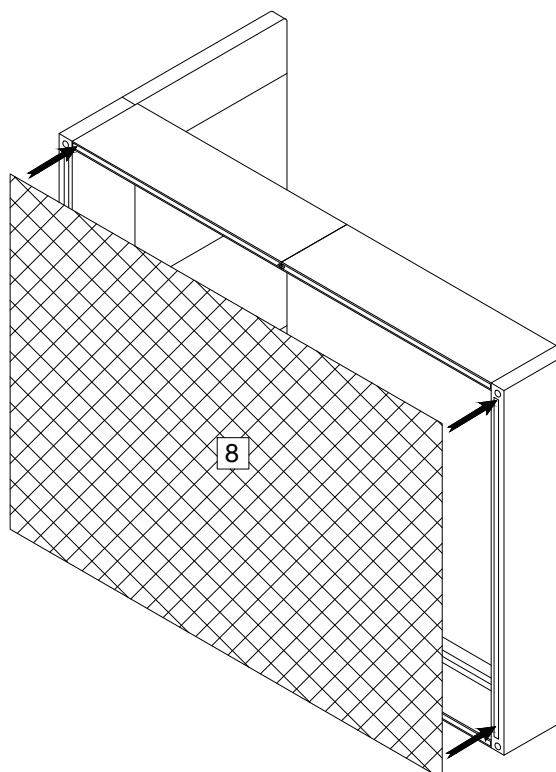

Assembly Steps


Step 7

Assemble feet.

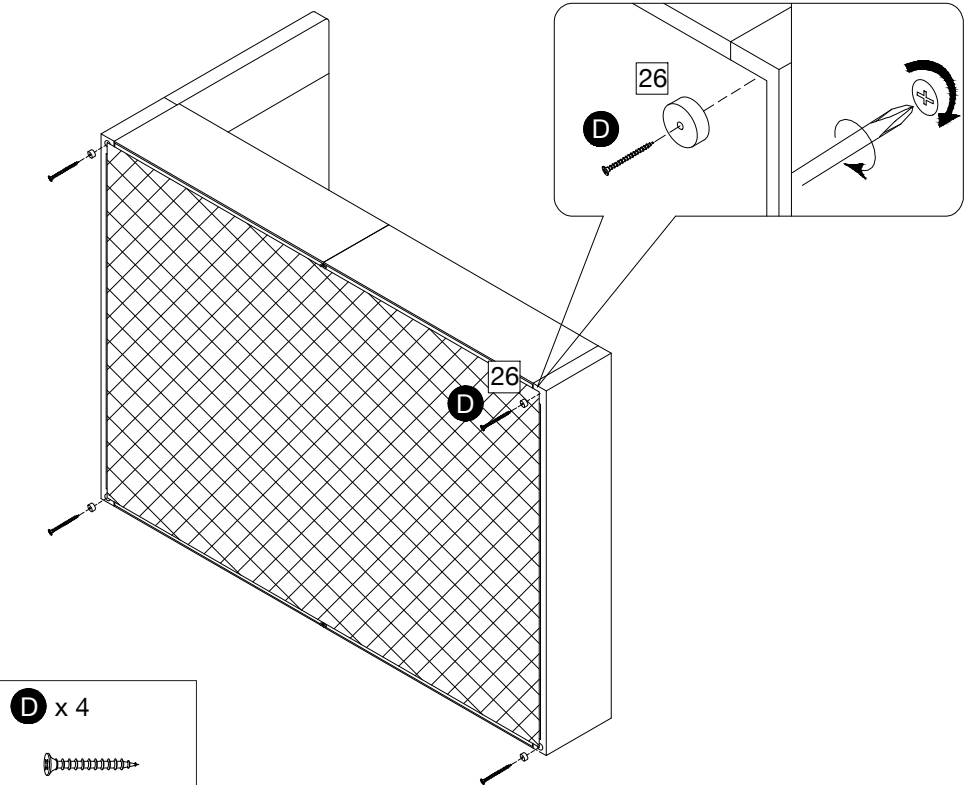


Step 8

Assemble ottoman hinge mechanisms.

 The hinges will move.

Beware of entrapment!


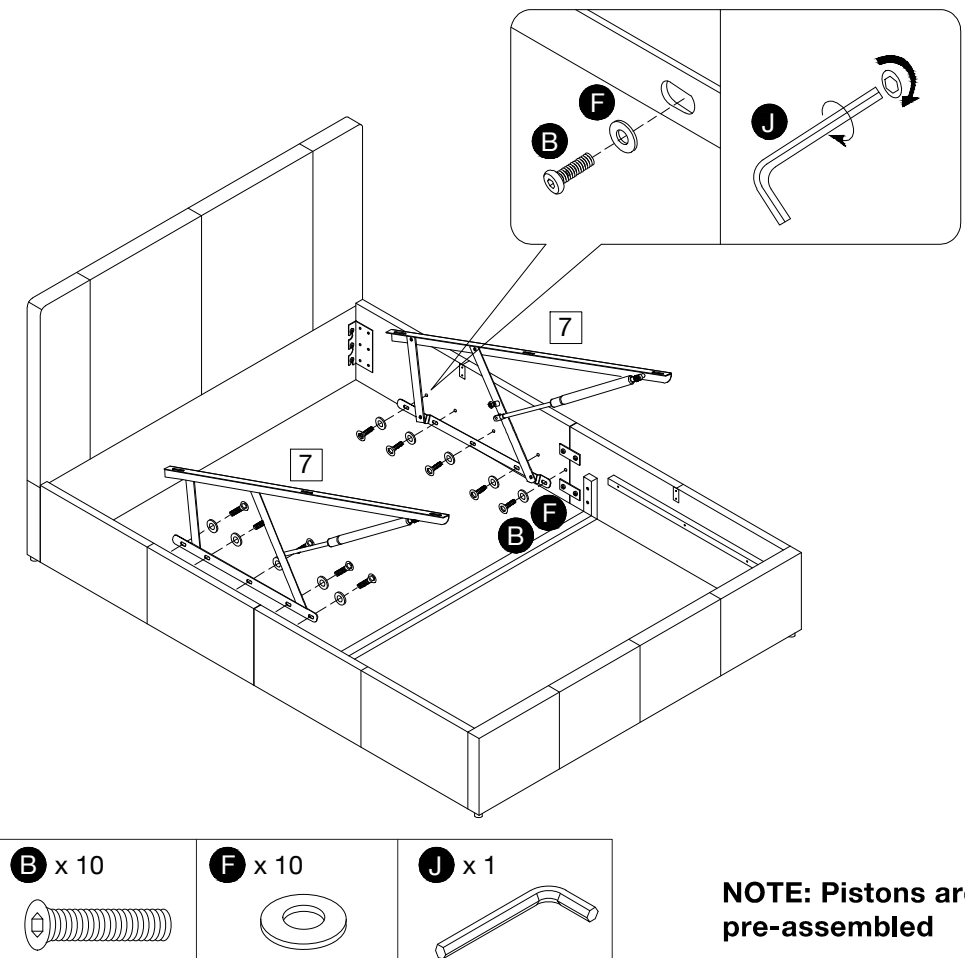


Assembly Steps

Step 9



Assemble ottoman frame centre support and legs.

Support legs [24] and [25] are different.

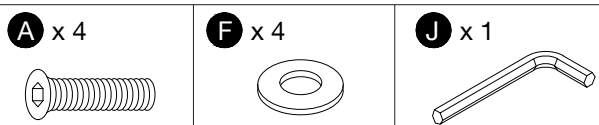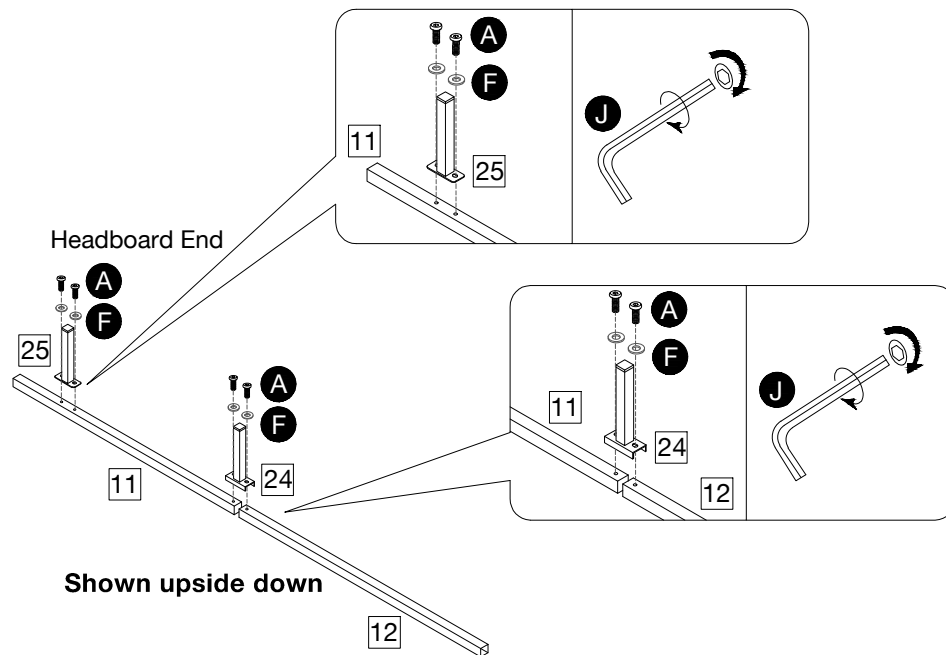

Step 10


Assemble ottoman frame sides.

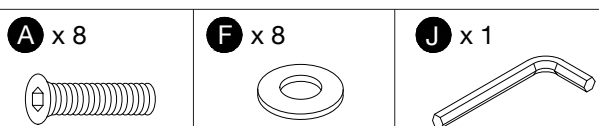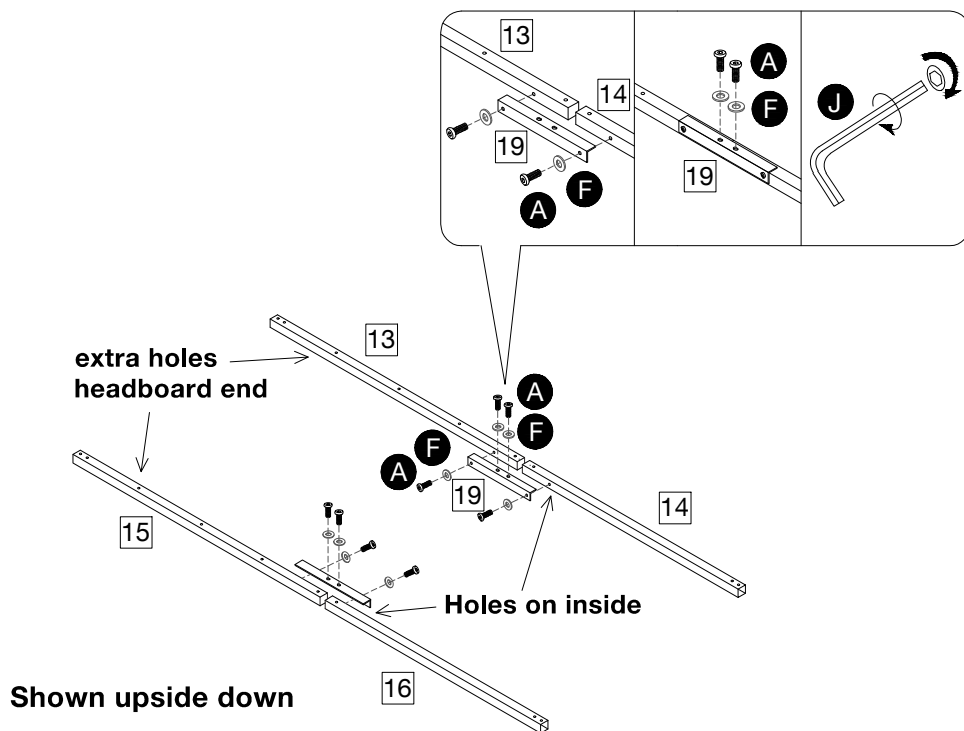


Assembly Steps

Step 11

Complete ottoman frame assembly.

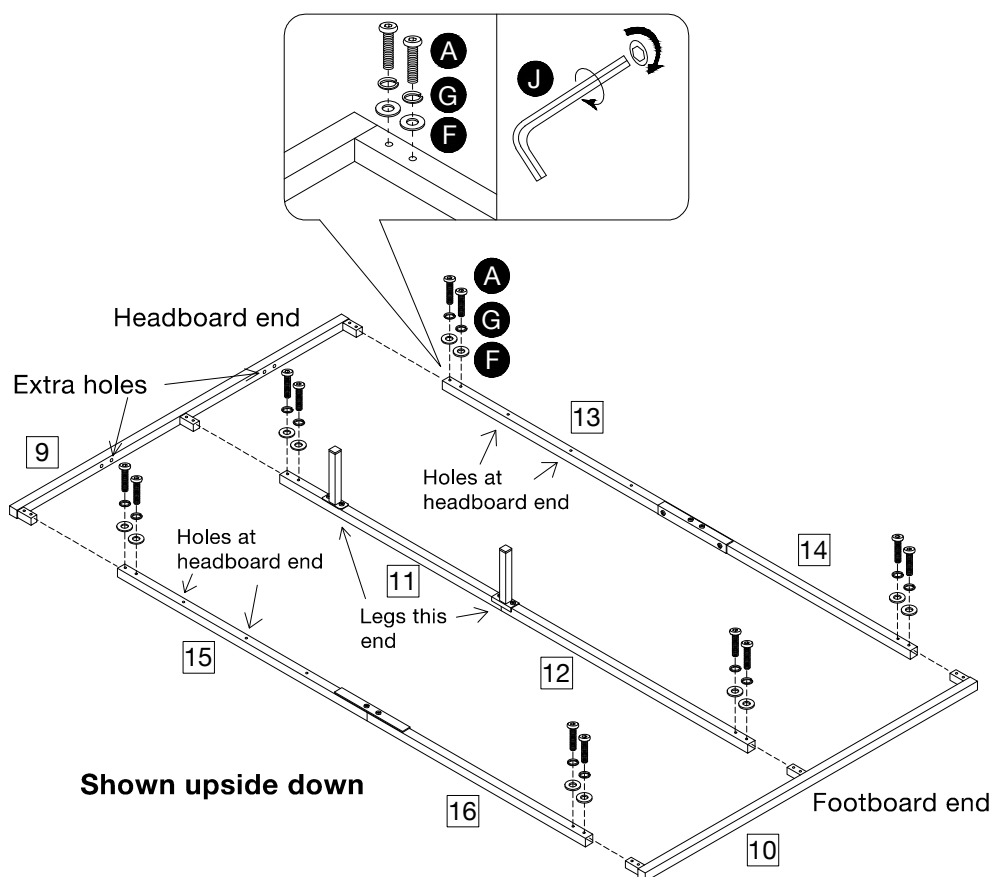

A x 12




G x 12



F x 12



J x 1




Step 12

Turn ottoman frame over and assemble mattress support brackets.

Two people will be required.

Two people required

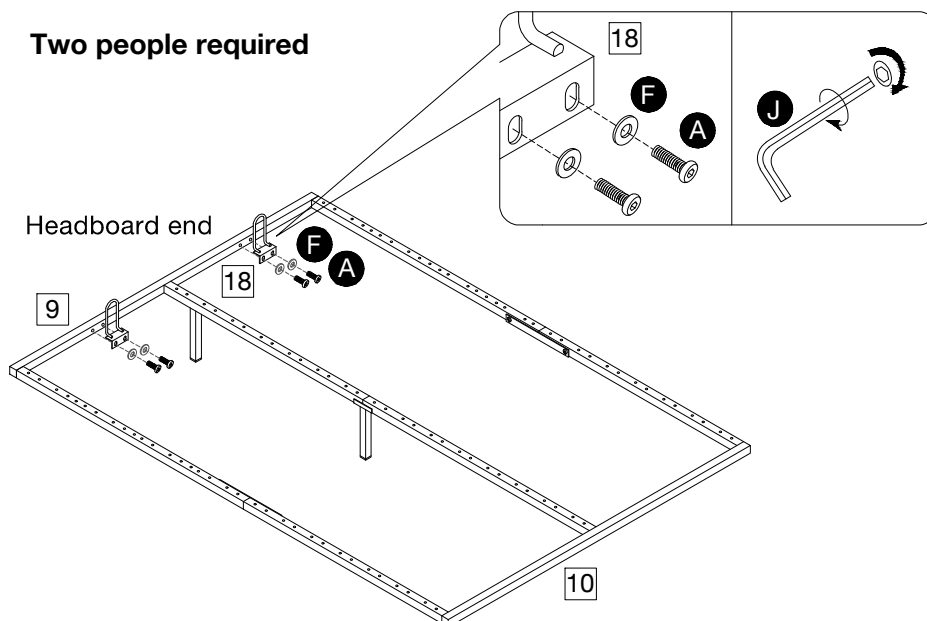


A x 4



F x 4



J x 1



Assembly Steps


Step 13

Ensure the bed frame is square.


With help, assemble ottoman frame to hinge mechanisms.

⚠ The mechanisms will move. Beware of entrapment.

Two people required

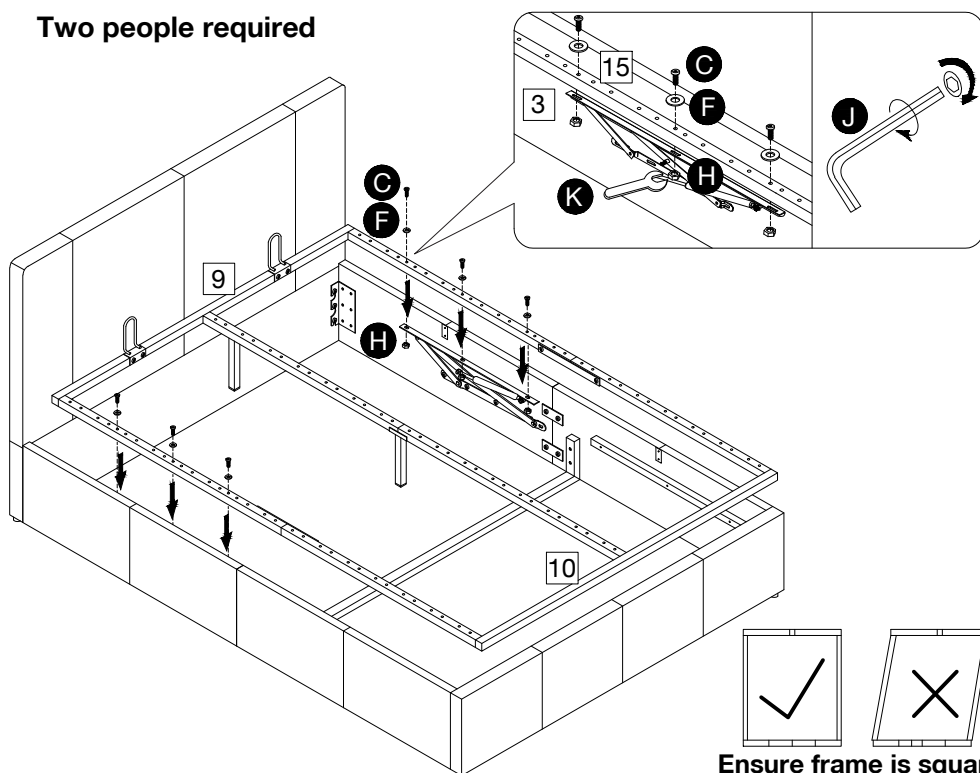

Ensure frame is square

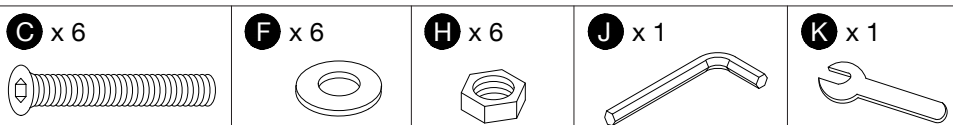


Step 14

Connect the pistons.


⚠ The frame must be fully supported at all times.

Two people will be required.

Important: Two people required.
Frame to be fully supported at all times!

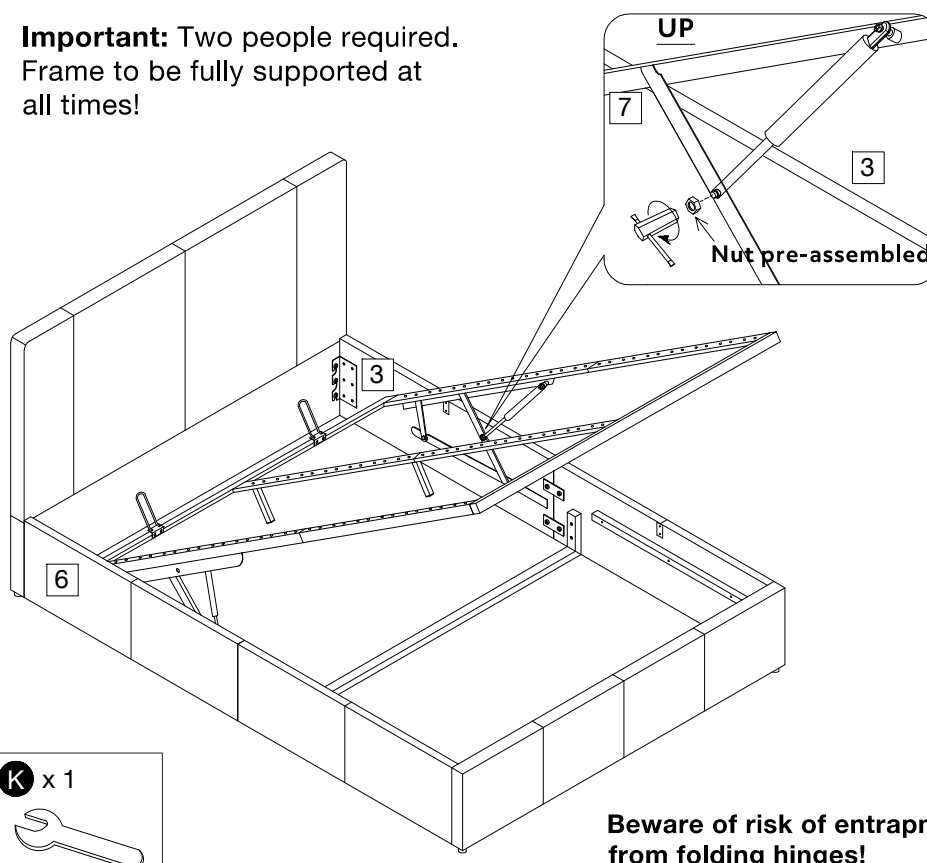

Beware of risk of entrapment from folding hinges!

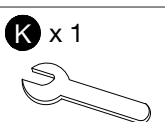


Assembly Steps

Step 15

Fit plastic slat caps and bentwood slats.

Ensure slat caps are properly engaged into the holes.

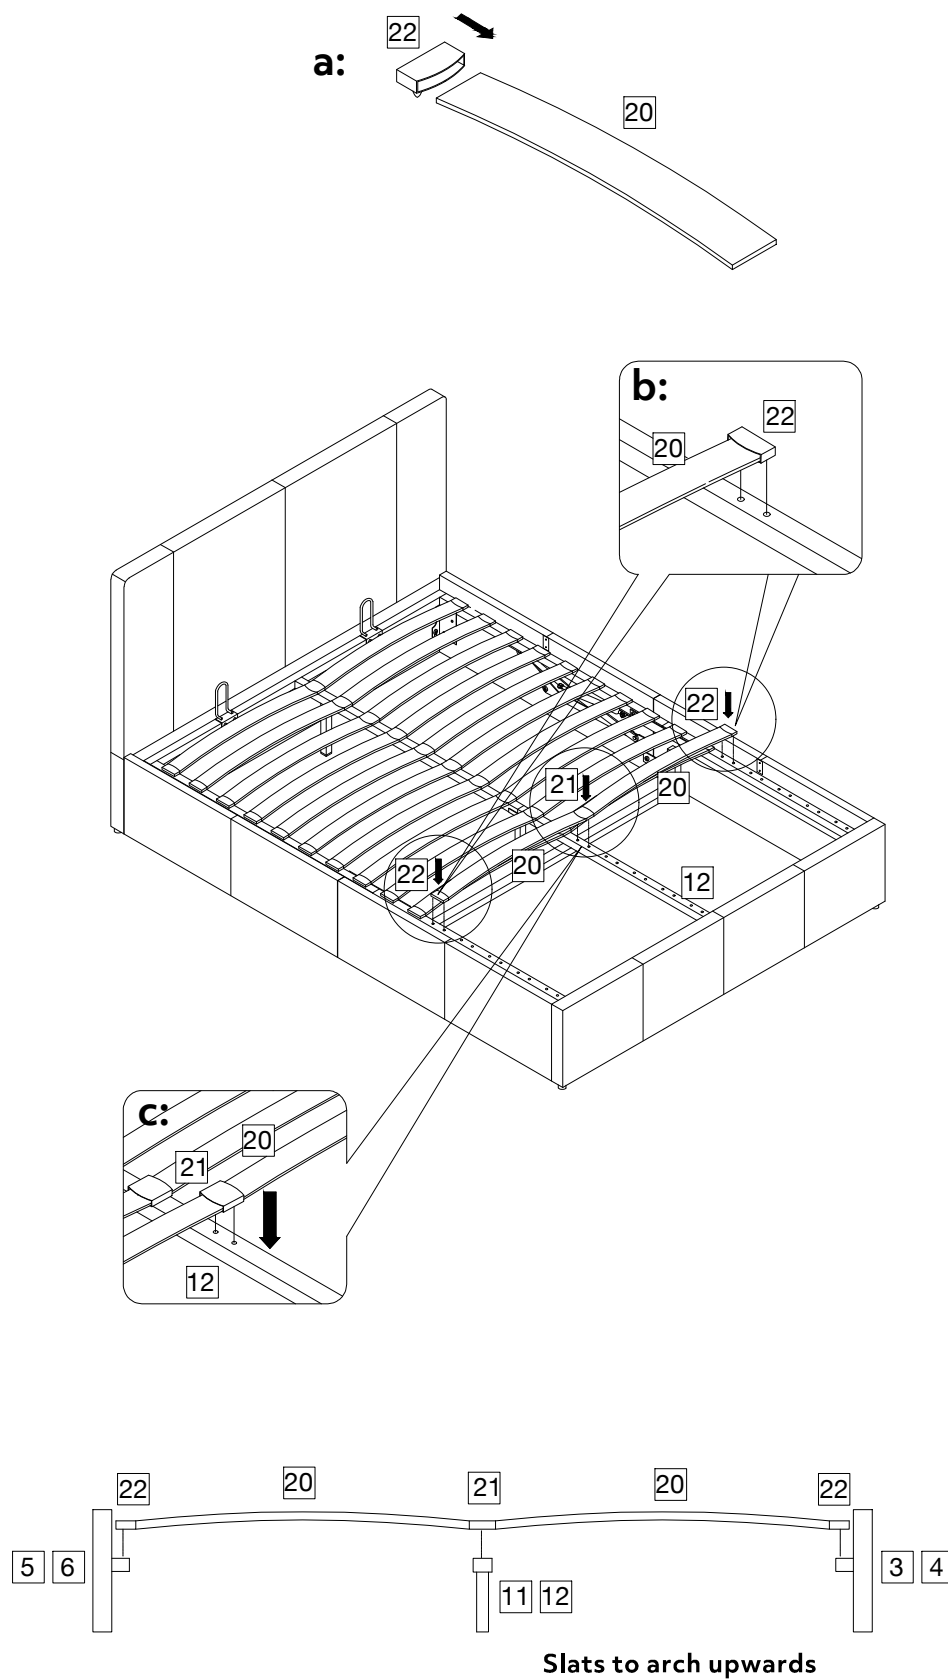

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401