

allen + rothTM
allen + roth is a trademark of LF, LLC.
All Rights Reserved.


ITEM #2550858

OVAL FRAMELESS MEDICINE CABINET


MODEL #MMV1032MV

Español p. 6

ATTACH YOUR RECEIPT HERE

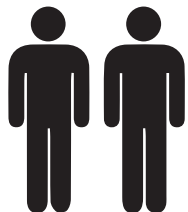

RECOMMENDED

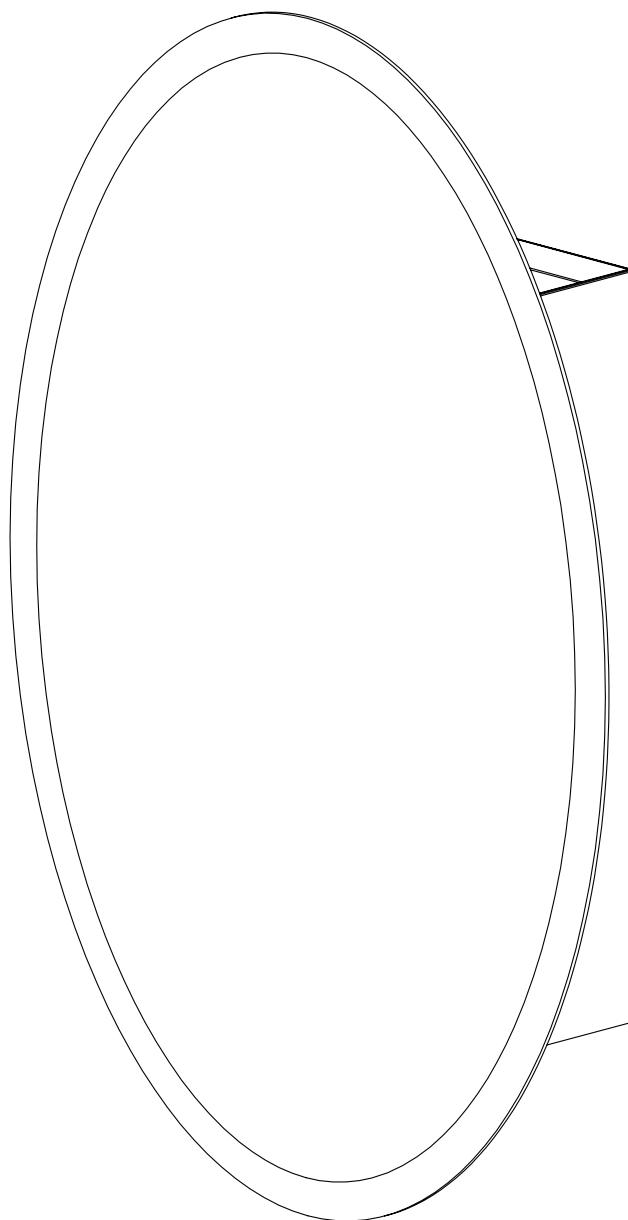

Serial Number _____ **Purchase Date** _____




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

TABLE OF CONTENTS

Package Contents	2
Safety Information	3
Preparation	3
Assembly or Installation Instructions	3
Care and Maintenance	5
Troubleshooting	5
Replacement Parts List	5

PACKAGE CONTENTS

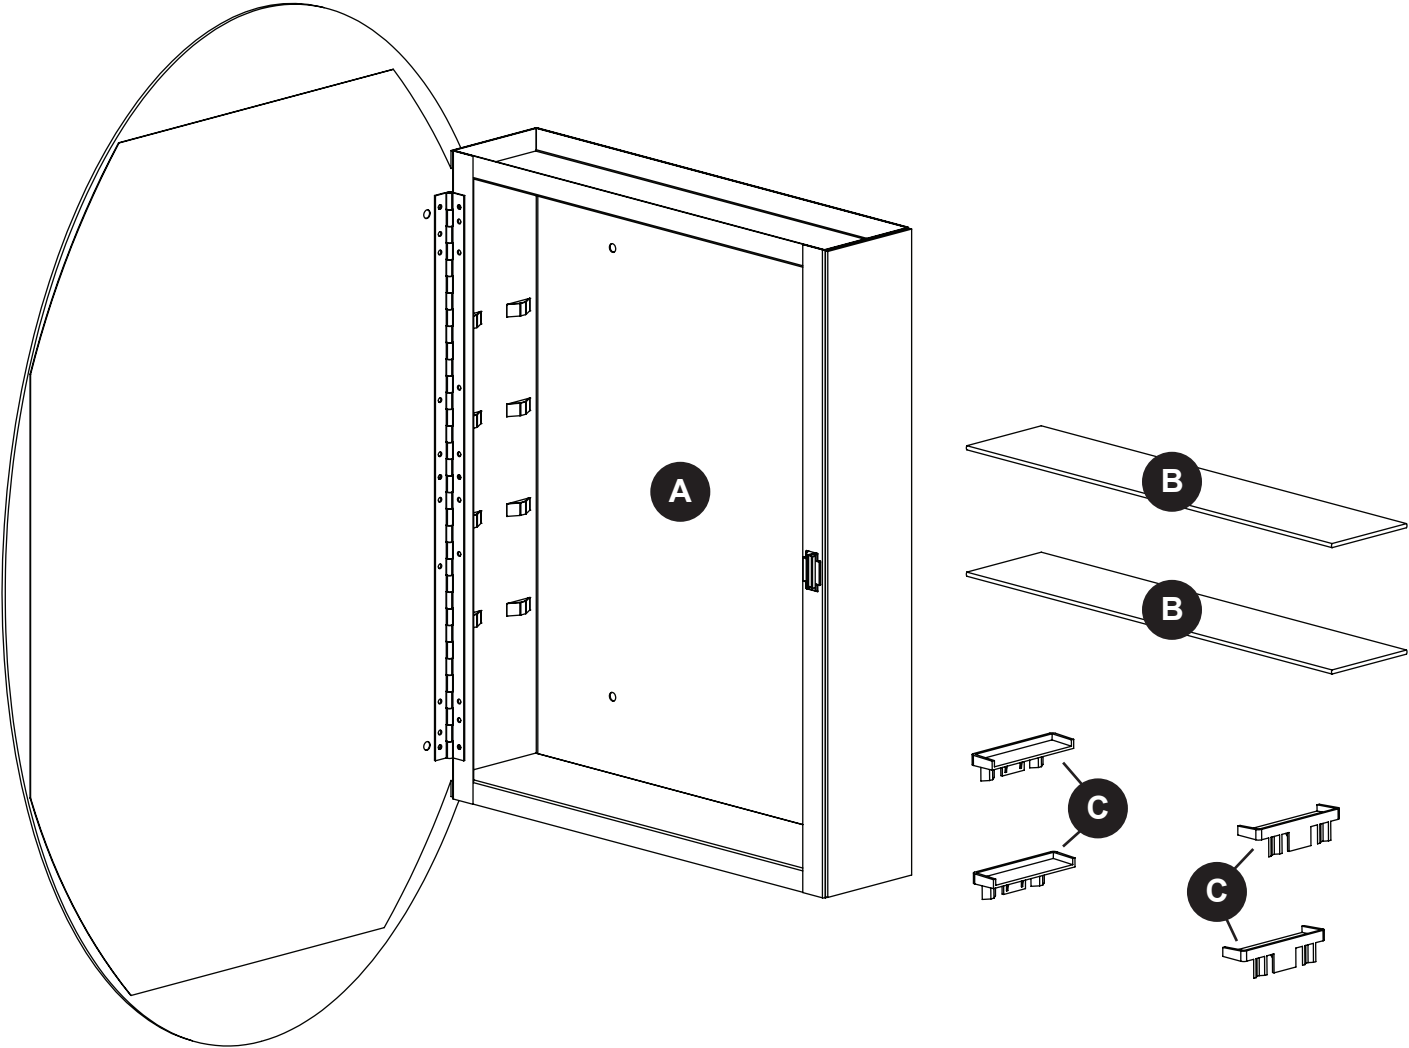

PART	DESCRIPTION	QUANTITY
A	Cabinet	1
B	Adjustable Shelf	2
C	Shelf Clip	4



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

- Locate all electrical, plumbing, and gas lines. Cutting any of these may cause serious injury.
- If installing into a material other than drywall or a stud, consult a professional for proper installation.



WARNING

- Before cutting, drilling, or hammering into any wall surface, verify the location of electrical, plumbing, and gas lines.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 25 minutes (*with assistance of another person*)

Tools Required for Assembly (not included): Electric drill with the appropriate drill bit size, level, Phillips screwdriver, measuring tape, pencil, and circular saw

NOTE: Use a 3/32 in. drill bit and #10 x 2 in. long pan head wood screws (*requires 6 per cabinet*) for direct stud installation. Use a 1/4 in. drill bit and 1/8 in. Molly Bolts sized to the appropriate wall thickness (*requires 6 per cabinet*) for drywall installation.


INSTALLATION INSTRUCTIONS

1. Hold the cabinet (A) at the desired position on wall.

NOTE: Make sure the cabinet is level.

Mark the locations on the wall through the mounting holes in back of cabinet (A).


Carefully set the cabinet (A) down.

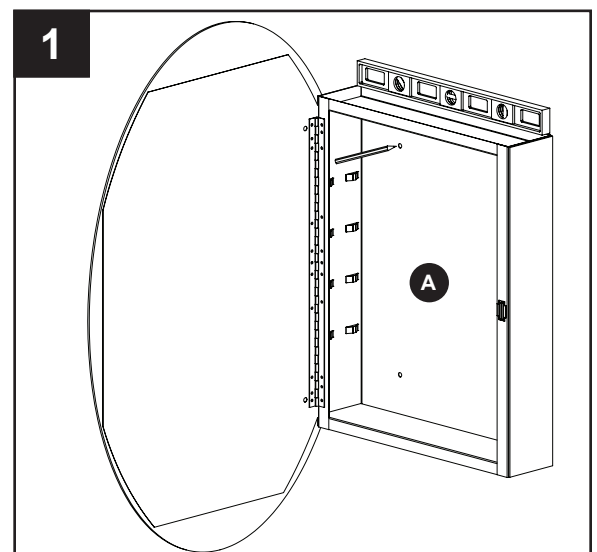


INSTALLATION INSTRUCTIONS

2. Drill holes in the marked locations on the wall. If screws will not be going directly into studs, insert wall anchors (*not included*).


Attach the cabinet (A) to the wall, using appropriate mounting screws (*not included*).

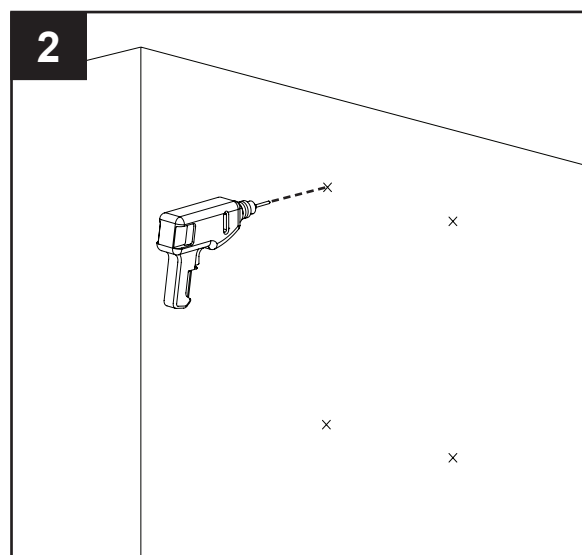

3. Insert the shelf clips (C) in the desired locations.

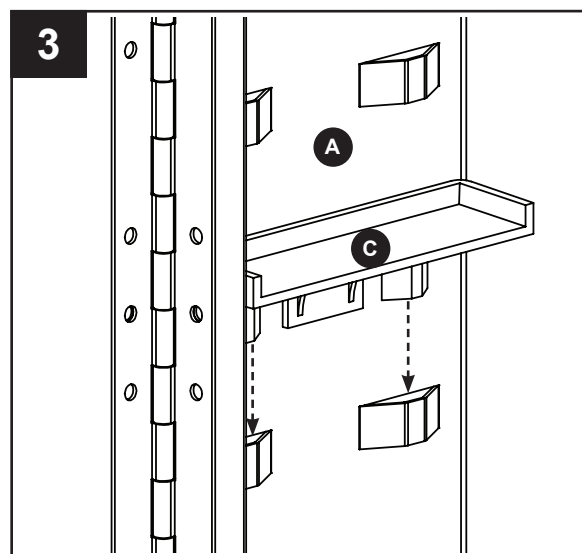

4. Place adjustable shelves (B) onto the shelf clips (C).

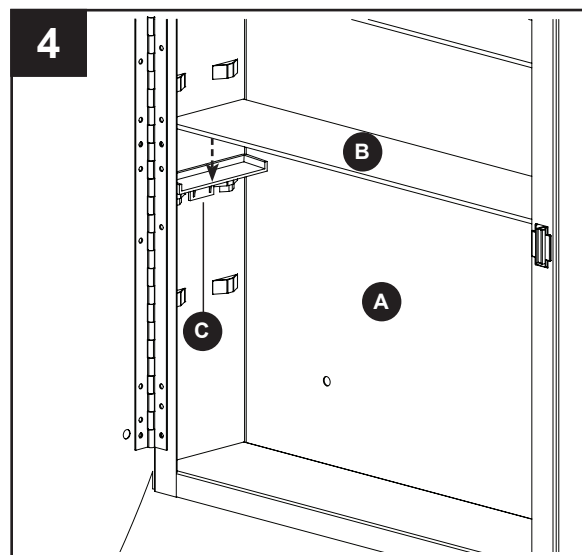

CARE AND MAINTENANCE

Cleaning with a dry cloth may be sufficient, but for other stains or marks wipe gently with a damp cloth. DO NOT use strong detergents or abrasive cleaners; they may damage the surface of the product.

TROUBLESHOOTING

- This medicine cabinet is reversible so that the door can open in either direction (from left to right, or from right to left).
- This means you may hang the cabinet with the hinge on the left (Figure 1) or you may turn the entire cabinet “upside down” and hang it with the hinge on the right (Figure 2).

Figure 1



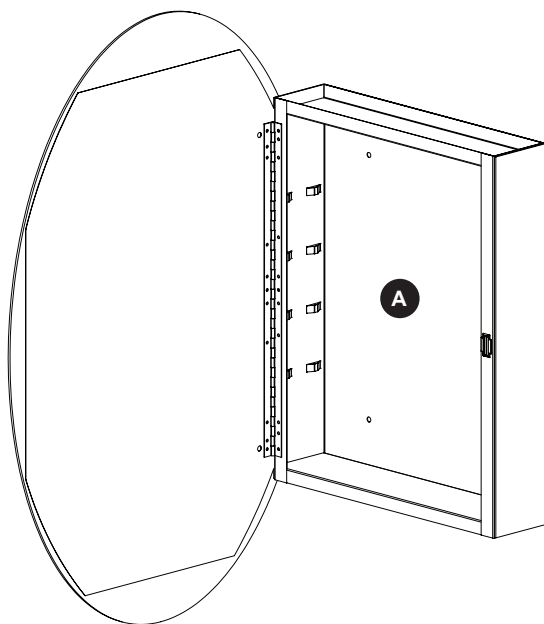


Figure 2

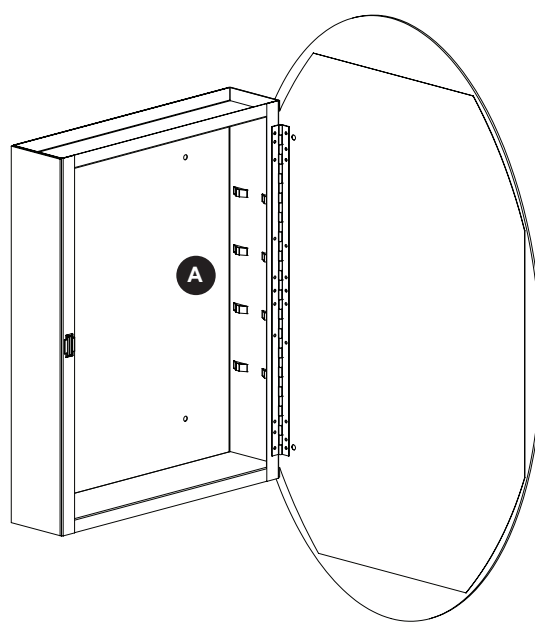

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

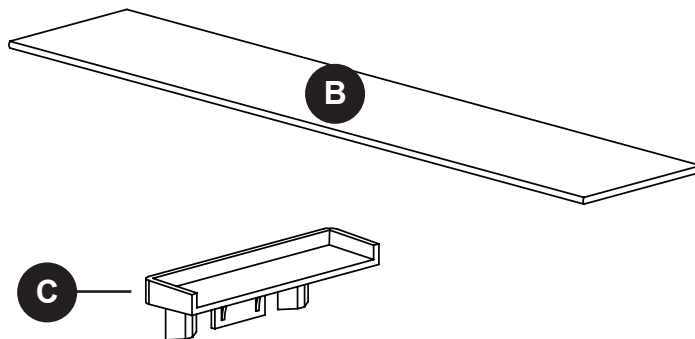

PART	DESCRIPTION	PART #
B	Adjustable Shelf	CAM133
C	Shelf Clip	YPN380

