

Assembly Instructions

Caution : You must read this before you proceed

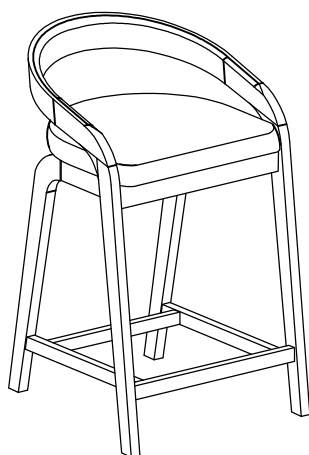
Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
 - ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  • Do not put hot items directly on furniture surface.
 - ⊘  • Do not clean furniture with harsh cleansers or polish.
 - ⊘  • Do not place furniture under direct sunlight.
 - ⊘  • Do not place furniture near heating or cooling vents.
 - ⊘  • Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  • Do not place furniture outside . For indoor use only.
 - ⊘  • Stains may be removed with mild soap solution and damp cloth.
 - ⊘  • Children should not climb or jump on the furniture.
-
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.






**Please look in the following places for hardware packs:
- on the back rest**

Sets often ship in multiple boxes and may arrive a day or two apart.



CHAIR




Part List




Label	Picture	Description	QTY
A		Front Leg	1
B		Seat	1
C		Apron	1
D		Right Back Leg	1
E		Left Back Leg	1
F		Back Stretcher	1
G		Right Side Stretcher	1
H		Left Side Stretcher	1

Hardware

Label	Picture	Description	QTY
①		Bolt Set (M6x50mm)	5
②		Wood Dowel DIA 8x35mm	8
③		Wood Dowel DIA 8x25mm	2
④		Pan Head Screw M5x32mm	7
⑤		Allen Wrench	1
⑥		CSK Screw M3.5 x 12MM	9
⑦		L Bracket 1.4MM	4
⑧		Adjust Leveller C99	4

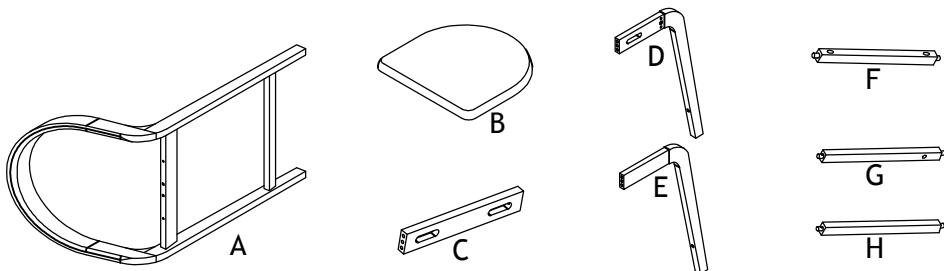Assembly Preparation


Before Beginning Assembly:	
----------------------------------	--

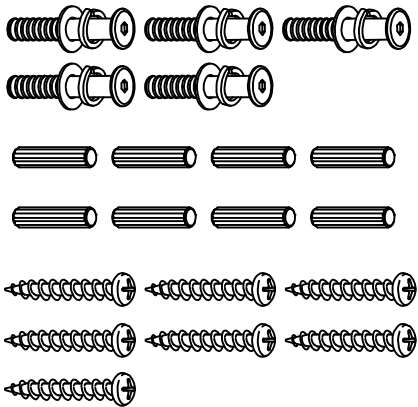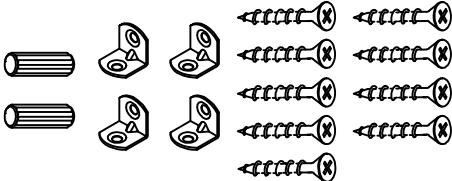Pack A for Locking the Left Chair Back Leg & Right Chair Back Leg with Back Leg Apron & Font Leg Backrest : Five Bolt:50mm + Eight Wood Dowel Dia 8x35mm. Locking the Chair Footrest with Right & Left Rail Stretcher and Back Stretcher: Seven Pan Head Screw M5x32mm.	
Pack B Locking the Seat with Seat Rail and Back Apron: Two Wood Dowel DIA 8x25mm + Four L Bracket + Nine CSK Screw M3.5x2MM	
Allen Wrench	
Adjust Leveller C99	

-  • Read instructions, cover to cover-
-  • Have 2 adults on hand for assembly-
-  • Do not assemble on flooring or carpet-
-  • Assemble on a clean non-marring surface (packing foam)-
-  • Save all packaging until finished-


Assembly Steps

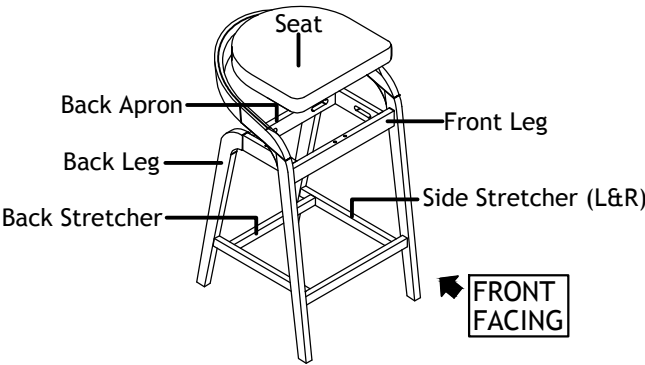Overview




This Chair has multiple parts and may require up to some 30 minutes to assemble.To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

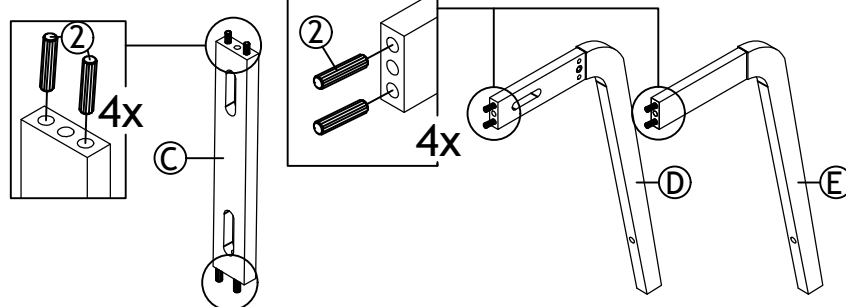Step 1



Insert the Wood Dowel DIA 8x35mm ② into the Back Apron (C). Then, insert the Wood Dowel DIA 10x35mm ② into the Right Back Leg (D) and Left Back Leg (E) as figure show as the picture.

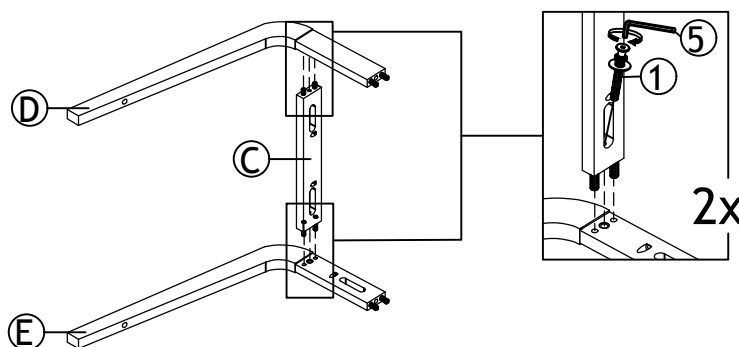Step 2




Place the Left Back Leg (E) on a soft surface to avoid any scratches or damages to the product.

Step 2.1 Insert the Back Apron (C) with Left Back Leg (E) by inserting Bolt Set (M6x50mm) ① by using Allen wrench ⑤ .

Step 2.2 Turn the assembled Left Back Legs over to Right Back Leg (D)by inserting Bolt Set (M6x50mm) ① using the Allen wrench ⑤.

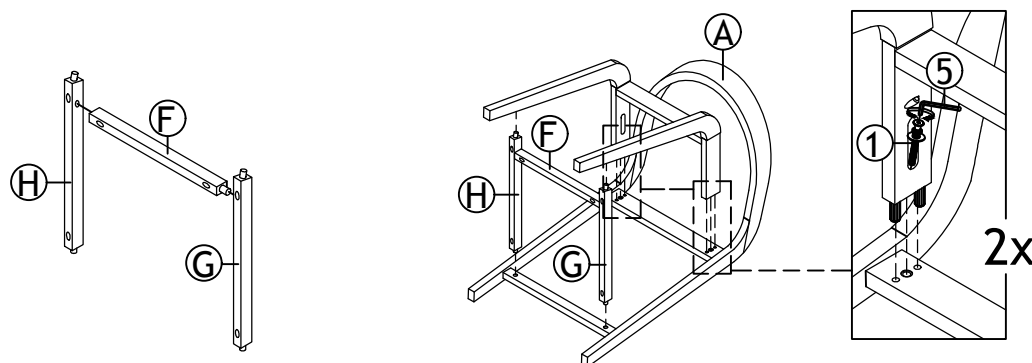Step 3




First Stand Up the Chair Footrest, and then install the front legs.

Step 3.1 Insert the Back Stretcher (F) to Right and Left Side Stretcher (G)(H). Align the Back Leg from Step1 with the hole in the Front Leg and insert it.

Step 3.2 Move the Back Leg of Step 1 insert to Front Leg Backrest (A) by inserting Bolt Set (M6x50mm) ① by using Allen wrench ⑤.

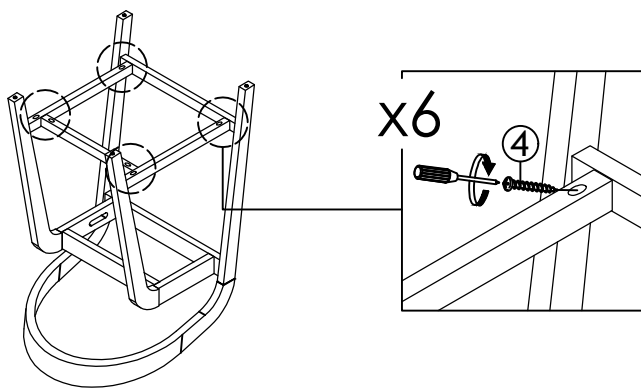
Step 4



Turn the chair over.


Step 4.1 Screw up Chair Footrest with Back Left and Right Stretcher (F,G,H) by inserting Pan Head Screw M5x32mm ④ using the Screwdriver (NOT PROVIDED).

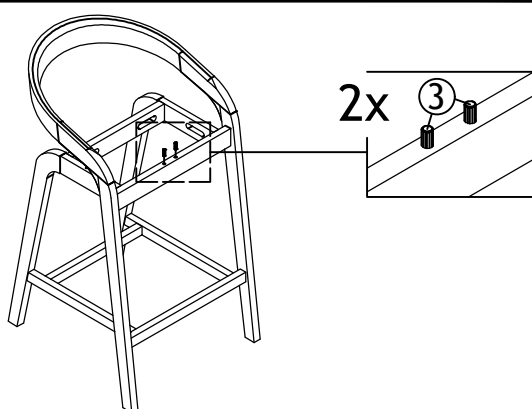Step 5



Insert the Wood Dowel DIA 8x25mm ③ into the mounting position of Front Rail as figure as the picture.

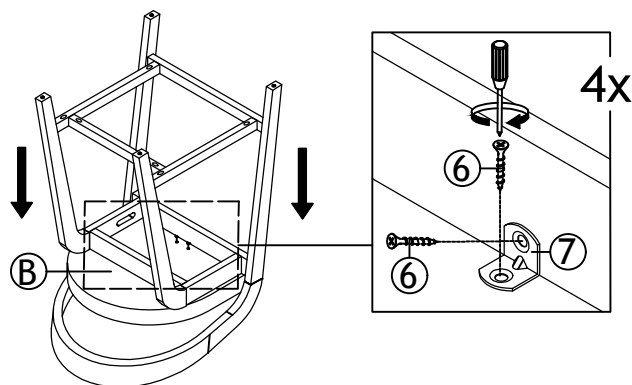
Step 6



Align the Wood Dowel DIA 8x25mm ③ with mounting position of Seat (B) as figure as the picture Step 6.1.


Align the cushion with the wood dowel and insert it, then screw up the Back Rail and Front Rail by inserting L Bracket ⑦ and CSK Screw M3.5 x 12MM ⑥ by using Screwdriver (NOT PROVIDED).

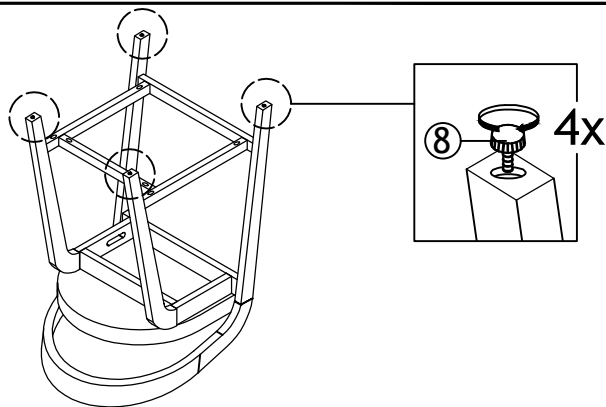Step 7



Insert the Adjust Leveller C99 (8) into the Bottom Leg as figure as the picture.

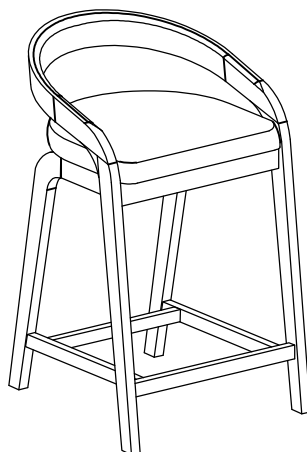Step 8



Turn the Chair right side up.

Place the Chair on a **LEVEL SURFACE**.

Inspect it and make sure all parts are adequately connected

Gently and gracefully, sit into to the Chair.

This would help to align all the parts at all the joint areas.

Then get off the Chair, and in a sequential manner, proceed to tighten all screws.

To tighten the Screws at the base of the Chair, do secure assistance from your adult partner(s).

You may be required to turn the Chair, to gain easy access to the secure points.

Turn the Chair in a synchronised manner.

CAUTION 1: When tightening these screws, tighten sequentially

DO NOT tighten any screw fully and then towards the next one. This would cause the frame to warp. If there is still wobbles, loosen the screws and execute this same process.

WARNING!! IF CHAIR IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.

The Chair is ready to be used.

CAUTION 2: This Chair can only be used on a flat, level surface.

Questions & Answers about Proposition 65

. What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

. What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

. Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.