
END TABLE

Assembly Instructions

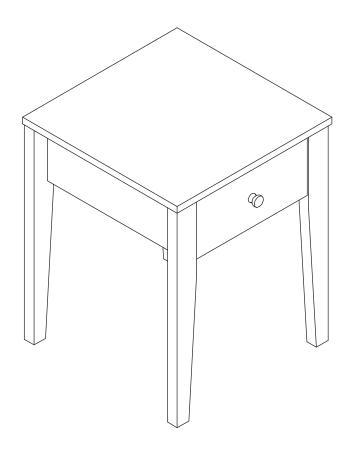

Product Refs-HM-ST005-001

Imported By: Forward Industries, 33401. U.S.A

Safety and Care Advice


- 1. The maximum weight that can be placed on this product is 110lbs.
- 2. This product must not be used as a seat.
- 3. Check carefully to ensure correct and complete assembly before using.
- 4. Don't allow children to play near the product as their behaviour is unpredictable. The manufacturer is not responsible for loss, injury, or damage due to improper actions or use.
- 5.Do not use corrosive or abrasive materials near the product. Please ensure that the cleaner used will not pollute the environment.
- 6. Cleaning should not be attempted by children without supervision.
- 7. Please make sure there are no hazard sources in your operating environment. e.g., do not leave tools around. Always be careful to dispose of the packaging materials in order to avoid any possible danger, e.g. plastic bags may lead to choking hazard to children.
- 8. We recommend you keep the original packaging of the item in case of the need for return or future transportation.
- 9. Do not use outdoors. SAVE THESE INSTRUCTIONS. For Household use only.






Main Components


Please check you have all the parts listed below

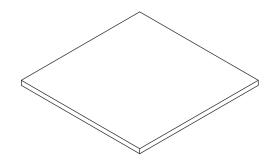

1 Top Panel Qty 1 (15.74×15.74×0.59")

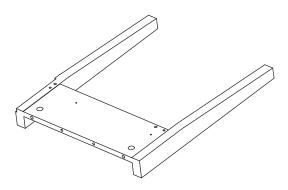


2 Side Panel (Left) Qty 1 (15.55×19.09×1.96")

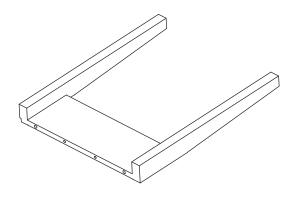


3 Side Panel (Right) Qty 1 (15.55×19.09×1.96")



4 Stretcher Qty 2 (11.41×2.16×0.59")




5 Back Panel Qty 1 (11.92×5.51×0.11")




6 Drawer Front Qty 1 (11.29×5.31×0.59")

Main Components


Please check you have all the parts listed below





7 Drawer Side (Left) Qty 1 (13.38×4.13×0.47")

8 Drawer Side (Right) Qty 1 (13.38×4.13×0.47")




- 9 Drawer Back Panel Qty 1 (10.15×4.13×0.47")
- Drawer Base Qty 1 (13.22×10.47×0.11")

Fixings, Fittings And Tools

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

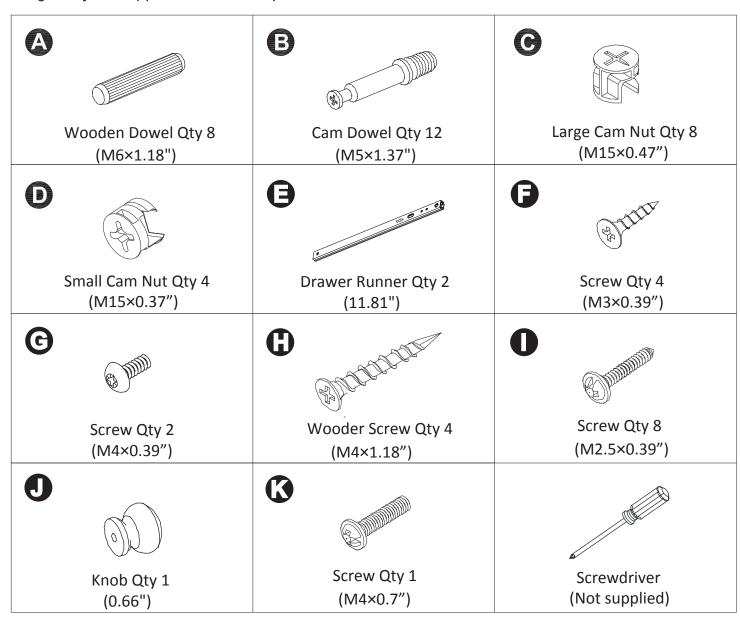

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.


Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401


STEP 1


Fit cam dowels **B** to side panels 2 and 3 and drawer front **6** .

Fit wooden dowels (A) into side panels **2** and

3 as shown.

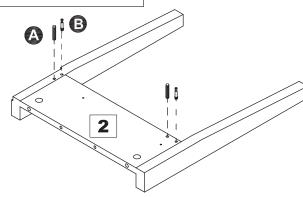

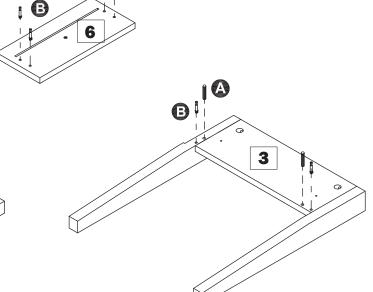






STEP 2

Fit cam dowels **B** to top panel **1**.

Fit wooden dowels (A) into top panel **1** as shown.

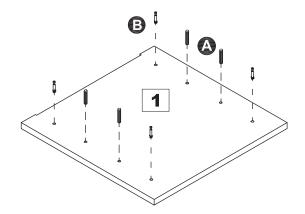








STEP 3

Assemble drawer runners (a) to side panels (a) and (a) using screws (b).

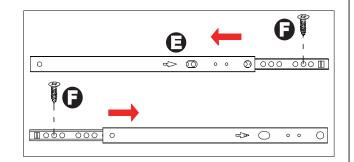

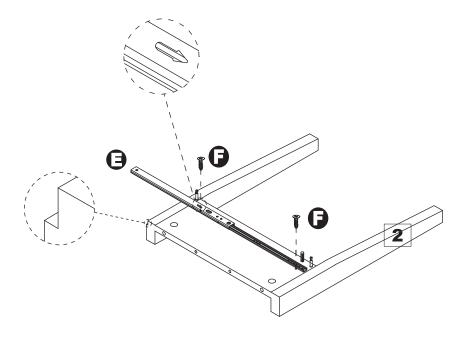

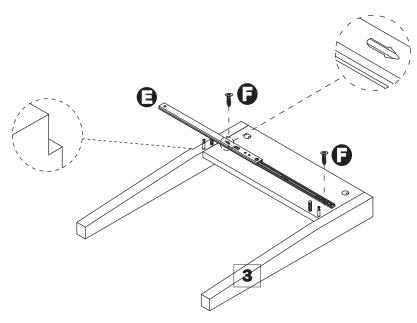






STEP 4

Fit large cam nuts **(G**) into stretchers **(4)** as shown.

Assemble stretchers 4 to side panels 2 and 3.

Secure by tightening the cam nuts.

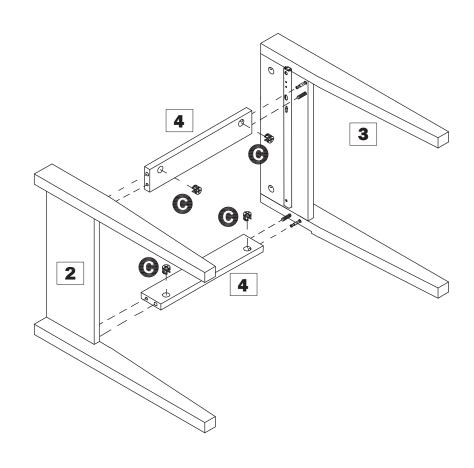




STEP 5

With help, stand the unit upright.

Insert large cam nuts **(G**) into side panels **(2)** and **(3)**.


Locate top panel **1** into position and secure by tightening cam nuts.



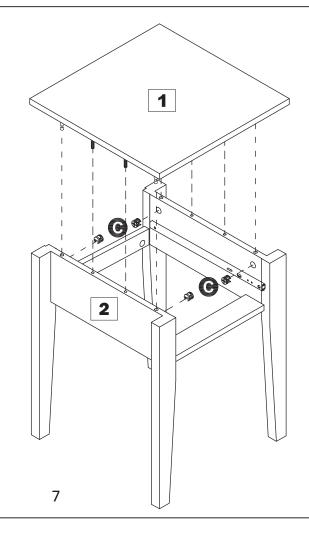

STEP 6

Assemble back panel **5** using screws **1**.

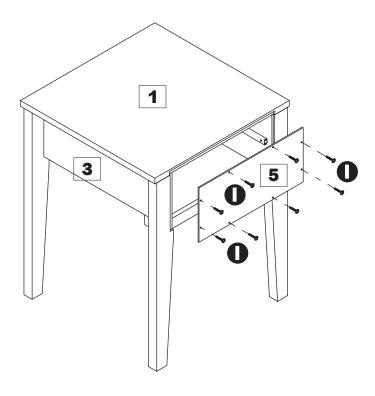




STEP 7

Assemble drawer back panel **9** and side panels **7** and **8** using screws **1**.

Slide drawer base **10** into grooves.

Assemble drawer front **6** . Secure using small cam nuts **D** .

Fit drawer Knob **①** using screw **⑥** .

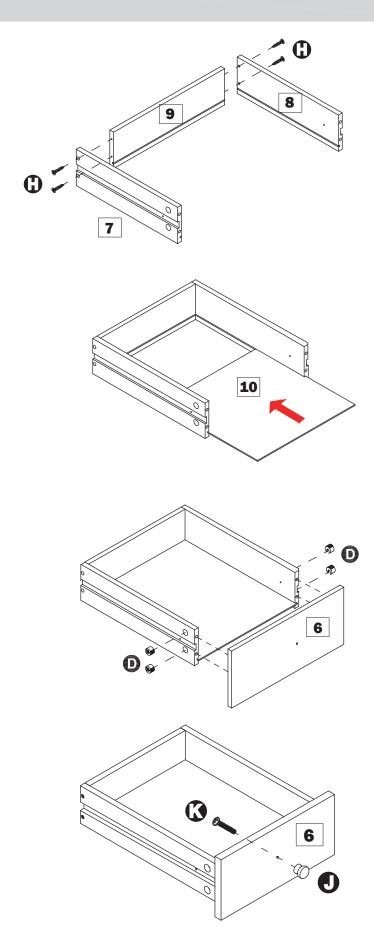










STEP 8


with help, stand the unit upright.

Engage the drawer runners.

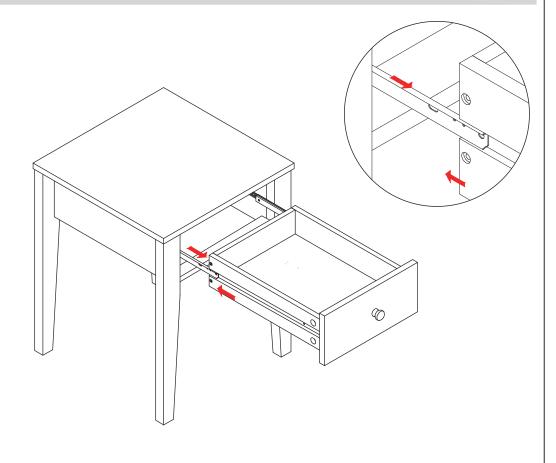


STEP 9

Secure drawer body to runners using screws **G**

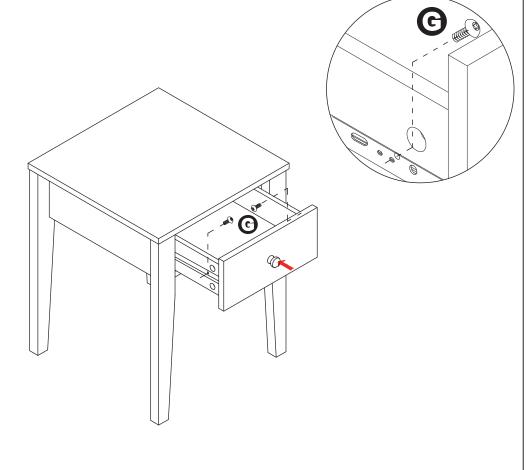



STEP 10

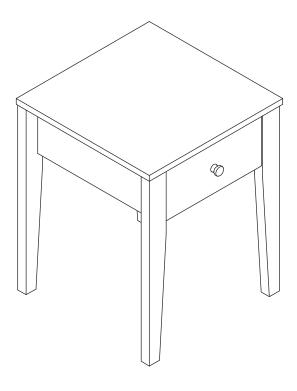

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at **customerservice@forwardindustries.com, or 561-465-0030, Option 0.**

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401