


highmore

Rocko Workbench With Pegboard User Manual

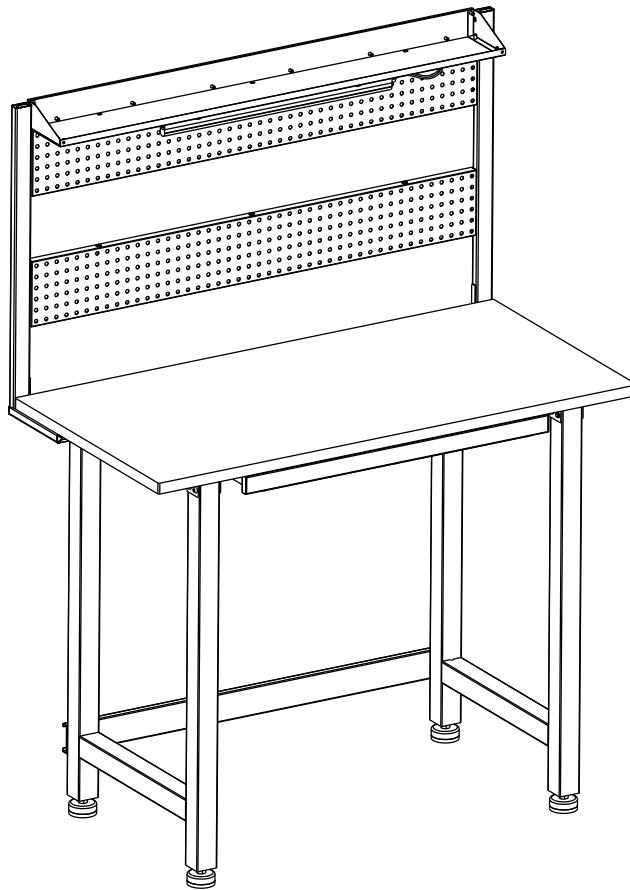

Product Ref-HM-WB005-001

Imported By: Forward Industries, 33401. U.S.A


Safety and Care Advice

1. The maximum weight that can be placed on this product is 2976lbs.
2. This product must not be used as a seat.
3. Check carefully to ensure correct and complete assembly before using.
4. Don't allow children to play near the table as their behaviour is unpredictable. The manufacturer is not responsible for loss, injury, or damage due to improper actions or use.
5. Do not use corrosive or abrasive materials near the equipment. Please ensure that the cleaner used will not pollute the environment.
6. Cleaning should not be attempted by children without supervision.
7. Please make sure there are no hazard sources in your operating environment. e.g., do not leave tools around. Always be careful to dispose of the packaging materials in order to avoid any possible danger, e.g. plastic bags may lead to choking hazard to children.
8. We recommend you keep the original packaging of the item in case of the need for return or future transportation.
9. When installing, be sure to wear safe and compatible tools. It is recommended that two people complete the installation together.
10. Please check the usage status of the tool table template from time to time to avoid cracks on the wooden board, resulting in damage to the product and unnecessary losses.

Note: This type of product is recommended for indoor use. If it is used outdoors, weather may cause accelerated aging of the wood board, causing damage to the product or personal injury.




2 PEOPLE ASSEMBLY

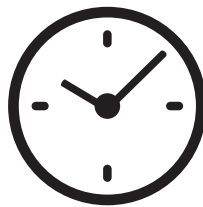

**APPROXIMATE 30 MINUTE
ASSEMBLY TIME**


Main Components

Please check you have all the parts listed below

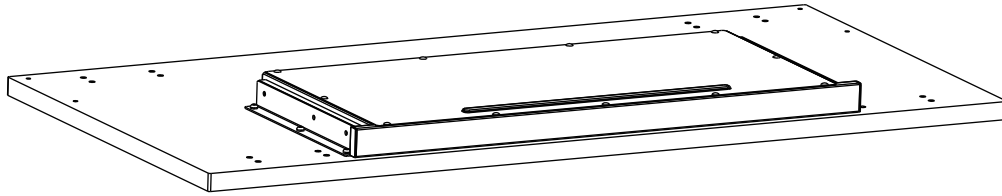


1 Table Top Qty 1

(47.2*23.6*2.8")

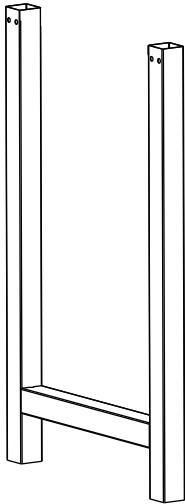

2 Leg Frame Qty 2

(35.4*21.8*2.0")

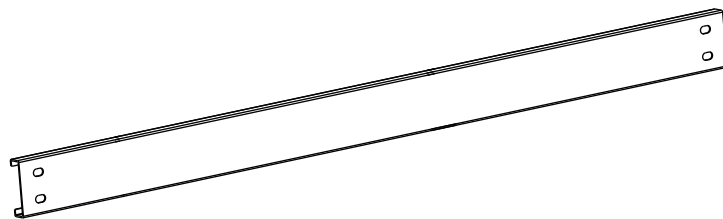

3 Rear Stretcher Qty 1

(37.8*0.6*2.6")




4 Height Adjustable Foot Qty 4

(ϕ 2.4*2.2")




5 Metal Bracket Qty 8

(1.9*1.6*1.6")

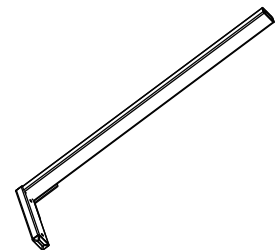


6 Supporting Bracket (left) Qty 1

(23.6*1.7*28.0")

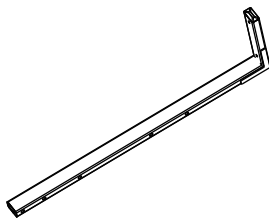

7 Supporting Bracket (right) Qty 1

(23.6*1.7*28.0")

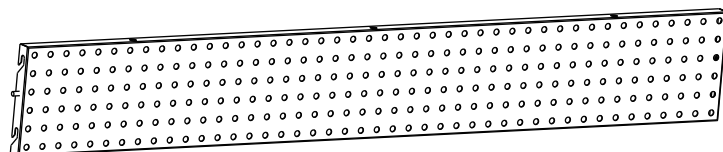

8 Peg Board Qty 2


(43.9*5.9*0.8")

Main Components


Please check you have all the parts listed below



9 LED Light Qty 1
(23.6")

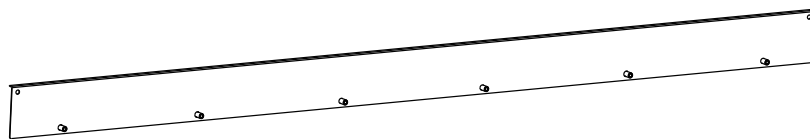


10 Shelf Back Panel Qty 1
(43.9*2.5*0.2")

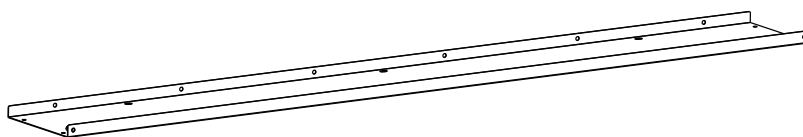

11 Shelf Qty 1
(43.9*5.4*0.6")



12 Shelf Side Panel Gap
(left) Qty 1
(5.2*2.4*0.6")











13 Shelf Side Panel Gap
(right) Qty 1
(5.2*2.4*0.6")

Fixings, Fittings And Tools (A)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  M6 Screw Qty 17 (M6*0.63")	B  M8 Screw Qty 36 (M8*0.63")	C  M4 Screw Qty 14 (M4*0.39")
D  4x4 Allen key Qty 1 (0.16*0.16*2.44")	E  5x5 Allen key Qty 1 (0.2*0.2*3.15")	F  3M Cable Clip Qty 5 (0.69*2.56")
G  Spring Washer φ0.24" Qty 17	H  Spring Washer φ0.31" Qty 36	







If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Fixings, Fittings And Tools (B)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

		
Tool Hook (Type U) Qty 5	Tool Hook (Type V) Qty 2	Tool Hook (Type W) Qty 2
		
Tool Hook (Type X) Qty 5	Tool Hook (Type Y) Qty 2	Tool Hook (Type Z) Qty 2


If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Assembly Steps

STEP 1

Assemble metal brackets **5** to the underside of table top **1** using fixings **B** and **H**.

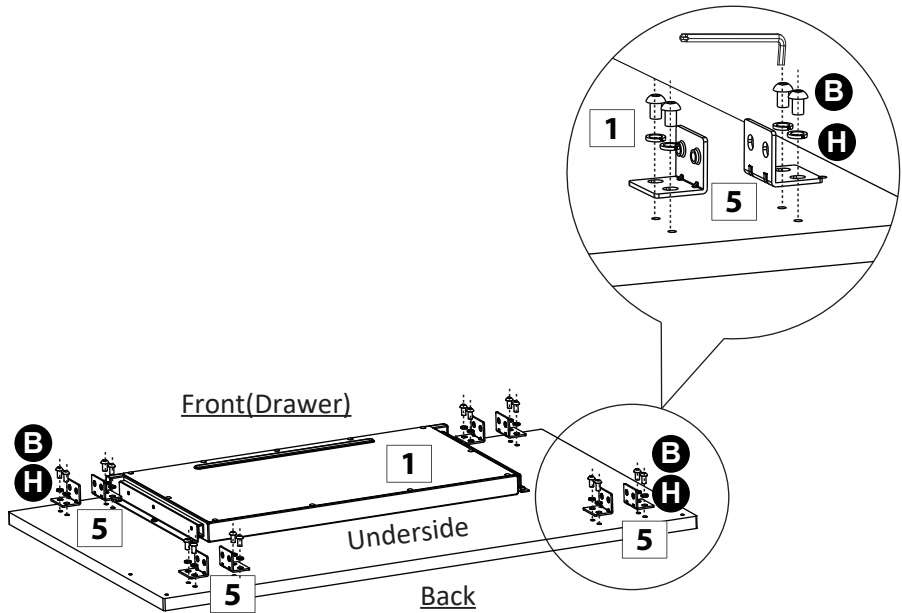

SHOWN UPSIDE DOWN

B



M8 Screw Qty 16

E



5x5 Qty 1

H



Washer $\phi 0.31$ Qty 16


STEP 2

Assemble leg frames **2** in between metal brackets **5** using fixings **B** and **H**.

Important Ensure the threaded holes in legs **2** are located at the back of the table top **1**.



Note: Holes must be located at the back of the table.

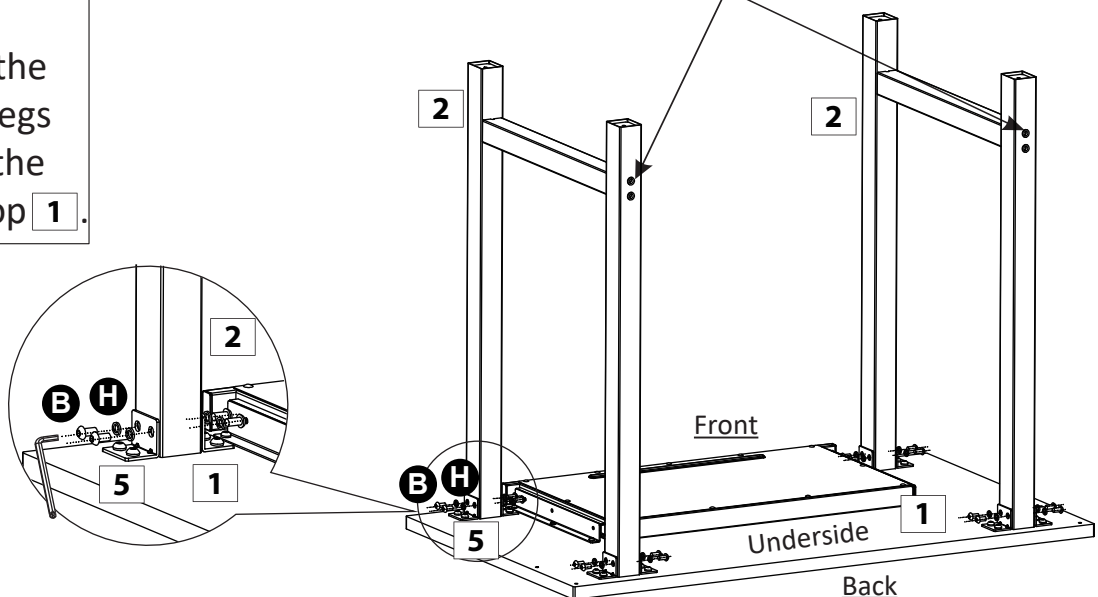

SHOWN UPSIDE DOWN

B



M8 Screw Qty 16

E



5x5 Qty 1

H




Washer $\phi 0.31$ Qty 16

Assembly Steps

STEP 3

Assemble rear stretcher

3 to the back of leg frames **2** using fixings **B** and **H**.

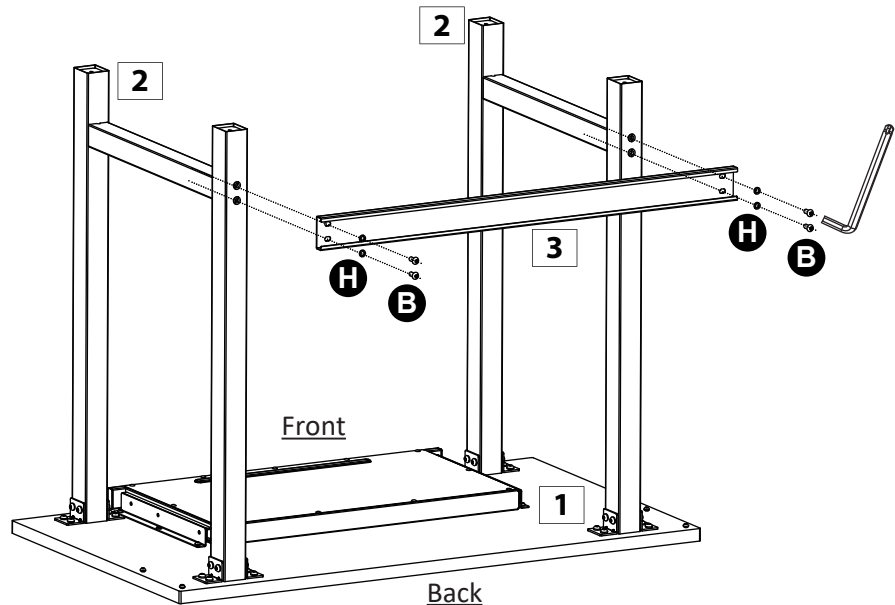

SHOWN UPSIDE DOWN

B



M8 Screw Qty 4

E



5x5 Qty 1

H



Washer $\phi 0.31$ Qty 4



STEP 4

Screw height adjustable feet **4** into the ends of leg frames **2**.

With help turn the table over and adjust the feet to achieve a stable base.

⚠ Warning the desk is heavy, lift with care.


Adjust to achieve stable position.

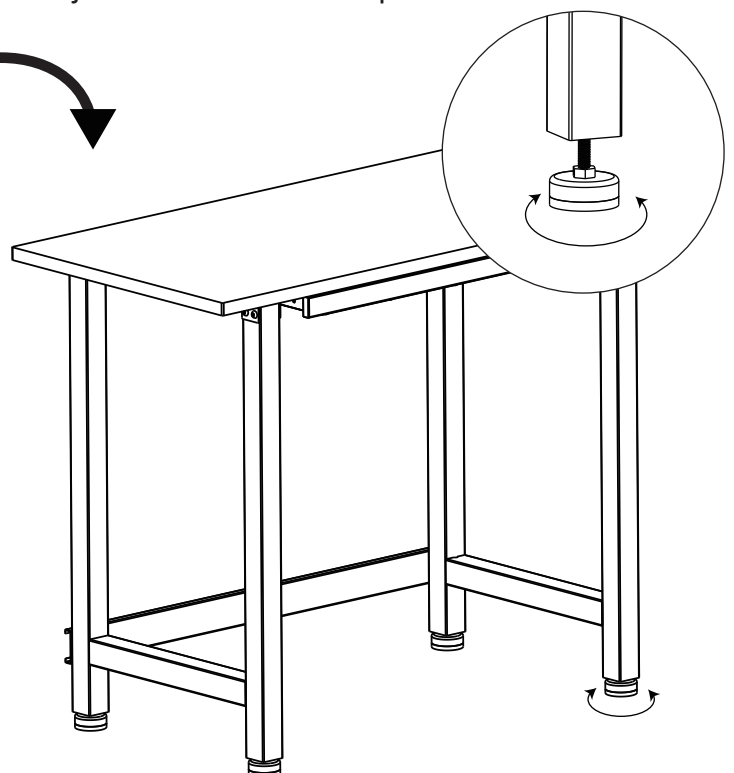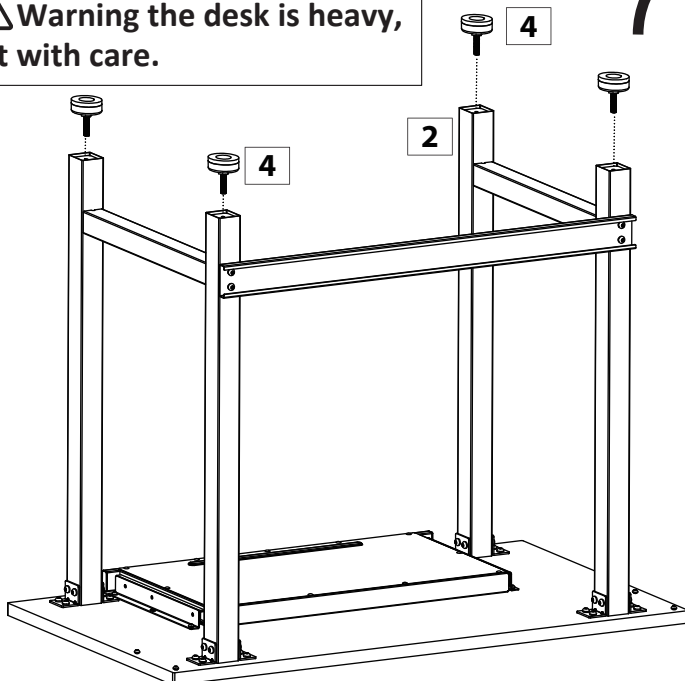

Assembly Steps

STEP 5

Assemble pegboard supports **6** and **7** to the underside of table top **1** using fixings **A** and **G**.

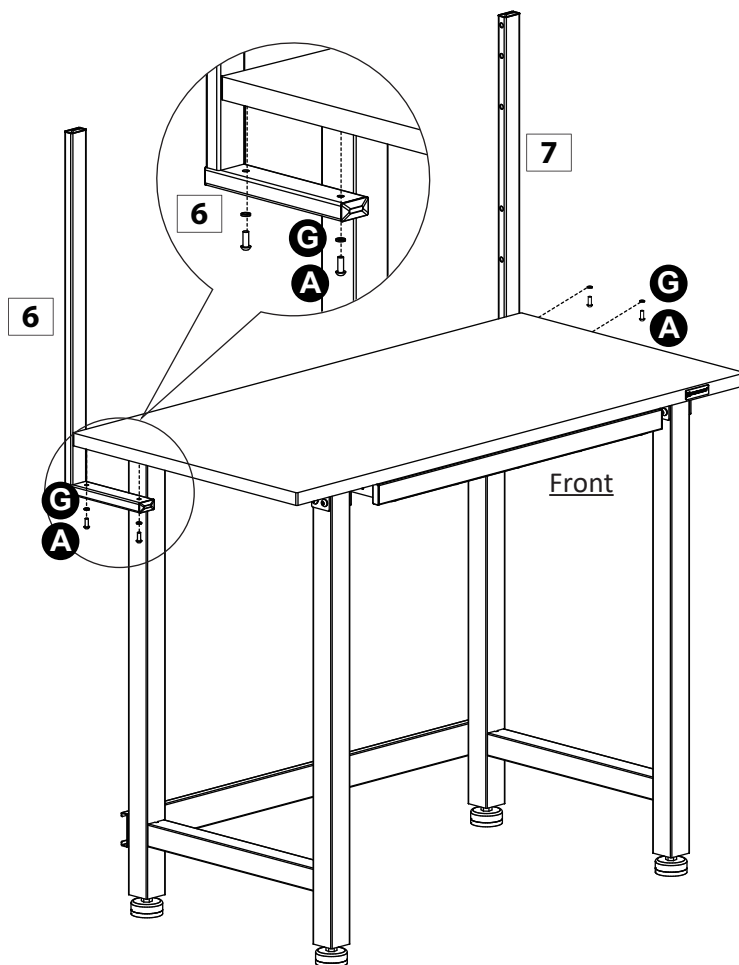

A



M6 Screw Qty 4

D



4x4 Qty 1


G



Washer $\phi 0.24$ Qty 4

STEP 6

With help, locate pegboards **8** in between supports **6** and **7**.
Secure fixings **A** and **G**.

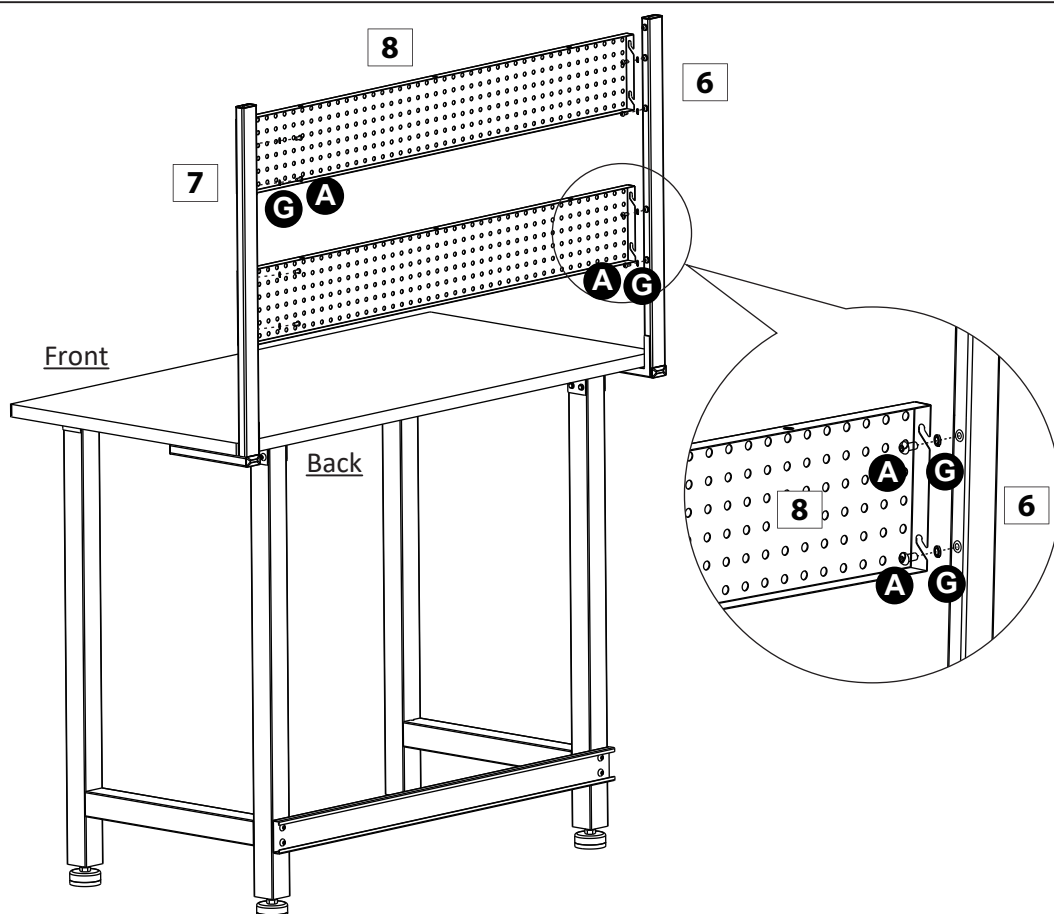

A



M6 Screw Qty 8

D



4x4 Qty 1

G



Washer $\phi 0.24$ Qty 8

SHOWN FROM BACK


Assembly Steps

STEP 7

Assemble Shelf.

- a. Assemble shelf back panel **10** and shelf **11** together using fixings **C**.
- b. Assemble shelf side panels **12** and **13** using fixings **C**.

a.

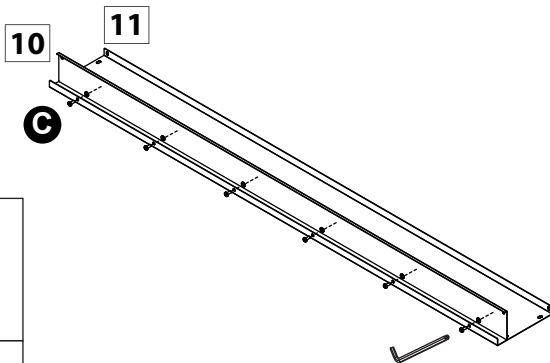

C




M4 Screw Qty 14

E



5x5 Qty 1


b.

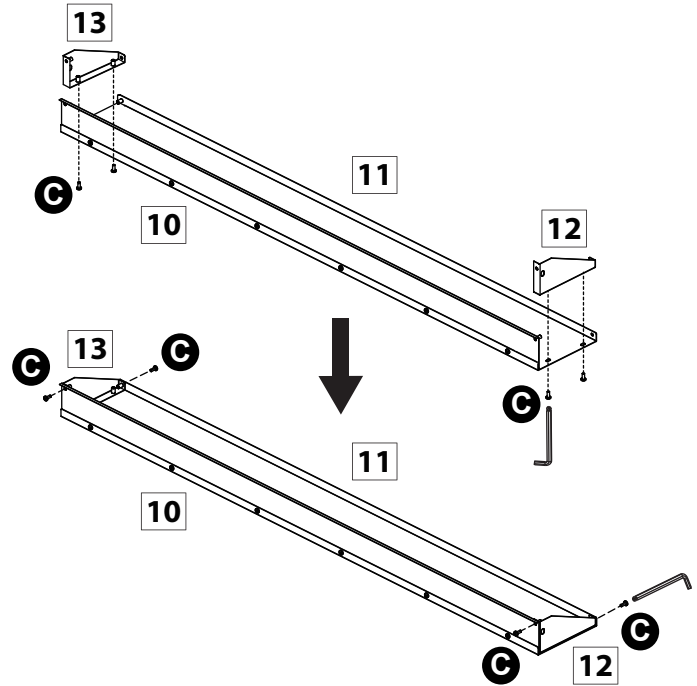

STEP 8

Locate shelf into position between pegboard supports **6** and **7**.
Secure using fixings **A** and **G**.

- a. Fixings are located through shelf side panels **12** and **13**.
- b. Also through shelf **11** into the top peg board **8**.

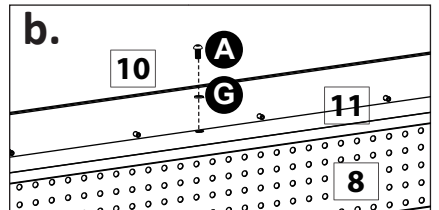

A



M6 Screw Qty 5

D





4x4 Qty 1

G



Washer $\phi 0.24$ Qty 5

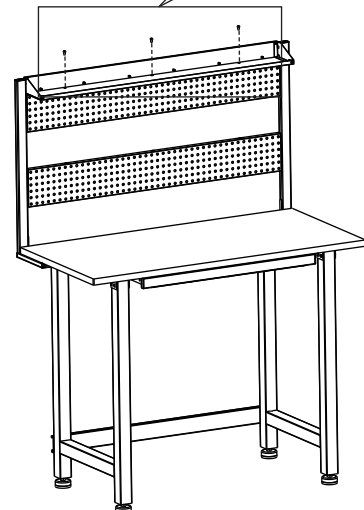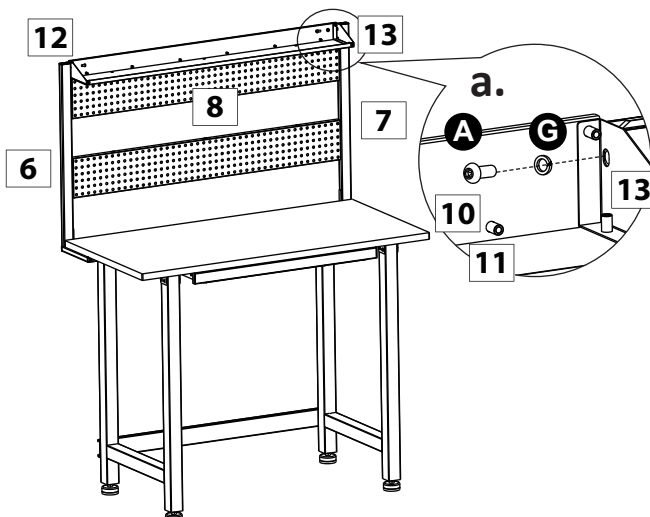

Assembly Steps

STEP 9



a. Attach magnets to LED light **9**.

Locate the light to the underside of shelf **11**.



b. Use self adhesive cable clips **F** for cable management.

c. Locate tool hooks into the peg boards as required.


a.

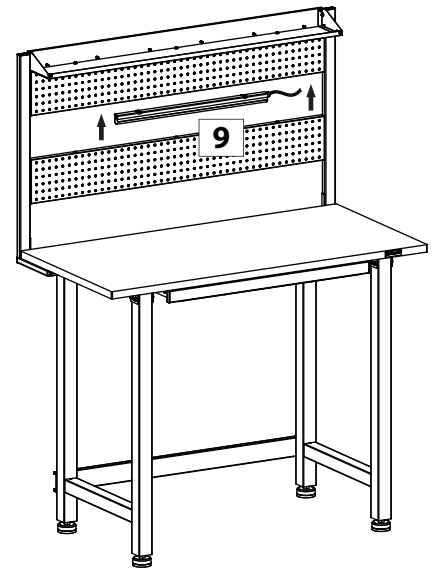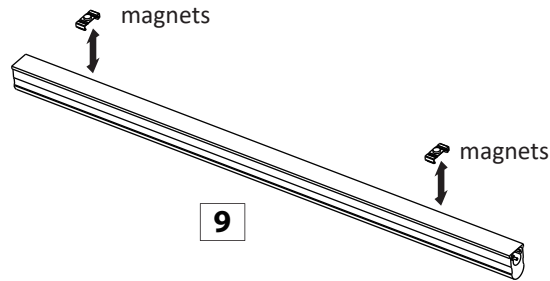

b.

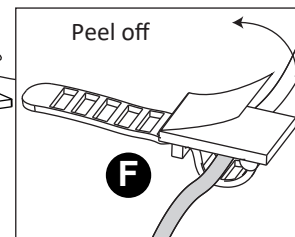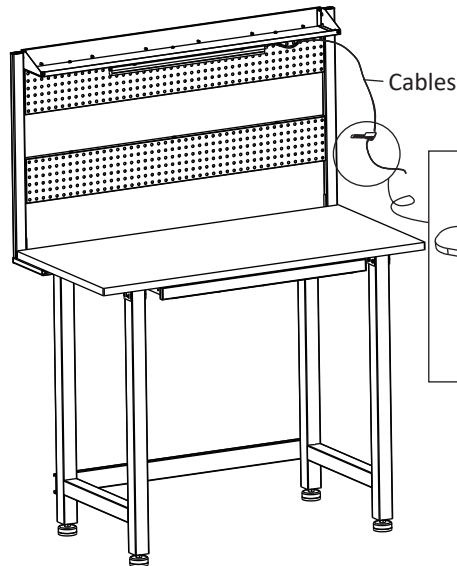

c.

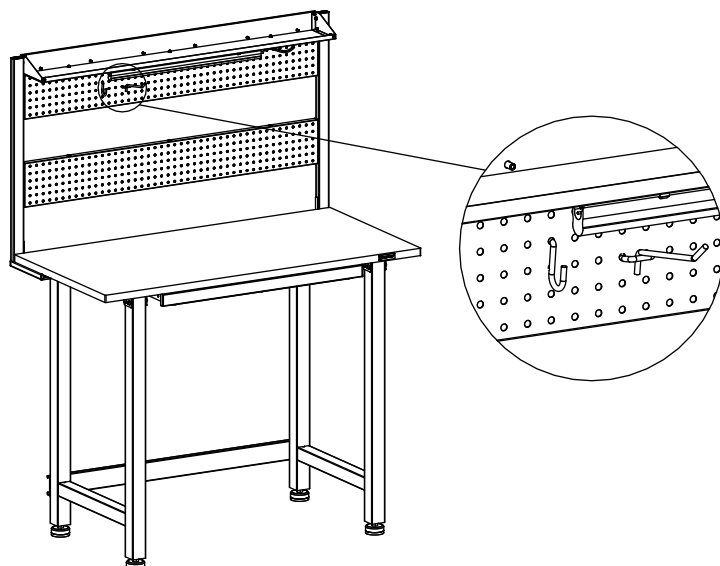

U



Tool Hook (Type U) Qty 5

V



Tool Hook (Type V) Qty 2

W



Tool Hook (Type W) Qty 2

X



Tool Hook (Type X) Qty 5

Y



Tool Hook (Type Y) Qty 2

Z



Tool Hook (Type Z) Qty 2


F



3M Cable Clip Qty 5

STEP 10

Assembly is complete

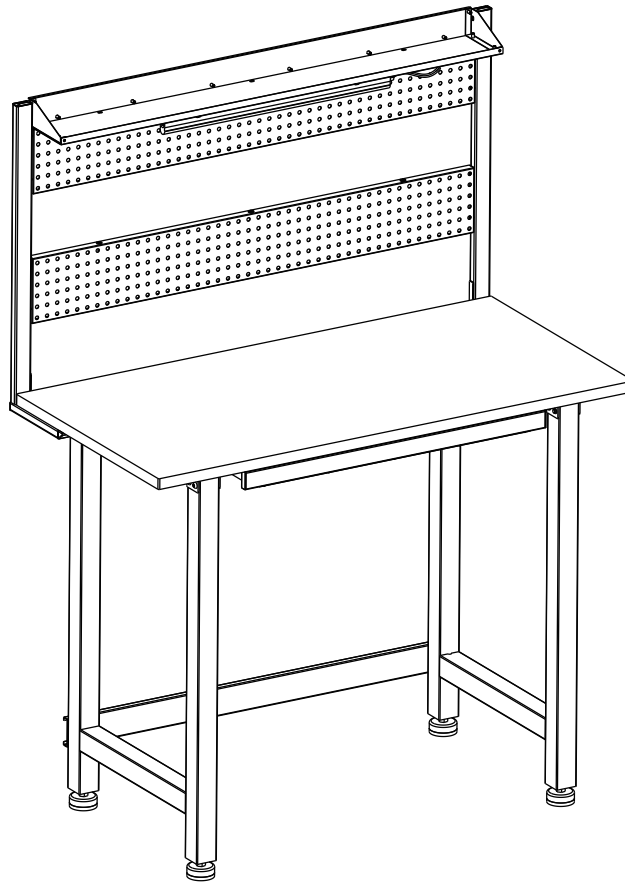

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Certification

RoHS