

Easy-Install Fascia

Modern Sliding Door Track System


INSTALLATION INSTRUCTIONS



REQUIRES
TWO
PEOPLE

Easy-Install Fascia Modern Sliding Door track System


TOOLS REQUIRED (NOT PROVIDED)

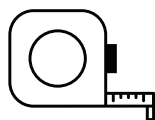


Measuring
Tape



Pencil

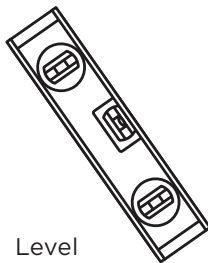

Level

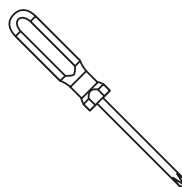

Phillips
Screwdriver



Step
Ladder

PLEASE READ CAREFULLY

- Read all instructions carefully.
- Protect your eyes by wearing safety goggles.
- Keep the installation area free of clutter.
- Follow each step completely before starting the next step.


IMPORTANT!

VERIFY THAT ALL PARTS ARE INCLUDED IN THE PACKAGING. IF ANY PARTS ARE MISSING, DO NOT RETURN THIS PRODUCT TO THE STORE.


FOR PARTS ASSISTANCE, PLEASE CALL 1-800-493-5263 BETWEEN 8:30 AM AND 4:30 PM EST, MONDAY TO FRIDAY.

SUPPORT IS PROVIDED IN ENGLISH, FRENCH AND SPANISH.


PACKAGE CONTENTS

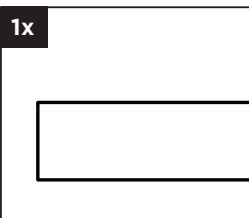


Front Fascia

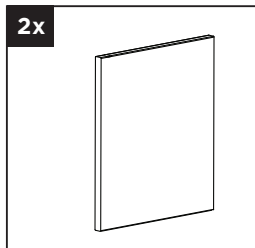

Side Fascia cover

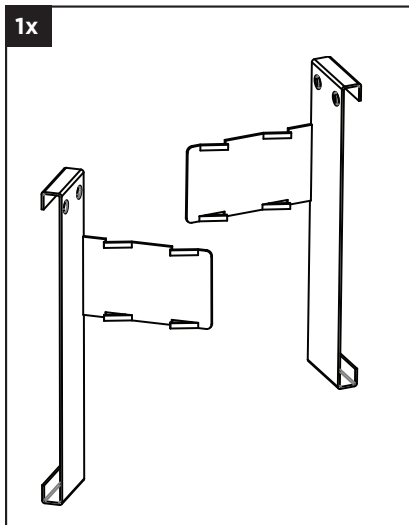

Side Fascia Clips
(Right & Left)

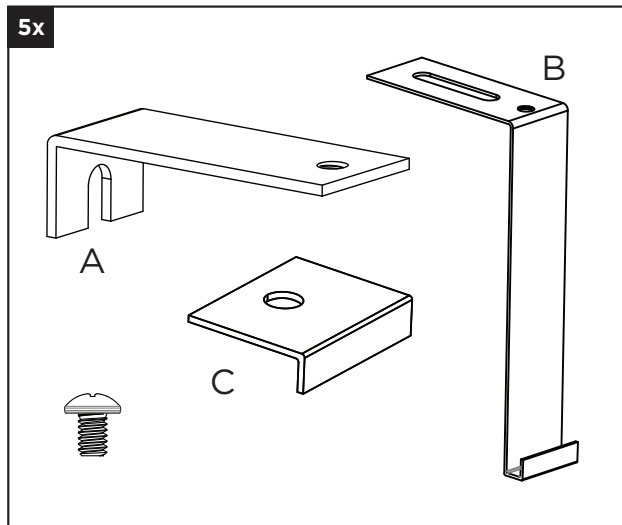


Fascia Brackets:
A - Short L-Bracket
B - Long L-Bracket
C - Fascia Clip

NOTE: For 42" Bi-Fold Barn Doors:
Use only: 3x Fascia Brackets
Cut front Fascia length to size


NOTE:

THIS FASCIA IS ONLY COMPATIBLE WITH THE EASY-INSTALL J-TRACK 78 3/4" SYSTEM

STEP 1A Attach Side Fascia (Illustrations viewed below are from behind of track)

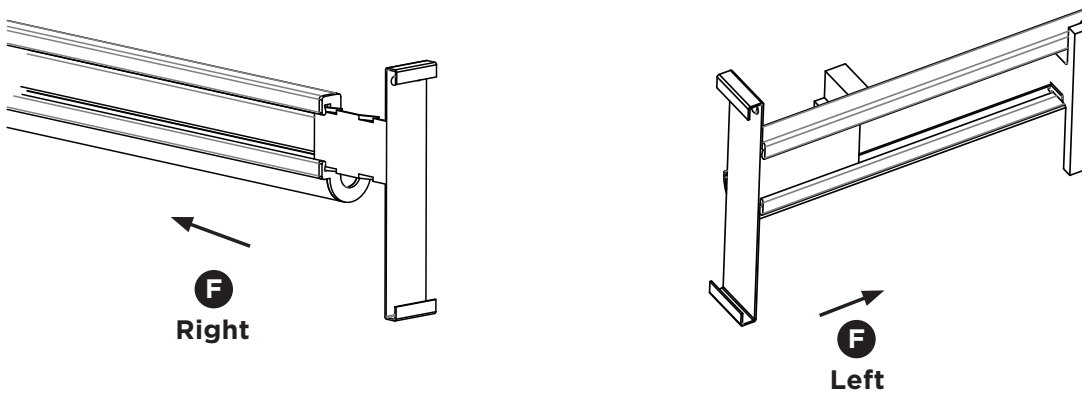

F) Attach the Side Fascia Brackets into the ends of the track channel as shown.

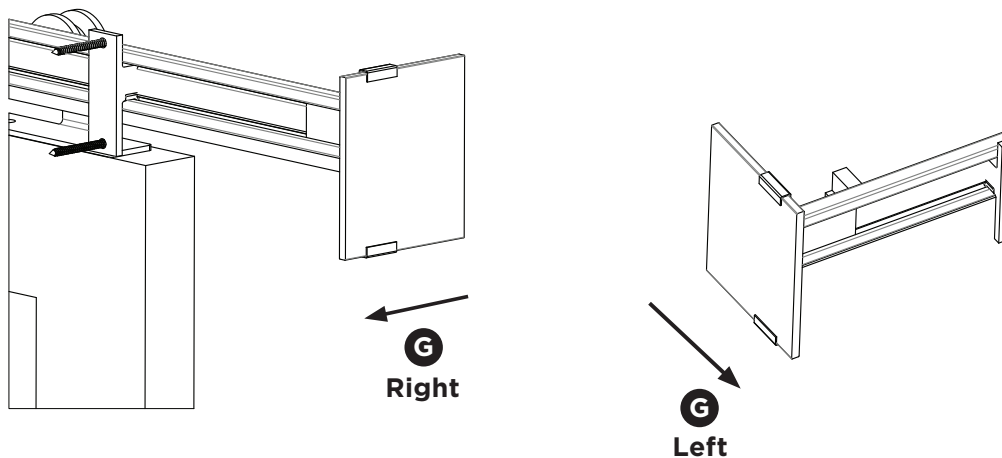




G) Slide the Side Fascia into the Side Fascia Brackets.

H) Adjust the Side Fascia in or out to align with the front Fascia.

NOTE: Make adjustments to the side fascia and front fascia manually to align the edge to give a boxed look

STEP 1B Attach Front Fascia

NOTE: If you choose to paint the Fascia do so before installation. Allow sufficient time to dry.

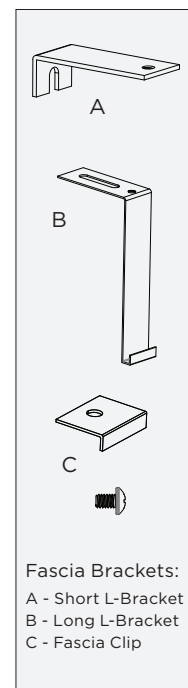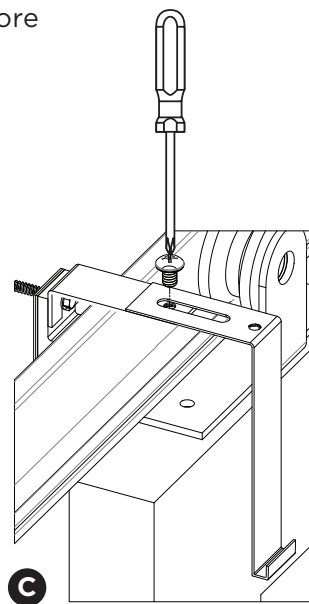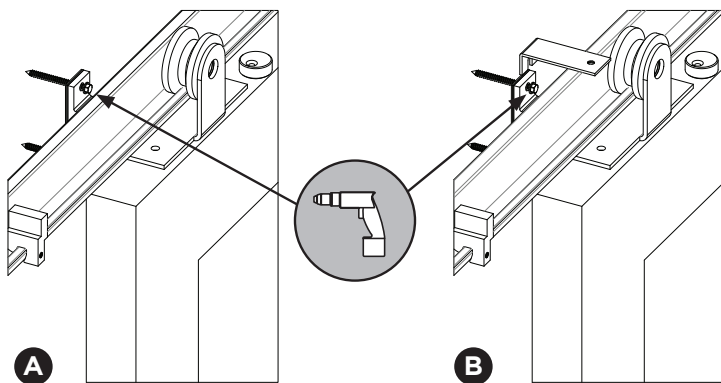


A) Slightly loosen the top screw on one of the Wall Brackets.

NOTE: Loosen top screw on only 1 bracket at a time

B) Slide the cut slot on Fascia Bracket A into the top screw and tighten the Wall Bracket top screw.

NOTE: Repeat Step A until all the Fascia Bracket A's are attached to the Wall Brackets.

C) Attach Fascia Bracket B to the Fascia Bracket A so the two pieces are now in line with each other and loosely tighten the screw within the slot.

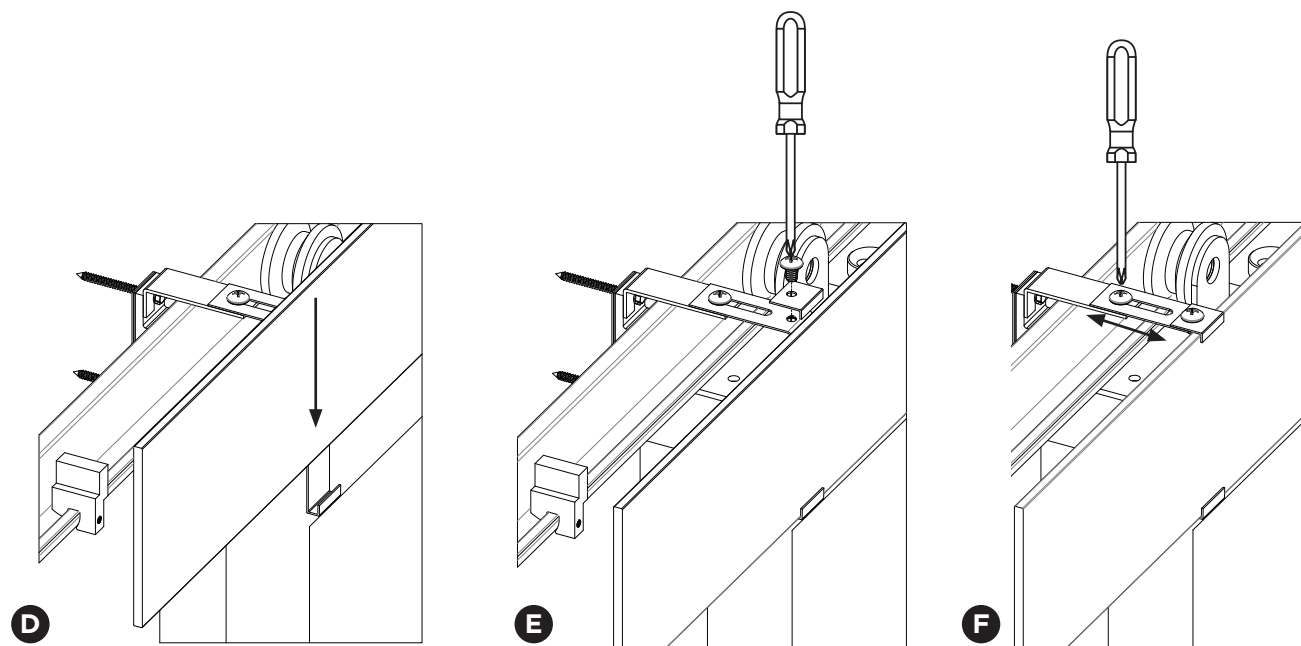

D) Drop Fascia into Fascia Bracket B.

NOTE: Bracket should hold the Fascia, but ensure it does not fall.

E) Attach the Fascia Clip (C) into the remaining top hole and tighten the top screw.

F) Adjust the Fascia and Track distance to your liking by sliding the slot in or out as shown in step Fig. F. Secure this position by tightening the top screw on the Fascia Bracket.