



VC R1.0

Installation and Operating Manual

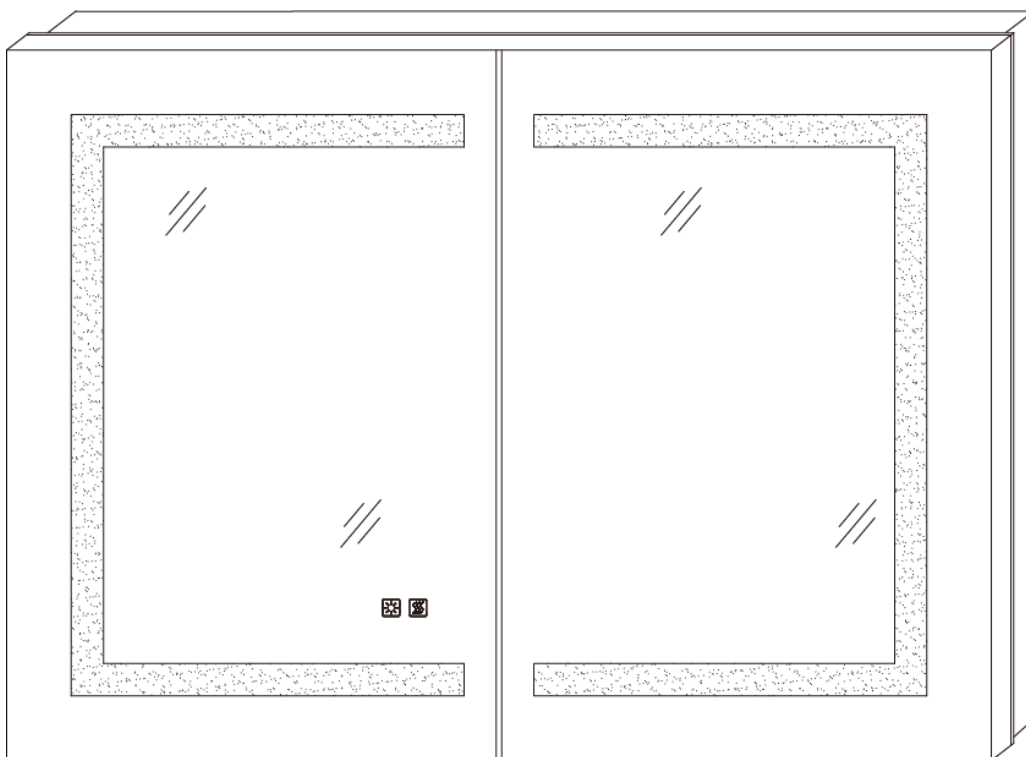


**Please do not return the product to the store.
Contact us with any questions.**

Model Specification

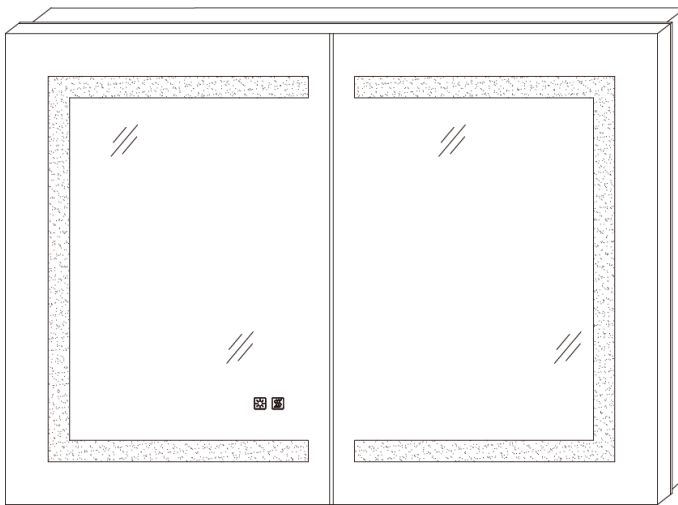

- Aluminum Frame
- Double Sided Mirror
- Adjustable Shelves
- Quiet Hinges
- Recessed or surface mounting
- Color Temperature:6000K
- Dimming
- Anti Fog
- Built-in USB

No.	Dimension	Color	Door Type	Remark
1	16"×24"	Matte Black	Single door Left or Right	Specify When Ordering
2	20"×26"	Matte Black	Single door Left or Right	Specify When Ordering
3	30"×26"	Matte Black	Double Door	
4	36"×26"	Matte Black	Double Door	

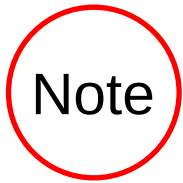

For easy and safe installation, please refer to the following:

Read all instructions thoroughly before installing the enclosed product. Read and take note of all **Safety Precautions**, care and maintenance information.

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE DURING PRODUCT OPERATION AND MAINTENANCE.



WARNING AND SAFETY INSTRUCTIONS

Before installing your LED Medicine Cabinet, please make sure that you carefully read through this instruction sheet, refer back to them during installation to ensure your product is fitted safely and correctly. Keep the instruction for future use.

WARNING Risk of Fire and Electric Shock

- All fittings must be installed in accordance with current IEE wiring regulations. If in doubt, please consult a qualified electrician.
- Turn breaker off the electrical supply at the main circuit board before installation and maintenance.
- Suitable for indoor use only. This product should be positioned well away from curtains and fabrics. Never cover the mirror.
- Regularly check any parts for damage, if any part is damaged the product should not be used.

INSTALLATION SAFETY

- Inspect the product immediately upon receipt for any possible damage during transportation or missing parts. Handle the product with care and protect against knocks to all sides and edges of the glass.
- Ensure there are no hidden pipes or cables in the wall before drilling and sawing.
- Wear suitable safety glasses when drilling. Take care if drilling on tiled surfaces in case the drill slips.


CAUTION

The light source of this product is non-changeable light diodes (LED). **Do not disassemble the product**, as the light diodes can cause damage to the eyes.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture. Do not install this fixture in hazardous locations.

PARTS SUPPLIED

Z- Mounting Bar
×1

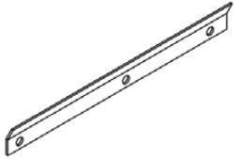

Support Bracket
×1



Wire Cap
×3



Anchor Screws
×5~10



Shelves
×2~6



Hinge Covers
×2~8



Anchors
×5~10




TOOLS REQUIRED


Drill




Pencil

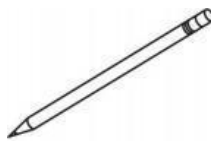

Level

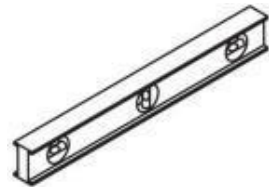

Tape

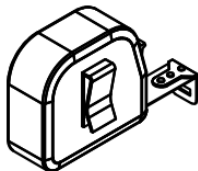

Gloves




Safety Glasses




**Phillip
Screw Driver**



**Drill Bit
8mm(5/16")**

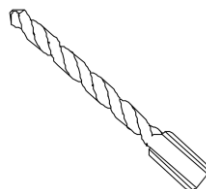

Hammer

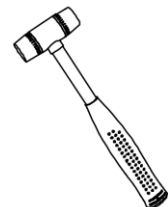

Installation Instruction



The medicine cabinet supports two installation methods:
1.Surface Installation and **2.Embedded Installation**.


Please choose the installation way as needed.




Some cabinet doors will be separated from the cabinet to reduce packaging volume. Please install the cabinet door after completing the cabinet installation according to the instruction.

Before installing the medicine cabinet, please remove the cabinet doors first. This will make the installation easier and more convenient.

1. First, disconnect the wires from the cabinet doors.

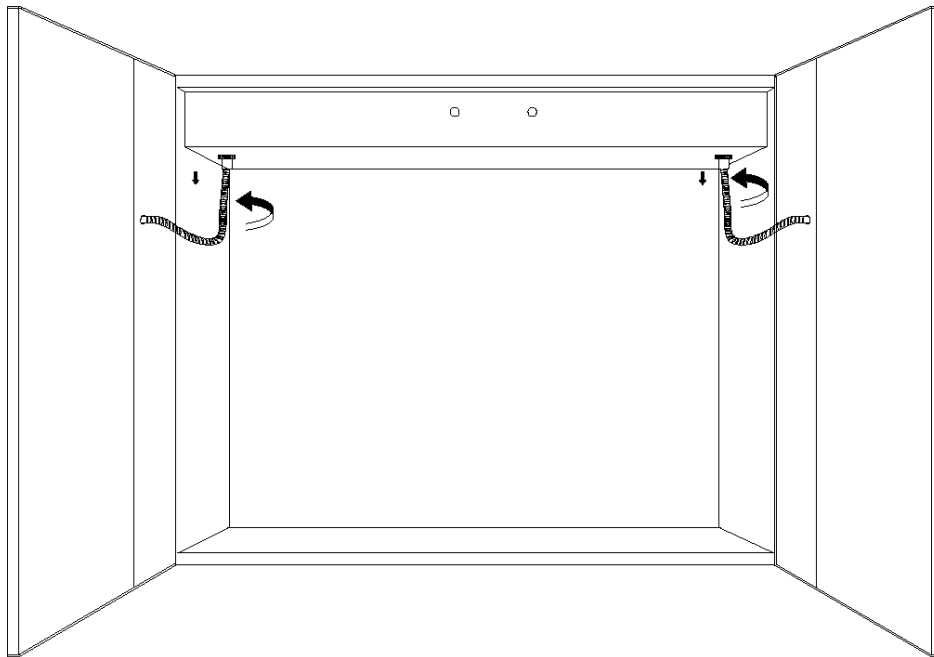


2. Then, press the end of the hinges and detach the cabinet door.

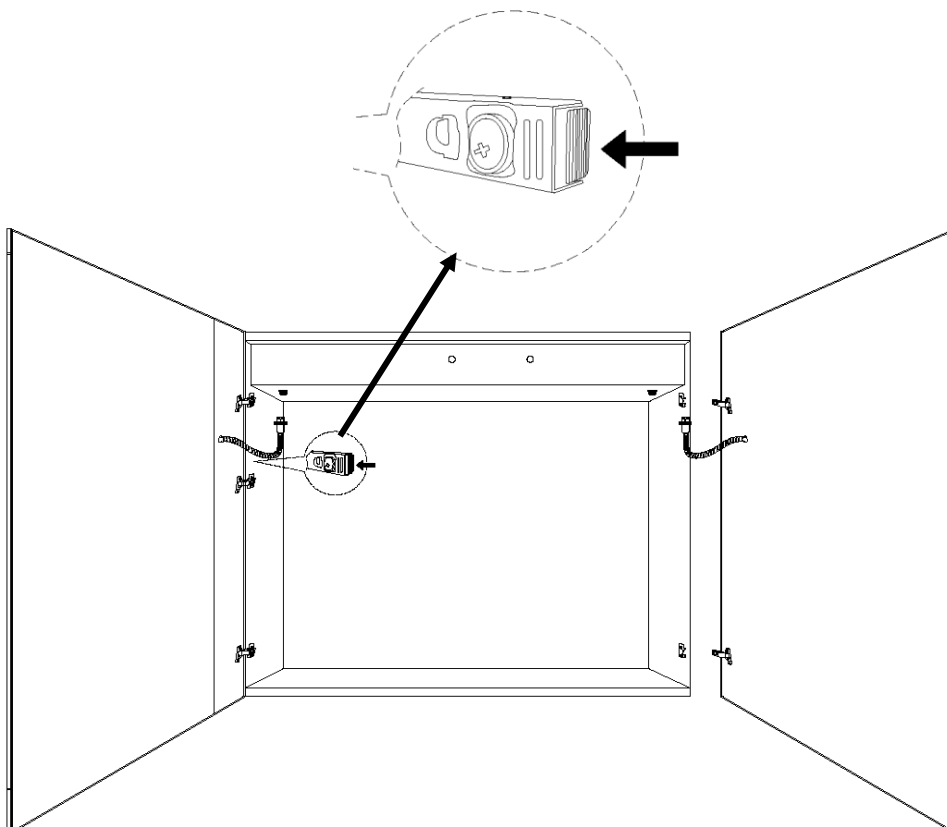


Surface Installation Instruction

Verify minimum clearances

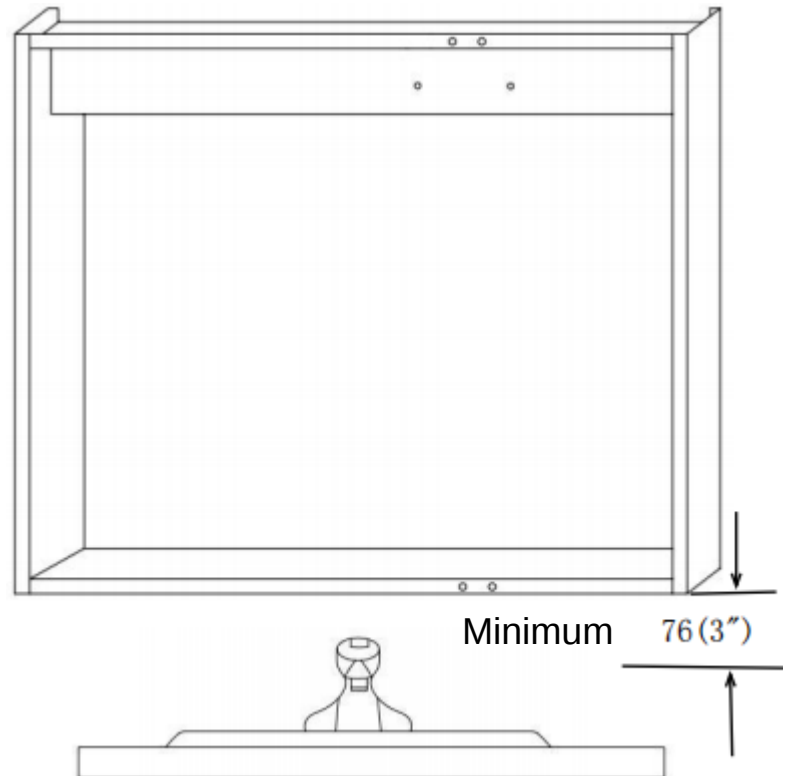

STEP 1


H is the total height of the mirror cabinet, and W is the total width of the mirror cabinet

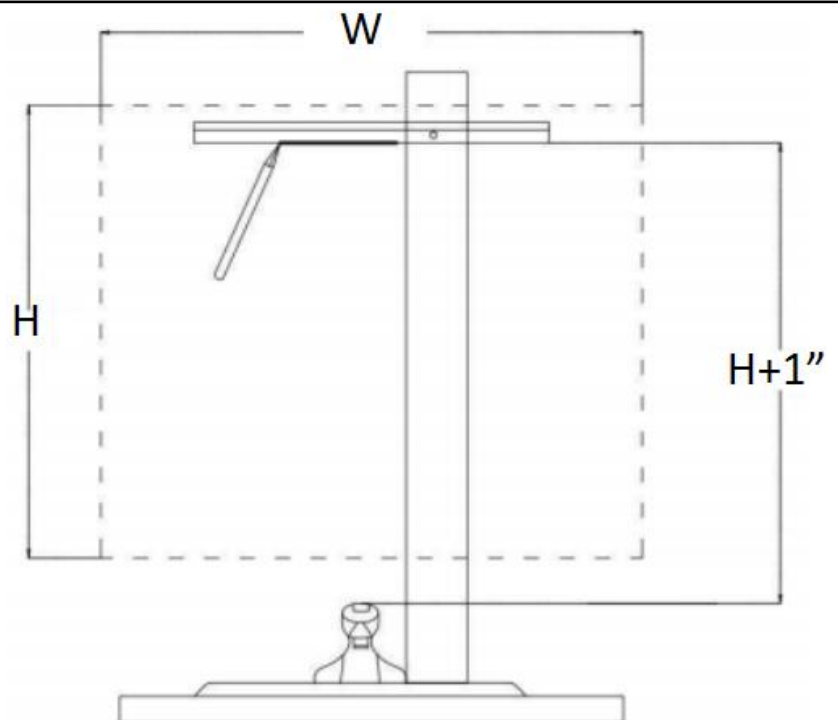


STEP 2

Surface Installation Instruction


Mark hole locations on the wall. Drill holes
Insert acchors where needed.

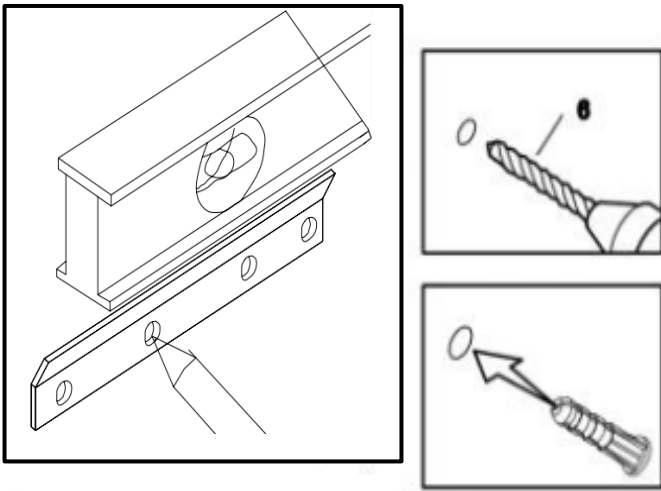

STEP 3

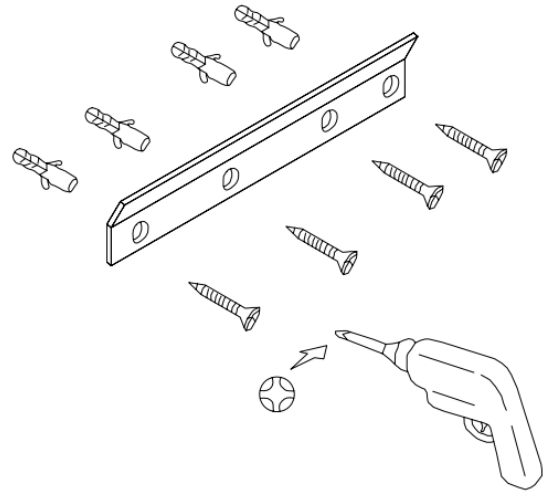


STEP 4

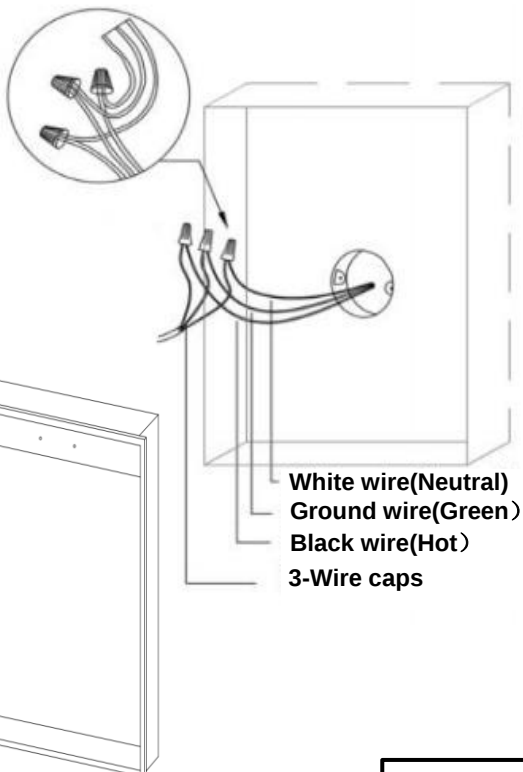

STEP 5


Lift the cabinet and slide it down over
the mounting bar

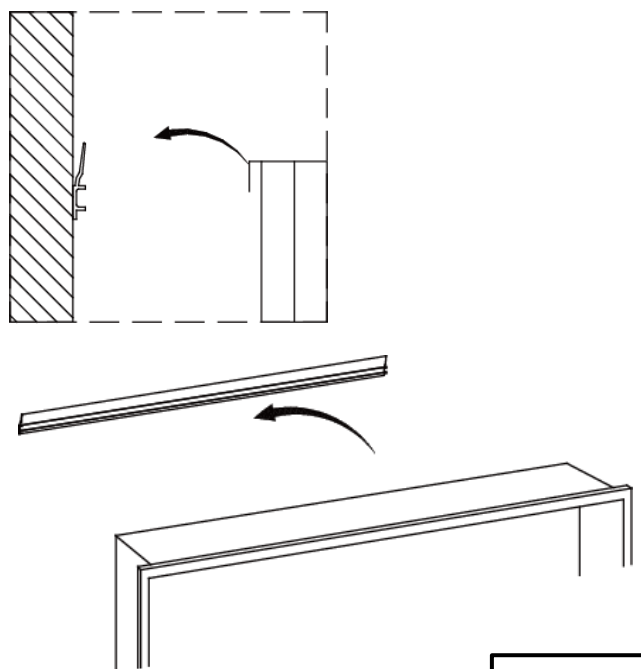


STEP 6

Surface Installation Instruction

Place the support angle on the bottom of the cabinet and mark hole location on the wall. Drill hole and insert anchor where needed. Fix the support angle by screw. Always look for wood studs behind the drywall for stronger installation, The studs are 16" apart.

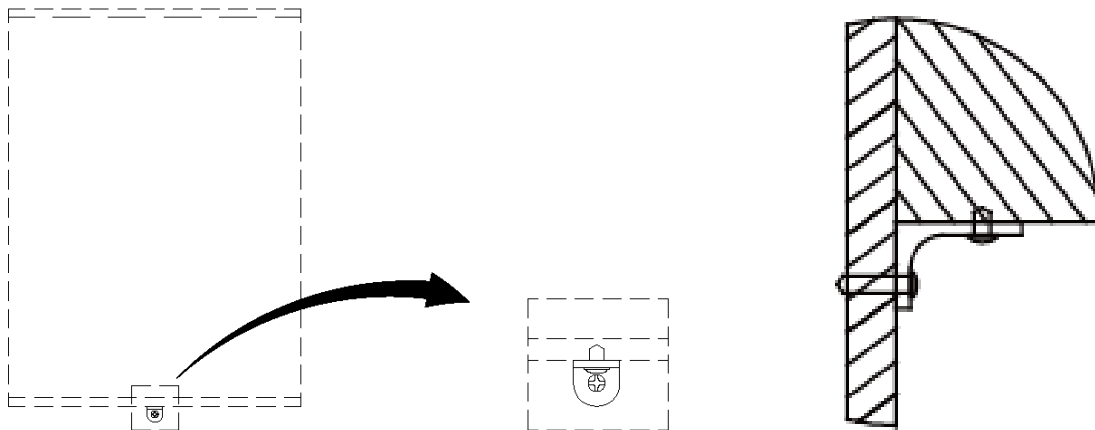**STEP 7**


Install the glass shelves by mounting them over the clips.

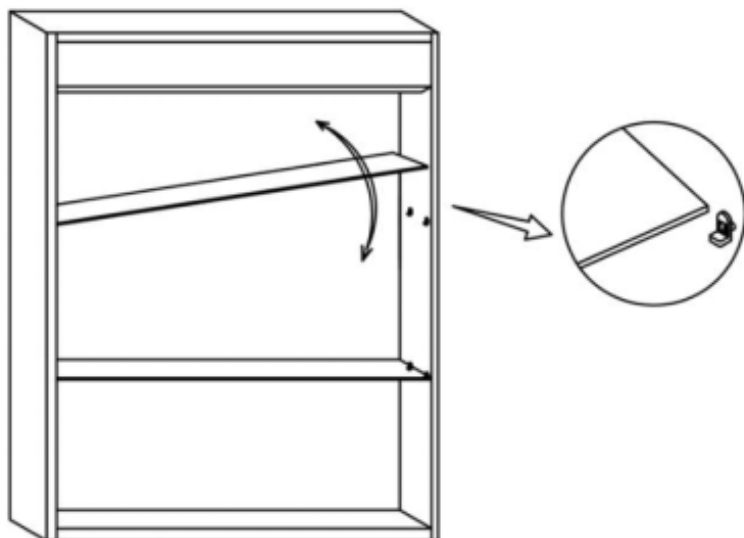**STEP 8**

Note

Some models have removable hinges. Before installing the cabinet door, you need to install the hinges first.


Place the hinge base in the opening on the cabinet door and secure it with screws.

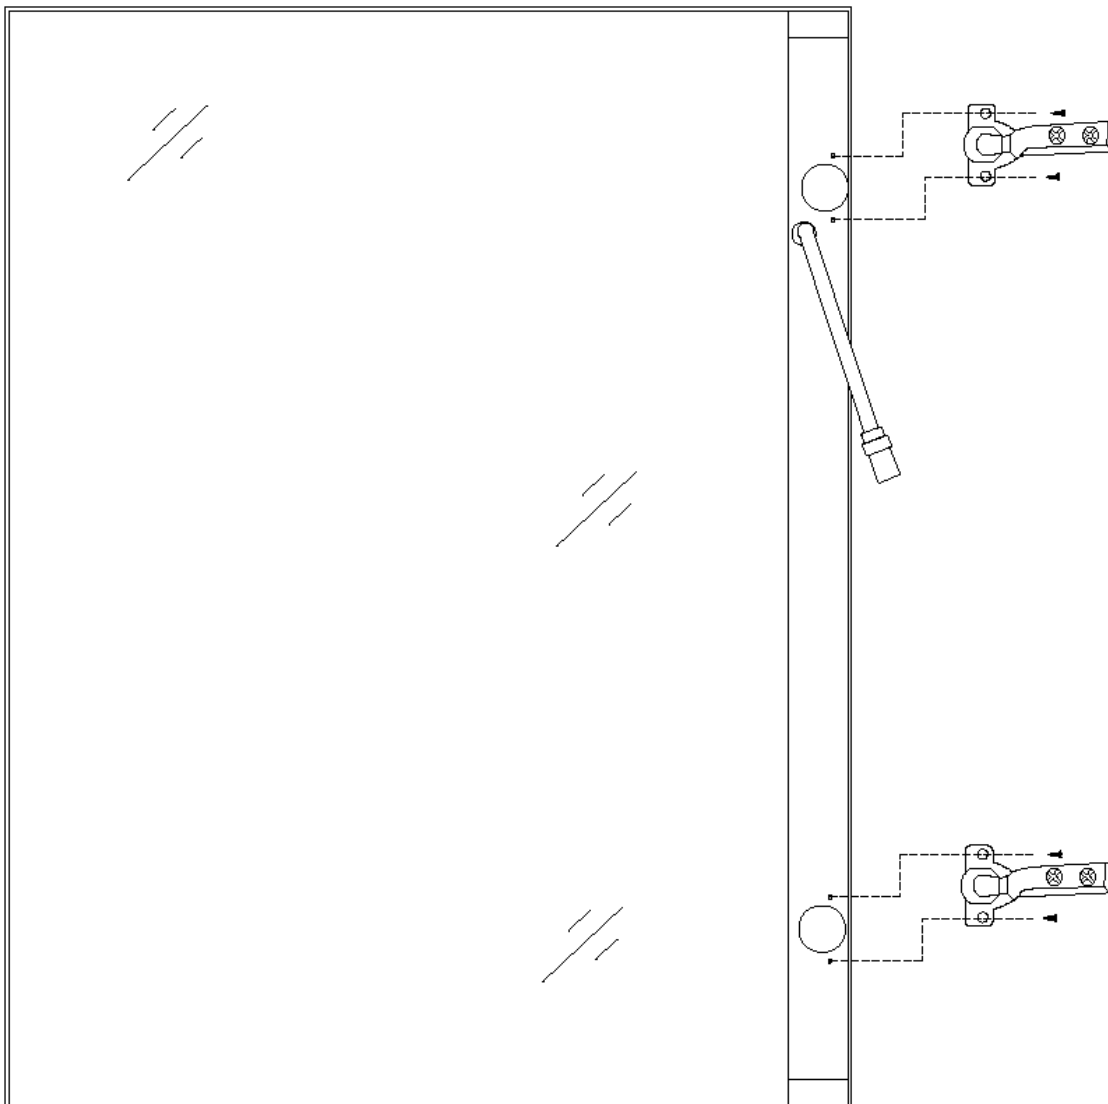



Note: The hinge base plates have been installed on the cabinet's body.

Step9: Cabinet Door Installation


1. Insert the hinges to the base ,then connect the doors with the cabinet.

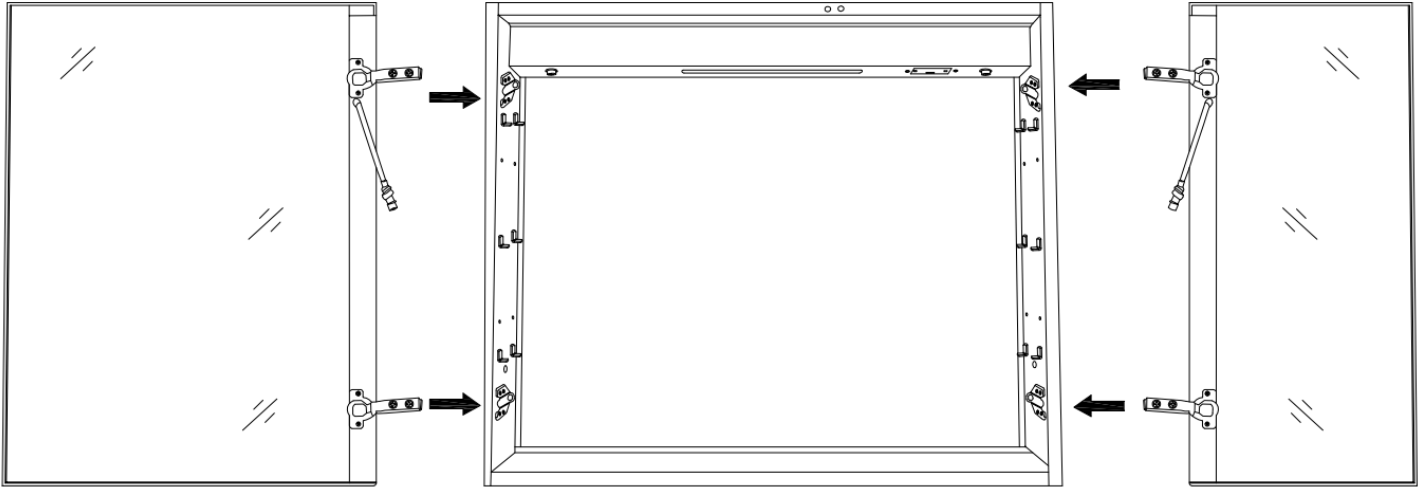

2.If necessary , adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly without touching each other

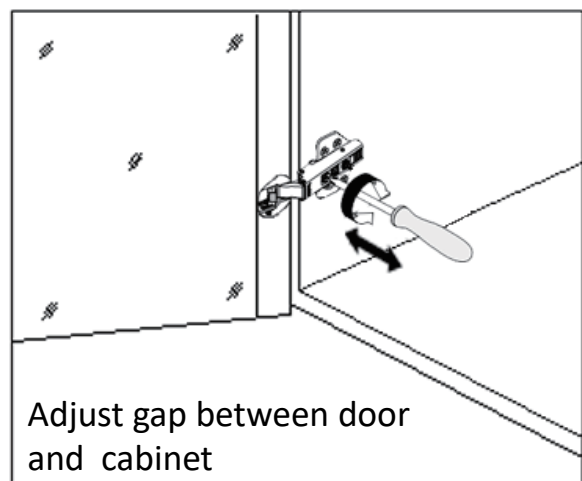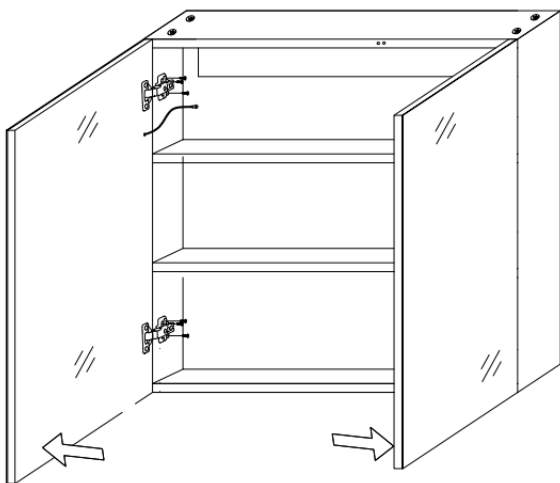


3. Connect the electrical cord on the door to the cabinet and tighten it properly.

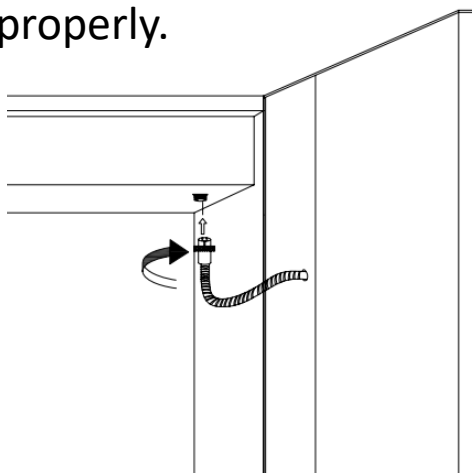

Embedded Installation Instruction


Before installing, it is necessary to determine the opening size, which can be referred to in the table below.

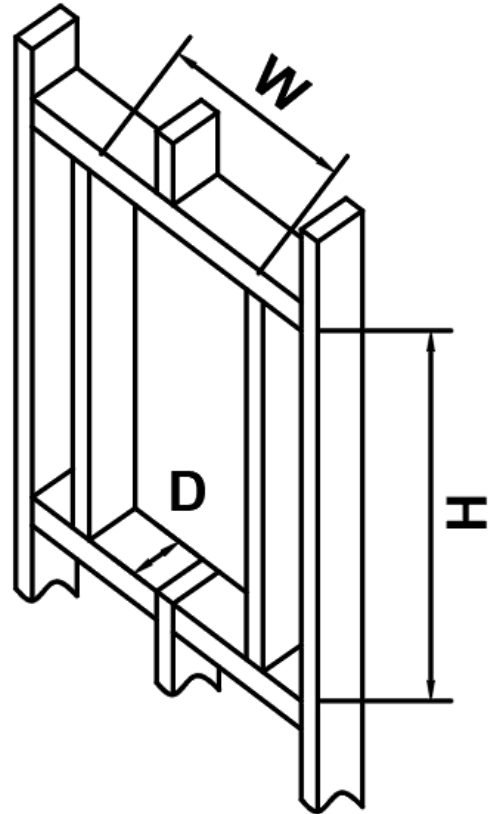


	Actual cabinet	Wall opening dimensions for embedded installation, all in Inches		
No.	Dimensions	W With	H Height	D Depht
1	16" × 24"	15-1/4	23-1/4	4-3/8
2	20" × 26"	19-1/4	25-1/4	4-3/8
3	30" × 26"	29-1/4	25-1/4	4-3/8
4	36" × 26"	35-1/4	25-1/4	4-3/8

Embedded Installation Instruction

Determine the size of the opening

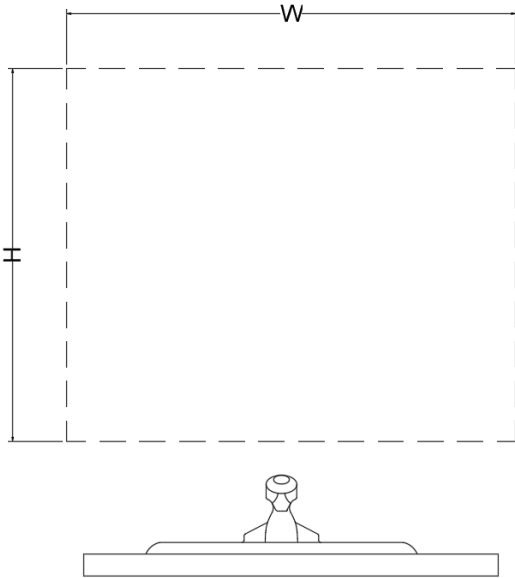


STEP 1

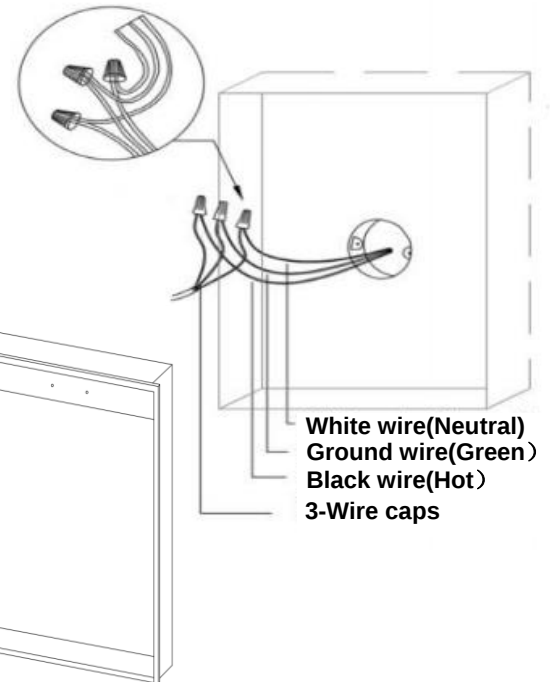


STEP 2

For certain models, there are reserved wiring ports on both sides, intended for connecting other products. If you don't need to use them, please neatly organize the wires.

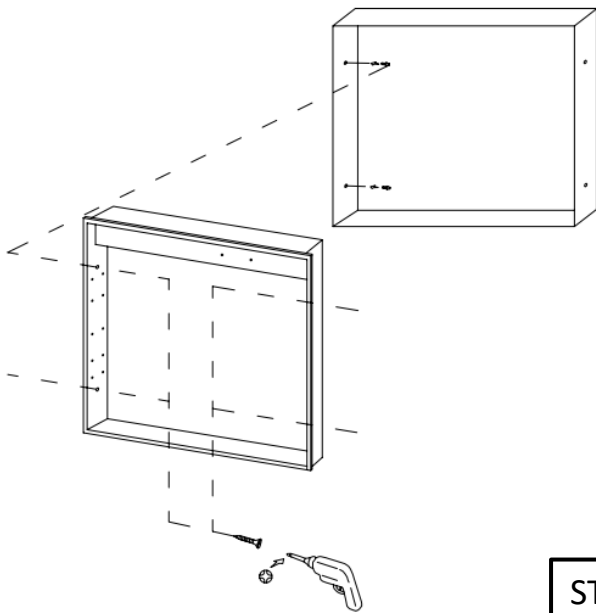

STEP 3

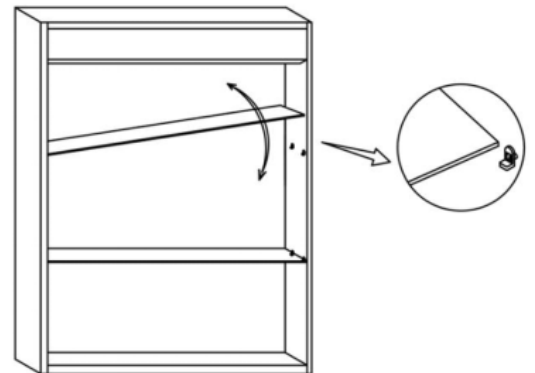


STEP 4

*All diagrams are for reference only. All model dimensions and proportion position will vary.

Note

Some models have removable hinges. Before installing the cabinet door, you need to install the hinges first.


Place the hinge base in the opening on the cabinet door and secure it with screws.

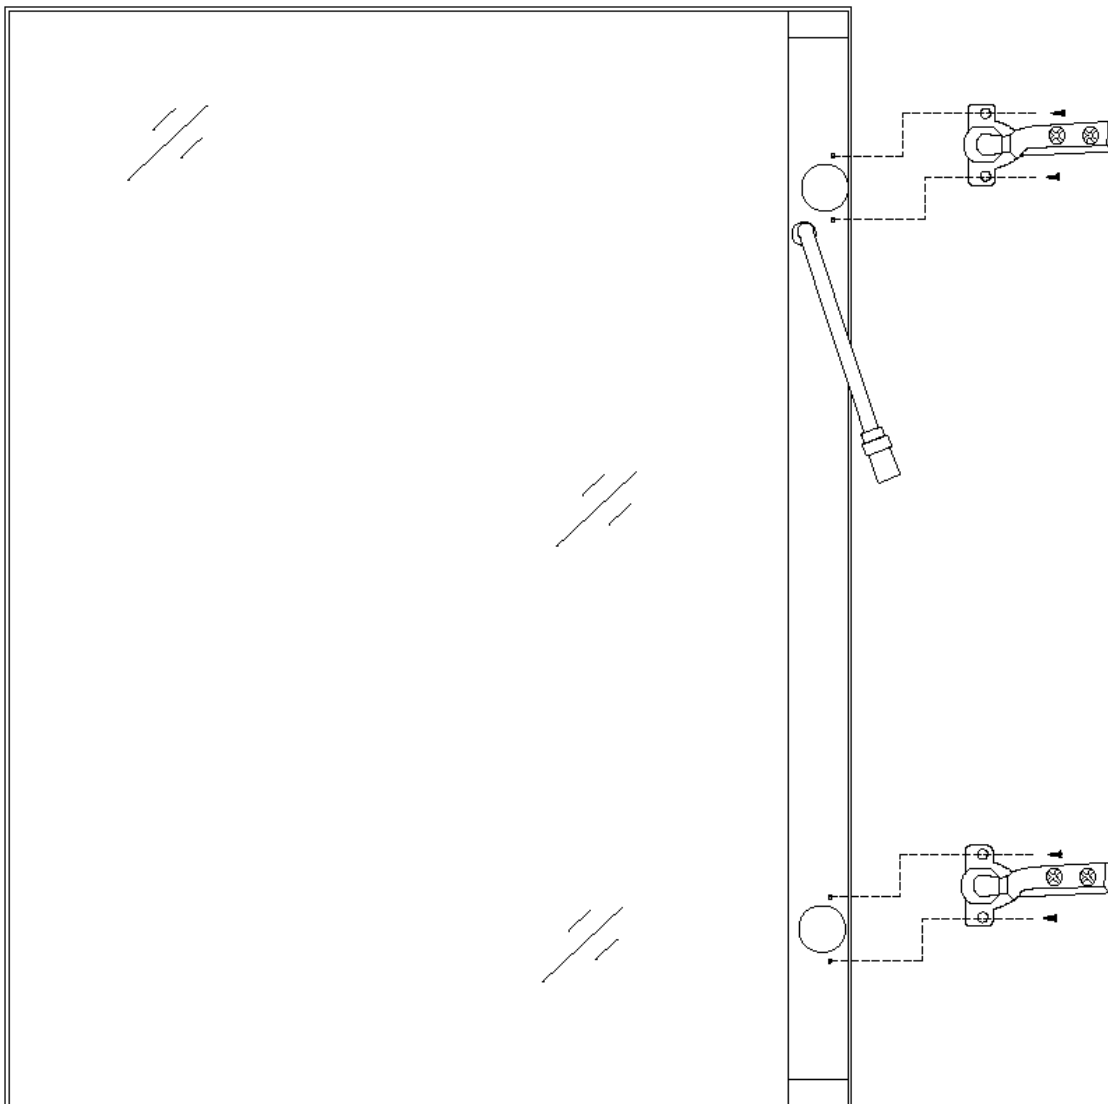



Note: The hinge base plates have been installed on the cabinet's body.

Step5: Cabinet Door Installation


1.Insert the hinges to the base ,then connect the doors with the cabinet.

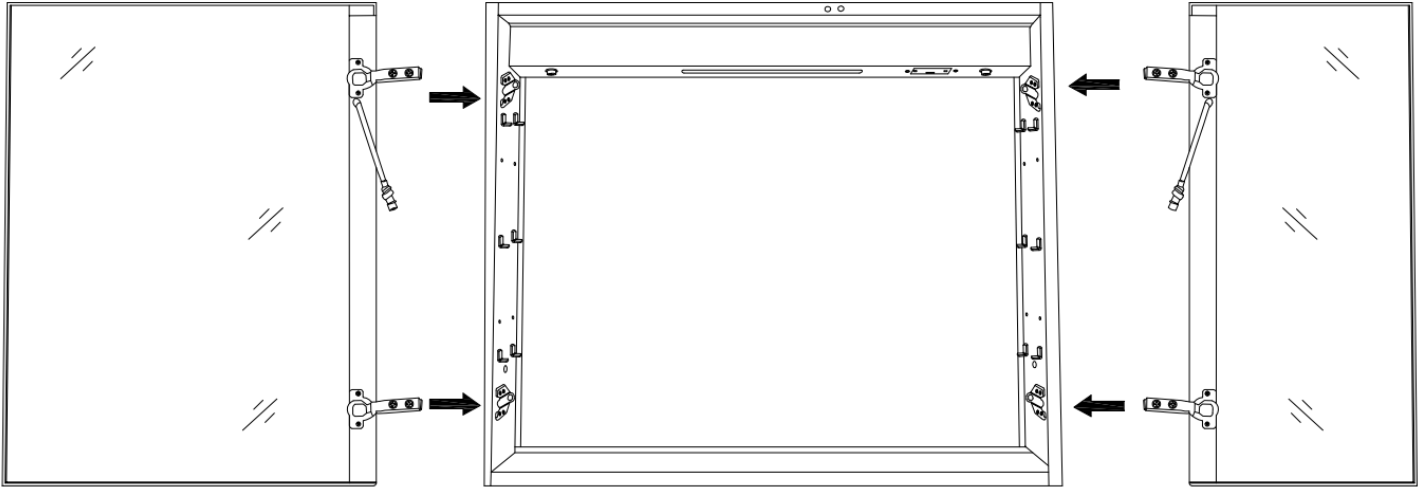


2.If necessary , adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly without touching each other

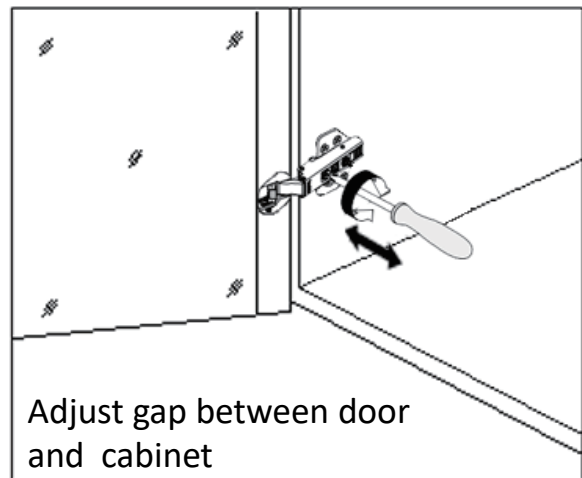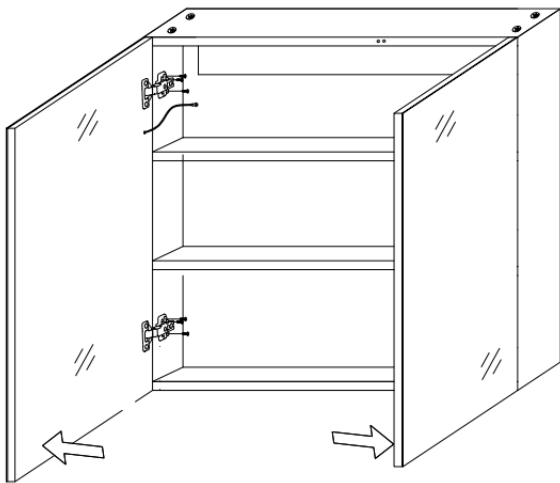

3. Connect the electrical cord on the door to the cabinet and tighten it properly.

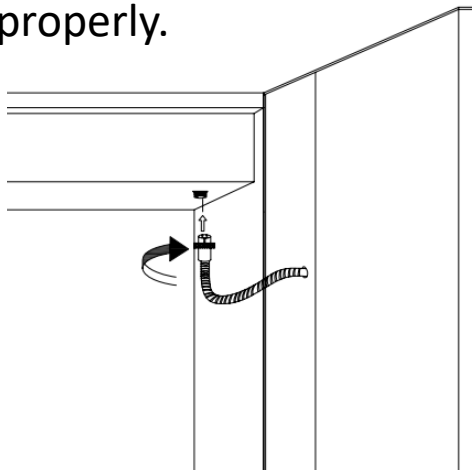

Operating Manual

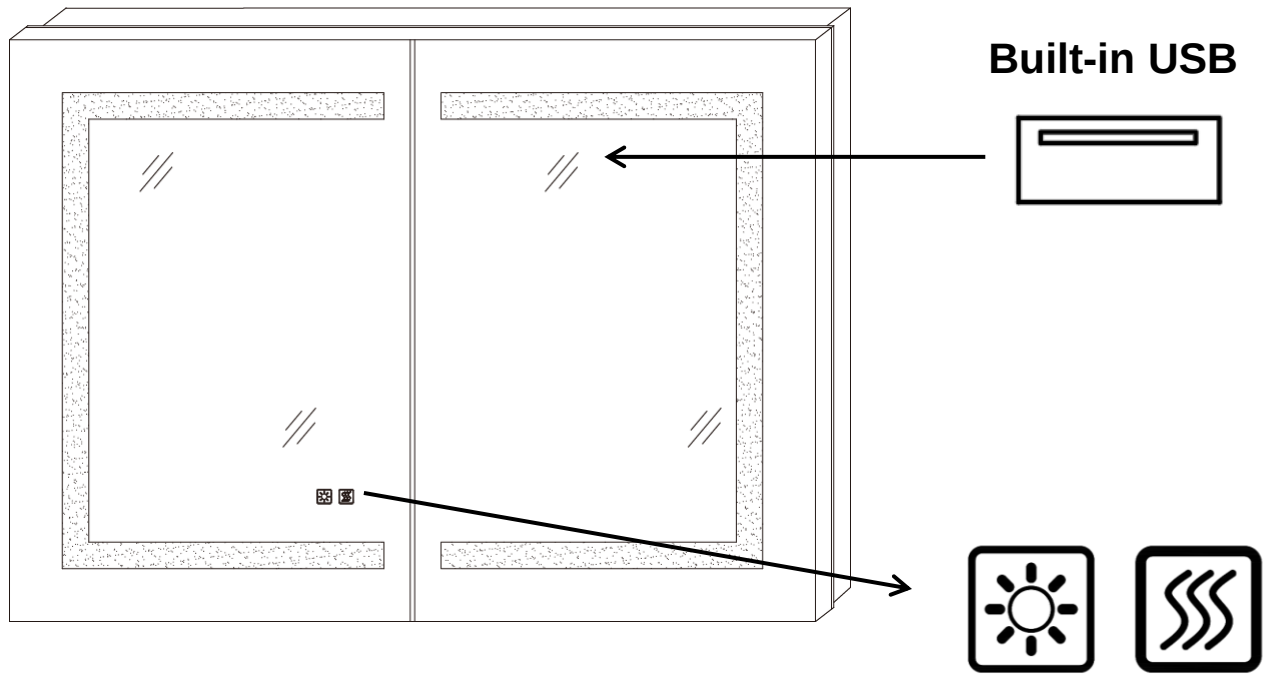

The buttons turn blue when connected to the main power supply and turn white after a brief touch.



- Briefly touch the button to turn the mirror on or off.
- Press and hold the button to adjust the brightness.
- Release the button when the brightness reaches your desired level to set it.



- The mirror begins to warm up and defog after you press the defogger button.
- Press the button again to turn off the anti-fog function.
- **Press and hold the button to turn the blue backlight on or off.**
- Note: To prevent damage from prolonged high temperatures, the defogger will automatically stop after 60 minutes of continuous operation.