



# Assembly Instructions

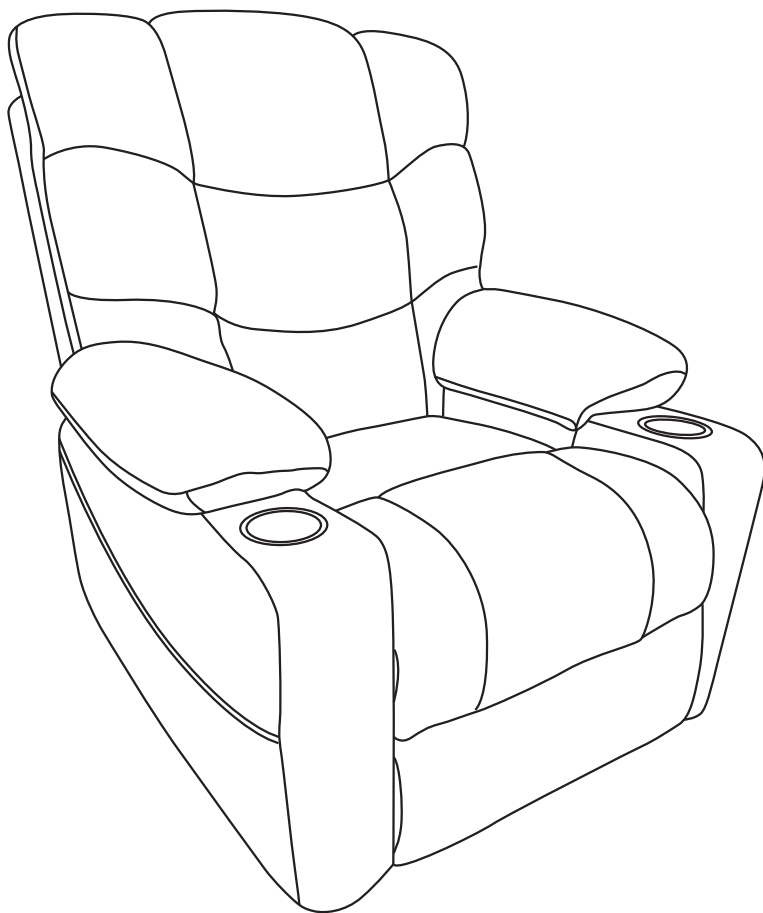

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.






# GENERAL ASSEMBLY INFORMATION GUIDE

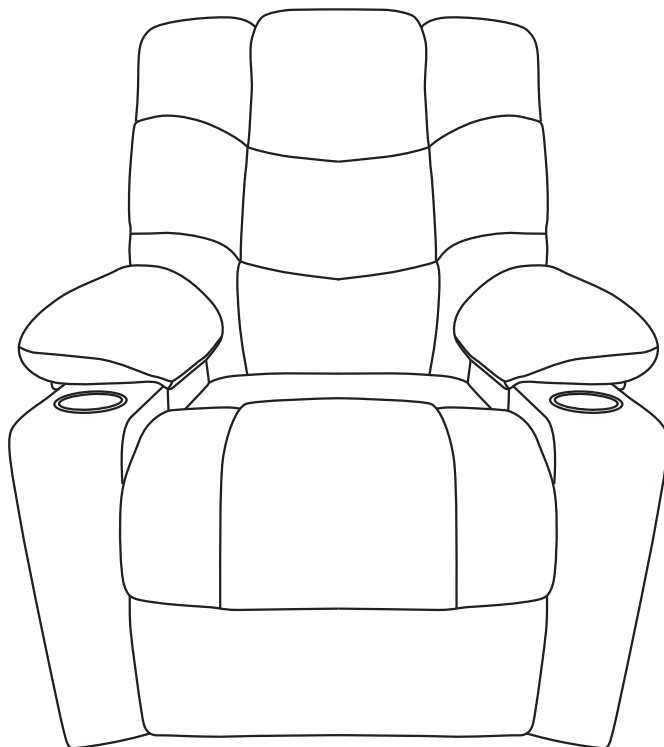

Please read the following instructions prior to assembling this product:

1. To avoid damage, assemble this product on a non-abrasive surface such as carpet.
2. Make sure all bolts are tightly fastened before use.
3. For home use or light commercial use only.
4. Please make sure you have all parts before assembly.

## Package Contents
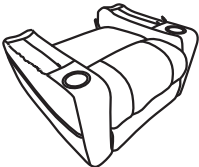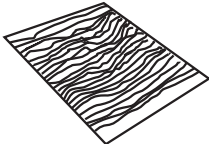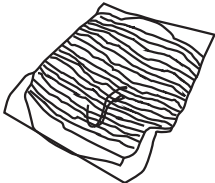
|                                                                                    |                                                                                    |                                                                                    |                                                                                    |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|    |   |   |   |
| A1*ChairSeat                                                                       | B1*Armrest Cover                                                                   | C1*Compressed seat cushion sponge                                                  | D1*Backrest Frame                                                                  |
|   |   |   |  |
| E1*Ear                                                                             | F1*Compressed backcushion                                                          | G2*Stainless steel cup holder                                                      | H1*Power Supply                                                                    |
|  |  |  |                                                                                    |
| I1*Power Plug                                                                      | J1*Massage Remote Control                                                          | K1*Remote Control fanel                                                            |                                                                                    |


Please find the spare parts at the bottom of the seat.

The back cover and seat cushion for this model adopt a compression process.

## Step1

Pls take out of compressed back cover and seat cushion and unpack the compression bags caerfully.


It takes 24 to 48 hours for the compressed deformation to recover to its original shpe.

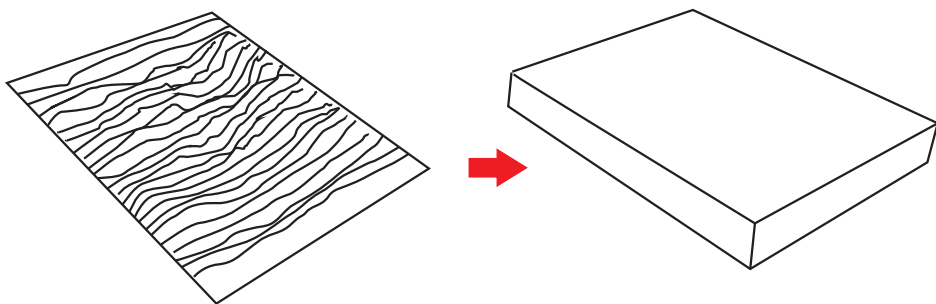

## Step2


Pull open the zipper at the bottom of the seat cushion cover,tuck in the recovered Seat cushion Sponge and thread the wires ( white and red colour) of the massage through the pre-reserved small hole at the bottom of the seat cushion cover.

Fasten the zipper

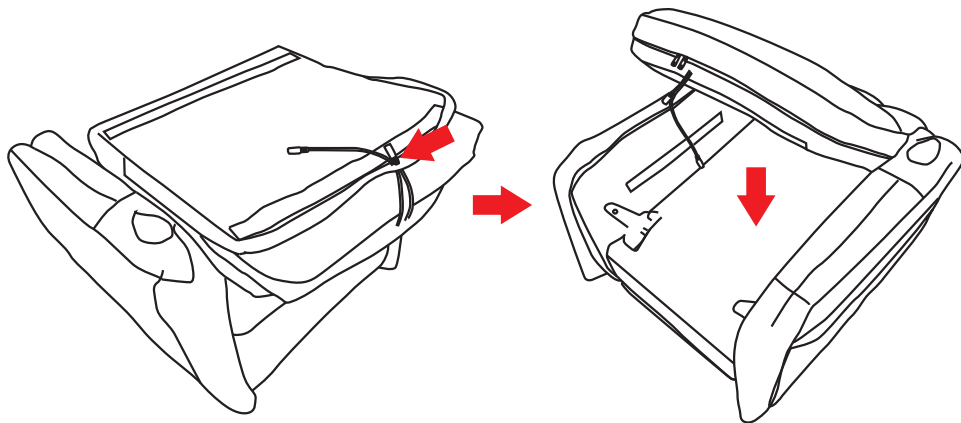


### Step3

The armrest features a telescopic design—pull open the zipper at the top of the armrest, press the inner wooden strip firmly downward, and the armrest will return to its normal position.

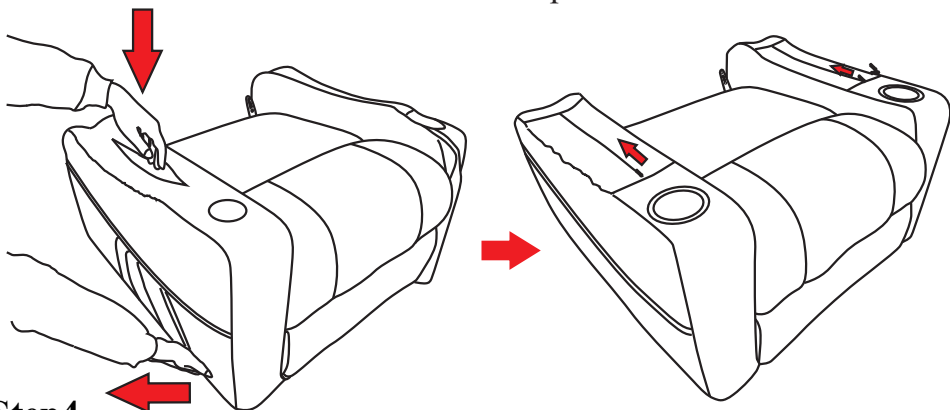


### Step4

Zip up the zipper and stick the Velcro on the side of the armrest. Then place the cup holders.

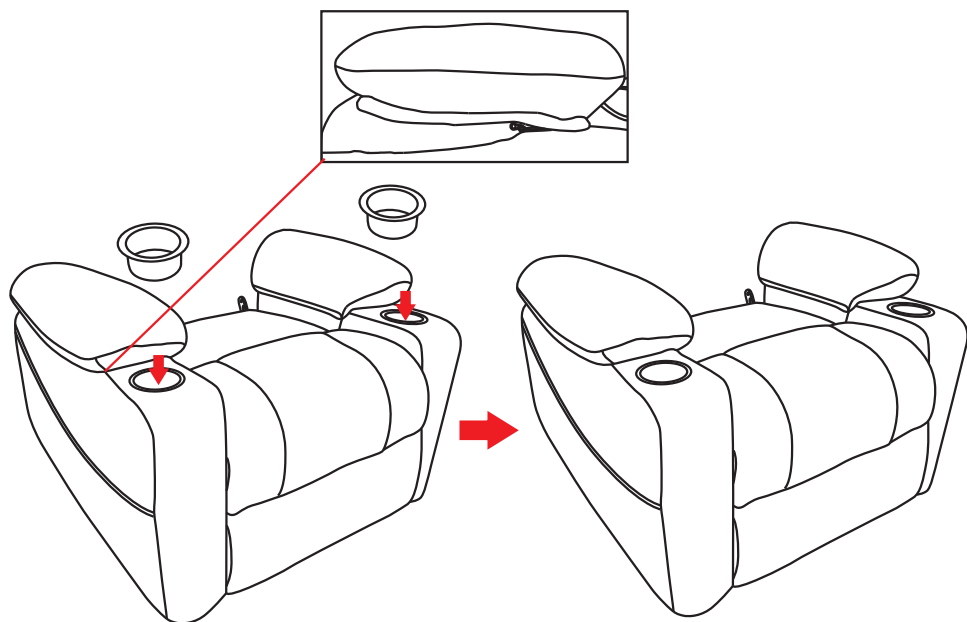


## Step5

Assemble the ears to the back frame by aligning the metal grooves.

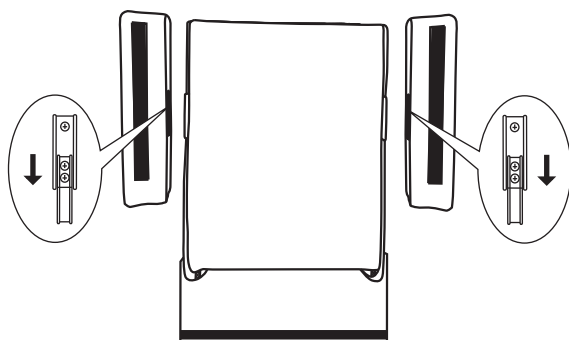

## Step6


Fasten the back cushion to the back frame via the top zipper and velcro on both sides.

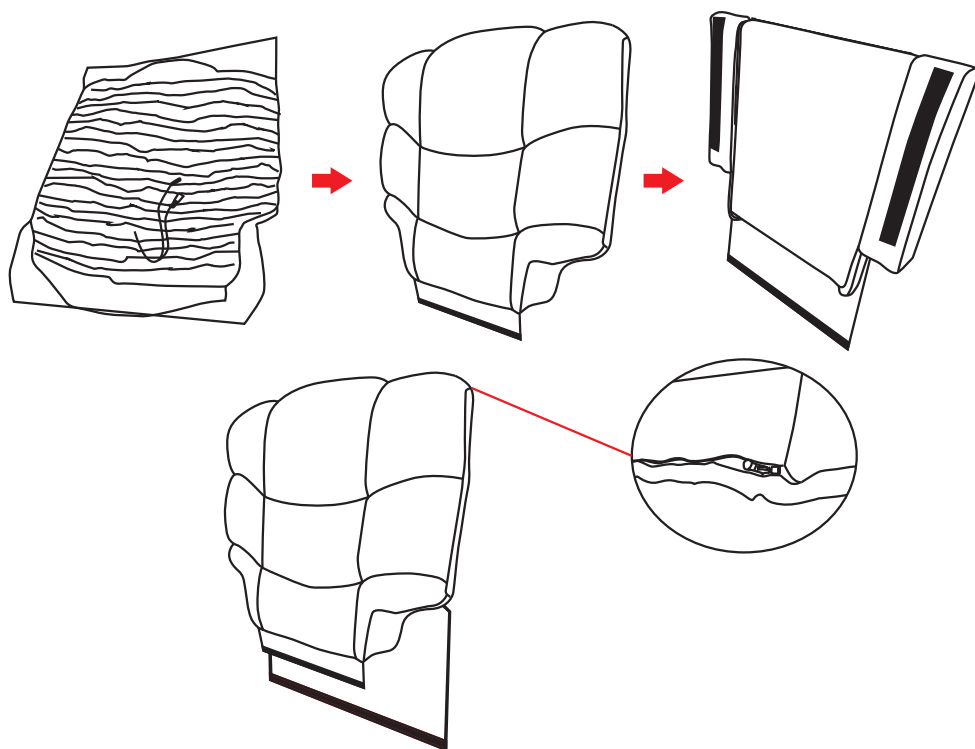

## Step7


Connect the chair backrest to the chair seat by aligning the metal grooves(M&N) and sliding down to the bottom.

PS: If the metal groove M slides down to the bottom of metal groove N, the backrest will not be taken off easily.

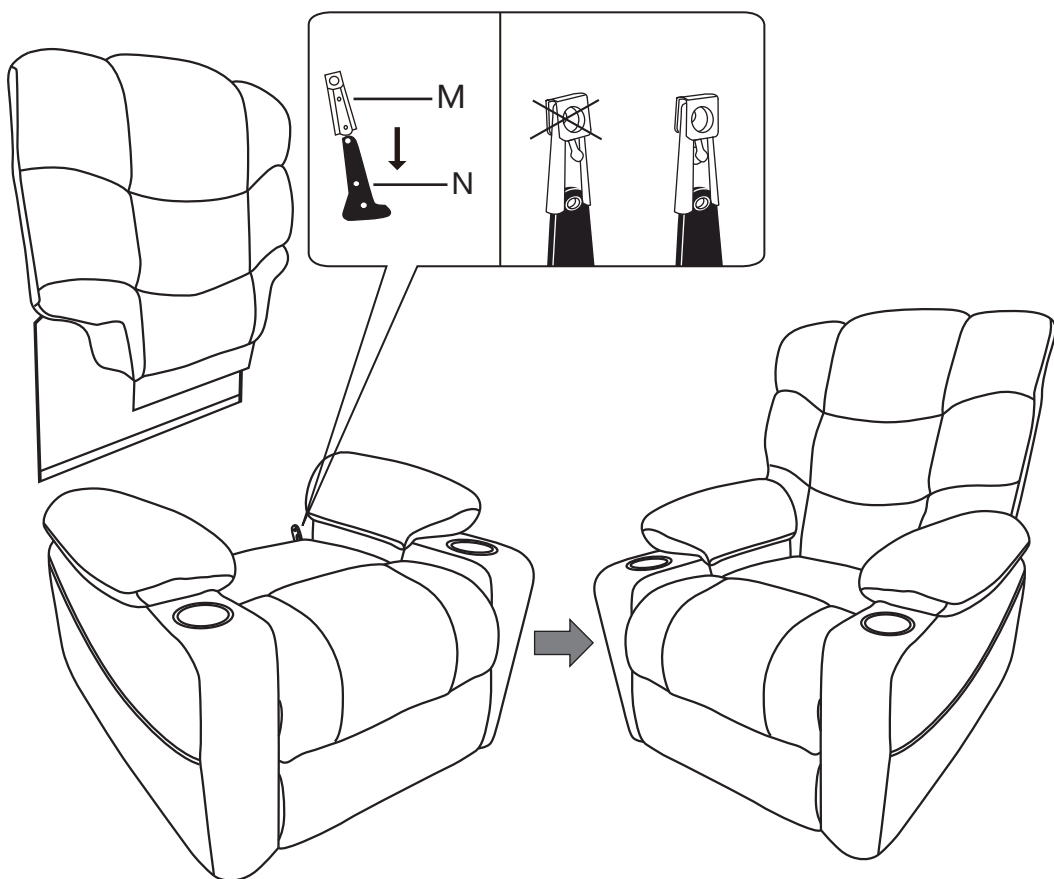

## Step8

Because the backrest is filled with doll cotton, 3cm difference is allowed, and you can slap the higher part to align the backrest.

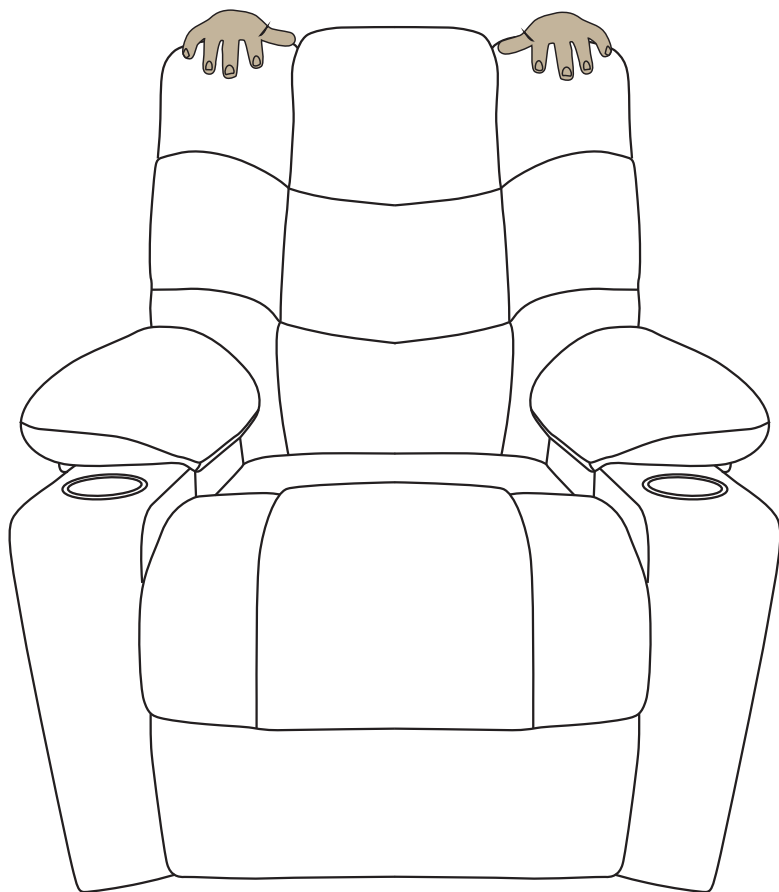

# Instructions for Connecting Power Cords

Pls be sure the wires with the same color are connected.

Tip: Lines of the same color must be connected. If the wires with different colors are connected, it can not work.


No.1 and No.2 wires connect the backrest to the chair seat.

No.3 wire connects the backrest to the power plug (I).

No.4 wire connects to the backrest and massage remote(H).

No.5 wire interface connects to the power supply(J)


No.6 wire interface connects to the remote control(K).

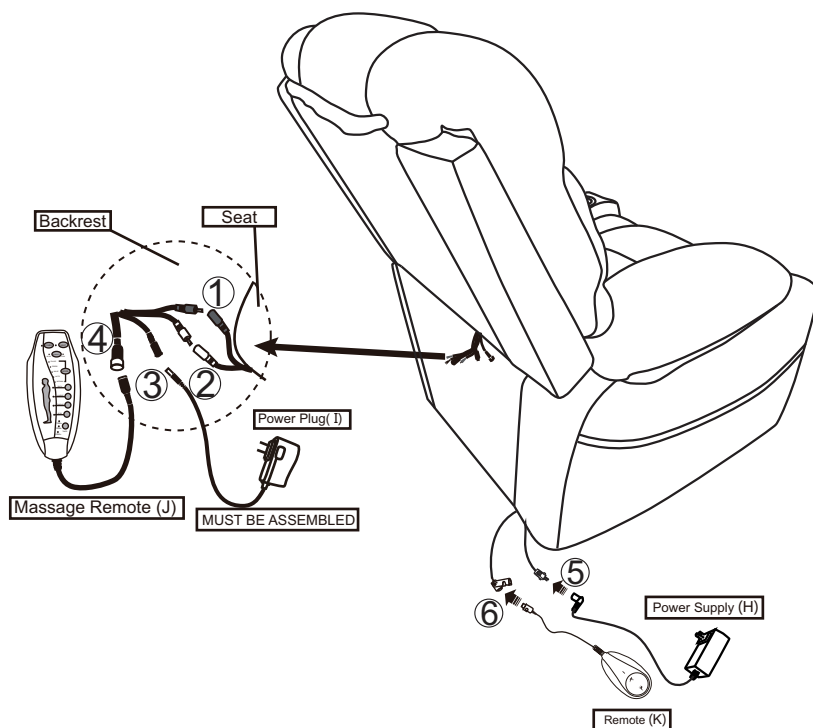


## Note:

1.Plug the Power Cord and Power Source into the outlet to get the recliner working.

# Instruction for Remote control


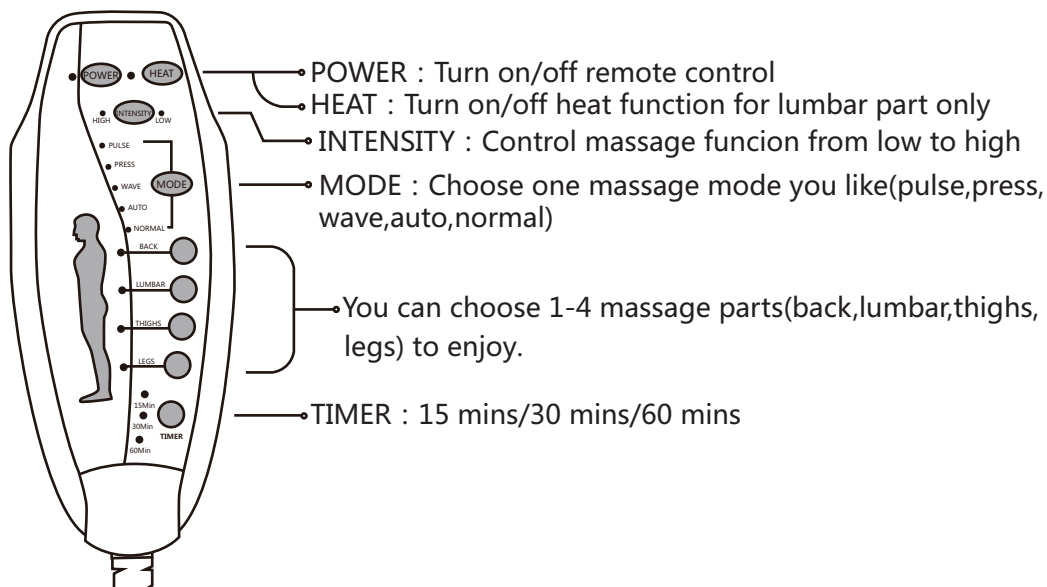


There are 2 buttons in remote control.

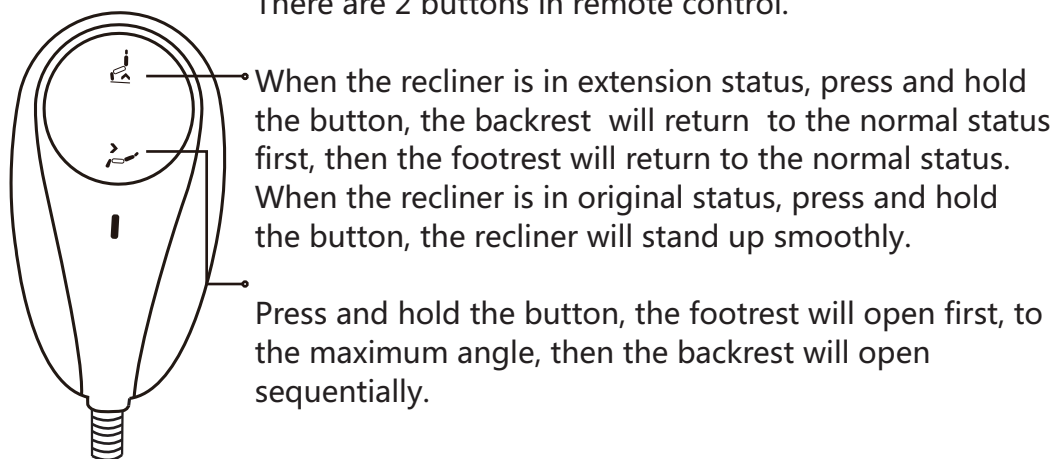

# Warnings

1. Please check if the chair's components are all included and can be used normally.
2. Follow instructions and assemble all components correctly before connecting the chair with the power.
3. Please DO NOT sit on the armrests or footrest to eliminate the risk of tipping over.
4. Please be careful when lifting to avoid sliding from the chair.
5. If the chair you received is damaged or doesn't with the website, please send clear pictures of the product, and take a picture of one side of every outer box. (This side is printed with a camera pattern). Then send us these photos or videos, and we'll help you to solve all problems.
6. If the recliner doesn't work, you can try the following measures for self-checking:
  - ① Check if all the cables are connected;  
Check if the pilot lamp of remote control is on or off;
  - ② Check if the pilot lamp of the power supply is on or off
  - ③ (1. on is normal. 2. off, check the wire connection of power supply, if connection is correct but the light is not on, please contact us to change a new power supply for you.)  
If the motor has a weak buzz on the condition that the two steps above are normal.
  - ④ If the chair still doesn't work, please leave the message to customer service in time. We will help solve the problem for you as soon as possible.
7. If you have any questions about the product, please get in touch with us.

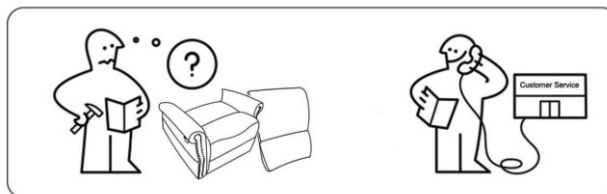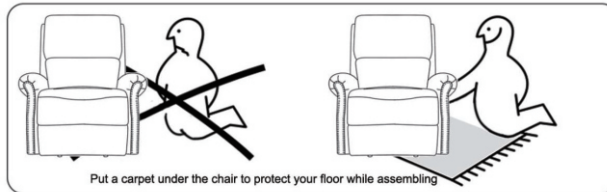

---

## MAINTAINANCE INSTRUCTIONS

---

### TO STORE:

Place unit in its box or safety dry and cool place. Avoid putting chair in contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap attached power cord around the unit. DO NOT pull the unit by power cord.

### TO CLEAN:

- ☒ Ensure the unit is unplugged from the power source, and allow the unit to cool down before cleaning.
- ☒ DO not use any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat with clean, dry cloth.
- ☒ Do not use any abrasive cleaners, brushes, gasoline, kerosene, glass furniture polish, paint thinner or water hotter than 120° F to clean the unit.