


Serial Number: MCV3/V4/V6/V22-13
R1.0

Medicine Cabinet Installation and Operating Manual

**For Technical support or questions, please call
us at + 1 302 336 8180.**


Model Specification (type 1)

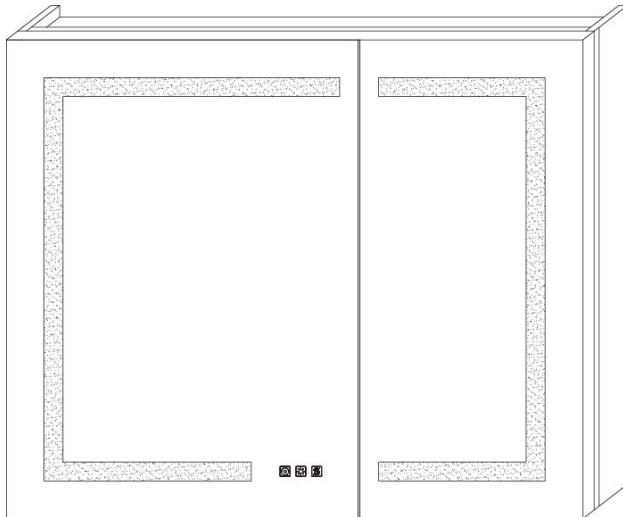

- Aluminum Frame
- Integrated LED
- Double Side Mirror
- Adjustable Shelves
- Quiet Hinge
- Recessed or surface mounting
- Color Temperature:3000-6000K
- Dimming
- Anti Fog
- Built-in 2 outlets and 2 USB connections
- **Clock & Temperature Display feature available on selected models only.**
- **Light-Sensitive Night Light feature available on selected models only.**

No.	Dimension	Color	Door Type	Remark
1	20"×26"	Silver / Matte Black	Single door Left or Right	Type1
2	20"×26"	Silver / Matte Black	Single door Left or Right	Type2
3	20"×30"	Silver / Matte Black	Single door Left or Right	
4	20"×32"	Silver / Matte Black	Single door Left or Right	
5	20"×36"	Silver / Matte Black	Single door Left or Right	
6	24"×30"	Silver / Matte Black	Single door Left or Right	
7	24"×32"	Silver / Matte Black	Single door Left or Right	
8	24"×36"	Silver / Matte Black	Single door Left or Right	
9	28"×30"	Silver / Matte Black	Double Door	
10	30"×26"	Silver / Matte Black	Double Door	
11	30"×30"	Silver / Matte Black	Double Door	
12	30"×32"	Silver / Matte Black	Double Door	


Model Specification (type 1)

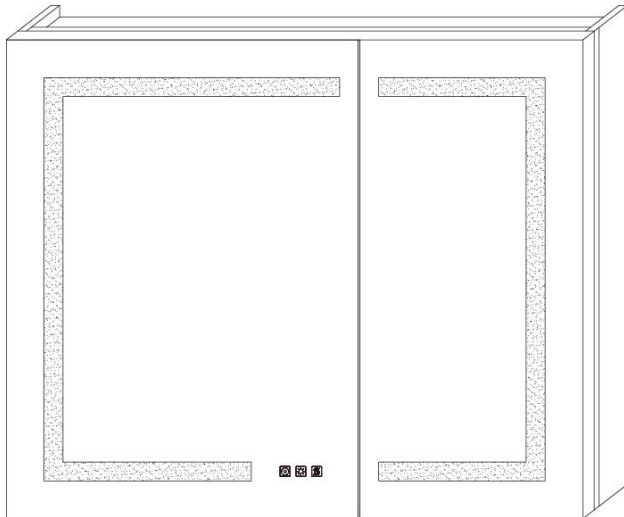

- Aluminum Frame
- Integrated LED
- Double Side Mirror
- Adjustable Shelves
- Quiet Hinge
- Recessed or surface mounting
- Color Temperature:3000-6000K
- Dimming
- Anti Fog
- Built-in 2 outlets and 2 USB connections
- **Clock & Temperature Display feature available on selected models only.**
- **Light-Sensitive Night Light feature available on selected models only.**

No.	Dimension	Color	Door Type	Remark
13	30"×36"	Silver / Matte Black	Double Door	
14	32"×30"	Silver / Matte Black	Double Door	
15	36"×30"	Silver / Matte Black	Double Door	
16	36"×32"	Silver / Matte Black	Double Door	
17	36"×36"	Silver / Matte Black	Double Door	
18	40"×30"	Silver / Matte Black	Double Door	
19	40"×32"	Silver / Matte Black	Double Door	
20	44"×30"	Silver / Matte Black	Double Door	
21	44"×32"	Silver / Matte Black	Double Door	
22	48"×30"	Silver / Matte Black	Triple Door	
23	48"×32"	Silver / Matte Black	Triple Door	
24	48"×36"	Silver / Matte Black	Triple Door	
25	60"×32"	Silver / Matte Black	Triple Door	

Model Specification (type 2)

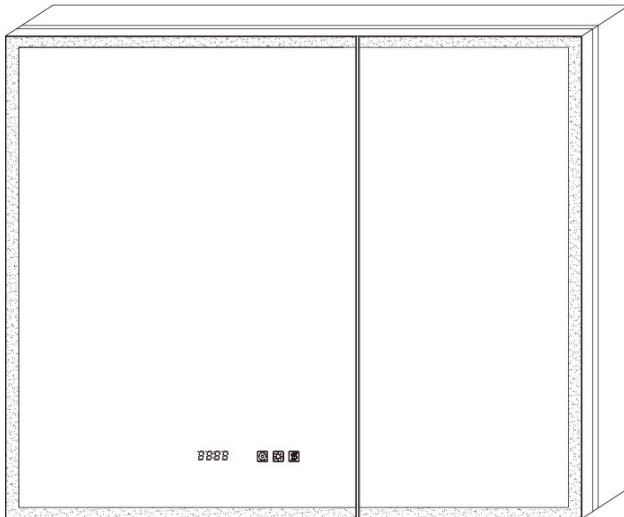

- Aluminum Frame
- Integrated LED
- Double Side Mirror
- Adjustable Shelves
- Quiet Hinge
- Recessed or Surface mounting
- Color Temperature:3000-6000K
- Dimming
- Anti Fog
- Built-in 2 outlets and 2 USB connections
- **Clock & Temperature Display feature available on selected models only.**

No.	Dimension	Color	Door Type	Remark
1	20"×30"	Silver	Single door Left or Right	
2	24"×32"	Silver	Single door Left or Right	
3	24"×36"	Silver	Single door Left or Right	
4	28"×32"	Silver	Double Door	
5	30"×32"	Silver	Double Door	
6	36"×30"	Silver	Double Door	
7	36"×32"	Silver	Double Door	
8	36"×36"	Silver	Double Door	
9	40"×30"	Silver	Double Door	
10	40"×32"	Silver	Double Door	
11	48"×30"	Silver	Triple Door	
12	48"×36"	Silver	Triple Door	



For easy and safe installation, please refer to the following:

Read all instructions thoroughly before installing the enclosed product. Read and take note of all **Safety Precautions**, care and maintenance information.

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE DURING PRODUCT OPERATION AND MAINTENANCE.



WARNING AND SAFETY INSTRUCTIONS

Before installing your LED Medicine Cabinet, please make sure that you carefully read through this instruction sheet, refer back to them during installation to ensure your product is fitted safely and correctly. Keep the instructions for future use.

WARNING Risk of Fire and Electric Shock

- All fittings must be installed in accordance with current IEE wiring regulations. If in doubt, please consult a qualified electrician.
- Turn breaker off the electrical supply at the main circuit board before installation and maintenance.
- Suitable for indoor use only. This product should be positioned well away from curtains and fabrics. Never cover the mirror.
- Regularly check any parts for damage, if any part is damaged the product should not be used.

INSTALLATION SAFETY

- Inspect the product immediately upon receipt for any possible damage during transportation or missing parts. Handle the product with care and protect against knocks to all sides and edges of the glass.
- Ensure there are no hidden pipes or cables in the wall before drilling and sawing.
- Wear suitable safety glasses when drilling. Take care if drilling on tiled surfaces in case the drill slips.


CAUTION

The light source of this product is non-changeable light diodes (LED). **Do not disassemble the product**, as the light diodes can cause damage to the eyes.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture. Do not install this fixture in hazardous locations.

PARTS SUPPLIED


Z- Mounting Bar
×1

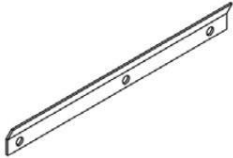


Z-Supporting Hook
×1

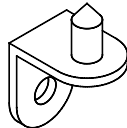


Anchors A
×1

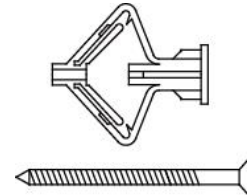


Shelves Support
×4~8

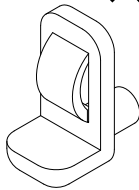


Wire Cap
×3

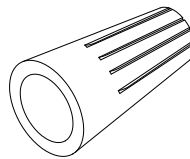


Side Panel
×2

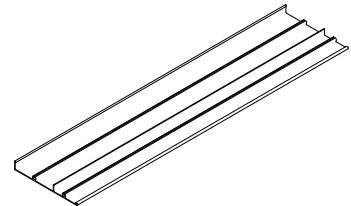

Side Panel Covers
×4

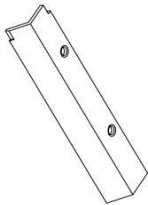


Side Panel Cover Screws
×10




Anchors B
×5~10



Anchor Screws
×5~10

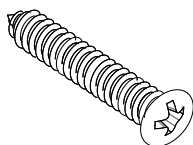

Shelves
×2~6

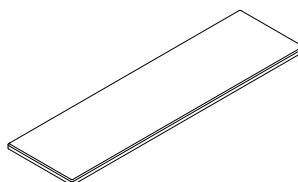

Hinge Covers
×2~8




TOOLS REQUIRED


Drill




Pencil

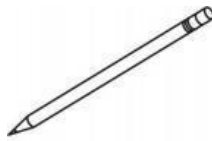

Level

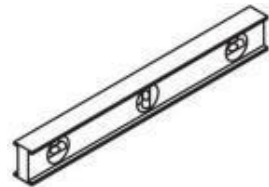

Tape

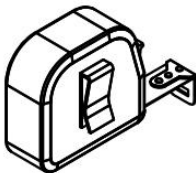

Gloves




Safety Glasses




**Phillip
Screw Driver**



**Drill Bit
8mm(5/16")**

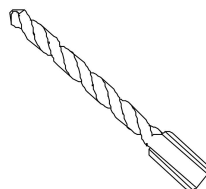

Hammer

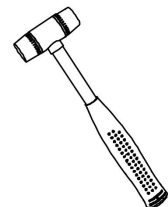

Installation Instruction



The medicine cabinet supports two installation methods:
1.Surface Installation and **2.Embedded Installation**.


Please choose the installation way that best suits you.




Some cabinet doors will be packed uninstalled but inside the cabinet to reduce packaging volume. Please install the cabinet door after completing the cabinet installation according to the instructions.

Before installing the medicine cabinet, please remove the cabinet doors first. This will make the installation easier, more convenient and safer.

1. First, disconnect the cords from the cabinet .

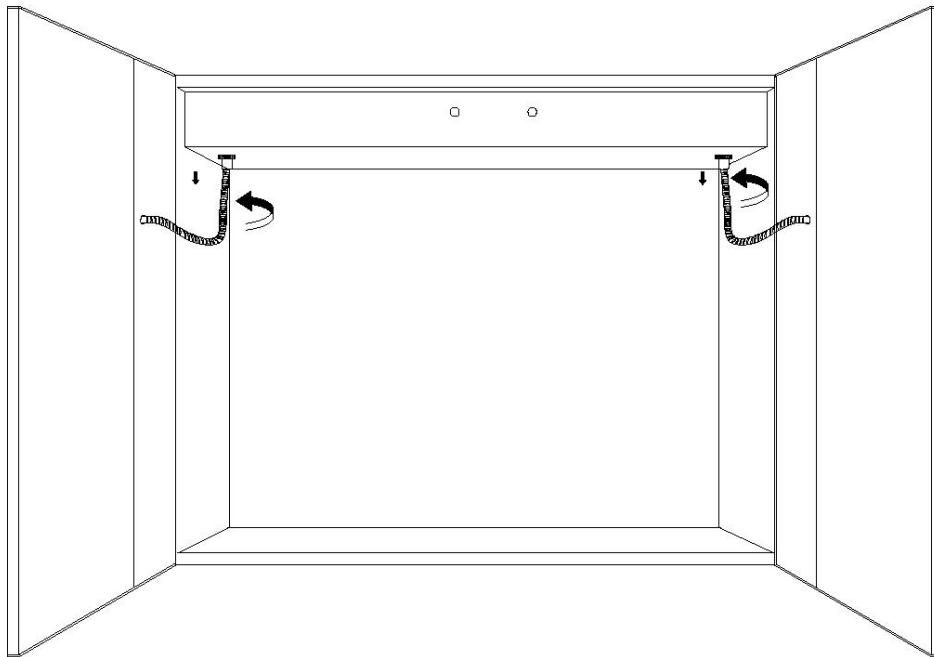


2. Then, press the end of the hinges and detach the cabinet door.

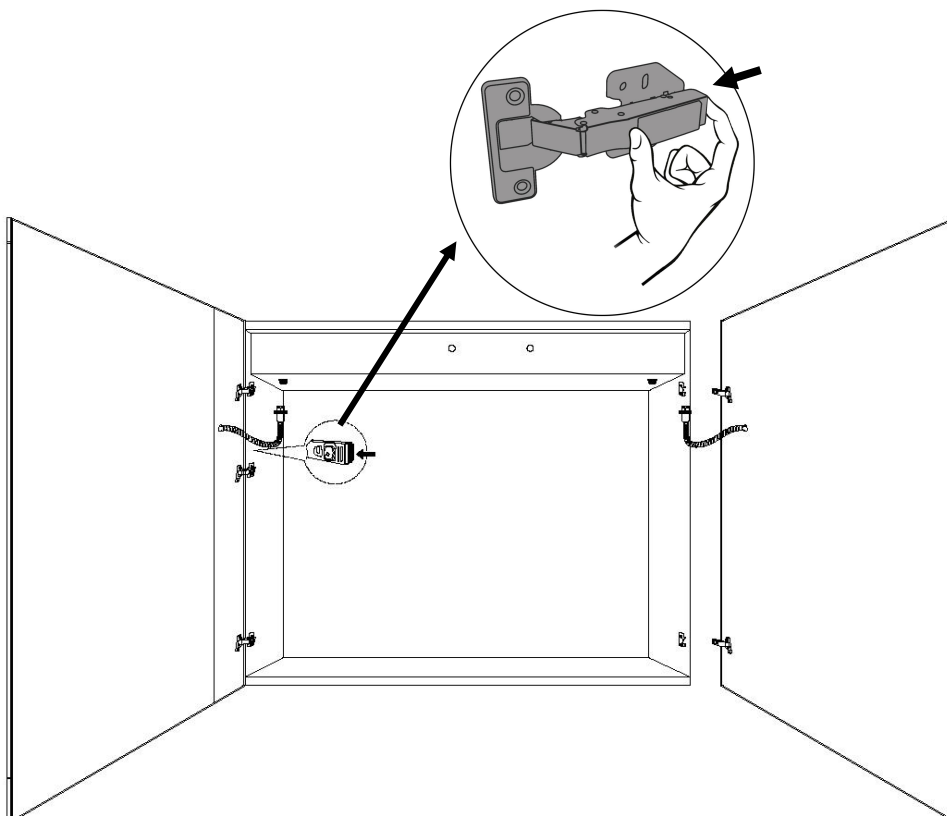


Surface Installation Instruction

Verify minimum clearances

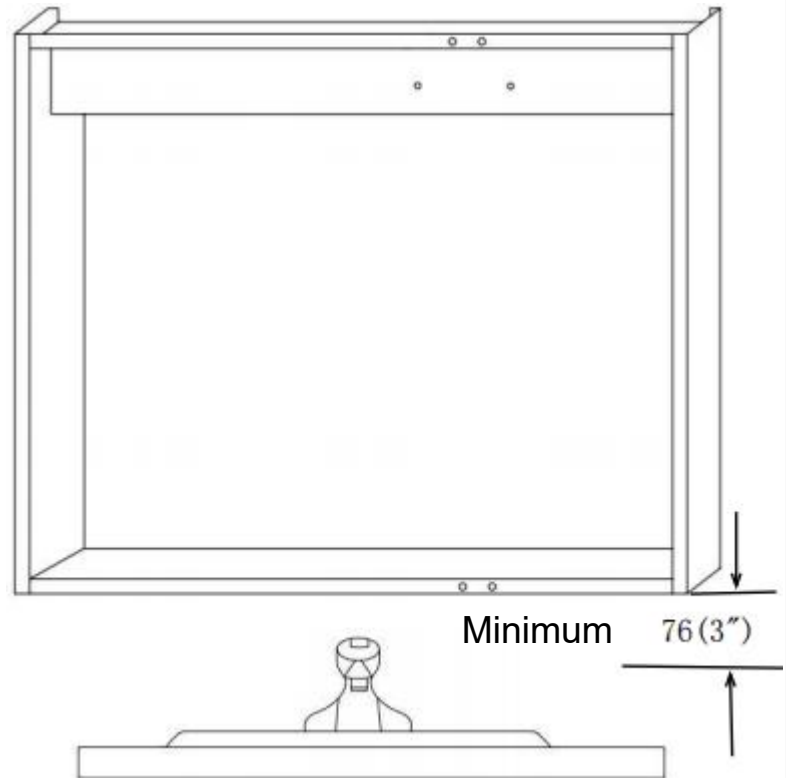

STEP 1


H is the total height of the medicine cabinet, and W is the total width of the medicine cabinet

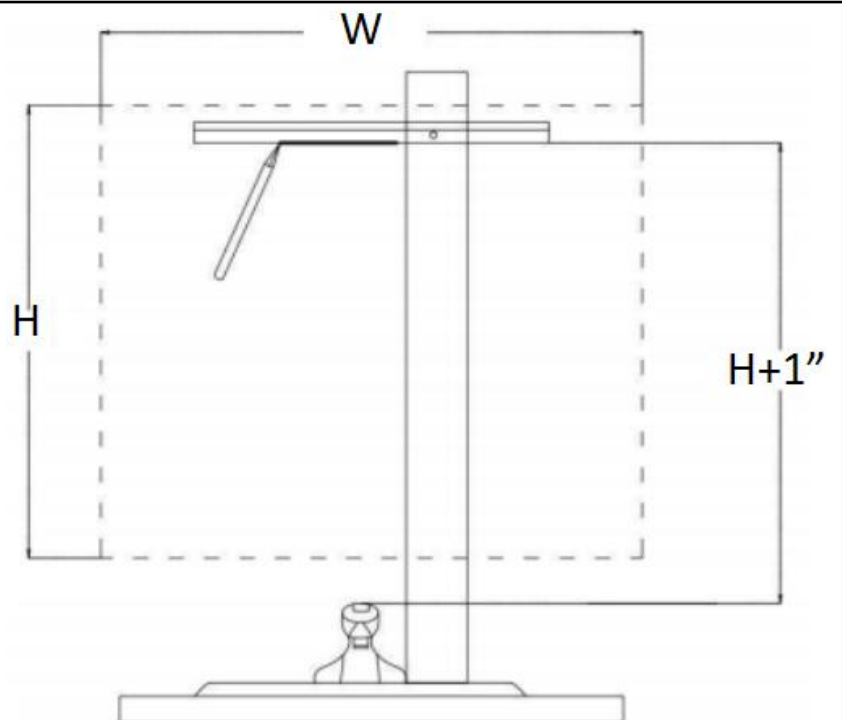

STEP 2


Surface Installation Instruction

- A) Mark holes locations on the wall. All markings must be properly leveled.
 B) Drill holes and insert anchor where needed.

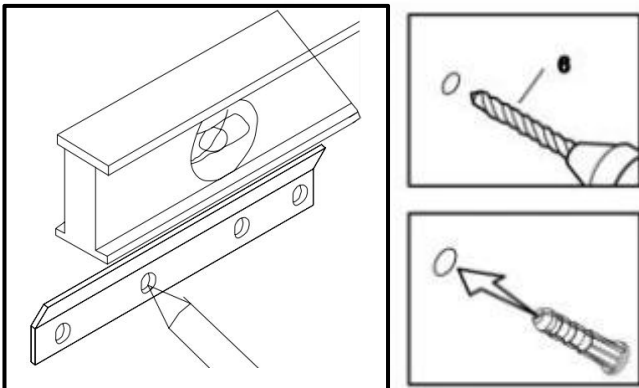


STEP 3

Secure the bar with Flat head screws provided.

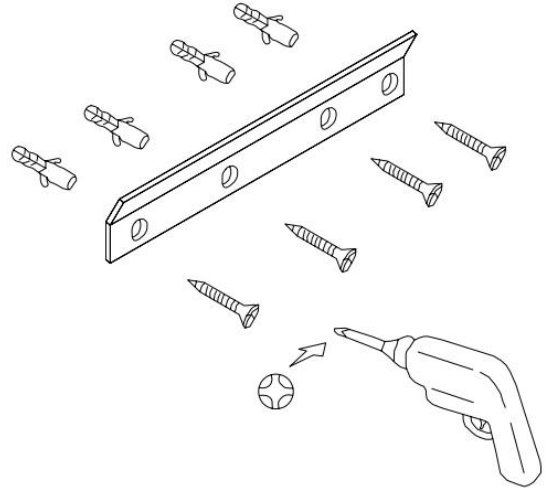


STEP 4

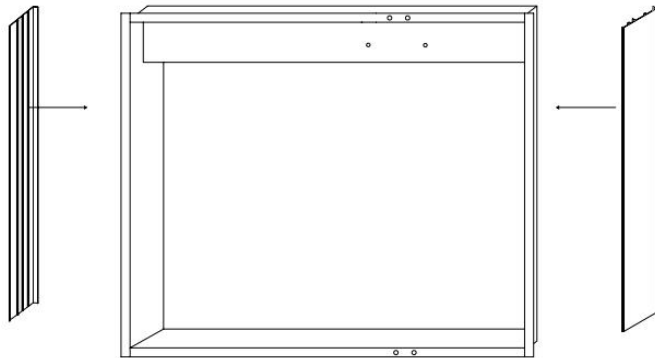

STEP 5

The side panels and cabinets are individually packaged , you need follow the STEP 5 to STEP 6 to install the side panels for surface mounting, for embedded installation no need to install the side boards.

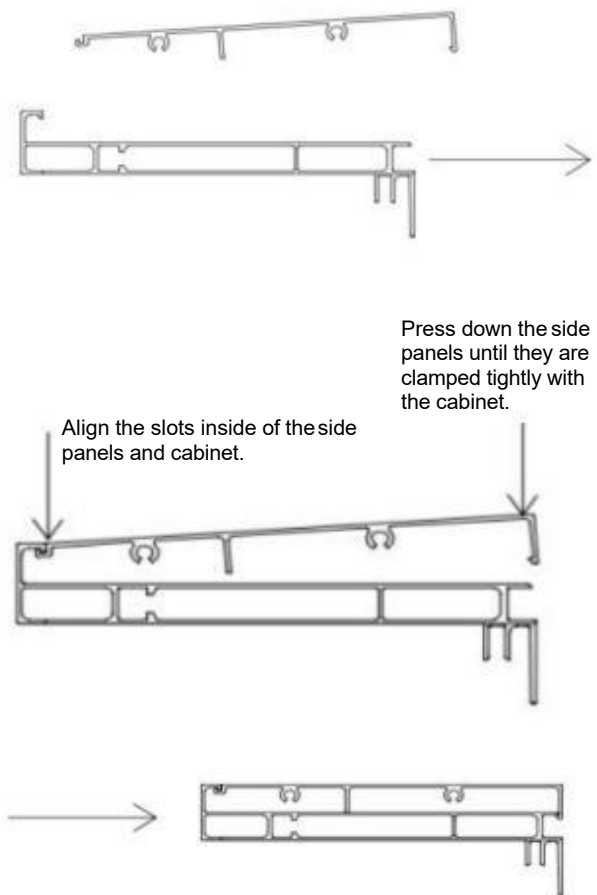


Press down the side panels until they are clamped tightly with the cabinet.

Align the slots inside of the side panels and cabinet.


STEP 6

Surface Installation Instruction

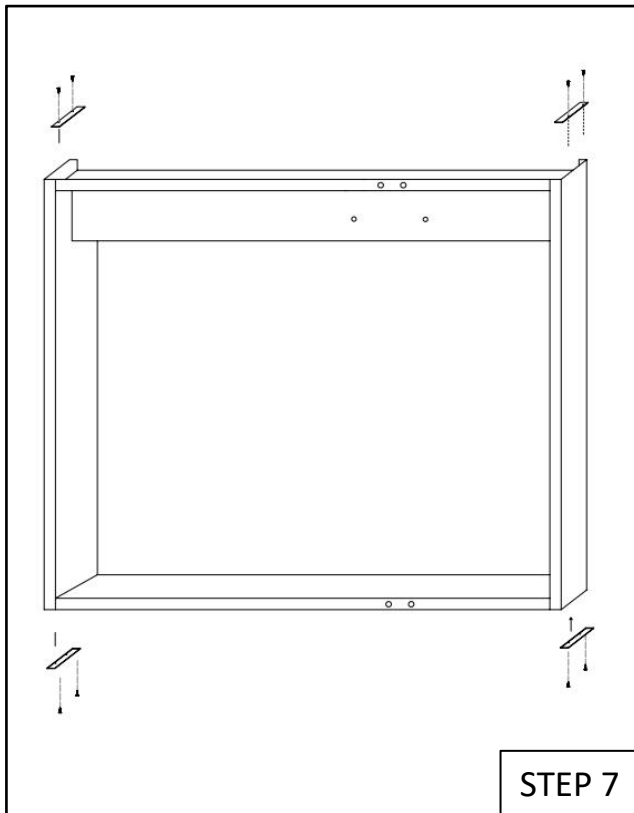


Connect the wires


BLACK WIRE --- POWER SUPPLY L (LINE)
 WHITE WIRE --- POWER SUPPLY N (NEUTRAL)
 GREEN WIRE --- POWER SUPPLY G (GROUND)

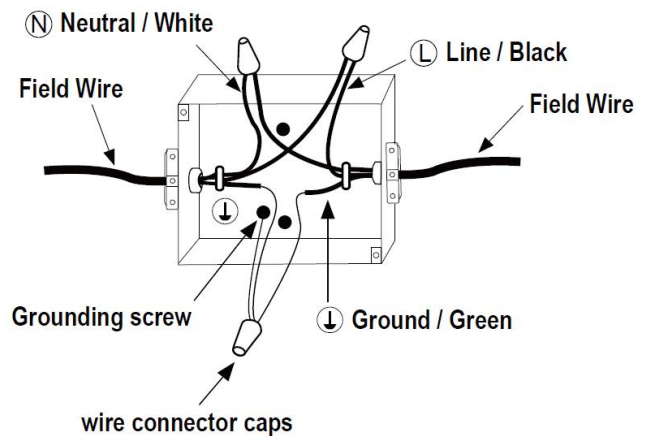

Lift the cabinet and slide it down over the mounting bar.
 Make sure the hooks engage the bar.

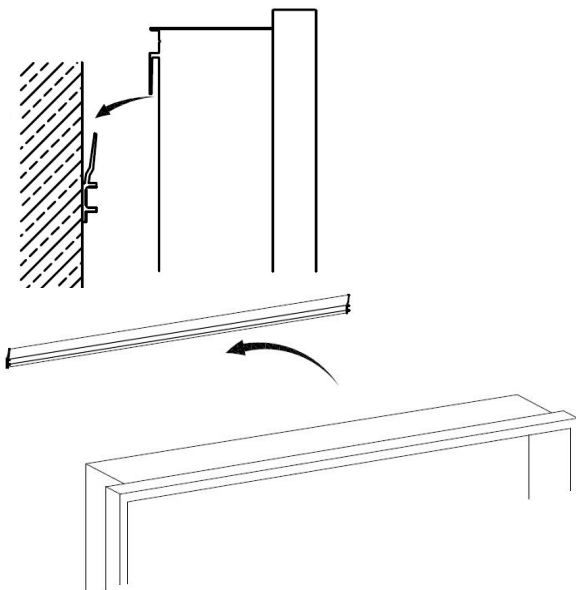

Place the support angle on the bottom of the cabinet and mark hole location on the wall. Drill hole and insert anchor where needed. Fix the support angle by screw. Always look for wood studs behind the drywall for stronger installation.

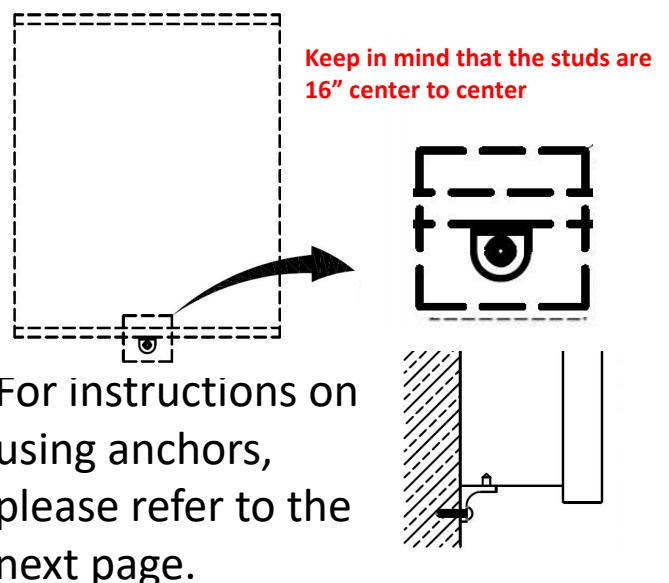


Surface Installation Instruction

Rules for Selecting Anchors

Installing on Drywall:

- Use Anchors A to ensure a secure installation on drywall.
- Anchors A are designed to provide adequate support on drywall.

Anchors A

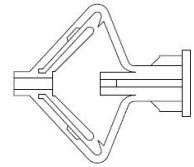

Installing on concrete wall:


- Use Anchors B for a stronger installation.
- Anchors B are specifically designed for concrete wall, offering higher fastening strength.

Anchors B



STEP 10


Install the glass shelves by mounting them over the shelves supports.

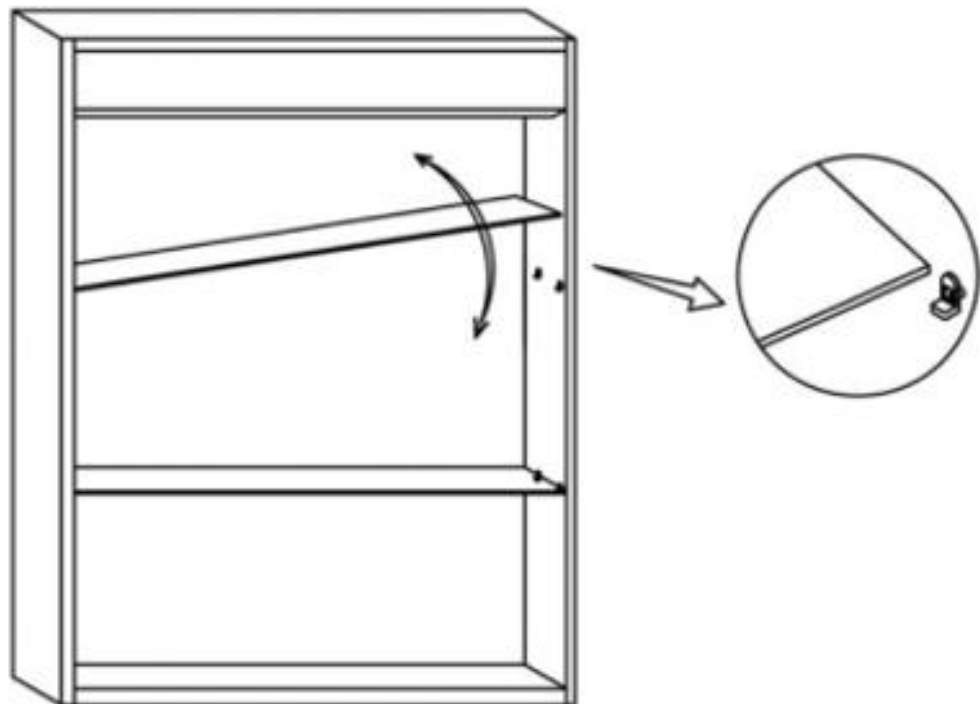


STEP 11

Step12: Cabinet Door Installation

1. Please ensure that the latch on the hinge is fully extended. This can be achieved by rotating the adjusting screw clockwise near the latch, which will make it easier to install the cabinet door.


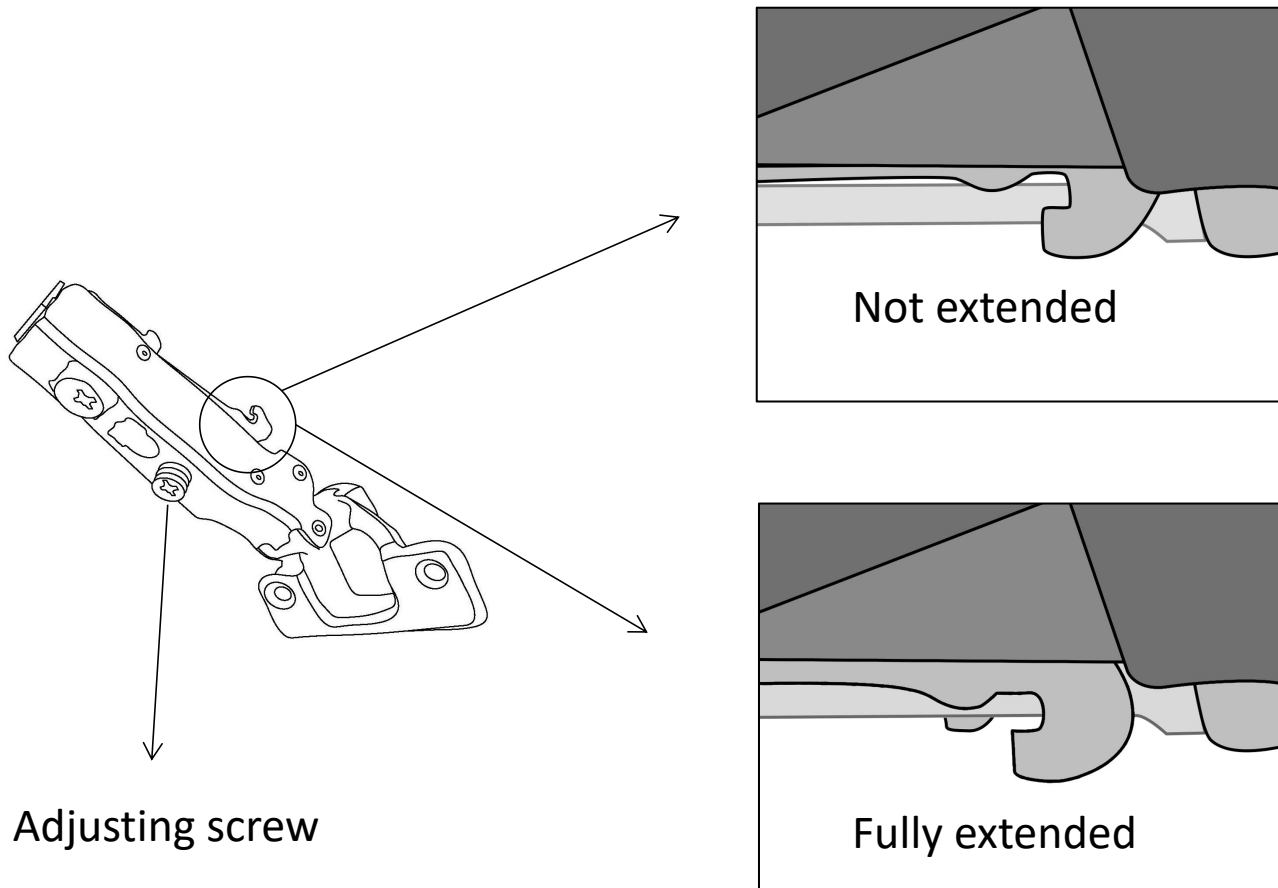


2. Insert the hinges to the base, then connect the doors with the cabinet.

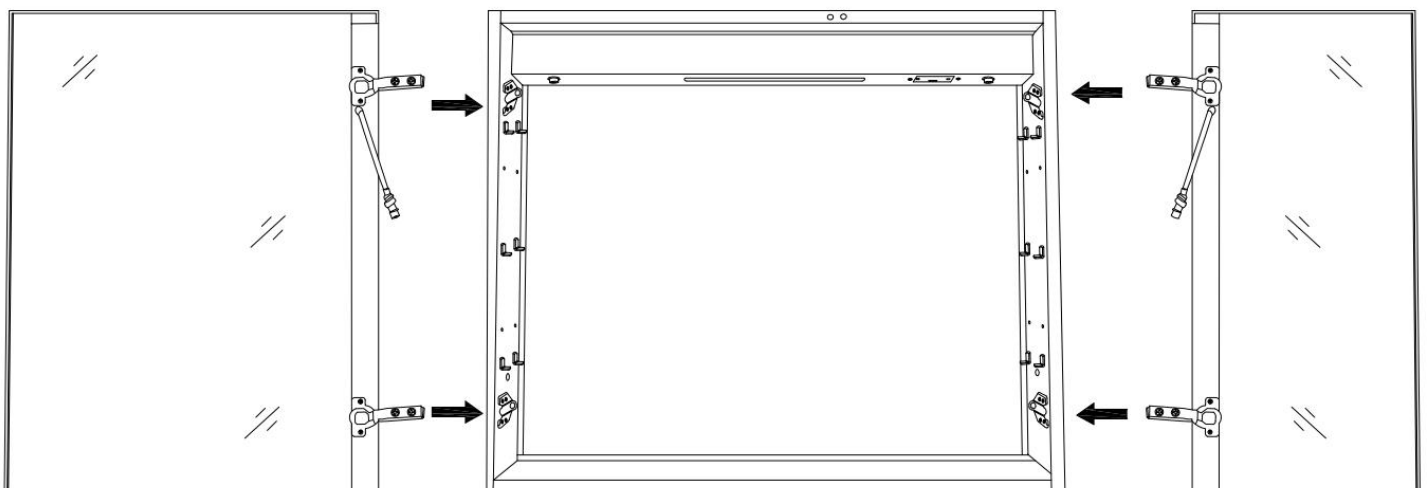


Step12: Cabinet Door Installation

3.If necessary , adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly.

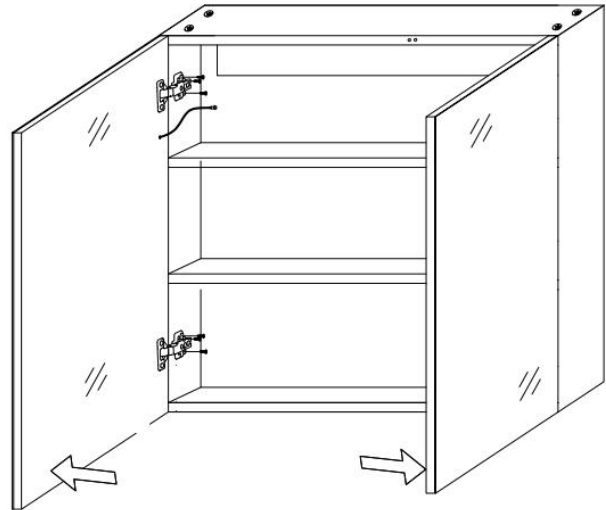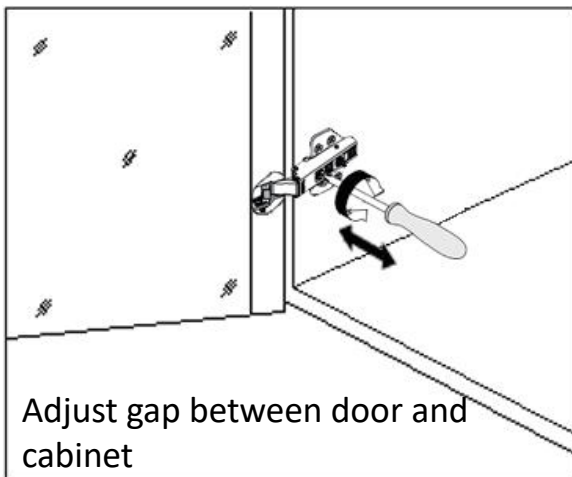


4. Connect the electrical cord on the door to the cabinet and tighten it properly.

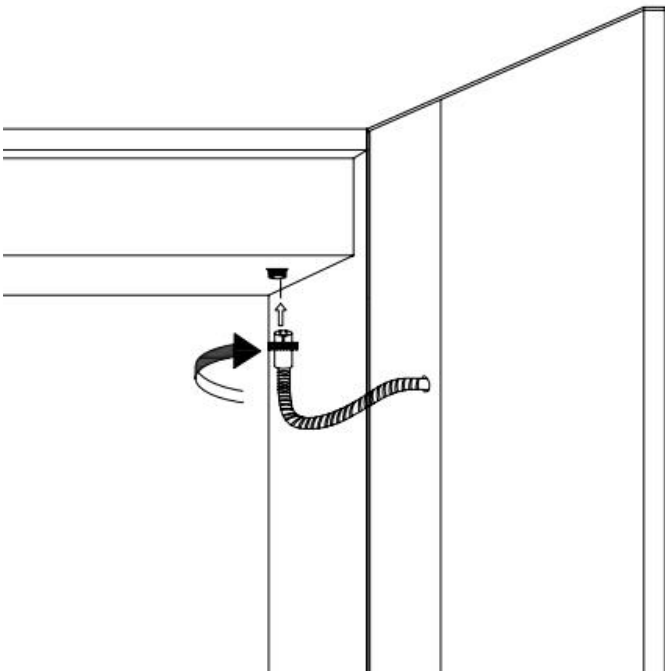

Embedded Installation Instruction

Before installing, it is necessary to determine the opening size, which can be referred to in the table below.

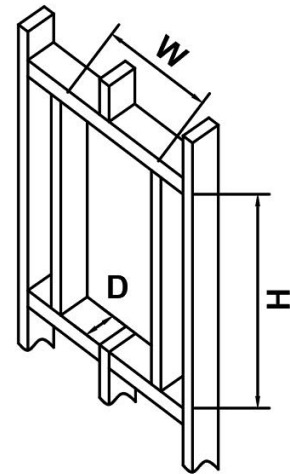


Actual cabinet		Wall opening dimensions for embedded installation all in Inches.		
No.	Dimensions	W (Width)	H (Height)	D (Depth)
1	20"×26"	19-1/4	25-1/4	4-3/8
2	20"×30"	19-1/4	29-1/4	4-3/8
3	20"×32"	19-1/4	31-1/4	4-3/8
4	20"×36"	19-1/4	35-1/4	4-3/8
5	24"×30"	23-1/4	29-1/4	4-3/8
6	24"×32"	23-1/4	31-1/4	4-3/8
7	24"×36"	23-1/4	35-1/4	4-3/8
8	28"×30"	27-1/4	29-1/4	4-3/8
9	28"×32"	27-1/4	31-1/4	4-3/8
10	30"×26"	29-1/4	25-1/4	4-3/8
11	30"×30"	29-1/4	29-1/4	4-3/8
12	30"×32"	29-1/4	31-1/4	4-3/8
13	30"×36"	29-1/4	35-1/4	4-3/8

Note: Some dimension information is on the next page.

Embedded Installation Instruction


Before installing, it is necessary to determine the opening size, which can be referred to in the table below.

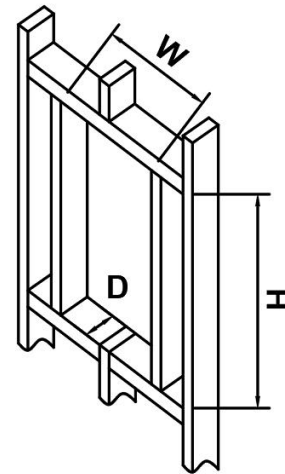

Actual cabinet		Wall opening dimensions for embedded installation all in Inches.		
No.	Dimensions	W (Width)	H (Height)	D (Depth)
14	32"×30"	31-1/4	29-1/4	4-3/8
15	36"×30"	35-1/4	29-1/4	4-3/8
16	36"×32"	35-1/4	31-1/4	4-3/8
17	36"×36"	35-1/4	35-1/4	4-3/8
18	40"×30"	39-1/4	29-1/4	4-3/8
19	40"×32"	39-1/4	31-1/4	4-3/8
20	44"×30"	43-1/4	29-1/4	4-3/8
21	44"×32"	43-1/4	31-1/4	4-3/8
22	48"×30"	47-1/4	29-1/4	4-3/8
23	48"×32"	47-1/4	31-1/4	4-3/8
24	48"×36"	47-1/4	35-1/4	4-3/8
25	60"×32"	59-1/4	31-1/4	4-3/8

Embedded Installation Instruction


Determine the size of the opening

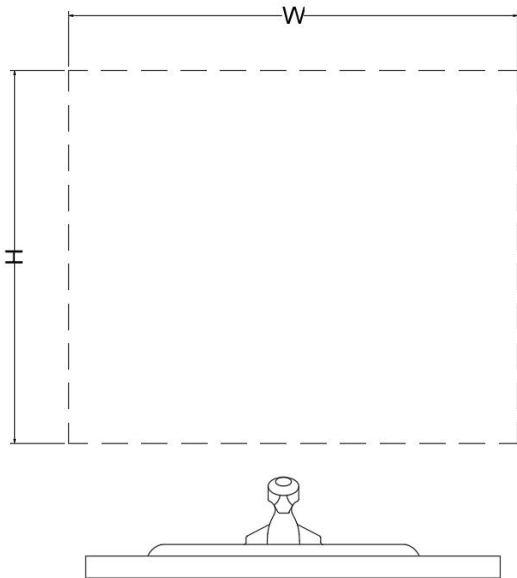


STEP 1

Connect the wires

BLACK WIRE --- POWER SUPPLY L (LINE)
 WHITE WIRE --- POWER SUPPLY N (NEUTRAL)
 GREEN WIRE --- POWER SUPPLY G (GROUND)

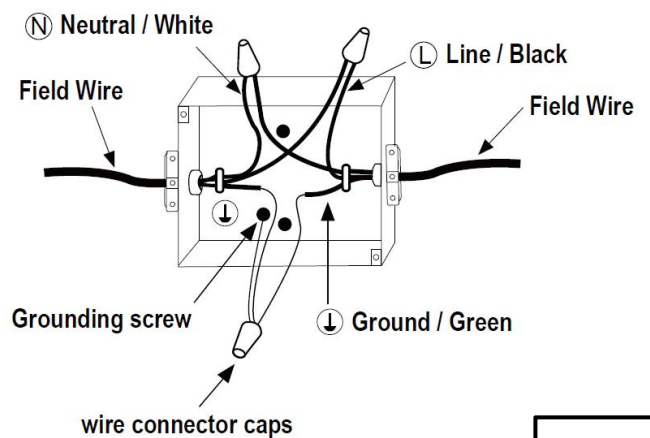


STEP 2

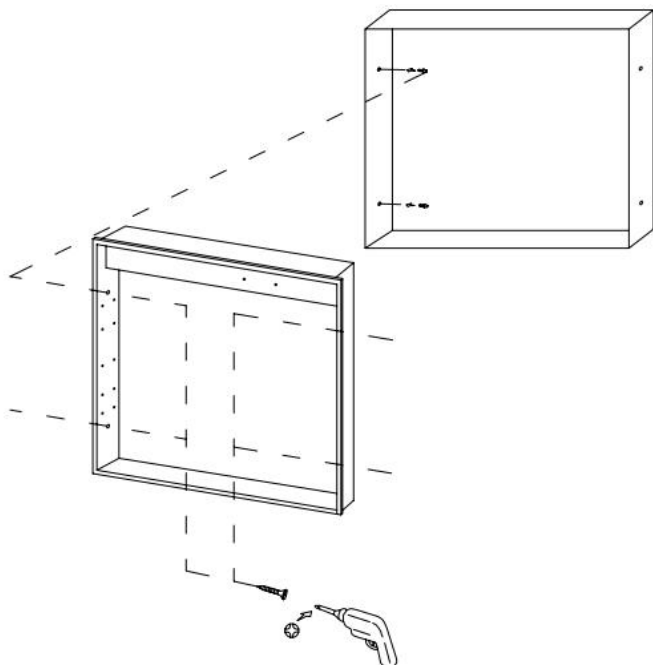

STEP 3

Install the glass shelves by mounting them over the shelves supports.

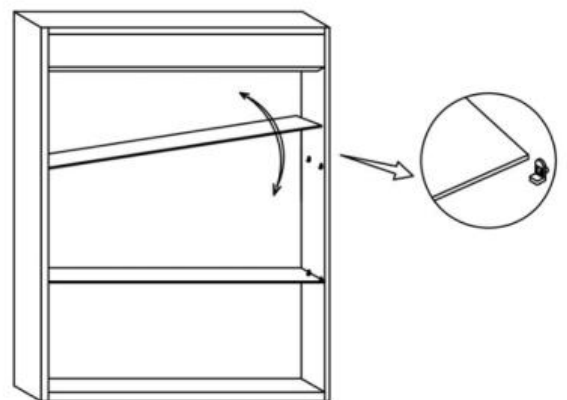


STEP 4


*All diagrams are for reference only. All model dimensions and proportion position will vary.

Step5: Cabinet Door Installation

1. Please ensure that the latch on the hinge is fully extended. This can be achieved by rotating the adjusting screw clockwise near the latch, which will make it easier to install the cabinet door.


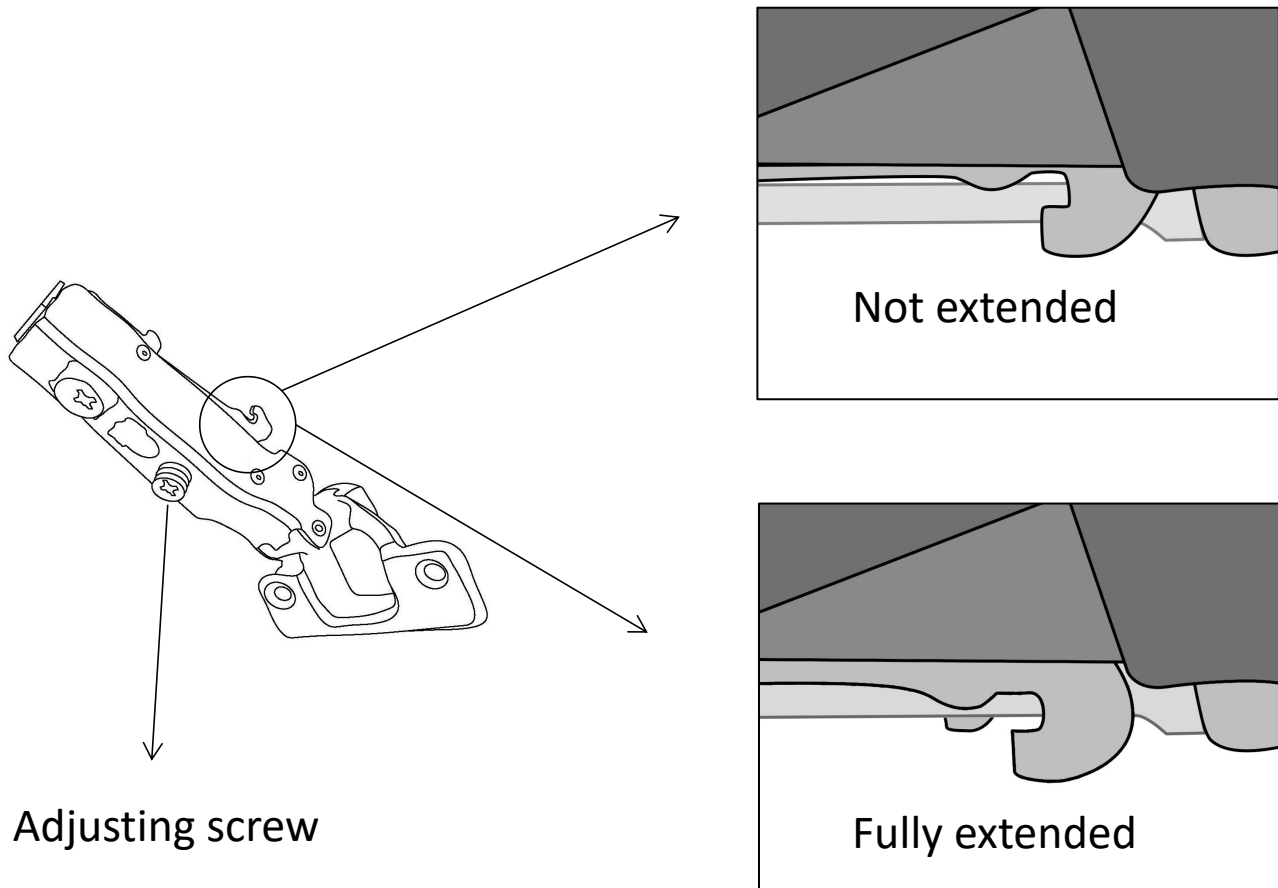


2. Insert the hinges to the base, then connect the doors with the cabinet.

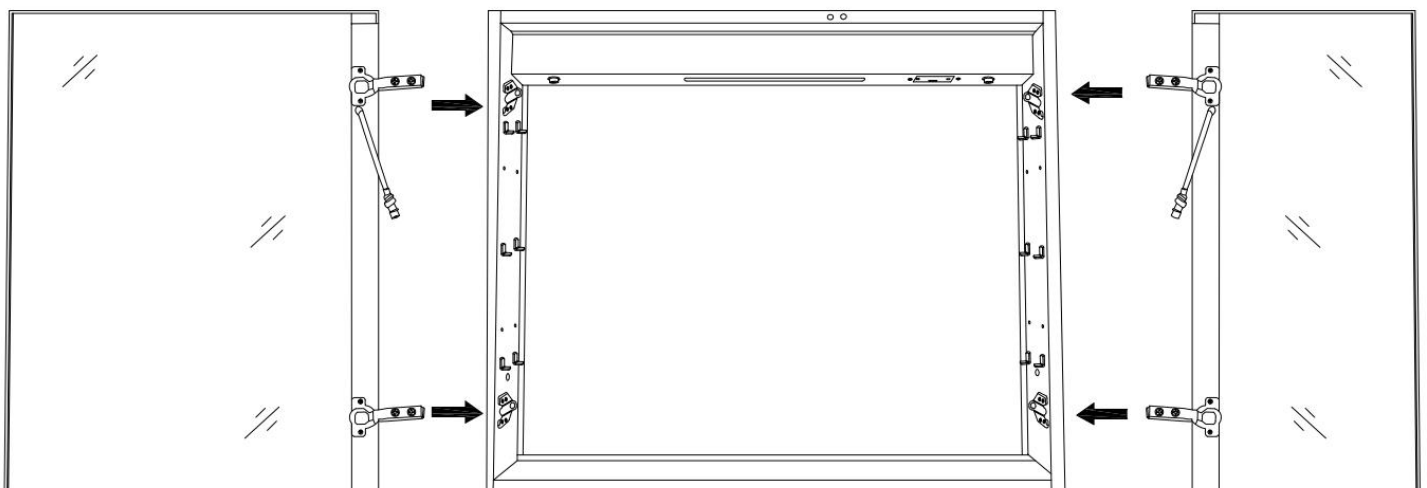


Step5: Cabinet Door Installation

3.If necessary , adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly.

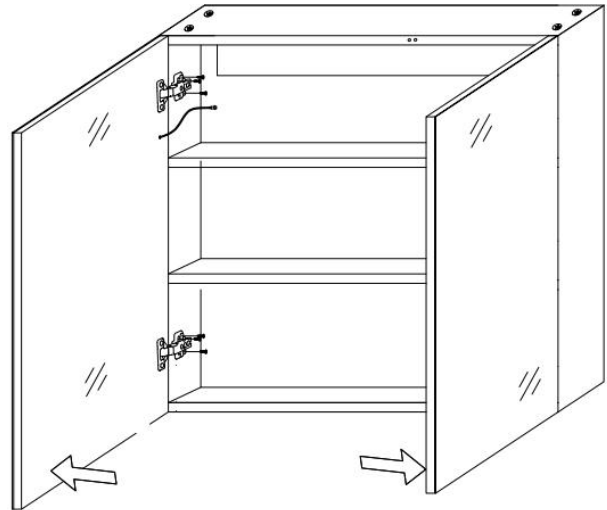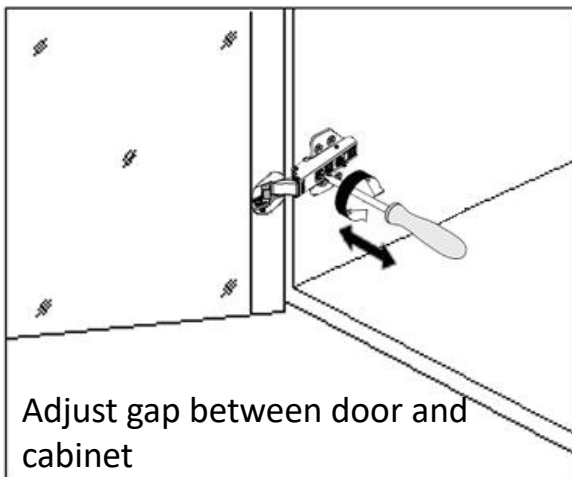

4. Connect the electrical cord on the door to the cabinet and tighten it properly.

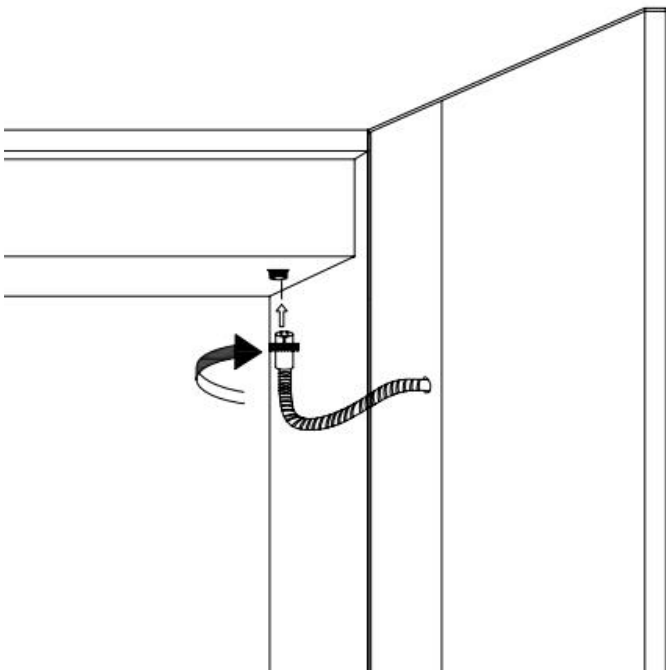


Operating Manual


The buttons turn blue when connected to the main power supply and turn white after a brief touch.



- Briefly touch the button to turn the mirror on or off.
- Press and hold the button to change the color temperature when the mirror is on.
- Optional to be wired to wall switch by ON/OFF memory function.

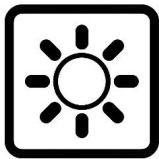


- Briefly touch the button to turn the mirror on or off.
- Press and hold the button to adjust the brightness.
- Release the button when the brightness reaches your desired level

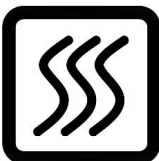

- The mirror begins to warm up and defog after you press the defogger button.
- Press the button again to turn off the anti-fog function.
- **Press and hold the button to turn the blue backlight on or off.**
- Note: To prevent damage from prolonged high temperatures, the defogger will automatically stop after 60 minutes of continuous operation.

● Electrical components inside the cabinet

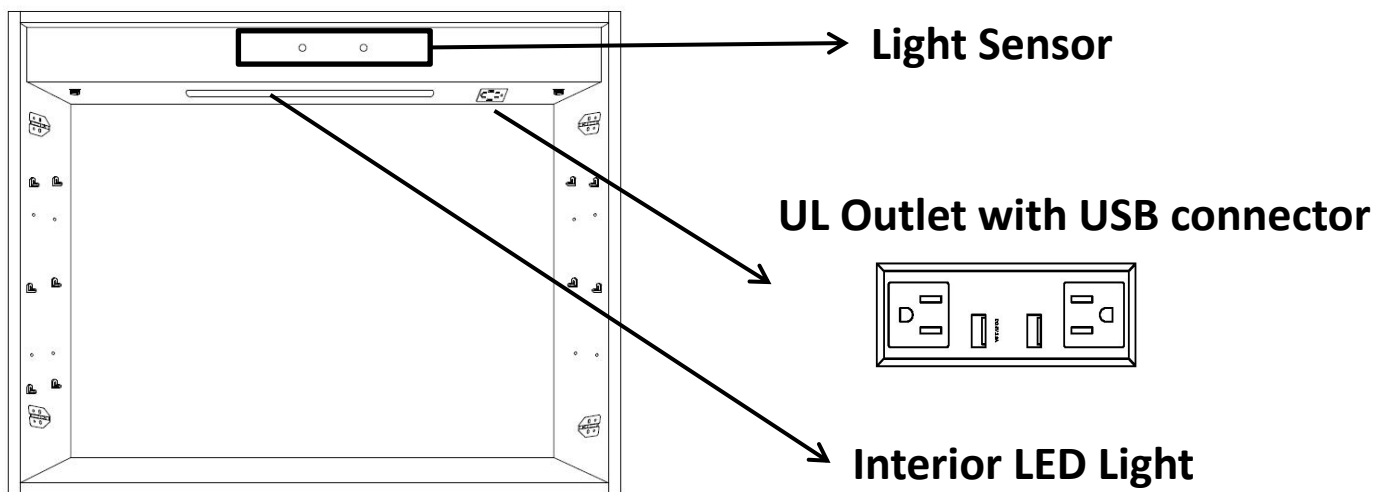

1. Interior LED Light

- The Interior LED Light will be automatically on when the cabinet door opened.
- Don't cover the light sensor.


2. UL Outlet with USB connector

- Outlet: Rated for a maximum of 15A, 1800W, 120Vac
- USB connector: Rated for a maximum of 3.6A, 18W, 5Vdc


● Light-Sensitive Night Light

Note: Some models of this series do not include a light-sensitive night light.

The top view of cabinet door



The bottom-up view of cabinet door

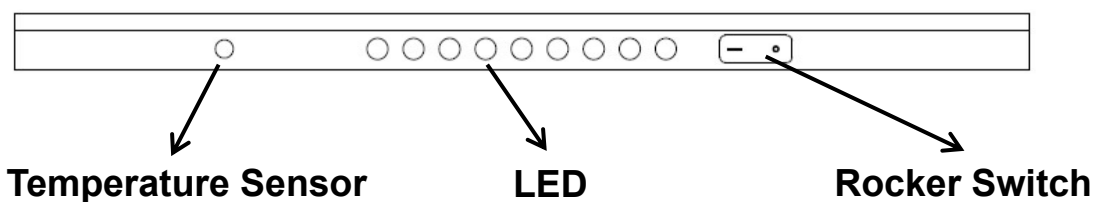

- When the ambient brightness decreases, the night light will turn on.
- The rocker switch allows you to toggle the night light function on or off.
- Don't cover the sensor.

● Setting the clock

Note: Some models of this series do not include a clock function.

- Please turn off the light before setting the clock.
- Press and hold the Button 1 for seconds , the “Hour” will flash , then briefly touch button1 or 2 to set Hour.
- Wait for seconds after setting up the Hour then it will automatically switch to the Minute adjustment mode.
- Briefly touch Button 1 or 2 to set up the Minute.
- Wait seconds after you finish the time setting , the time will be saved automatically.

To turn on/off the clock:

- First, turn off the mirror light.
- Then, press and hold the button 2 for a few seconds until the clock turns on/off.

