



## ➤ Application



Empty completely all the contents of the catalyst (B) onto the paste (A).



Mix at slow speed using an electric drill equipped with mixing paddle. Scrape the walls of the bucket to eliminate all parts of non-catalysed product.



The joints must be dry. Introduce the mortar into the joints using the suitable green rubber float (art. 946GR) spreading diagonally across the joints. Remove the excess product.





The grout must be cleaned while the product is still wet. Sprinkle clean water. Initial cleaning using a moistened white felt (art. 109/GBI making circular movements. Ensure no water enters the joints. Any adjustments to the grout must be performed before cleaning with w



Now perform a second cleaning with a rigid cellulose sponge (art. 128G0001).





Any stains of the transparent product can be removed after 24 hours or anyway after the gap has hardened. Use HAZE REMOVER. Spread HAZE REMOVER with the white felt.



Leave on for 15-30 minutes. Scrub the surface with the white felt.



Rinse with clean water. Dry immediately with a clean cloth and do not wait for the evaporation of the rinse water.

Mixture life: About 1 hour at  $T = +23^{\circ}C / 73.4^{\circ}F$ 

Application temperature: from +12°C to +30°C / From + 64,4°F to 73,4°F

Recommended application temperature: from +18°C to +23°C / From 64,4°F to 73,4

Walkable after: 24 hours at  $T = +23^{\circ}C / 73.4^{\circ}F$ Ready for use:5 days at  $T=+23^{\circ}C$  / 73,4°F

Storage time: 24 months in original packaging, avoid freezing temperatures.


Packaging: 1, 2.5 and 5 kg buckets

Mixing ratios: Component A: 93.7 parts by weight - Component B: 6.3 parts by weight -

The two components are pre-measured in their respective packaging

Consistency of the mix: creamy grout Specific gravity of mix: 1.55 kg/l

Joint width: Up to 3 mm

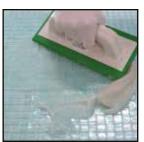







## **ADVISED TOOLS**













EXCLUSIVE DISTRIBUTOR FOR USA Tile Doctor www.TileDoctor.com 877-TileDoc (845-3362)