
## allen + roth

ITEM #: 5256834 MODEL #: KY-1005

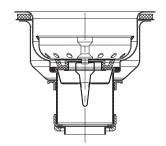

## Deep Cup Sink Strainer

## **DIRECTIONS:**

- Remove all components from strainer body.
- Apply plumber's putty between strainer body and sink.
- Insert strainer body firmly in place while installing under sink
  first rubber washer and paper washer, next locking shell and steel pressure ring, with the flat side against the locking shell. Hand-tighten firmly.
- Place flanged tailpiece washer onto tailpiece and install slip nut with threads upward on tailpiece. Screw slip nut onto threaded shank of strainer body. Tighten firmly with wrench.

## **REQUIRED TOOLS:**

Wrench Plumber's putty

ALLEN + ROTH and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

Thank you for purchasing this **ALLEN+ROTH** product. Questions, problems or missing parts? Before returning, contact us on:**866-439-9800**, 8 a.m. - 8 p.m., EST, Monday - Sunday or **ascs@lowes.com**.