

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.





- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look into the Carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

Counter Stool




Parts List

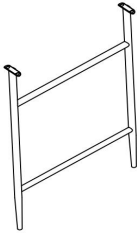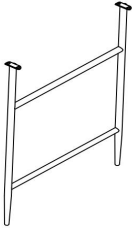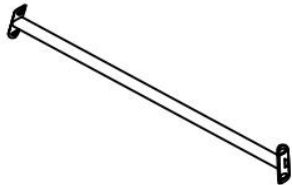Label	Picture	Description	QTY
A		Front Leg	1
B		Hind Leg	1
C		Left Wood Armrest	1
D		Right Wood Armrest	1
E		Armrest Connection	1
F		Legs Connection	2

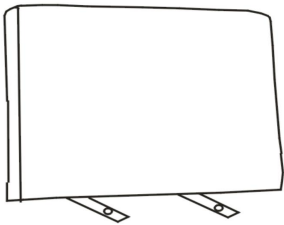
G		Backrest	1
H		Seat Panel	1

Hardware

Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolt (M6*16MM)	9
③		Bolt (M6*16MM)	11
④		Bolt (M6*40MM)	7
⑤		Bolt (M6*50MM)	2
⑥		Bolt (M6*14MM)	18

Assembly Preparation

Before Beginning Assembly:

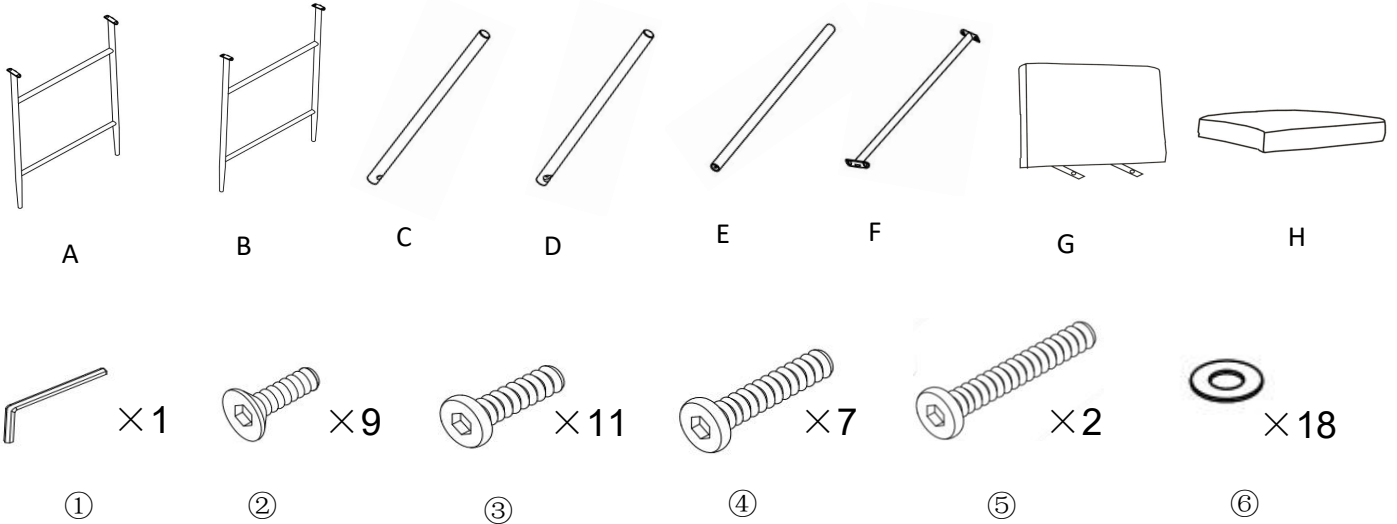

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

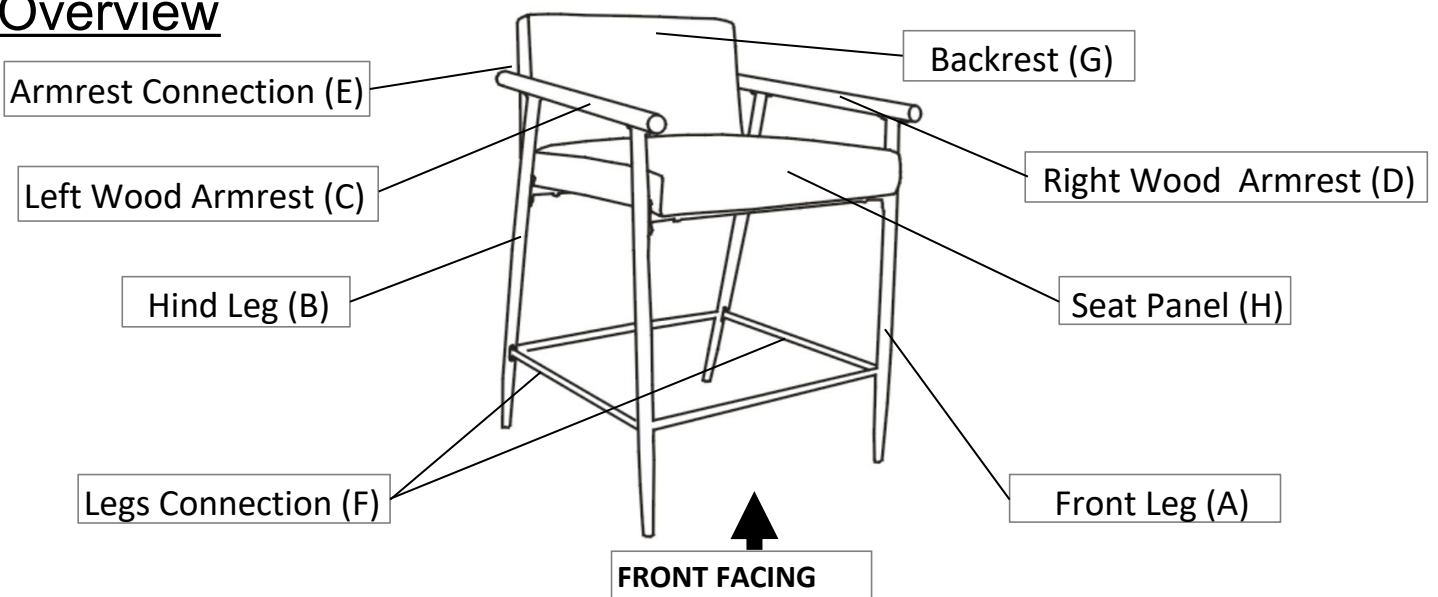


This Counter stool has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Counter stool parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise yourself with the parts and steps before assembly.

Step 1

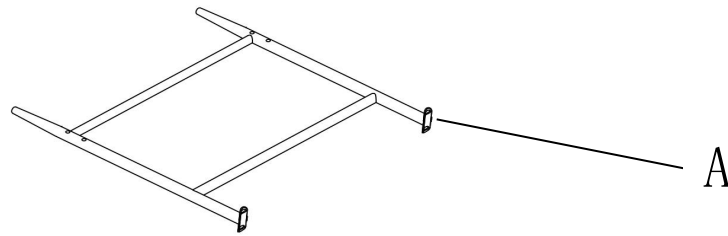


Open the carton and place all the parts onto a clean, non-marring surface.
Place Front Leg (A) on the ground, as shown in picture above.

Step 2

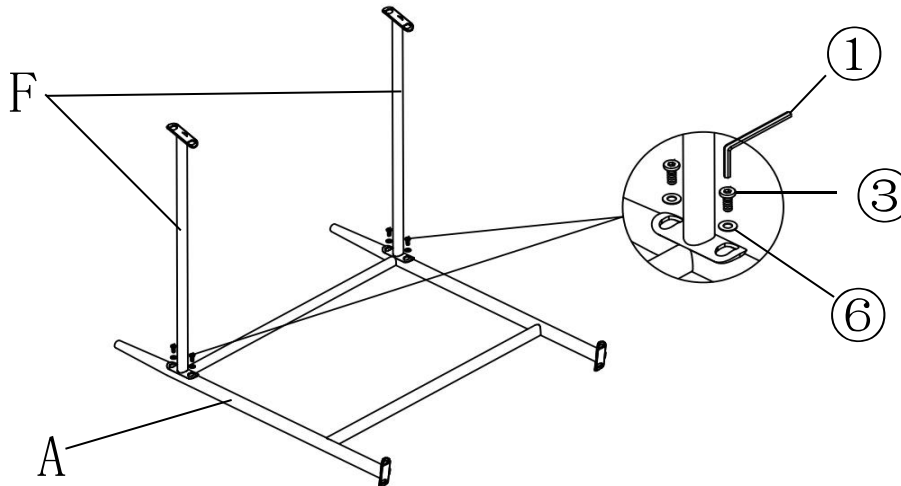


Attach Legs Connection (F) to Front Leg (A) using Bolts(③) and Wahser (⑥) with Allen Wrench(①).
DO NOT FULLY TIGHTEN THE BOLTS.

Step 3

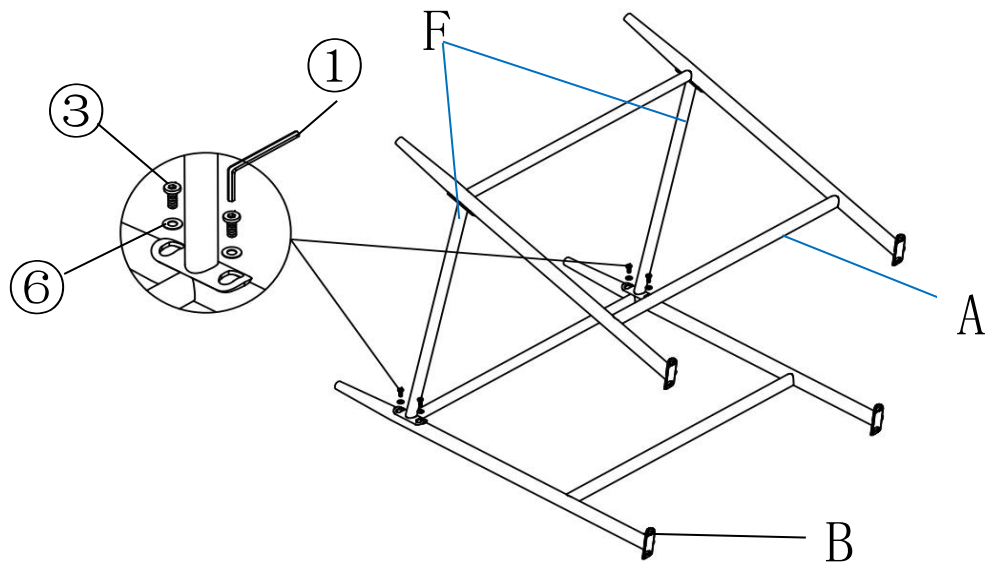

Turn over part of step 2 with the assistant of your adult partner.
Attach the Partially assembled Front Leg (A) with Legs Connection (F) to the Hind Leg (B) using Bolts (③) and Wahser (⑥) with Allen Wrench (①).
DO NOT FULLY TIGHTEN THE BOLTS.

Step 4

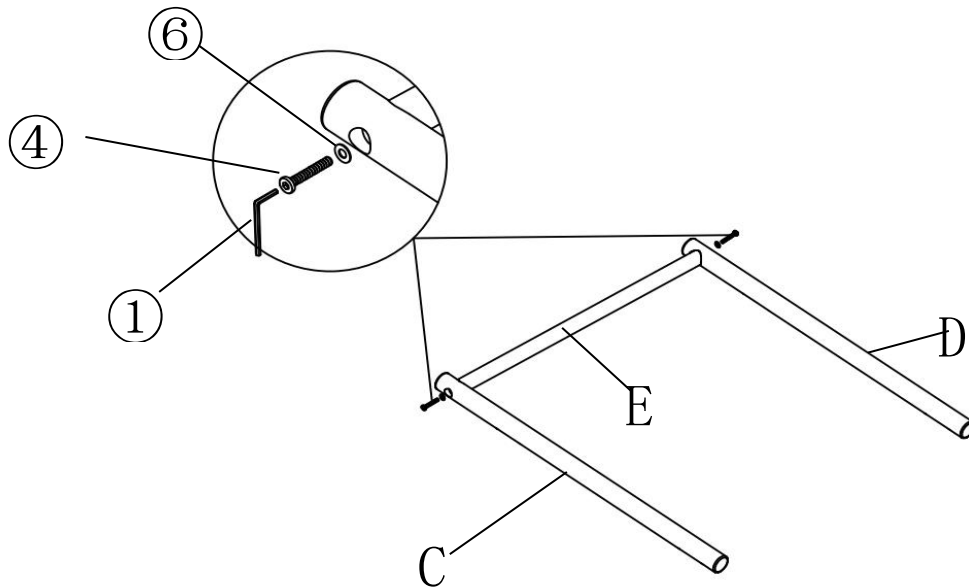


Using Bolts(④) and Wahser (⑥) with Allen Wrench(①) to connect the Left Wood Armrest (C), Right Wood Armrest (D) and Armrest Connection (E) as shown above.

The bolts mounting positions are on the inner side of the Armrest Connection.

DO NOT FULLY TIGHTEN THE BOLTS.

Step 5

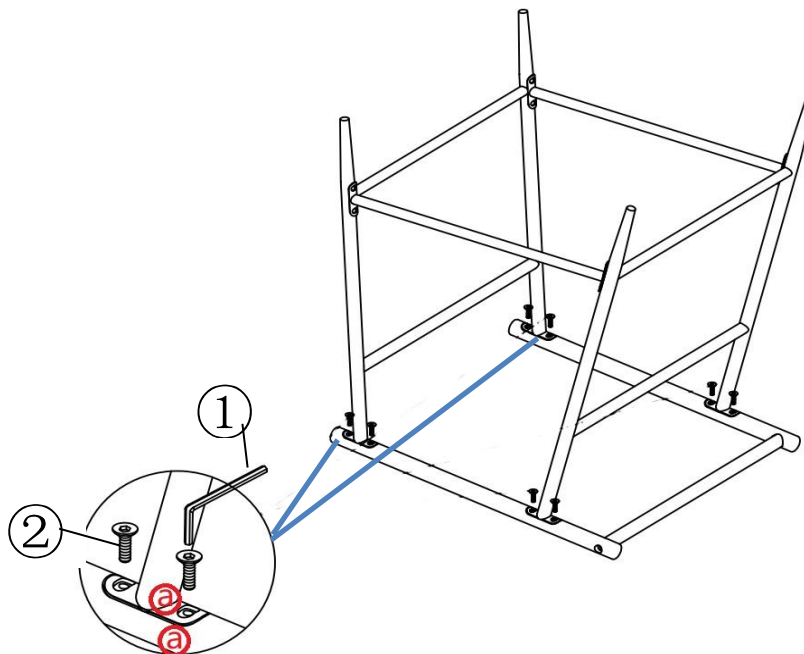


Turn over part of step 4 with the assistant of your adult partner.

Using Bolts(②) with Allen Wrench(①) to connect the Wood Armrest to the Partialy assembled Legs as shown above.

Make sure the hole @ on the leg match the mounting positions @ on the Wood Armrest as shown above.


Step 6

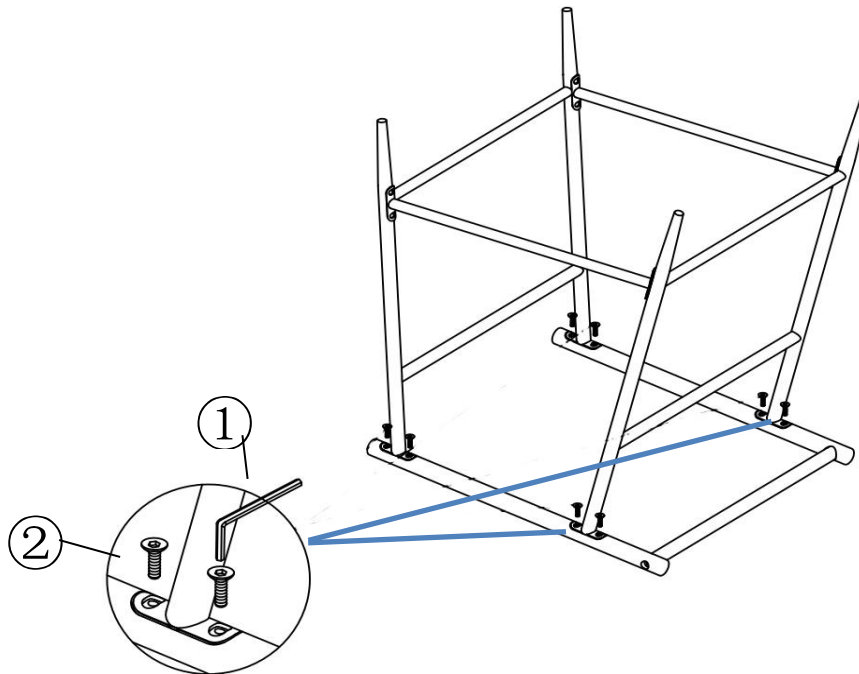

Using Bolts(②) with Allen Wrench(①) to connect the Wood Armrest to the Partially assembled Legs as shown above.

DO NOT FULLY TIGHTEN THE BOLTS.


Step 7

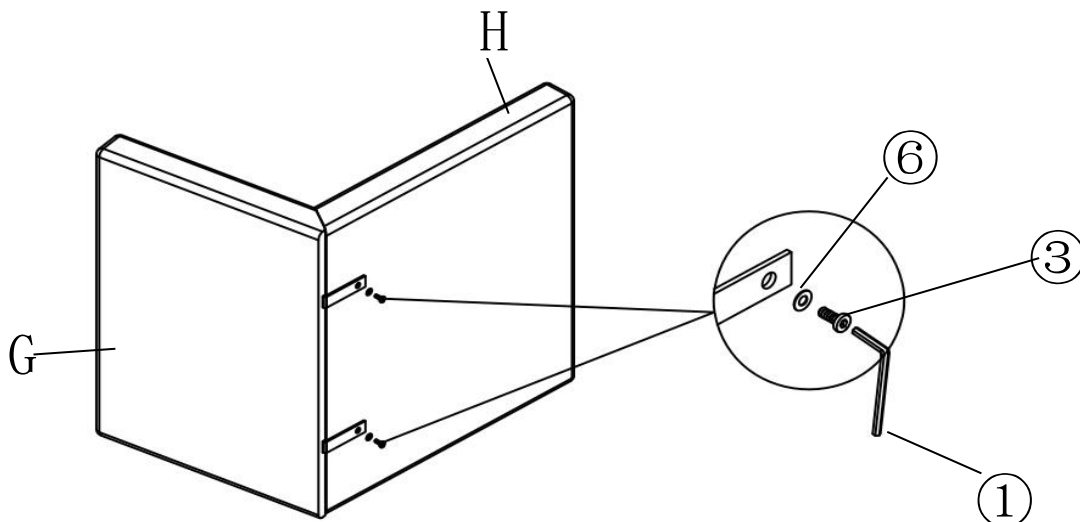

Using Bolts (③) and Wahser (⑥) with Allen Wrench (①) to connect the Backrest (G) to Seat Panel (H) as shown above.

DO NOT FULLY TIGHTEN THE BOLTS.


Step 8

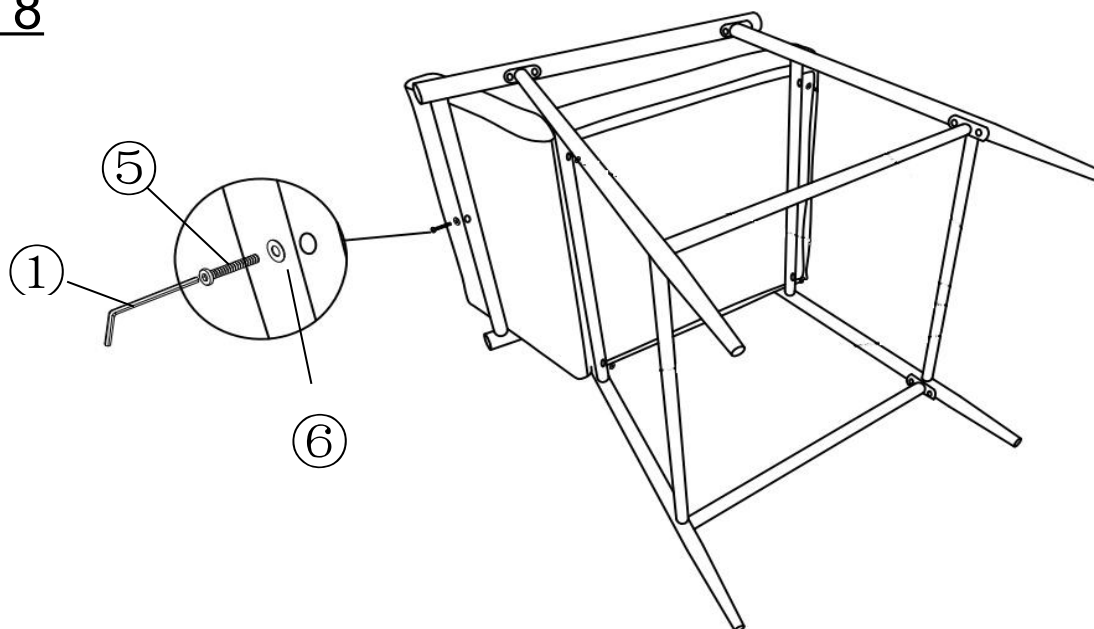

Attach the Backrest (G) and Seat Panel (H) to the Partially assemble Legs as shown above. Using Bolts (5) and Wahser (6) with Allen Wrench (1) to attach the Armrest connection (E) to the Backrest (G).

DO NOT FULLY TIGHTEN THE BOLTS.


Step 9

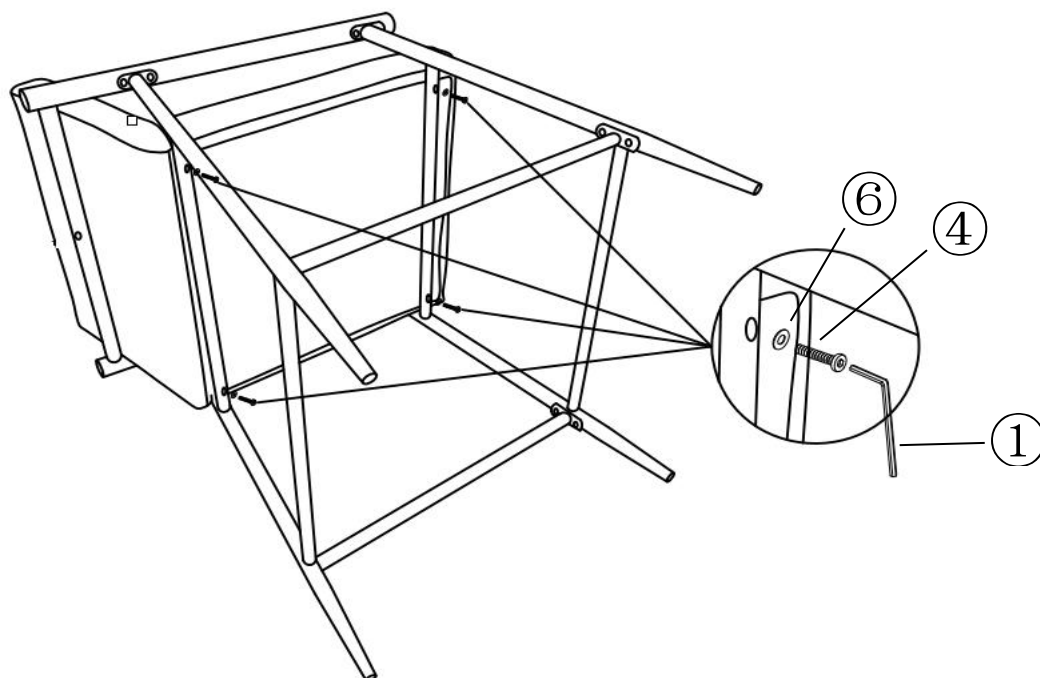

Using Bolts (4) and Wahser (6) with Allen Wrench (1) to attach the Legs and Seat Panel (H) as shown above.

DO NOT FULLY TIGHTEN THE BOLTS.

Step 10

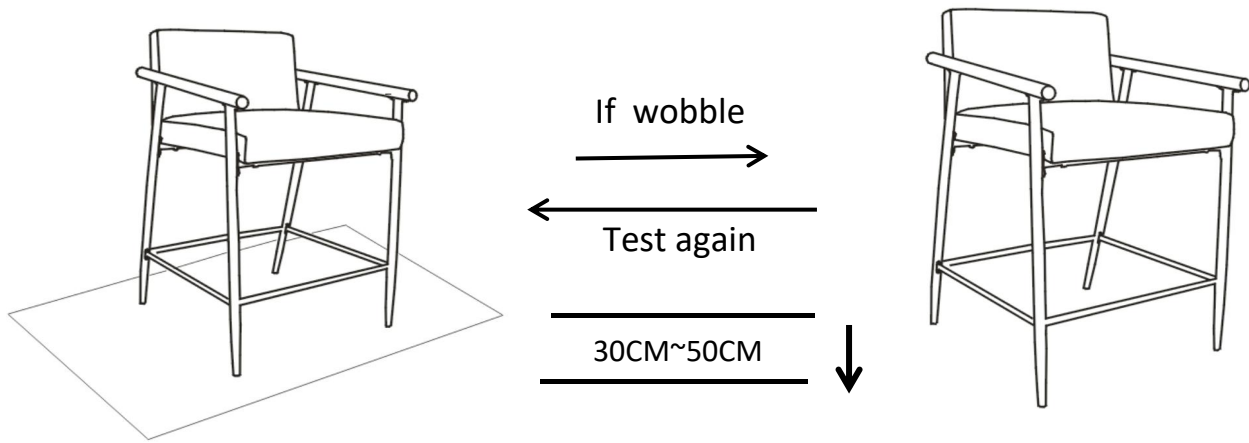

Place the Counter stool on a **LEVEL SURFACE** to check for wobbles.

If it wobbles, lift the Counter stool to some 30cm to 50cm in height from the ground.

Keep your feet and toes well away from the drop zone.

Drop the Counter stool freely and vertically with the four legs, hitting the ground, all at the same time.

This Drop Test will help to ensure that all the bolts and gaps all reach full alignment status.

Test again for evenness on a **LEVEL SURFACE**.

If no wobbles are found, slowly and steadily turn the Counter stool upside down.

Then, proceed to tighten all bolts in a sequential manner.

CAUTION: When tightening these bolts, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the bolts and execute these same drop tests.

WARNING!! IF Counter stool IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Step 11



Your Counter stool is ready for use.

The chair can only be used on a flat, level surface.