


6055-11631-WHT 3-Tier Metal Cart



A 2 ea
Top Arches

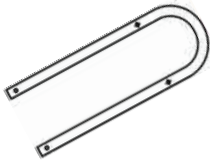

D 2 ea
Female Base Tubes



G 1 ea
Small Basket



J 2 ea
Locking Wheels



B 4 ea
Vertical Tubes




E 1 ea
Large Basket



H 12 ea
Phillips Screws



K 2 ea
Wheels



C 2 ea
Male Base Tubes



F 1 ea
Medium Basket



I 12 ea
Acorn Hex Nut



L 1 ea
Screwdriver
Hex Wrench




M 1 ea
Open Wrench

Part	Reference
A	F11015
B	F11016
C	F11017
D	F11018
E	F11019
F	F11020
G	F11021
H	F10941
I	F10942
J	F10943
K	F10944
L	F10945
M	F10946

**No additional
tools required.**


STEP 1: Assemble the frame - follow the drawing below

- Attach male base tubes (C) to the female base tubes (D).
- Insert a vertical tube (B) into vertical sections of male and female base tubes (C & D).
- Use top arches (A) to connect the vertical tubes (B).

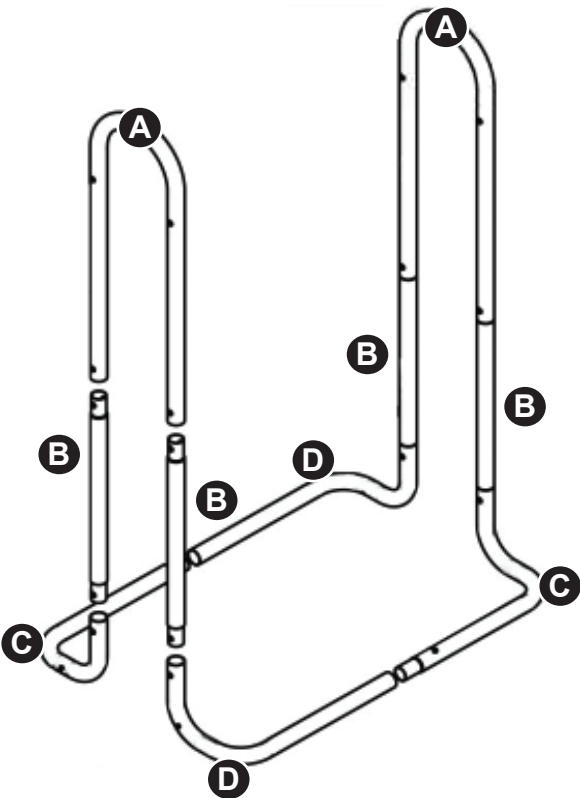

STEP 2: Install the first basket - follow the drawing below

- Place the large basket (E) at the bottom of the unit.
- First lightly hand-tighten Phillips screws (H) using acorn hex nuts (I) on the inside side of the basket.
- Then use an open wrench (M) to hold the acorn hex nuts (I) while tightening Phillips screws (H) with a screwdriver hex wrench (L).

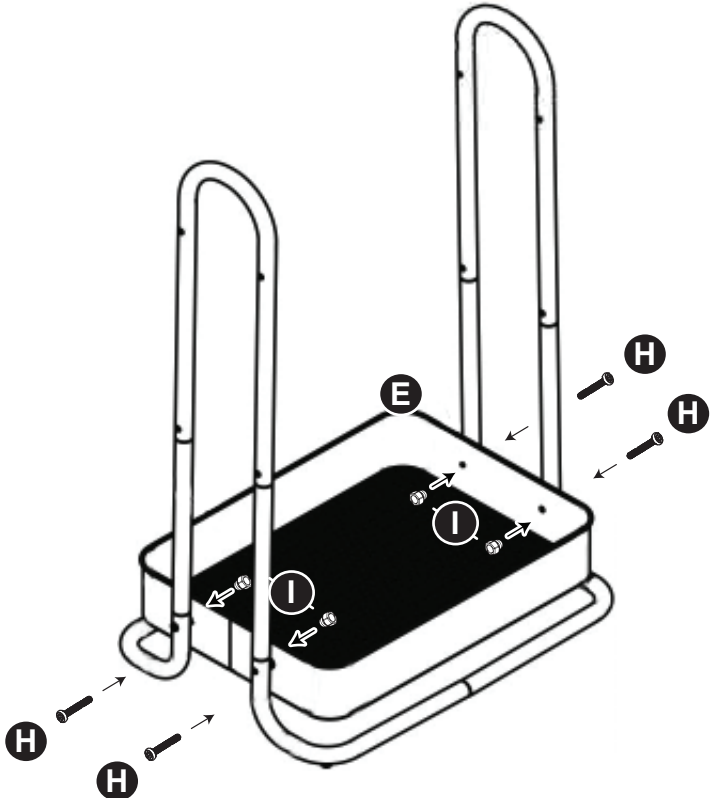


6055-11631-WHT 3-Tier Metal Cart




STEP 3: Install second basket

Repeat step 2 for the medium basket (F) at the middle of the unit.

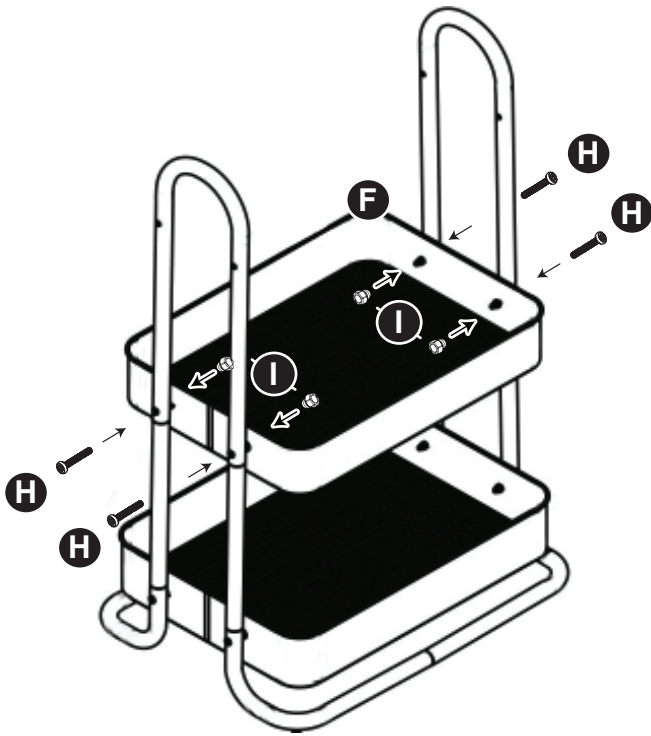



STEP 4: Install the third basket

Repeat step 2 for the small basket (G) at the top of the unit.

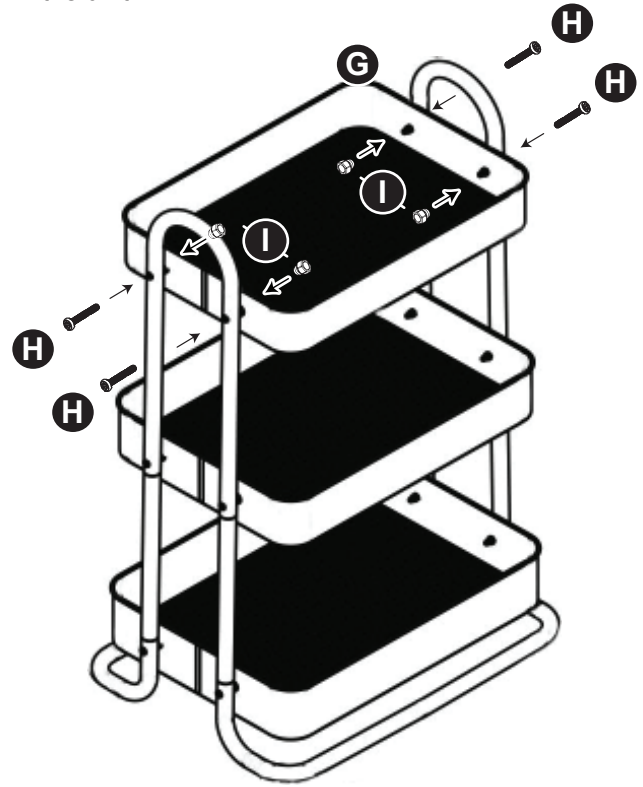

STEP 5: Attach the wheels - follow the drawing below

Attach locking wheels (J) on one side and wheels (K) on the other side using an open wrench (M).

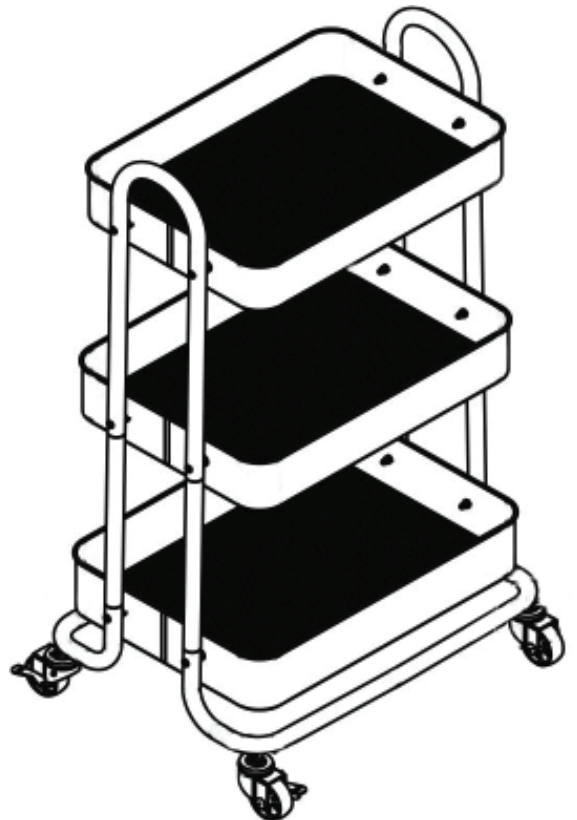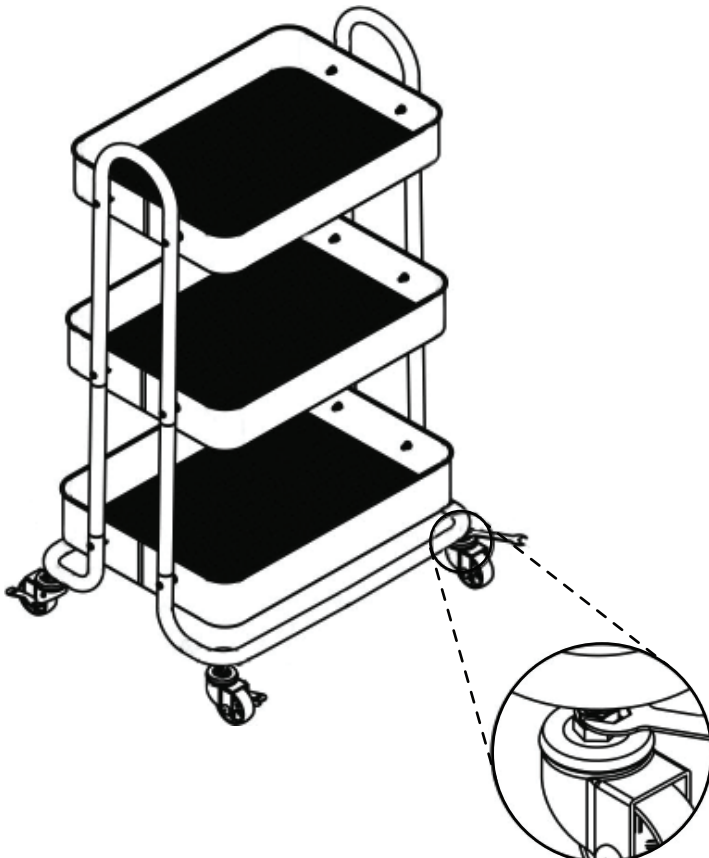

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Consumer Care Team, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: help@whitmor.com. Visit us online at www.whitmor.com