




Part# 515600

**MODEL T200-F18P  
18 Ga. Brad Nailer**

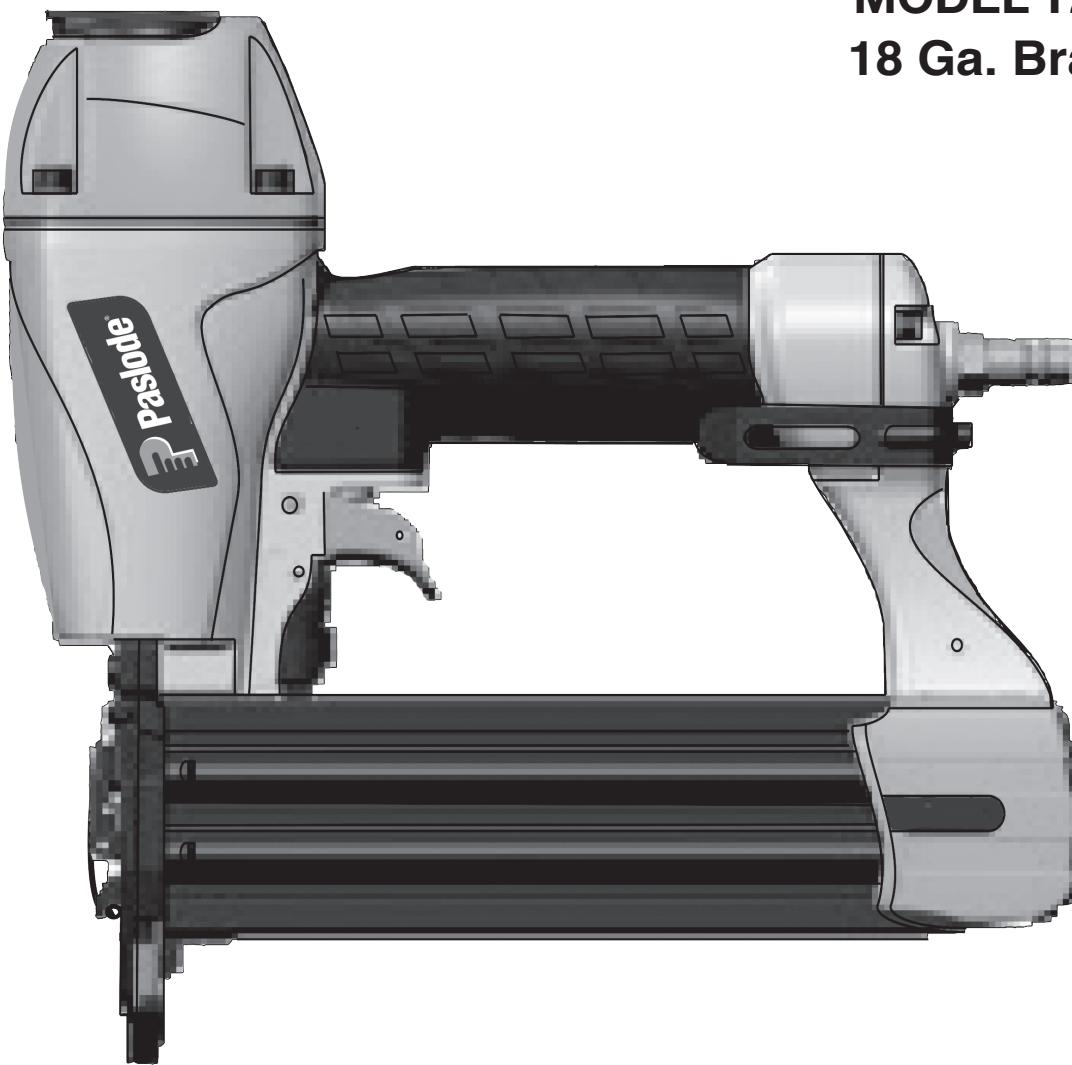

**IMPORTANT!  
DO NOT DESTROY**

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

**OPERATING MANUAL AND  
SCHEMATIC**

## INTRODUCTION

The **PASLODE® T200-F18P** Brad Nailer is a quality-built tool designed for use in residential trim applications. This tool will deliver efficient, dependable performance when used according to the manufacturer's guidelines. Please study this manual including the safety instructions to fully understand the operation of this tool.

<b>TOOL AND FASTENER SPECIFICATIONS</b>	3
<b>SAFETY INSTRUCTIONS</b>	4
<b>TOOL OPERATION</b>	5
<b>EXPLODED VIEW AND SPARE PARTS LIST</b>	10-11
<b>ACCESSORIES</b>	12

## TOOL WARRANTY AND LIMITATIONS

Paslode warrants that newly purchased power fastening tools, parts and accessories will be free from defects in material and workmanship for the period shown below, after the date of delivery to the original user.

### 90 DAY LIMITED WARRANTY

A 90-day warranty will apply to all parts, except those which are specifically covered by an extended warranty.

### EXTENDED LIMITED WARRANTY FOR ONSITE CONSTRUCTION APPLICATIONS

A one year warranty will apply to all housing and cap assembly castings. A six month warranty will apply to all magazine parts.

### NORMAL WEARING PARTS

The following parts are considered normal wearing parts and are not under warranty:

- Bumper
- Driver Blade
- "O" Rings
- Piston Rings

### WARRANTY STATEMENT

**This warranty is limited to tools sold and service requested in the United States. To obtain information on warranty service in the United States, refer to the Service Center listing that was provided with your tool.**

Paslode's sole liability hereunder will be to replace any part or accessory which proves to be defective within the specific time period. Any replacement part or accessory provided in accordance with this warranty will carry a warranty for the balance of the period of warranty applicable to the part it replaces. This warranty does not apply to part replacement required due to normal wear.

This warranty is void as to any tool which has been subjected to misuse, abuse, accidental or intentional damage, use with fasteners not meeting Paslode specification, size, or quality, improperly maintained, repaired with other than genuine Paslode replacement parts, damaged in transit or handling, or which, in Paslode's opinion, has been altered or repaired in a way that affects or detracts from the performance of the tool.

**PASLODE MAKES NO WARRANTY, EXPRESSED OR IMPLIED, RELATING TO MERCHANTABILITY, FITNESS, OR OTHERWISE, EXCEPT AS STATED ABOVE, and Paslode's liability AS STATED ABOVE AND AS ASSUMED ABOVE is in lieu of all other warranties arising out of, or in connection with, the use and performance of the tool, except to the extent otherwise provided by applicable law. PASLODE SHALL IN NO EVENT BE LIABLE FOR ANY DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, DAMAGES WHICH MAY ARISE FROM LOSS OF ANTICIPATED PROFITS OR PRODUCTION, SPOILAGE OF MATERIALS, INCREASED COST OF OPERATION, OR OTHERWISE.**

Paslode reserves the right to change specifications, equipment, or designs at any time without notice and without incurring obligation.

# TOOL AND FASTENER SPECIFICATIONS

<b>MODEL NO.</b>	T200-F18P (Part # 515600)
<b>HEIGHT</b>	10.63"
<b>WIDTH</b>	2.56"
<b>LENGTH</b>	10.04"
<b>WEIGHT</b>	2.9lbs.
<b>NAIL LENGTH</b>	5/8" - 2"
<b>SHANK DIAMETER</b>	18 gauge
<b>OPERATING PRESSURE</b>	80 to 120 psi

## TOOL AIR FITTINGS:

This tool uses a 1/4" N.P.T. male plug. The inside diameter should be .28" (7mm) or larger. The fitting **must** be capable of discharging tool air pressure when disconnected from the air supply.

## OPERATING AIR PRESSURE:

80 to 120 psi. Select the operating air pressure within this range for best tool performance.

**DO NOT EXCEED THIS RECOMMENDED OPERATING PRESSURE.**

# SAFETY INSTRUCTIONS

## SAFETY FIRST

These safety instructions provide information necessary for safe operation of Paslode® tools. **DO NOT ATTEMPT TO OPERATE THE TOOL UNTIL YOU READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND MANUAL INSTRUCTIONS.**



### WEAR EYE AND HEARING PROTECTION

Always wear hearing and eye protection devices, that conform to ANSI Z87.1 requirements, when operating or working in the vicinity of a tool. As an employer you are responsible for enforcing the use of eye protection. Wear hard hats in environments that require their use.

### THE TOOL MUST BE USED ONLY FOR THE PURPOSE FOR WHICH IT WAS DESIGNED

Do not throw the tool on the floor, strike the housing in any way or use the tool as a hammer to knock material into place.

### NEVER ENGAGE IN HORSEPLAY WITH THE TOOL

The tool is not a toy so do not use it like one. Never engage in horseplay with the tool or point it at yourself or any other person, even if you think it is not loaded.

### NEVER ASSUME THE TOOL IS EMPTY

Check the magazine for fasteners that may be left in the tool. Even if you think the tool is empty or disconnected, never point it at anyone or yourself. Unseen fasteners could fire from the tool.

### NEVER CLAMP THE TRIGGER IN A LOCKED OR OPERATING POSITION

The trigger of the tool must never be tampered with, disabled or clamped in a locked or operating position since this will cause the tool to drive a fastener any time the work contacting element depressed.

### DO NOT LOAD FASTENERS WITH THE AIR LINE CONNECTED, OR WITH THE TOOL TRIGGER OR WORK CONTACTING ELEMENT DEPRESSED

When loading fasteners into the tool be sure you disconnect the air line and that you do not depress the trigger or work contacting element.



### OPERATE THE TOOL ONLY ON A WORKPIECE

The tool should be operated only when it is in contact with the workpiece. Even then you should be careful when fastening thin material or working near the edges and corners of the workpiece since the fasteners may drive through or away from the workpiece.

### DO NOT DISABLE OR REMOVE THE WORK CONTACTING ELEMENT

This tool is equipped with a safety mechanism, called a work contacting element, to help prevent accidental firing. Never tamper with, disable or remove the work contacting element. Do not use the tool unless the work contacting element is working properly. The tool could fire unexpectedly.

### DISCONNECT THE TOOL WHEN NOT IN USE

Always disconnect the tool from the air line when it is not in use, when you leave the work area or when moving the tool to a new location. The tool must never be left unattended because people who are not familiar with the tool might handle it and injure themselves or others.



### CARRY THE TOOL ONLY BY THE HANDLE

Always carry the tool by the handle only. Never carry the tool by the air hose or with the trigger depressed since you could drive a fastener unintentionally and injure yourself or someone else.

### DO NOT WEAKEN THE TOOL HOUSING

The tool housing is a pressure vessel and should never be weakened by having your company's name, area of work or anything else stamped or engraved into its surface.

### DISCONNECT THE TOOL WHEN PERFORMING REPAIRS AND CLEARING JAMS

Never attempt to clear a jam or repair a tool unless you have disconnected the tool from the air line and removed all remaining fasteners from the tool.

### ALWAYS USE THE PROPER FITTING FOR THE TOOL

Only MALE pneumatic type air connectors should be fitted to the tool, so that high pressure air in the tool is vented to atmosphere as soon as the air line is disconnected.

NEVER install FEMALE quick disconnect couplings on the tool. Female couplings will trap high pressure air in the tool when the air line is disconnected, leaving the tool charged and able to drive at least one fastener.



### DO NOT EXCEED THE MAXIMUM RECOMMENDED AIR PRESSURE

Operate the tool only at the recommended air pressure. Do not exceed the maximum air pressure marked on the tool. Be sure the air pressure gauge is operating properly and check it at least twice a day.



Never use any bottled air or gases such as oxygen to operate the tool since they could cause the tool to explode. Do not operate in explosive atmospheres such as in the presence of flammable liquids, gases, or combustible dust.

### INSPECT TOOL FOR PROPER OPERATION

Clean the tool at least daily and lubricate as required. Never operate a dirty or malfunctioning tool.

### USE ONLY PASLODE® RECOMMENDED PARTS AND FASTENERS


Use only parts and fasteners specifically designed and recommended by Paslode® for use in the tool and for work to be done. Using unauthorized parts and fasteners or modifying the tool in any way creates dangerous situations. Replace all missing warning labels---refer to tool schematic for correct placement and part Number.

## WARNING



Failure to follow any of the above instructions could result in severe personal injury to tool user and bystanders or cause damage to tool and property.

## INSTRUCTIONS FOR LOADING


**Step No. 1** – Disconnect the tool from its air source. Grasp the finish nailer firmly with one hand and press the orange magazine release button at the rear of the handle and slide the magazine cover back towards you.

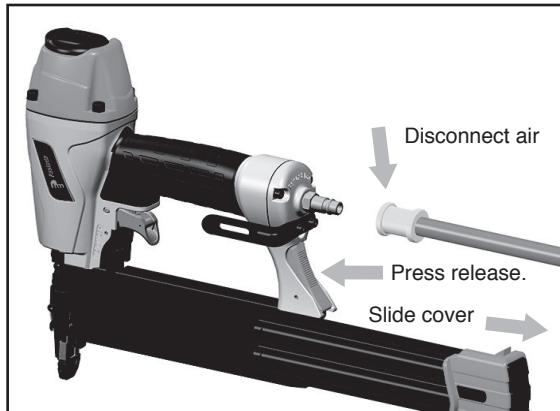

**Step No. 2** – Insert the strip of 18 gauge brad nails with the point of the fastener facing down and place the point of the fastener into the **bottom** of the magazine channel. Placing fasteners on the top of the magazine will cause jamming.

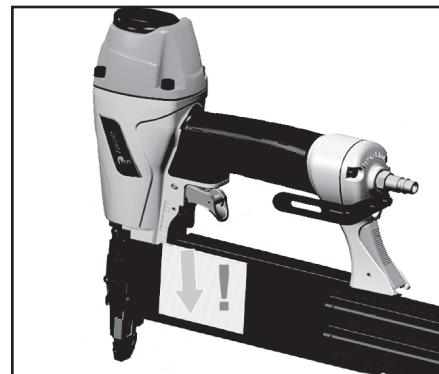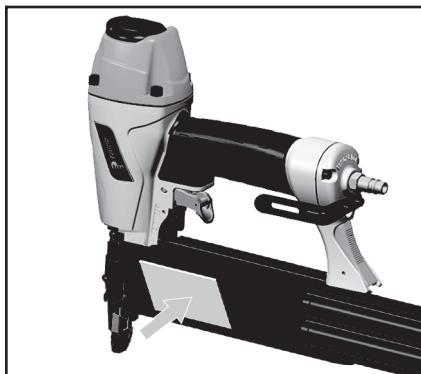

**Step No. 3** – Push the magazine firmly towards the front of the tool until it locks in place. Connect the air supply. The tool is now ready to use.

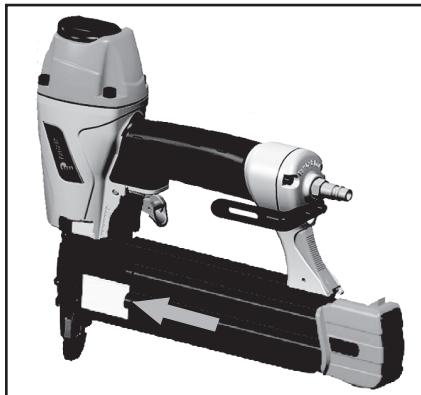

## TOOL OPERATION - continued

### **WARNING**

Use only fasteners that meet Paslode® specifications. Use of fasteners that do not meet Paslode® specifications can result in damage to the tool or injury to the operator or bystanders.

### **Driving of Nails**


#### **Sequential Operation - (Gray Trigger)**

The sequential operating kit prevents successive or "bounce" driving.

- Depress the work contacting element and hold it against the work surface before pulling the trigger.
- After each fastener is driven, completely release the trigger and lift the tool from the work surface.

### **CHANGING THE TRIGGER**

1. Disconnect the tool from air source.
2. Remove trigger step pin rubber retaining ring (**A**).
3. Remove trigger step pin (**B**).
4. Remove sequential trigger assembly **C** (Gray, part # 576918) and spring.
5. Install contact trigger **D** (part# 576917,Orange) with spring and align hole and reinsert Trigger step pin.
6. Reinstall rubber retaining ring and check for correct operation.

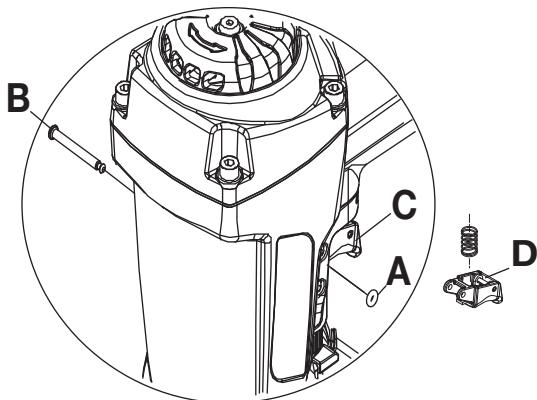

### **Successive (Bounce) Driving (Orange Trigger)**

- Grasp the handle firmly.
- Squeeze the trigger and move the tool along the work-piece with a bouncing motion, depressing the work contacting element at the points where you want to insert a fastener.
- Keep the trigger depressed and continue to bounce the work contacting element against the workpiece, positioning the tool above as carefully as possible.
- When the desired number of fasteners have been driven, release the tool trigger to avoid unintentional fastener discharge.

### **WARNING**

**Do not clamp or hold trigger with anything other than your hand.**

### **Precision Placement Driving (Orange Trigger)**

- Grasp the tool handle firmly and hold the bottom of the work contacting element firmly against the workpiece until it is completely depressed.
- Squeeze the trigger to drive the fastener.
- Lift the tool from the workpiece.
- Repeat the procedure for the next fastener.

### **Adjust the Depth of Drive**



# MAINTENANCE

Paslode® tools are built for ease of maintenance. A few simple details will assure trouble-free operation and long tool life. Anyone who uses or maintains the tool must read the safety and maintenance instructions. Study the schematic drawing before starting any repairs on the tool.

Air-operated tools must be inspected periodically, and worn or broken parts must be replaced to keep the tool operating safely and efficiently. Also the items on the maintenance chart must be checked often.

## Cold Weather Care

When temperatures are below freezing, tools should be kept warm by any convenient, safe method. If this is not possible, the following procedure should be used to warm up the tools.

- Reduce the regulated air pressure to 30 psi.
- Remove all fasteners from the tool.
- Collect an air line and blank fire the tool. The reduced air pressure will be enough to free-fire the tool. Slow speed operation tends to warm up the moving parts. Slowing up the piston helps the bumper and the O-rings to become pliable.

### CAUTION

#### Never free-fire the tool at high pressure.

- Once the tool is warmed up, readjust the regulator to the proper working pressure and reload the tool.
- Tool operators working outdoors or in unheated areas in extremely cold temperatures should also:

Use Paslode pneumatic oil with antifreeze in the lubricator, Part No. 219090 (8oz.)

Once a week, depending on the amount of tool use, take the tool apart and wash away any sludge with degreaser cleaner (Paslode Part No. 219086) to keep the tool operating efficiently.

### CAUTION

#### Never use kerosene or flammable solvents to clean the tool.

Cleaning the air-operated tools with solvents removes the thin coating of grease applied to the cylinder wall and O-rings at the factory. To replace this coating of grease, use Chemplex grease (Paslode Part No. 403734).

- Open the drain on the air compressor tank to drain any moisture at least daily in extremely cold or humid weather. A few ounces of anti-freeze in the tank will keep the air free of frost.

## Testing the Tool After Servicing

After replacing any part or parts, it is important to check the tool for proper operation. This ensures that the tool was put together correctly, is safe to use, and will perform the job properly.

- Ensure that all hardware is tight.
- Ensure that the work contacting element is installed correctly in relation to the trigger, and that both parts move freely.
- Ensure that the magazine is properly attached.
- Ensure that the required safety information on the tool is legible.
- Use only Paslode approved fasteners in the tool, and ensure that they are correct for the application.
- Ensure that a male air fitting is securely connected to the tool.
- Test the tool by driving fasteners into a workpiece identical to the tool's application.
- Check the tool for air leaks during testing and for the proper sequence of operation.

- Ensure that all fasteners are driven to the same depth and that the crown of the fastener is flush with the workpiece.

## Tool Lubrication

It is most important that the tool be properly lubricated by keeping the air line lubricator filled and correctly adjusted. Without proper lubrication the tool will not work properly and parts will wear prematurely.

Use the proper lubricant in the air line lubricator. The lubricator should be of low air flow or changing air flow type, and should be kept filled to the correct level. Use only Paslode recommended lubricants. Substitutes may harm the rubber compounds in the tools O-rings and other rubber parts. Paslode Part No. 403720 is a pneumatic lubricating oil specially made for pneumatic applications.


If a filter/regulator/lubricator is not installed on the air system, air operated tools should be lubricated at least once a day with 6 to 20 drops of oil, depending on the work environment, directly through the male fitting in the tool housing.

Most minor problems can be resolved quickly and easily using the maintenance table that follows. If problems persist, contact your Paslode dealer for assistance.


## Operation Continued:

### *Clearing a Jam*


Disconnect tool from its air source.

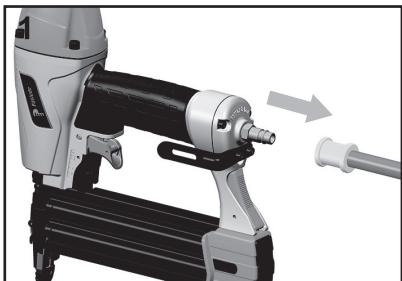


Remove all fasteners.

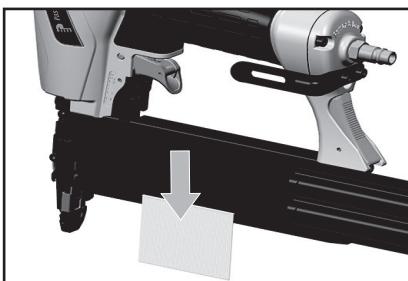


Unlatch the front guide and lift open.

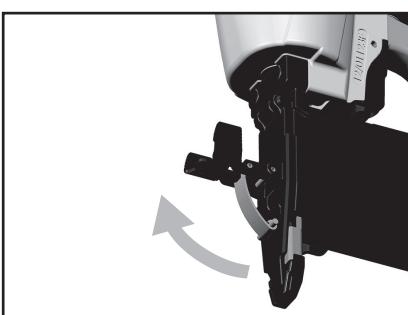

Remove jammed fastener and relatch front guide.

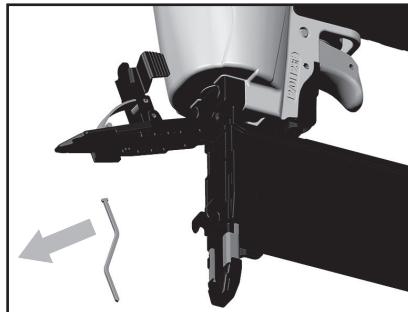


Reload fasteners, close and latch the magazine.

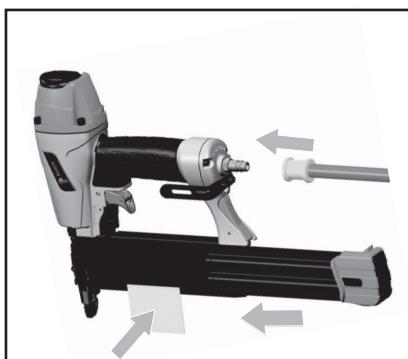


Reconnect the air.

### *Changing the work contact element.*

Disconnect tool from its air source.

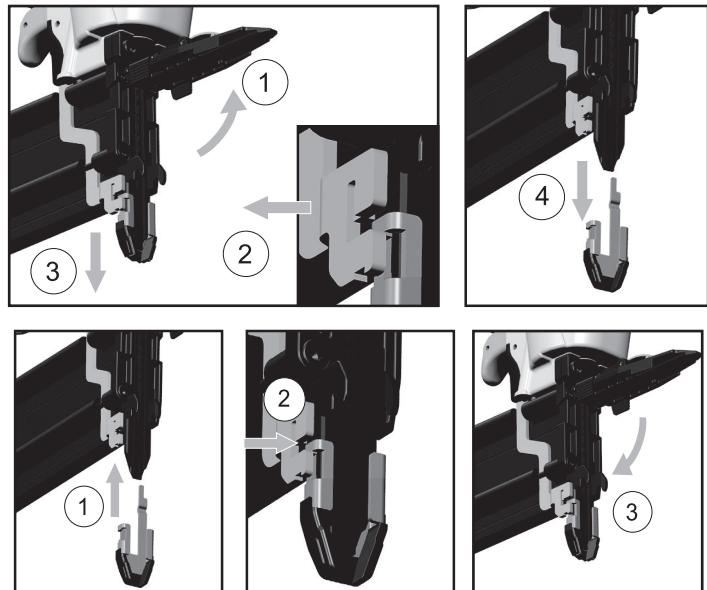

### *Reversible belt hook*

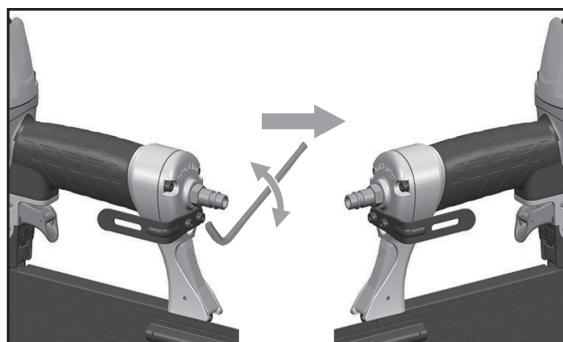

### *Toolless Adjustable Exhaust*



## MAINTENANCE

ACTION	WHY	HOW
Add several drops of pneumatic oil into the air fitting.	Keep tool lubricated.	Use Paslode pneumatic tool lubricant. Part No. 403720.
Check that all screws on tool are tight.	Prevent air leakage and promote efficient operation.	Check screws daily.
Keep work contacting element working properly.	Promote operator safety and efficient tool operation.	Inspect and blow clean daily and check for proper operation.
Keep magazine and feeder mechanism clean.	Prevent jamming of fasteners.	Blow clean daily.
Lubricate "O" rings that are replaced.	Assure long life and proper operation of tool.	Use Chemplex grease, Part No. 403734.
Use only Paslode replacement parts.	Keep tool operating efficiently and maintain Paslode tool warranty.	Order any replacement parts needed from Paslode Dealer.

## OPERATOR TROUBLESHOOTING



**CAUTION**

Disconnect the tool when performing repairs or clearing jams.

PROBLEM	CORRECTIVE ACTION
Fasteners will not drive completely into wood.	Adjust the depth of drive adjustment (retract length). Increase air pressure (do not exceed 120 psi).
Fasteners drive too deeply into wood.	Adjust the depth of drive adjustment (extend length). Reduce air pressure.
Fastener jams in nose of tool.	Open front guide latch, release jammed fastener, and close latch securely.
Tool skips during operation - no fasteners are driven from time to time.	Check magazine for proper fasteners. Magazine follower should slide freely. Clean as needed to remove debris. Make sure correct fasteners are being used. Use fasteners that meet Paslode® specifications only.


# PARTS LEGEND

T200-F18P 515600


1	617539	1	Screw	39	576921	1	Driver Guide
2	617558	1	Bushing	40	617513	4	Screw
3	617504	1	Air Deflector	41	576922	1	Screw
4	576913	1	Spring	42	576923	1	Plate
5	617533	4	Screw	43	576966	2	Spring Washer
6	617535	4	Washer	44	576924	2	Screw
7	617489	1	Cap	45	617547	1	Washer
8	617550	1	Gasket, Cap	46	576925	1	Front Plate
*9	617548	1	Seal	47	617530	1	PIN
*10	617519	1	Spring	48	576926	1	Lock Lever Unit
*11	617521	1	O-Ring	49	576927	1	Pin
*12	617510	1	Valve	50	576928	1	Work Contact A
*13	617527	1	O-Ring	51	576929	1	Pusher
14	617507	1	Piston Stop	52	617520	1	Guide, Spring
15	617552	1	Restrict Washer	53	576967	2	Spring
*16	617551	1	Cylinder Seal	54	617538	2	Screw
*17	617523	1	O-Ring	55	617511	1	Rear Plate
*18	576914	1	Piston Assembly	56	617536	2	Nut
19	617505	1	Cylinder Sleeve	57	617556	1	Cover
*20	617524	1	O-Ring	58	617512	1	Cover
*21	617525	1	O-Ring	59	576930	1	Movable Magazine Unit
*22	617503	1	Collar	60	617496	1	Rail
*23	617522	1	O-Ring	61	576931	1	Label, Trigger Sequential
24	617506	1	Bumper	62	576934	1	Magazine Unit Sequential
25	617508	1	Joint Guide	63	576935	1	Work Contact B
*26	617526	1	O-Ring	64	576936	1	Support
27	617545	1	Logo-1	65	617540	1	Screw
28	617488	1	Housing	66	617541	1	Pin
29	576915	1	Trigger Valve Assembly	67	617555	1	Lock
30	576916	1	Spring	68	576937	1	Spring
31	576918	1	Trigger, Sequential	69	576938	1	End Cap
32	617537	1	Spring Pin	70	576939	1	Belt Hook
33	617553	1	Safety Bracket	71	576940	1	Screw
34	576919	1	Spring	72	617534	1	Washer
35	576920	1	Safety Lever Unit	73	617509	1	Air Plug
36	617544	1	Logo-2	74	576979	1	Guide, Spring
37	617549	1	Gasket	** 75	515620	1	Label, Safety Warning
38	617529	1	Pin				

- \* Denotes Normal Wear Items
- \*\* Make sure Warning Label (Part No.515620) is properly affixed. Replace if necessary.
- ▲ Apply Loctite® 242 (Blue) Part No. 093500
- Denotes New Change

<b>⚠ WARNING</b>	
All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect the tool's operation and present a safety hazard.	

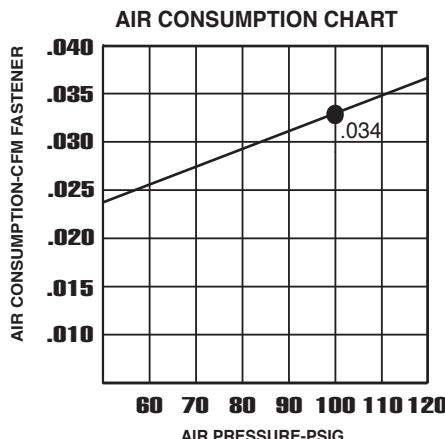

**T200-F18P**  
**BRAD NAILER**  
**515600**

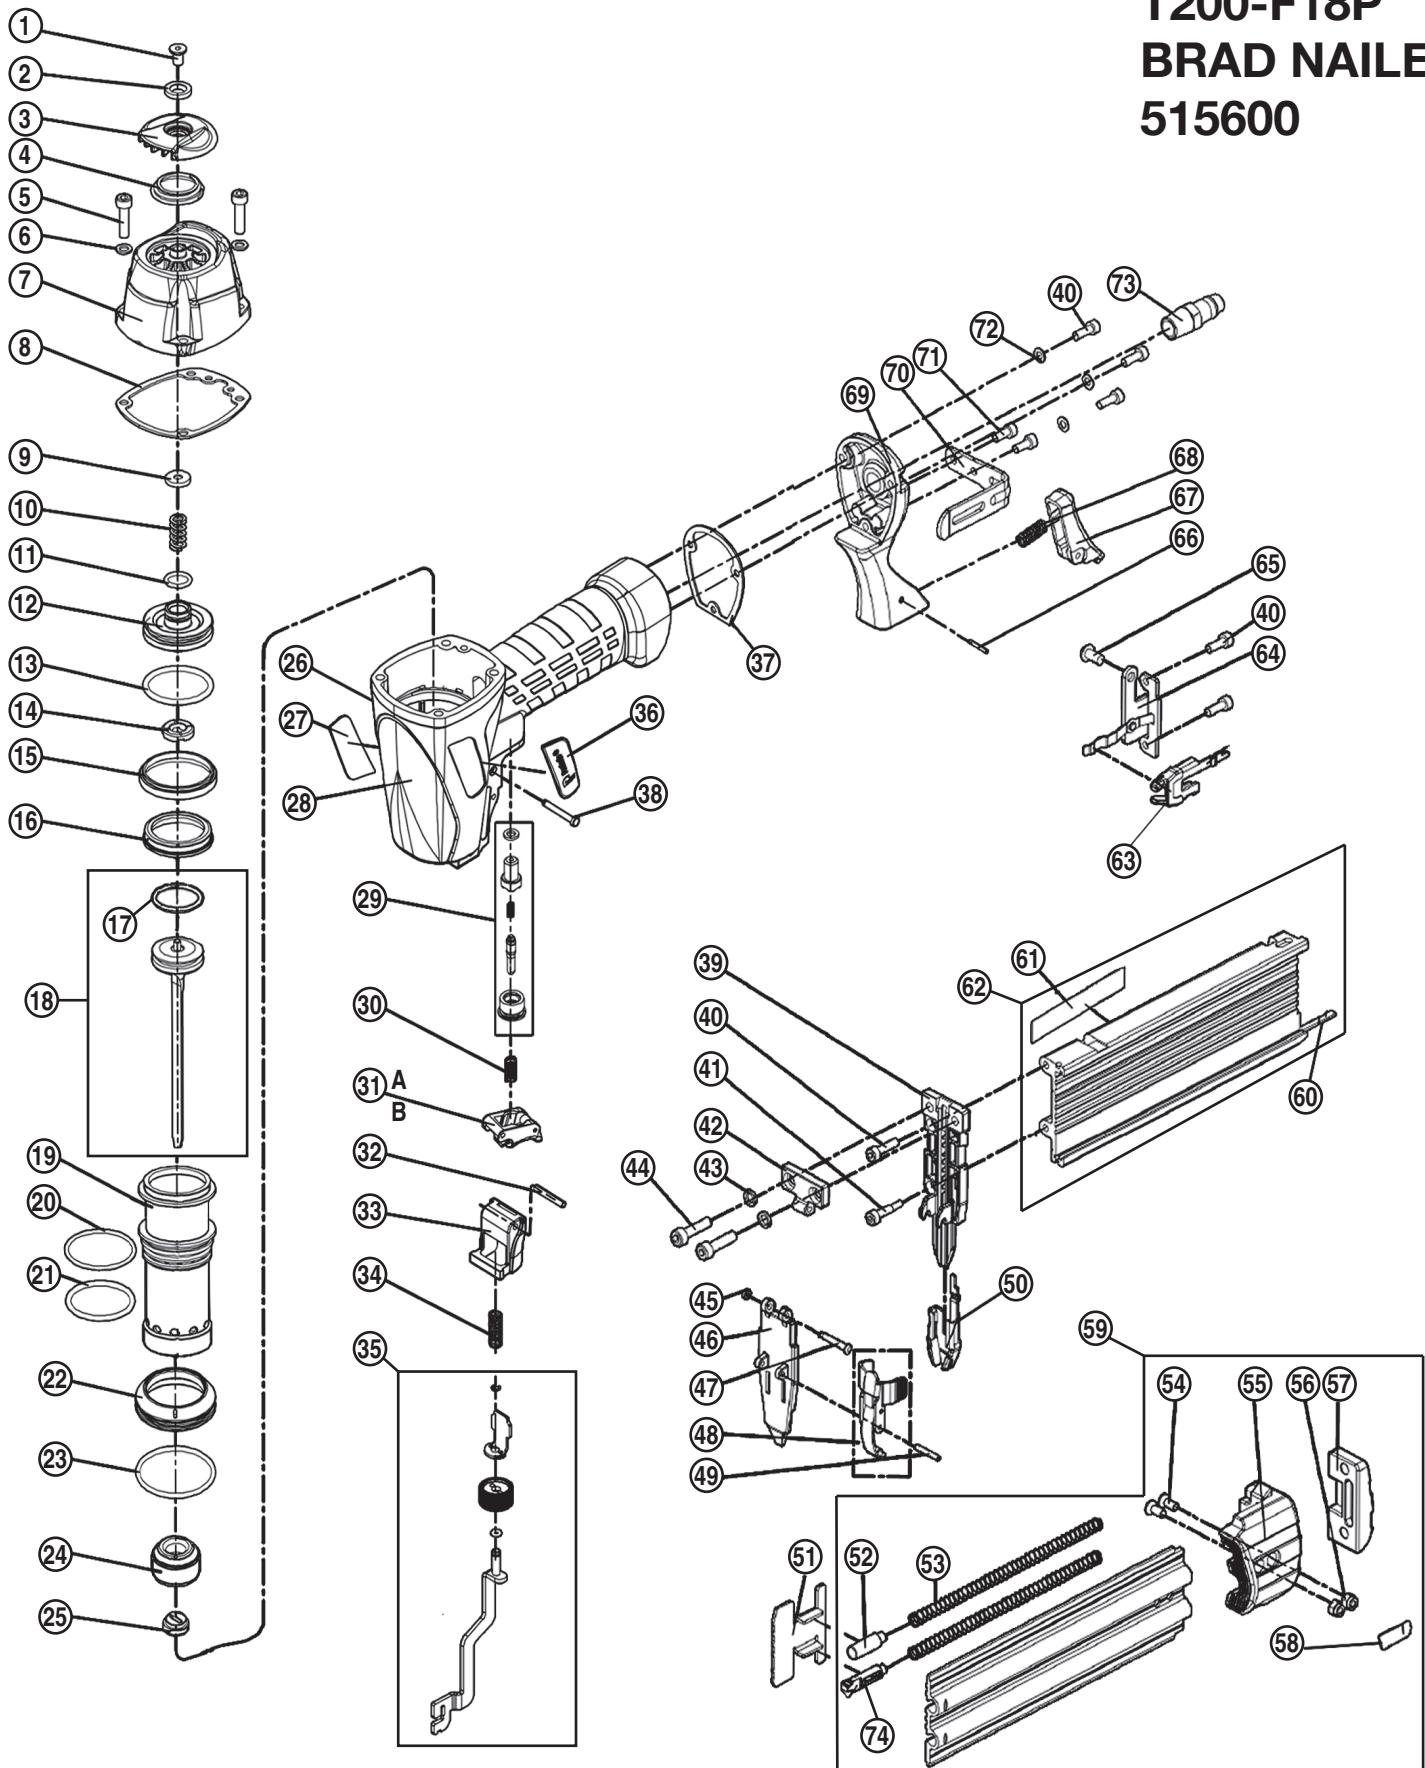

# ACCESSORIES

## Lubricants

Lubricating Oil 16 oz.  
Lubricaing Oil with Anitfreeze 8 oz.  
Chempex 710 Lubricant 1lb.



Part No. 403720  
Part No. 219090  
Part No. 403734

## Tool Cleaner


Ideal cleaner for all Paslode tools.



Part No. 219086

## Safety Glasses

Clear

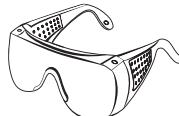

Part No. 401382

## Tool Case

Handy carrying case that conveniently stores your tool with room for additional accessories.




Part No. 515615

## Tool Case Latch



Part No. 617559

## Work Contact Element

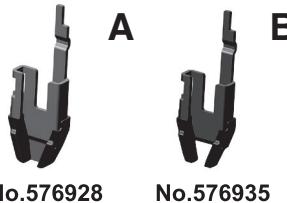

A Part No. 576928

B Part No. 576935

## Contact Trigger (Orange)



Part No. 576917



An Illinois Tool Works Company  
155 Harlem Avenue  
Glenview, IL 60025




Pieza No. 576917



**Contacto Trigger (anarriado)**

B Pieza No. 576935

No. 576928      No. 576935

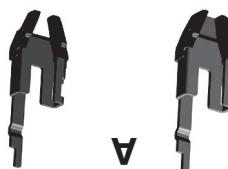

A Pieza No. 576928

Pieza No. 617559



**Pestillo de Reemplazo**  
**Maletero de Herramientas**

Pieza No. 515615



Práctico estuche que almacena convenientemente su herramienta con espacio para accesorios adicionales.

**Maleta de Transporte para Herramientas**

Pieza No. 401382



**Lentes de Seguridad**

Pieza No. 219348



El limpiador ideal para todas las herramientas Paslode.

**Desengrasador**

Pieza No. 403720



Lubricante Chemplex® 710 1lb.

Pieza No. 219090



8 oz.


Aceite Lubricante con Anticongelante 8 oz.

Pieza No. 403734

Acetato Lubricante 16 oz.

**Lubricantes**

## ACCESORIOS

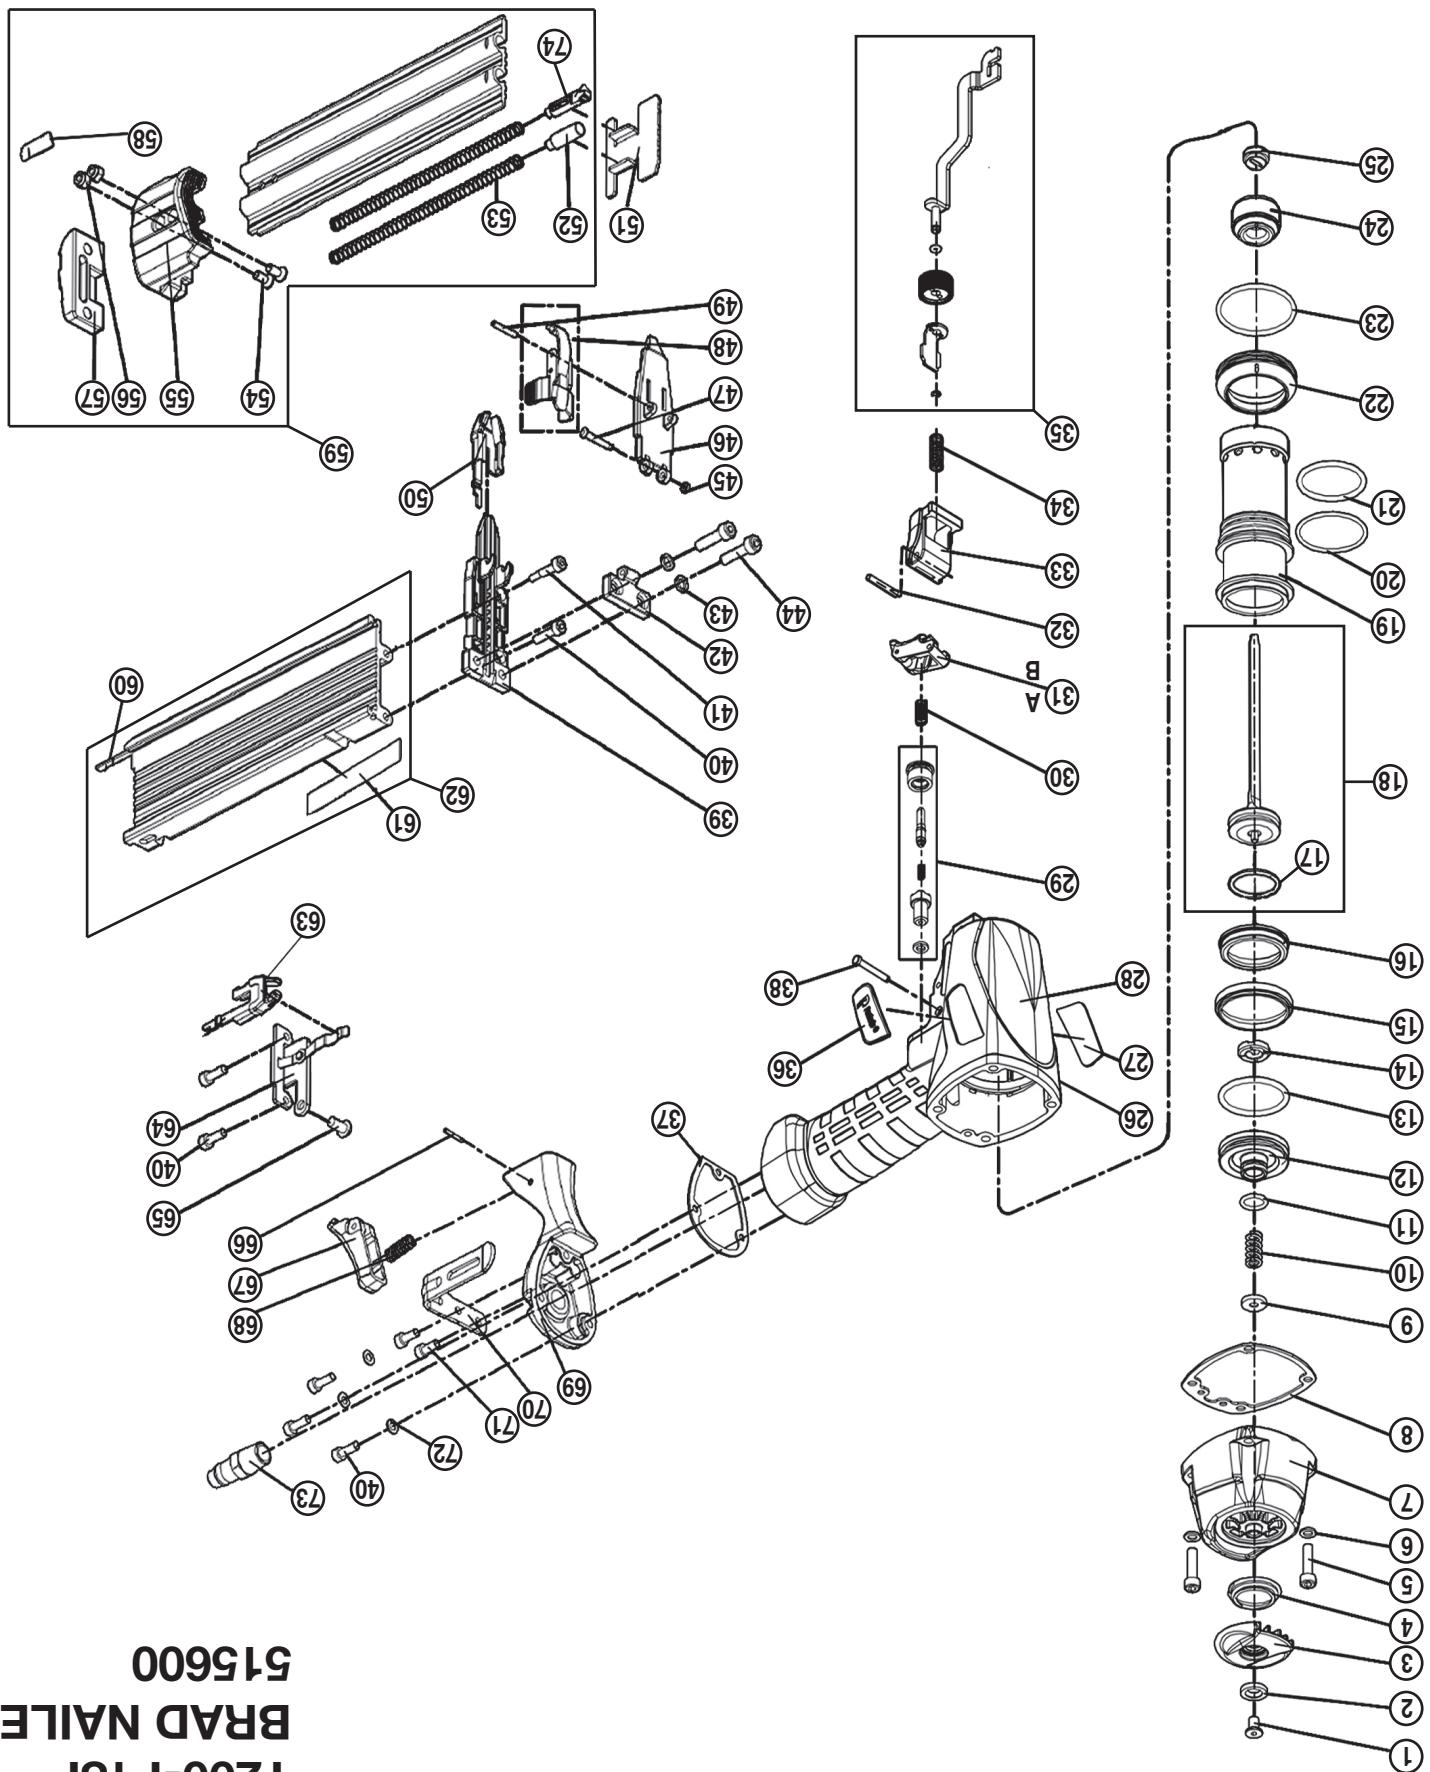


**T200-F18P**  
**BRAD NAILER**  
**515600**

# LISTA DE PIEZAS

T200-F18P 515600

1	617539	1	Screw	576921	1	Driver Guide	39	576921	1	Driver Guide	
2	617558	1	Bushing	40	617513	4	Screw	41	576922	1	Screw
3	617504	1	Air Deflector	42	576923	1	Plate	43	576966	2	Spring Washer
4	576913	1	Spring	44	576924	2	Screw	45	617547	1	Washer
5	617533	4	Screw	46	576925	1	Front Plate	47	617530	1	PIN
6	617535	4	Washer	48	576926	1	Lock Lever Unit	49	576927	1	Pin
7	617489	1	Cap	50	576928	1	Work Contact A	51	576929	1	Pusher
8	617550	1	Gasket, Cap	52	617520	1	Guide, Spring	53	576967	2	Spring
9	617548	1	Seal	54	617538	2	Screw	55	617511	1	Rear Plate
10	617548	1	O-Ring	56	617536	2	Nut	57	617536	2	Nut
11	617519	1	Spring	58	617556	1	Cover	59	576930	1	Movable Magazine Unit
12	617510	1	O-Ring	60	617496	1	Rail	61	576931	1	Label, Trigger Sequential
13	617527	1	O-Ring	62	576934	1	Magazine Unit Sequential	63	576935	1	Work Contact B
14	617507	1	Piston Stop	64	576936	1	Support	65	617540	1	Screw
15	617552	1	Piston Washer	66	617541	1	Pin	67	617555	1	Lock
16	617551	1	Cylinder Seal	68	576937	1	Spring	69	576938	1	End Cap
17	617523	1	Cylinder Assembly	70	576939	1	Belt Hook	71	576940	1	Screw
18	576914	1	O-Ring	72	617534	1	Washer	73	617509	1	End Lever
19	617505	1	Cylinder Sleeve	74	576979	1	Guide, Spring	75	515620	1	Label, Safety Warning
20	617524	1	O-Ring	** 26	617545	1	O-Ring	** 27	617526	1	O-Ring Guide
21	617503	1	Collar	28	617488	1	Housing	29	576915	1	Trigger Valve Assembly
22	617522	1	O-Ring	30	576916	1	Spring	31	576918	1	Trigger, Sequential
23	617506	1	Bumper	32	617537	1	Spring	33	617553	1	Safety Bracket
24	617508	1	Joint Guide	34	576919	1	Spring	35	576920	1	Safety Lever Unit
25	617508	1	Bumper	36	617544	1	Logo-2	36	617509	1	Air Plug
26	617545	1	O-Ring	37	617549	1	Gasket	37	576979	1	Guide, Spring
27	617546	1	O-Ring	38	617529	1	Pin	38	617529	1	Label, Safety Warning
28	617546	1	O-Ring								
29	576915	1	Trigger Valve Assembly								
30	576916	1	Spring								
31	576918	1	Trigger, Sequential								
32	617537	1	Spring								
33	617553	1	Safety Bracket								
34	576919	1	Spring								
35	576920	1	Safety Lever Unit								
36	617544	1	Logo-2								
37	617549	1	Gasket								
38	617529	1	Pin								

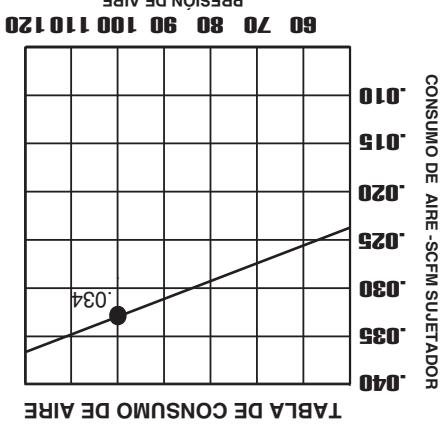

Todas las piezas deben ser inspeccionadas periódicamente para presentar un riesgo de seguridad.

\* Indica piezas de desgaste normal.  
\*\* Asegure que la Evidencia de Advertencia (515620) este bien puesta. Reemplaza si es necesario.


## ADVERTENCIA

<b>PROBLEMA</b>		<b>SOLUCIÓN</b>
Los sujetadores penetran completamente en la madera.	Ajuste la profundidad de ajuste del accionamiento (longitud de retroacción).	Aumente la presión de aire (no debe exceder 120 psi).
Los sujetadores penetran demasiado en la madera.	Ajuste la profundidad del ajuste del accionamiento (alarjar la longitud).	Reduzca la presión de aire.
Los sujetadores se acumulan en la punta de la herramienta.	Abra el pestillo de la guía delantera, suelte el sujetador atascado, y cierre el seguro de forma segura.	Compruebe si el cargador tiene los sujetadores apropiados.
Vez en cuando no impulsa sujetadores.	La herramienta "saltá" mientras esta funcionando; de vez en cuando no impulsa sujetadores.	Limpielo para quitar cualquier suciedad.

## DETECCIÓN Y CORRECCIÓN DE FALLOS



### PRECAUCIÓN ▲

<b>ACTIVIDAD</b>	<b>COMO</b>	<b>POR QUÉ</b>	<b>DETENIMIENTO</b>
Mantenga lleno el lubricador.	Para mantener lubricada la herramienta.	Nº 403720 (474 ml).	Verifique que todos los tornillos de la herramienta estén apretados.
Verifique que todos los tornillos de la herramienta estén apretados.	Para evitar perdidas de aire y asegurar el buen funcionamiento de la herramienta.	Revise los tornillos a diario.	Verifique que todos los tornillos de la herramienta estén apretados.
Revise si el elemento de contacto funcional corrrectamente.	Para promover la seguridad del operador y el buen funcionamiento de la herramienta.	Limpielo con aire a diario.	Revise los tornillos de la herramienta estén apretados.
Mantenga limpia los mecanismos del cargador y del alimentador.	Par prevenir que se obstruyan los sujetadores.	Limpielos con aire a diario.	Mantenga limpia los mecanismos del cargador y del alimentador.
Lubrique los anillos-o que se han reemplazado.	Para prolongar la vida de la herramienta y su funcionamiento N° 403734.	Use grasa lubricante Chemplex®.	Lubrique los anillos-o que se han reemplazado.
Use solamente piezas de repuesto Paslode.	Para que la herramienta continúe funcionando eficientemente y mantenerla limpia la garantía de Paslode.	Solicite al representante de Paslode que necesite.	Desconecte la herramienta al hacer cualquier reparación o eliminar cualquier obstrucción.
Desconecte la herramienta al hacer cualquier reparación o eliminar cualquier obstrucción.	Desconecte la herramienta y el seguro de la pieza de repuesto que necesite.	Use solamente piezas de repuesto Paslode.	Precaución ▲

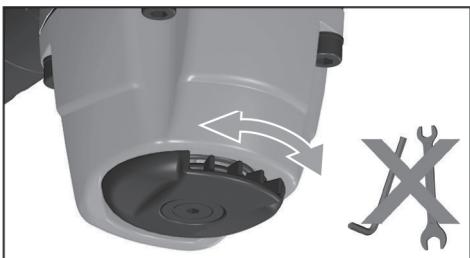



### Escape sin herramientas de Ajustable

Vuelva a conectar el aire.  
Recargar sujetadores,  
cerrar y bloquear la revisa.

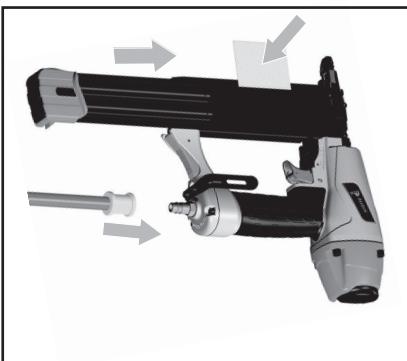
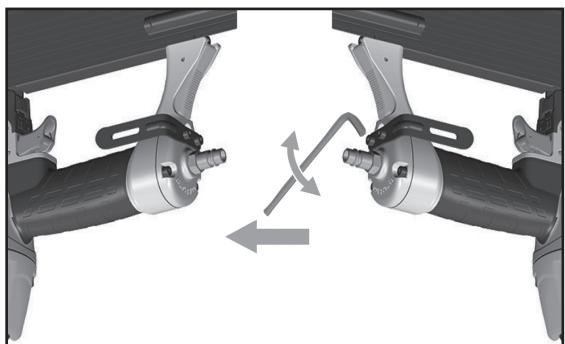


### Gancho de cinturon reversible

Retire el sujetador atascado y cierre y bloquee la guia delantera.

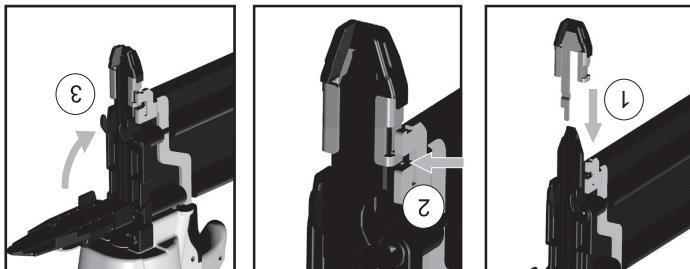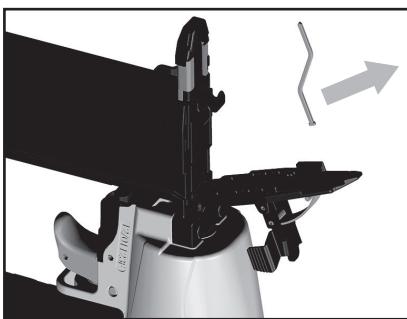


Desenganchar la guia delantera y levante abierta

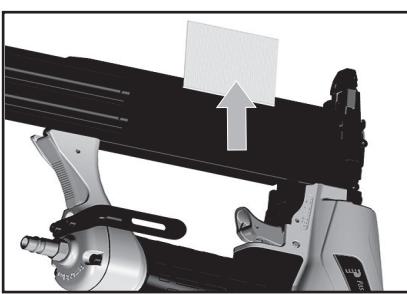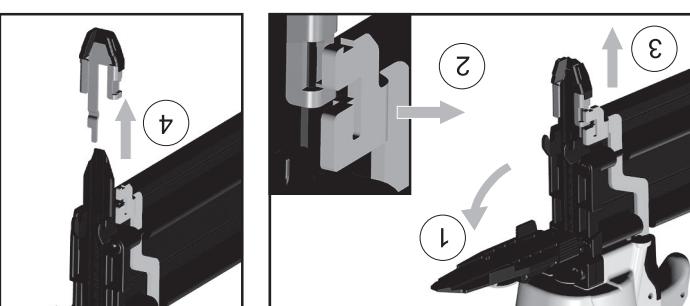

Quite todos los sujetadores.

No.576928 No.576935

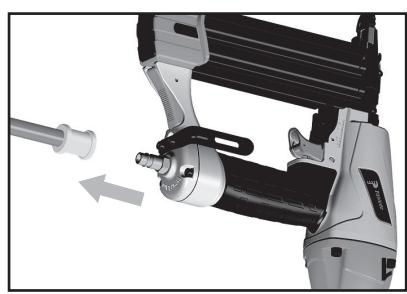

Desconecte la herramienta de su fuente de aire.

Cambiar el elemento de contacto de trabajo.

Desconecte la herramienta de su fuente de aire.

### Limpie un Atasco

### Operacion Continuada:






## Ajustar la profundidad de clavado

- Tome la herramienta firmemente por el mango.
- Apriete el gatillo y mueva la herramienta a lo largo del material de trabajo.
- Oprimiendo el elemento de contacto de rebote, trabaje con un movimiento suave y continuo hacia el rebotar el elemento de contacto contra el material de trabajo.
- Manteniendo apretado el gatillo, continúe hacia el rebotar el elemento de contacto contra el material de trabajo.
- Una vez que haya colocado todos los sujetadores necesarios, deje de oprimir el gatillo para evitar que salgan más.
- Tome firmamente la herramienta por el mango y sostengala de modo que el base del elemento de contacto quede bien apoyada en el material de trabajo.
- Apriete el gatillo para disparar el sujetador.
- Separe la herramienta del material de trabajo.
- Repita el mismo procedimiento con el próximo sujetador.

## Colocación precisa

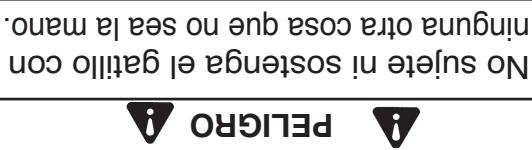

**PELIGRO**


- Manteniendo apretado el gatillo, continúe hacia el rebotar el elemento de contacto contra el material de trabajo.
- Una vez que haya colocado todos los sujetadores necesarios, deje de oprimir el gatillo para evitar que salgan más.
- Tome firmemente la herramienta por el mango y sostengala de modo que el base del elemento de contacto quede bien apoyada en el material de trabajo.
- Apriete el gatillo y mueva la herramienta firmemente por el mango.

(Gatillo de color Naranja)

- Tome la herramienta firmemente por el mango.

(Gatillo de Color Gris)

## IMPULSOS SUCESSIONES (de rebote)

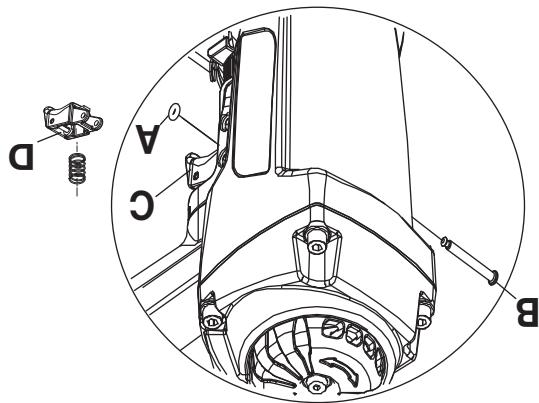

1. Desconecte la herramienta de la fuente de aire.
2. Retirar el snilllo de retención
3. Retirar el pasador del gatillo (B)
4. Retire el conjunto de gatillo secundario (C) (Gris, Parte # 576918) y resorte.
5. Instalar Contacto gatillo (D), naranja, parte #576917) con resorte y alinee el orificio y vuélvala a insertar el pasador de paso del gatillo.
6. Vuelva a instalar el anillo de retención de caucho y compruebe su correcto funcionamiento.

## CAMBIANDO EL DISPARADOR

- Evita los impulsos sucesivos o "de rebote".
- Oprime el elemento de contacto y mantenga apoyado contra el material de trabajo antes de apretar el gatillo.
- Despues de haber impulsado cada sujetador, suelte completamente el gatillo y levante la herramienta del material de trabajo.
- Mantenga el elemento de contacto y oprima el gatillo de impulsos sucesivos o "de rebote".


## Funcionamiento en secuencia

(Gatillo de Color Gris)



## La conducción de clavos

## HERRAMIENTA (continuación)


## FUNCIONAMIENTO DE LA

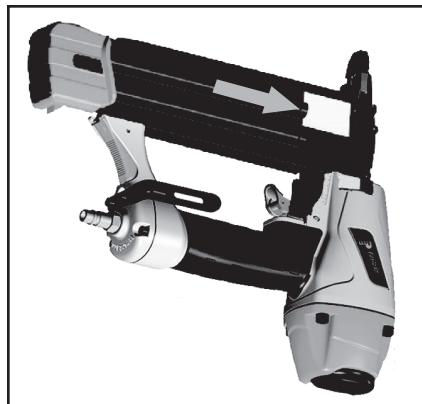

**Paso No. 3** - Empuje el cargador firmemente hacia la parte delantera de la herramienta hasta que encaje en su lugar. Conecte el suministro de aire. La herramienta está lista para usar.

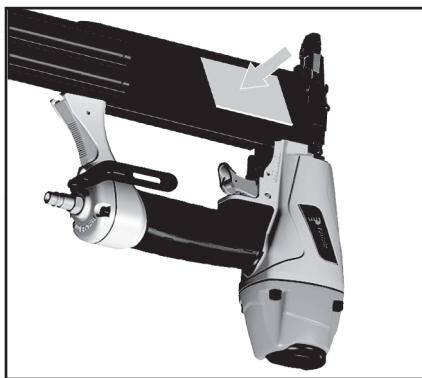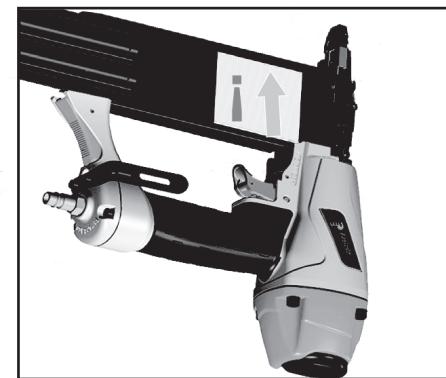

**Paso No. 2** - Inserte la tira de clavos de calibre 18 con el punto de los sujetadores hacia abajo y coloque el punto del sujetador en la parte inferior del canal del cargador. Colocar sujetadores en la parte superior de la revisión causará atascos.

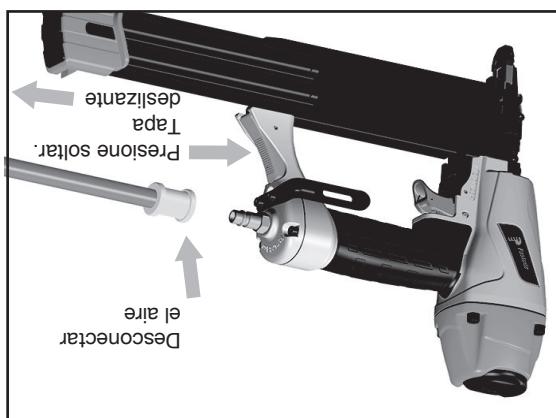

**Paso No. 1** - Desconecte la herramienta de su fuente de aire. Sujete firmemente la clavadora de acabado con una mano y presione el botón de liberación del cargador naranja en la parte posterior de la manija y deslice la cubierta del cargador hacia usted.

## INSTRUCCIONES DE CARGA

<b>INSTRUCCIONES DE SEGURIDAD</b>	
<b>LA SEGURIDAD ESTA PRIMERO</b>	Estas instrucciones proporcionan la información necesaria para tratar de usar su herramienta hasta que no haya leído y entendido todas las precauciones de seguridad que aparecen en el manual.
<b>DESCONECTE LA HERRAMIENTA CUANDO NO USE</b>	Siempre desconecte la herramienta de la línea de aire comprimido que no la esté usando o la esté usando solamente para protegerse los oídos.
<b>LA ESTE USANDO</b>	Siempre desconecte la herramienta de la línea de aire comprimido que no la esté usando o la esté usando solamente para protegerse los oídos.
<b>MANGO</b>	Siempre tome la herramienta sólo por el mango. Nunca la tome por la manijera o con el gatillo oprimido, porque se aflojará.
<b>TOME LA HERRAMIENTA SOLAMENTE POR EL</b>	Siempre tome la herramienta sólo por el mango. Nunca la tomara despegando la herramienta de un recipiente a presión y nunca la aflojará.
<b>NO ALTRÉE EL ARMAZON DE LA HERRAMIENTA</b>	El armazón de la herramienta es un recipiente a presión y nunca se debe manipularlo.
<b>DESCONECTE LA HERRAMIENTA PARA HACER REPARACIONES O ELIMINAR OBSTRUCCIONES</b>	Nunca trate de eliminar obstrucciones o reparar una herramienta sin haberla desconectado de la línea de aire comprimido.
<b>USÉ SIEMPRE LOS ADAPTADORES APROPIADOS PARA SU HERRAMIENTA</b>	Se debe conectar a la herramienta solamente conectores neumáticos MACHOS, para permitir que el aire de alta presión salga tan pronto como se desconecte la línea de aire comprimido.
<b>NO EXCEDA LA PRESIÓN NEUMÁTICA MAXIMA</b>	NUNCA coloque engranes HMBRAS de desconexión rápida en la herramienta. Solo con la presión neumática máxima recomendada. No exceda la presión neumática máxima marcada en la herramienta.
<b>RECOMENDADA</b>	el calibre de la presión neumática funcione correctamente.
<b>INSPECIONE LA HERRAMIENTA PARA LA OPERACIÓN</b>	Nunca use aire o gases envasados, como el oxígeno, para hacer funcionar la herramienta. Verifique por lo menos dos veces al día que
<b>COIN APRÓPIDA</b>	funcionen la herramienta y lubrique la herramienta como se recomienda. Nunca trate de hacer funcionar una herramienta sucia o defectuosa.
<b>USE SOLAMENTE PIZZAS Y SUJETADORES ESPECÍFICAMENTE DISEÑADOS Y MENDADOS POR PASCADE</b>	use solo pizzas y sujetadores específicamente diseñados y mendaos por Pascade. Si se usan piezas o sujetadores no autorizados o se modifica de alguna forma la herramienta, se pierden características peligrosas. Una vez a colocar todos los sujetadores sobre el número de cada parte y su ubicación correcata.
<b>EL GATILLO O EL ELEMENTO DE CONTACTO ESTE</b>	La fuerza de la herramienta es de contacto con un mecanismo que incluye un dispositivo impulsivo.
<b>NO CARGUE SUJETADORES CUANDO LA LÍNEA DE OPRIMIDO.</b>	Este dispositivo impulsivo se activa cuando se aprieta el gatillo.
<b>NO CARGUE SUJETADORES CUANDO LA LINEA DE OPRIMIDO.</b>	Algunas de las partes sujetadoras están compuestas de plástico que se rompen al impactar con la herramienta, verifique que la herramienta sea delgada o robusta cerca de las artesas del mismo.
<b>USE LA HERRAMIENTA SOLAMENTE SOBRE UN MATERIALES DIFERENTES</b>	La herramienta debe funcionar solo cuando está en contacto con el material de trabajo. Debe tener mucho cuidado cuando el material sea delgado o robusto o trabaje cerca de las artesas del mismo.
<b>MATERIAL DE TRABAJO</b>	porque los sujetadores podrían arrastrar o saltar de material.
<b>NO DEJE INOPERANTE NI QUITE EL ELEMENTO DE CONTACTO</b>	Esta herramienta es de contacto con un mecanismo que incluye un dispositivo impulsivo.
<b>SEGURO</b>	que incluye un dispositivo impulsivo.

**NO EXCEDA LA PRESIÓN DE AIRE RECOMENDADA.**  
 Esta gama para obtener el mejor rendimiento.  
 70 hasta 120 p.s.i. Selecciona una presión de aire dentro de  
**OPERACIÓN de PRESIÓN de AIRE:**

Esta herramienta utiliza un tapón macho de 1/4" N.P.T. El acoplamiento debe ser  
 capaz de descargar la presión de aire en la herramienta cuando sea desconectada  
 del suministro de aire.  
**ACOPLAMIENTO DE AIRE:**

LONGITUD DEL CLAVO	5/8" to 2"
DIAmetro DEL TALLO	18 gauge

### ESPECIFICACIONES de los SUJETADORES

NO. de MODELO	T200-F18P (Pieza# 515600)
ALTURA	10.63"
ANCHO	2.56"
LONGITUD	10.04"
PESO	2.9 lbs.
PRESIÓN de OPERACIÓN	70 hasta 120 p.s.i. (6.2 hasta 8.3 bar)

### ESPECIFICACIONES DE LA HERRAMIENTA

### ESPECIFICACIONES DE LA HERRAMIENTA Y LOS SUJETADORES

Pasóde<sup>o</sup> se reservar a el derecho de cambiar las especificaciones, el equipo o los diseños en cualquier momento, sin avisos previo y sin incurrir en obligación alguna.

CONTENIDO

La herramienta Paslode® T200-F18P es una herramienta de calidad, diseñada para uso en aplicaciones residenciales. Esta herramienta le provee confiabilidad y eficiencia cuando se usa da acorde con las reglas del fabricante. Lea cuidadosamente este manual y las instrucciones de seguridad para comprender como usar la herramienta correctamente.

# INTRODUCCIÓN

# INTRODUCCIÓN

LÍNEAS DE LA GRANJA

ACCESSIONS

VISTA EXPANDIDA CON LISTADO DE PIZZAS

INSTALACION Y OPERACION DE LA HERRAMIENTA

INSTRUCCIONES DE SEGURIDAD

ESPECIFICACIONES DE LA HERMAMIENTA SUS SUSTADORES

DECLARACION DE LA GARANTIA

Esta garantía es válida a las herramientas vendidas y revisadas en los Estados Unidos. Para obtener más información sobre el servicio de garantía en los Estados Unidos, véa la lista de Centros de Servicio que fue proporcionada con su herramienta.

Passolde", que sus hermanas mecánicas, sus plazas y acserciones, due hayan sido compradas nuyeros, estan libres de defectos de material y fabri- cacion por el perodo indicado mas abajo, a partir de la fecha de compra del comprador original.

GARANTIA LIMITADA DE 90 DIAS

GARANTIA LIMITADA ADICIONAL PARA APLICACIÓN

Las siguiéntes piezas se consideran como piezas que sufren desgaste normal y no están cubiertas por ninguna garantía.

Se cancelaría esta garantía a cualquier herramienta que intencionalmente, usada con sujetadores que no reúnan las especificaciones, el tamano o la calidad de Paslode®, o a la que no se le haya sido daño por manipulación o uso excesivo. La garantía se cancelaría si se modificas o repáras de manera que altere la funcionalidad original de la herramienta.

PARA DE<sup>1</sup> NO OTROGA NINGUNA GARANTIA EX-  
PLICITA O IMPLICITA CON RESPECTO A LA COMER-  
CIALIZACION O ADAPTACION AL USO PREVISTO, O DE  
CALULARDAR ANTERIORMENTE, Y LA RESPONSABILIDAD  
de Pasarle. TAL COMO SE INDICA Y SE ASUME MAS  
que ARBITRA REEMPLAZA A TODAS LAS OTRAS GARANTIAS QUE RESULTEN  
de la operacion de la tarjeta de credito que se le emite.  
CUALquier otra garantia que se establezca en el contrato de  
compra y venta de bienes o servicios no es aplicable.  
DEBERA PAGAR EL COSTO DE LOS Gastos de envio y  
mano de obra para la instalacion de la tarjeta de credito  
y tambien el costo de los gastos de envio y mano de obra  
para la devolucion de la tarjeta de credito.

PIEZAS DE DESGASTE NORMAL

- Amortiguador
  - Hojas del impulsor
  - O rings
  - Anillos del pistón

Manual de Funcionamiento y  
Esquema

El cliente tiene la responsabilidad de que todo  
el personal de operaciones y servicio lea y  
entienda este manual.

**NO DESTRUYE ESTE MANUAL**

**¡IMPORANTE!**



Calibre 18 Clavadora Brad

MODELO T200-F18P

Piezaz# 515600

**Paslode®**