

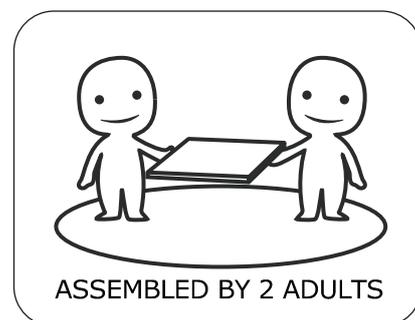


# Kitchen Cart

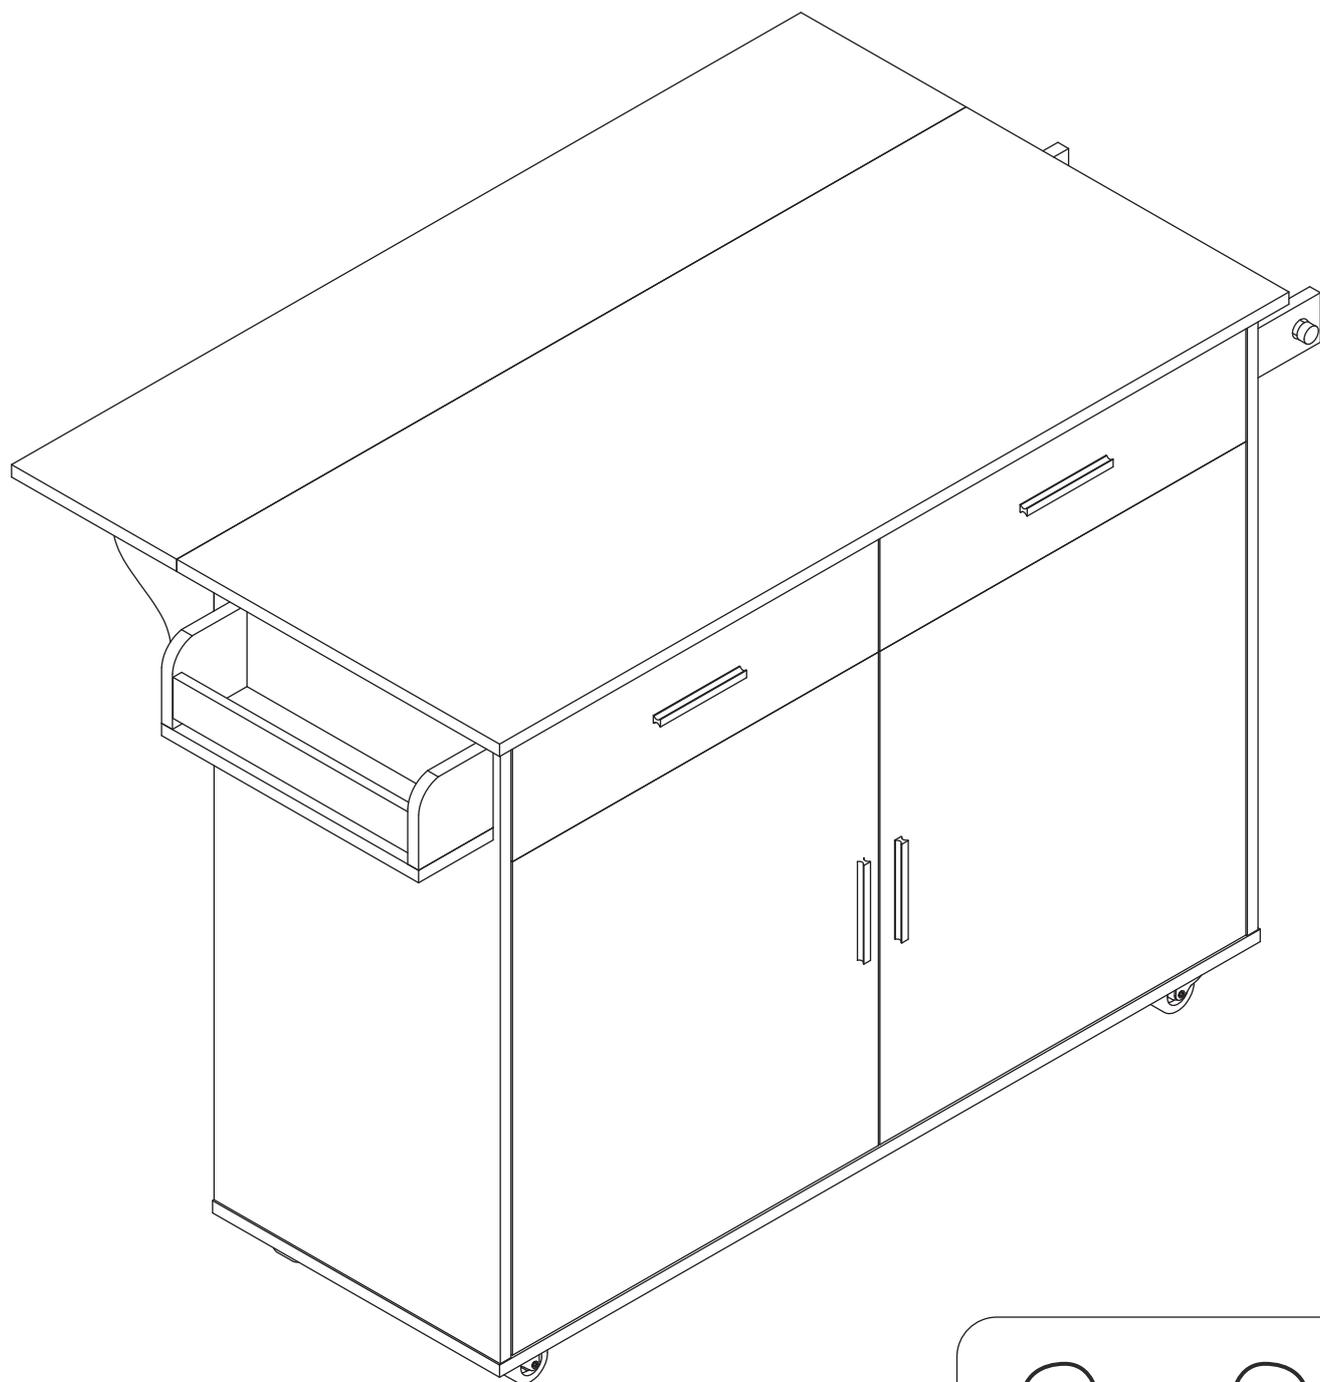


ASSEMBLED BY 2 ADULTS

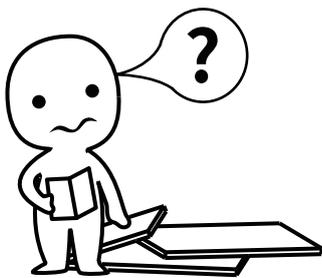


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

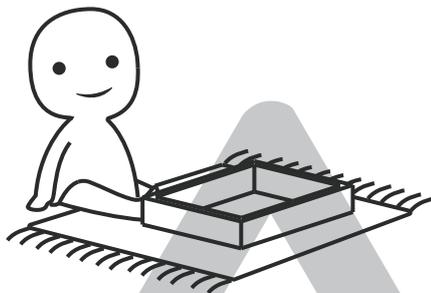



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

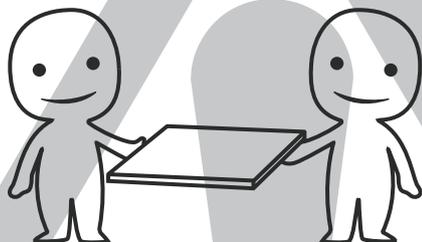

### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

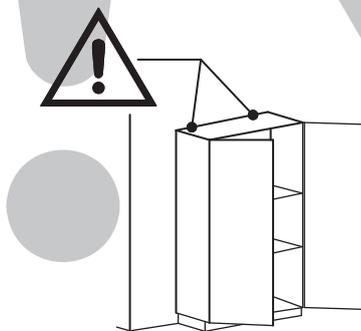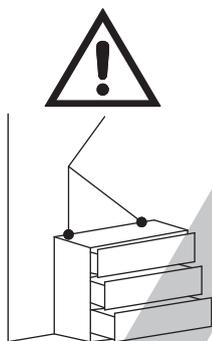

### **ANTI-TOPPLE WARNING !**


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.









Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

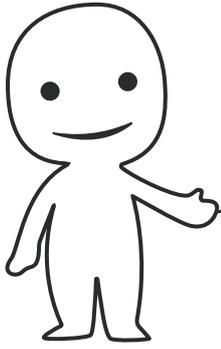


Please prepare the following tools







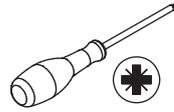


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
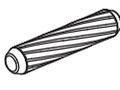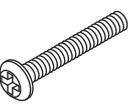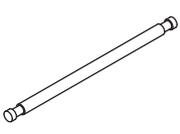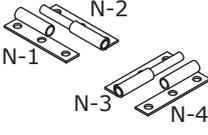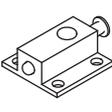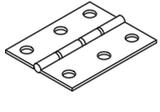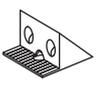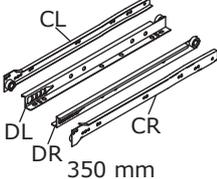
|  |  |  |  |   |
|--|--|--|--|---|
| <p>A x 84</p>  <p>Ø6 x 35 mm</p>    | <p>B x 84</p>  <p>Ø15 x 10 mm</p> | <p>C x 92</p>  <p>Ø6 x 30 mm</p>  | <p>D x 110</p>  <p>Ø3.5 x 12 mm</p> | <p>E x 8</p>  <p>Ø4 x 16 mm</p>      |
| <p>F x 24</p>  <p>Ø5 x 40 mm</p>  | <p>G x 4</p>  <p>Ø4 x 27 mm</p> | <p>H x 4</p>  <p>Ø6 x 50 mm</p> | <p>I x 4</p>  <p>DW</p>            | <p>J x 76</p>  <p>Ø3.5 x 14 mm</p> |
| <p>K x 1</p>  <p>Ø18 x 408 mm</p> | <p>L x 5</p>                    | <p>M x 4</p>                    | <p>N x 2</p>                       | <p>O x 2</p>                       |
| <p>P x 9</p>                      | <p>Q x 32</p>                   | <p>R x 2</p>                    | <p>S x 2</p>                       |   |

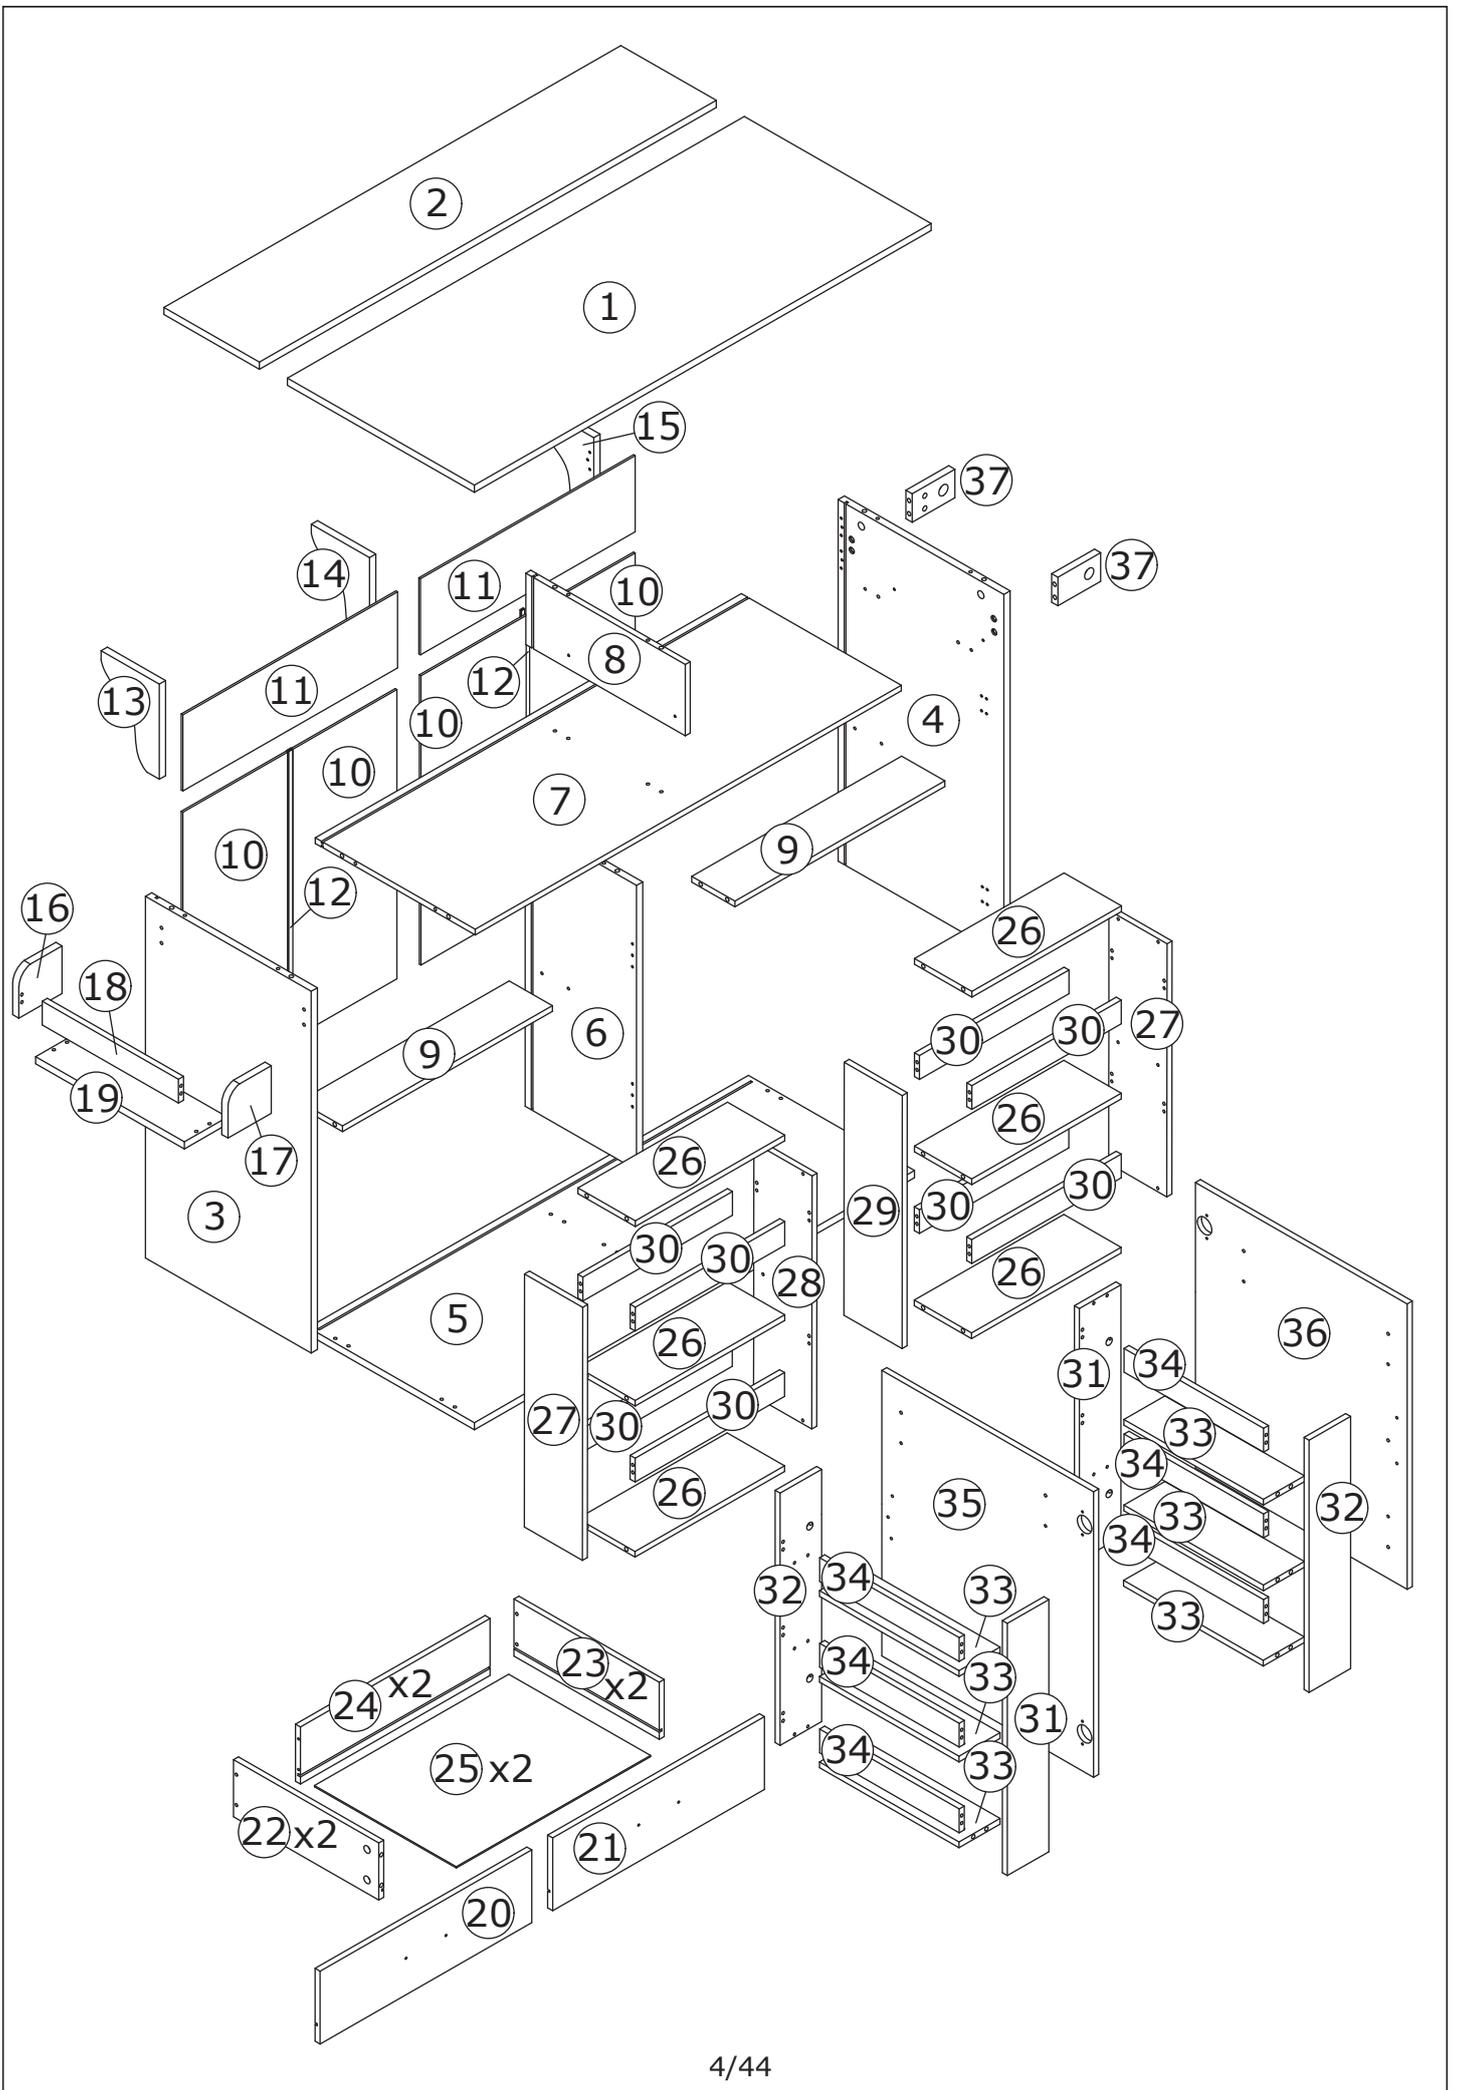




1

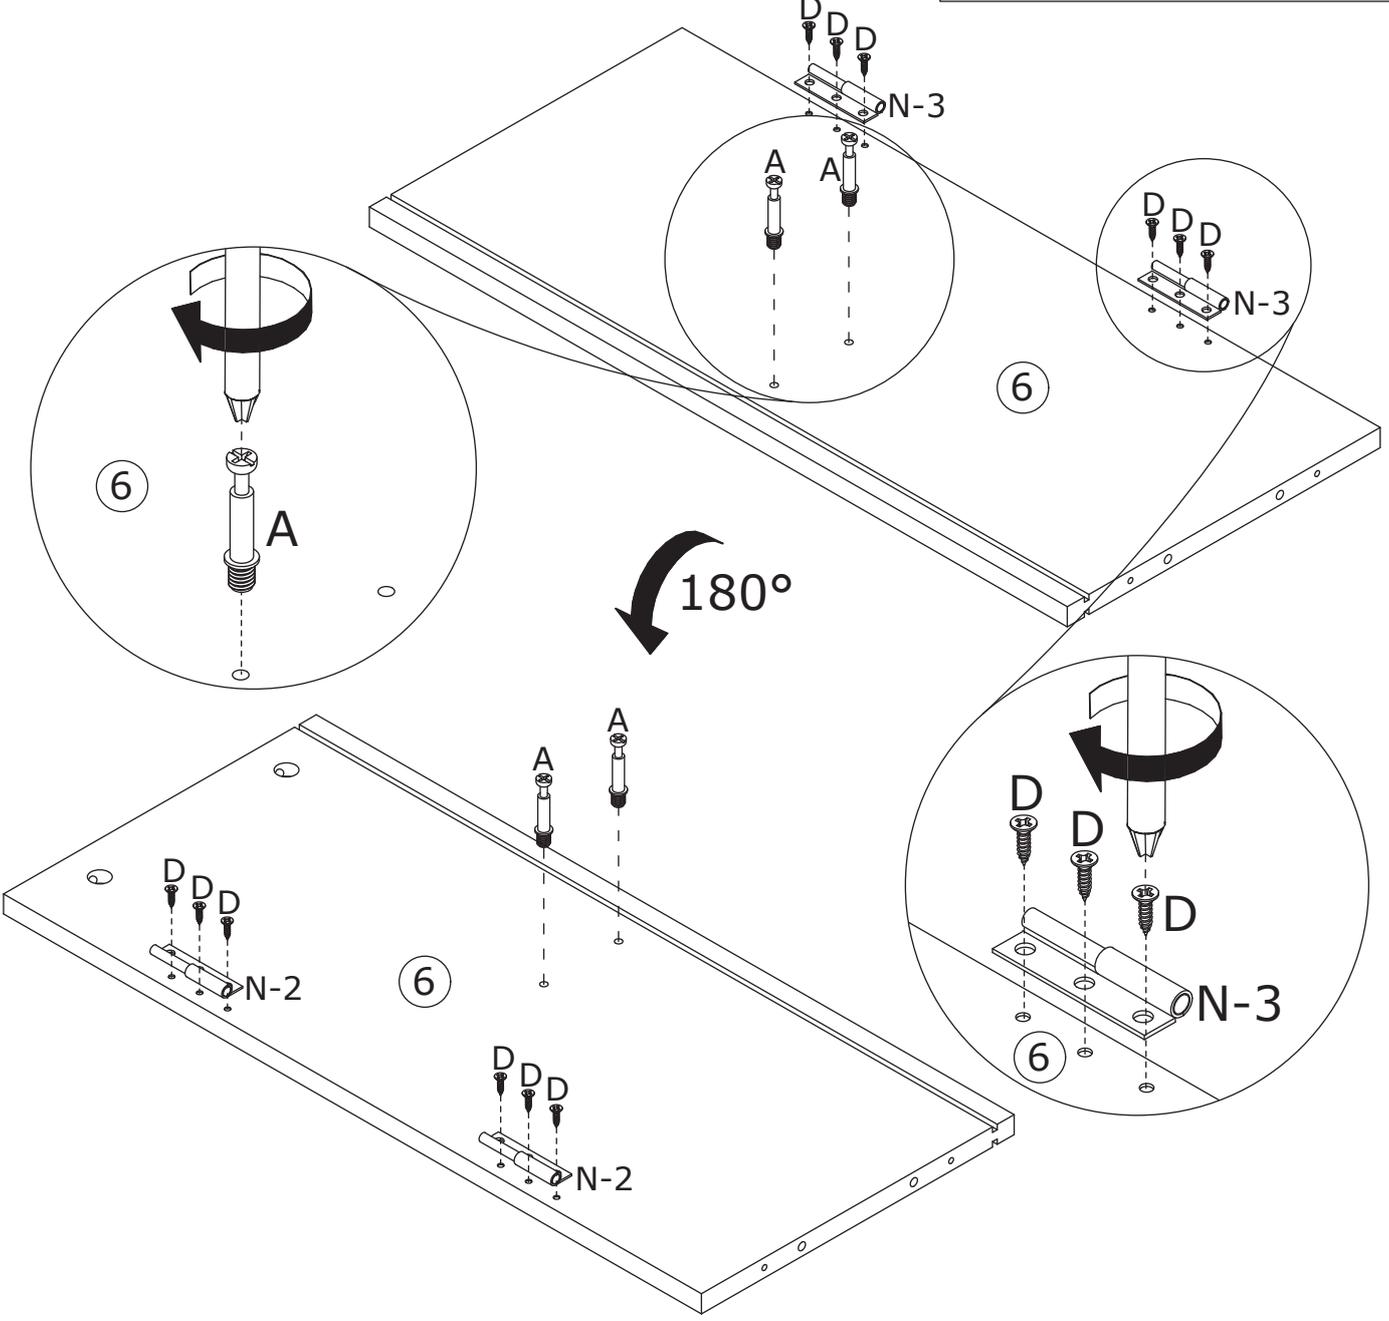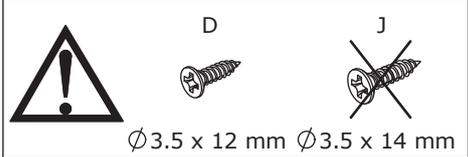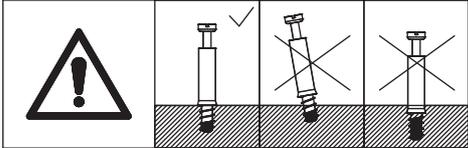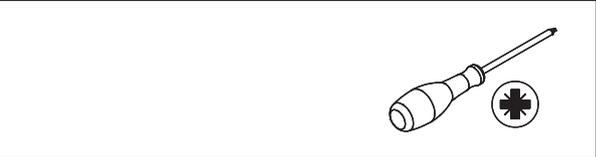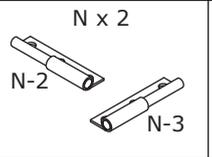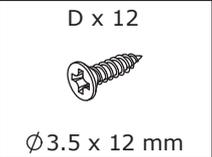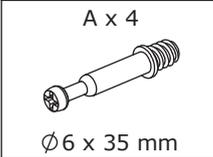

Screw eccentric rod(A) into board 6 and fix hinge(N-3) with screw(D) at first.  
Flip to back, screw eccentric rod(A) into and fix hinge(N-2) as well.









2
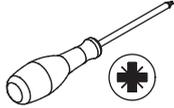
|  |   |   |   |
|--|---|---|---|
| <p>B x 4</p>  <p>Ø 15 x 10 mm</p> | <p>D x 4</p>  <p>Ø 3.5 x 12 mm</p> | <p>R x 2</p>  <p>R-1</p> |  |
|--|---|---|---|

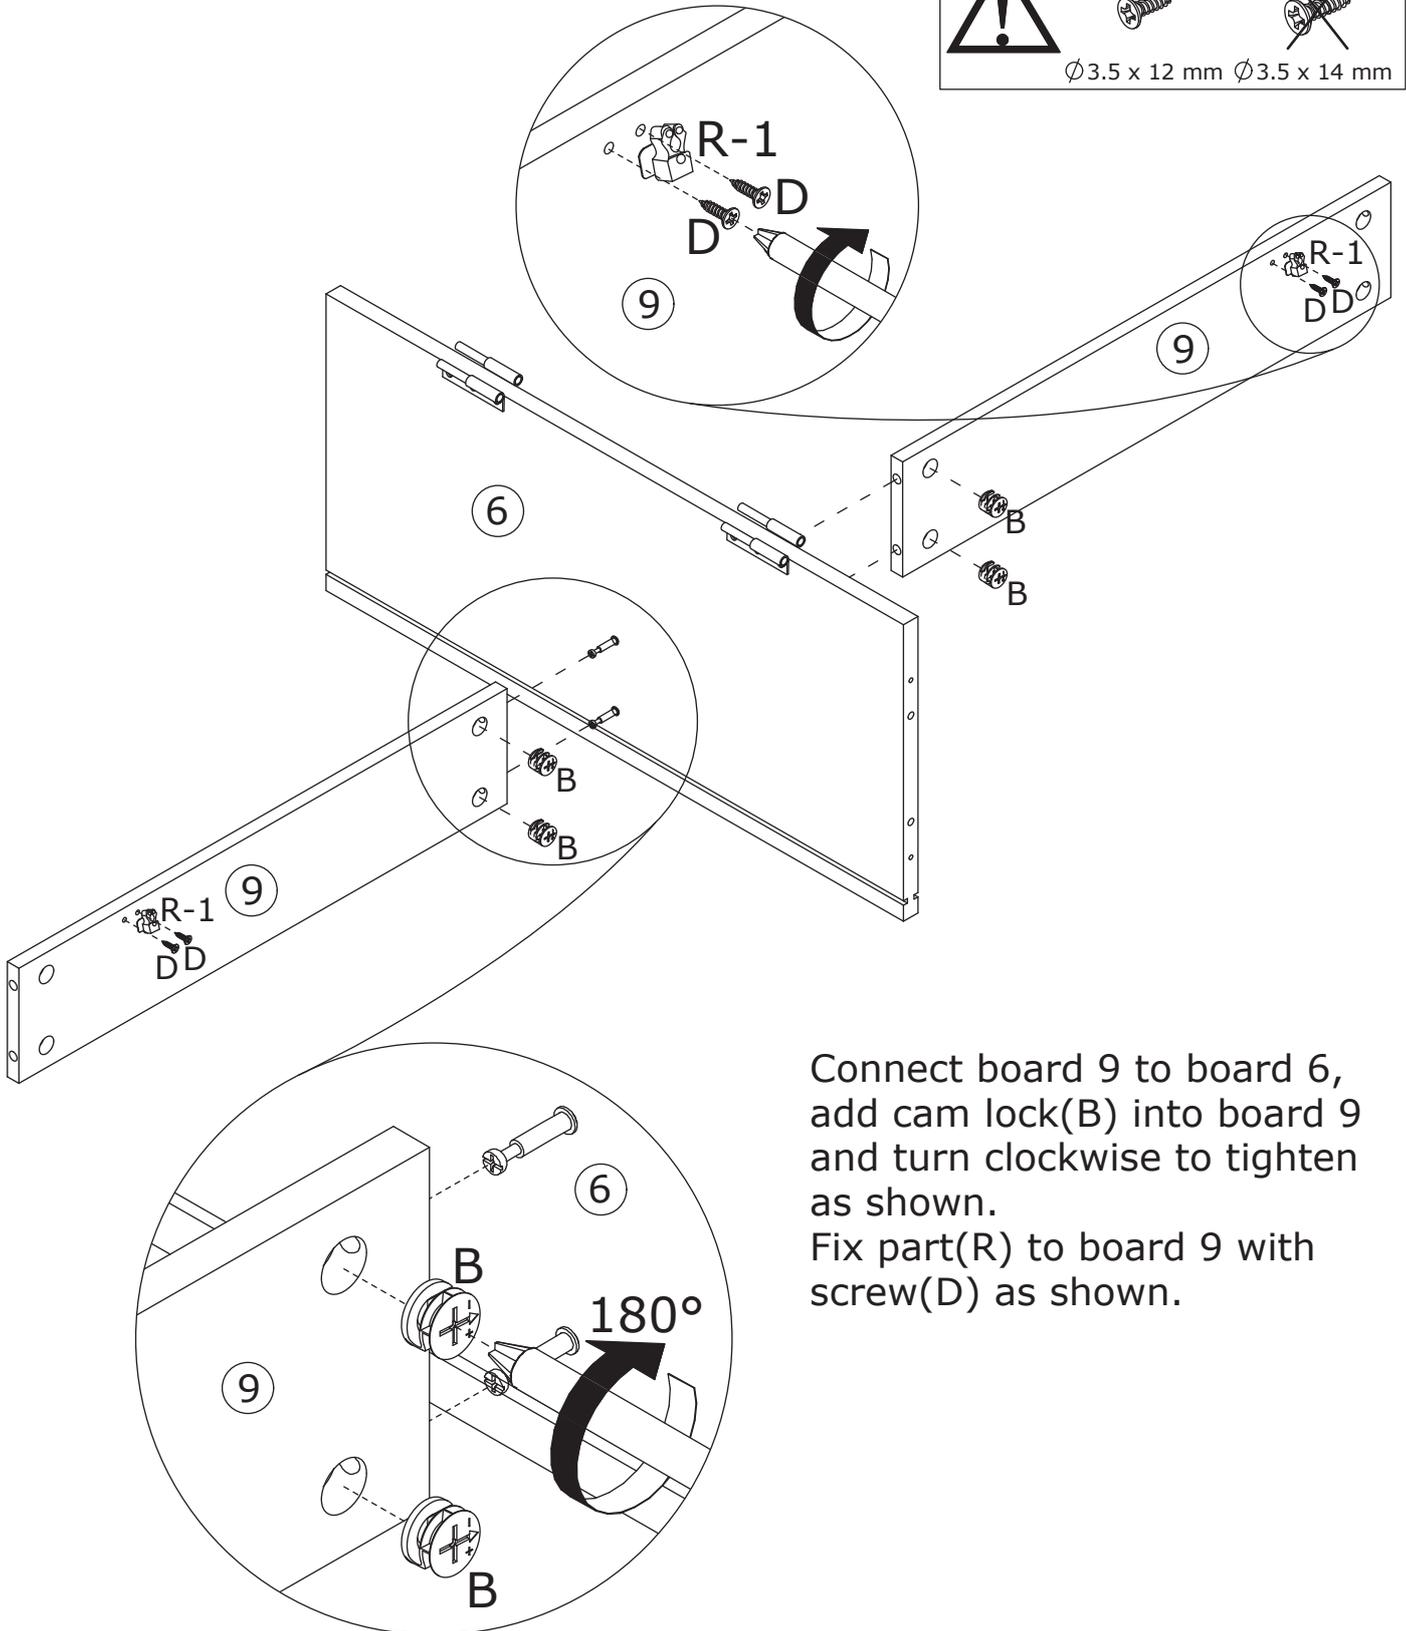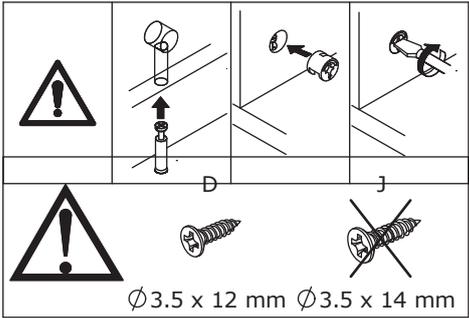


Connect board 9 to board 6,  
add cam lock(B) into board 9  
and turn clockwise to tighten  
as shown.  
Fix part(R) to board 9 with  
screw(D) as shown.

3

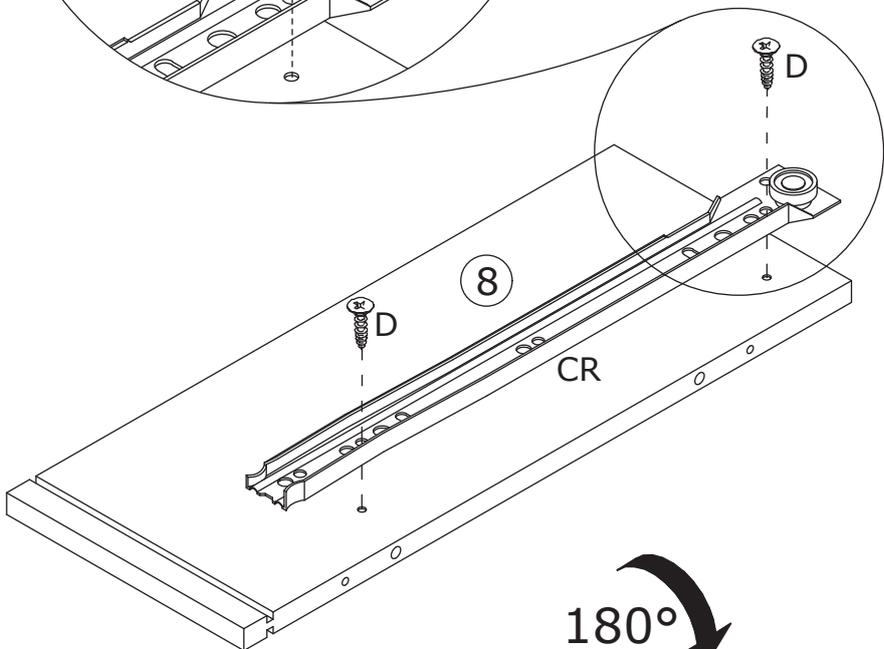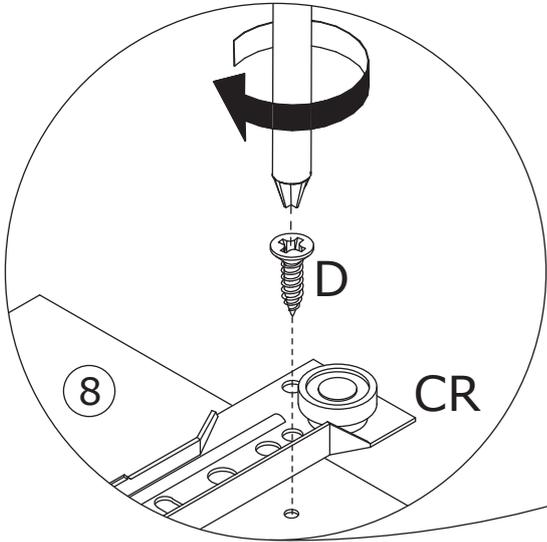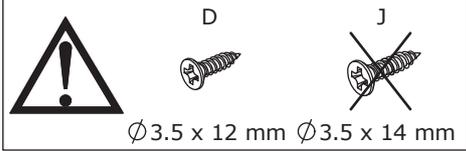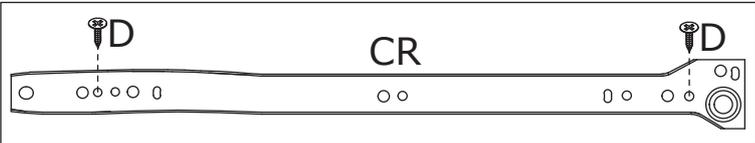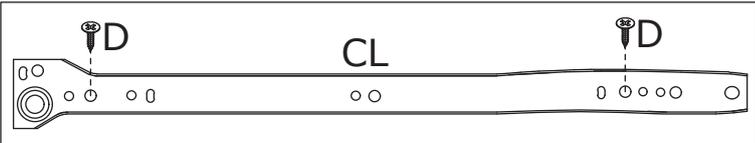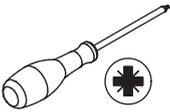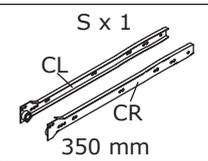
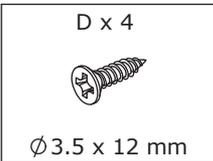


180°

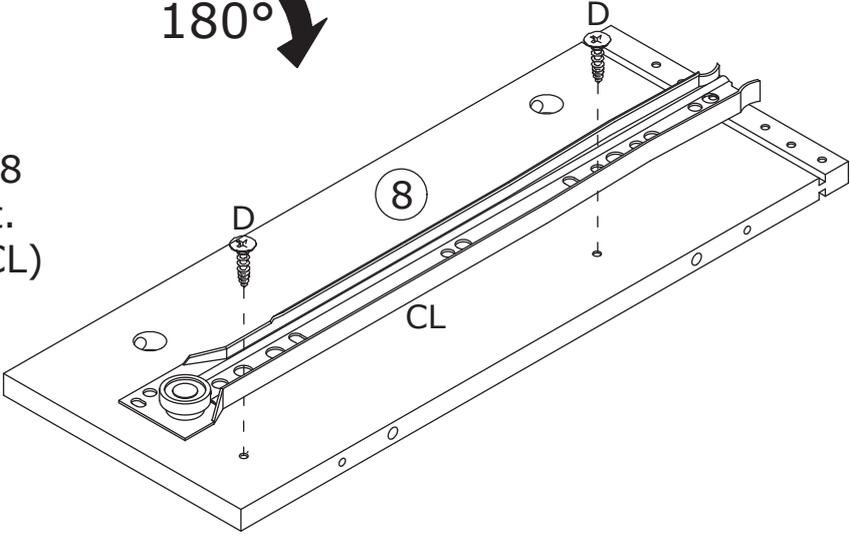


Fix rail(CR) to board 8 with screw(D) at first. Flip to back, fix rail(CL) as shown.

4

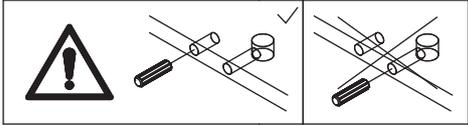
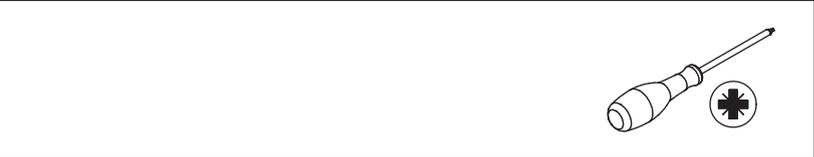


Attach board 8 to board 7 using wooden dowel(C), and fix with screw(F) as shown.

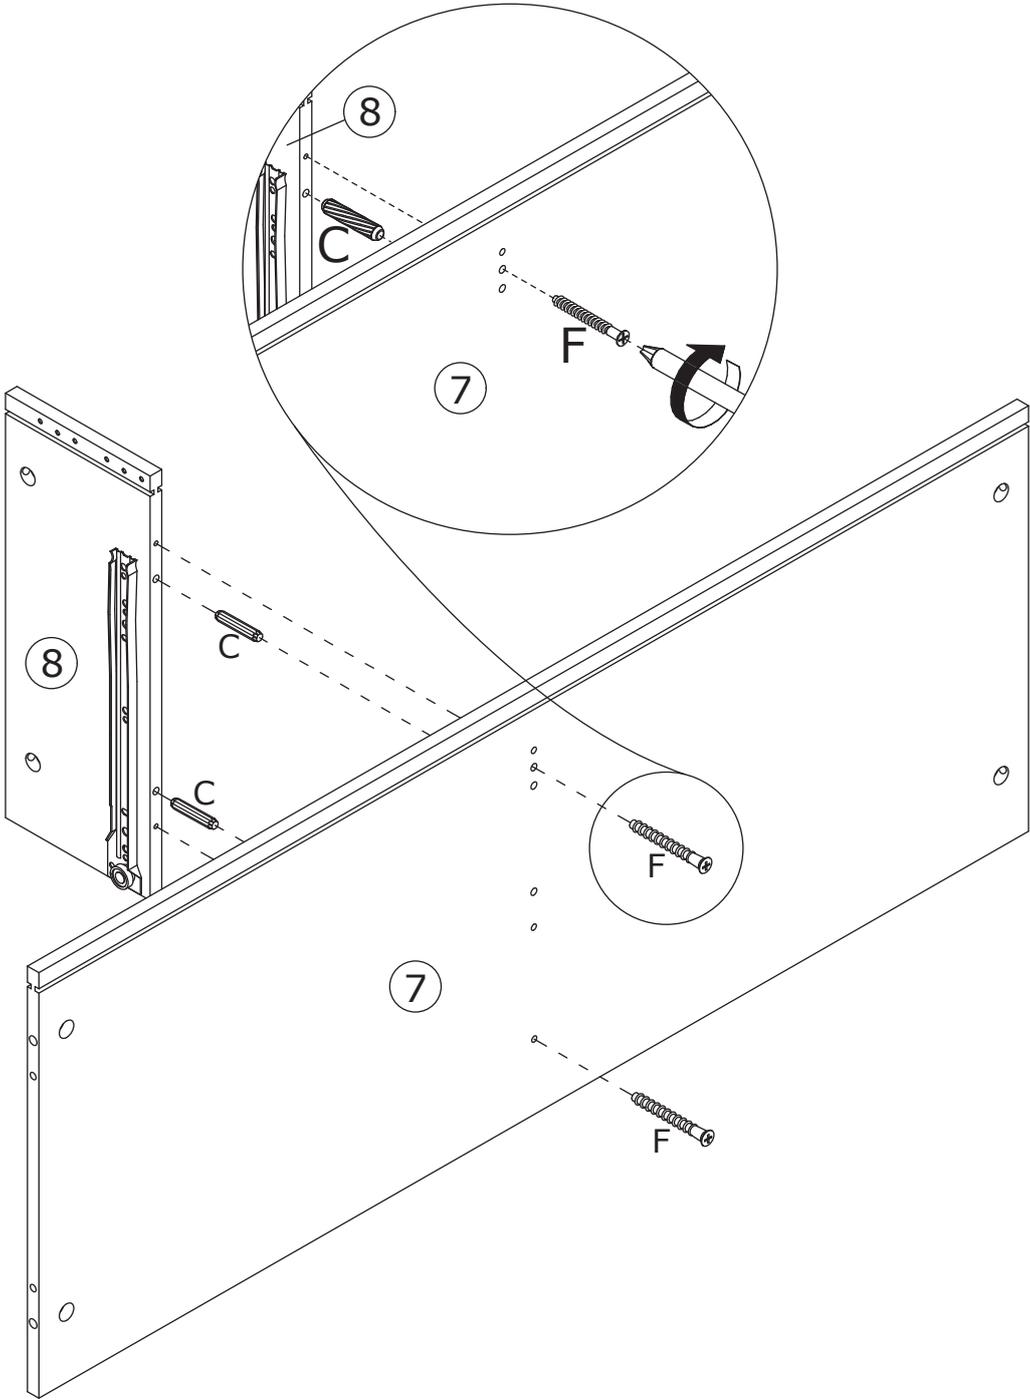


5

A x 2  
Ø6 x 35 mm

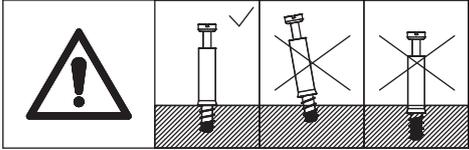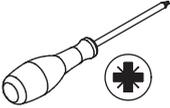





Screw eccentric rod(A) into board 7 at first.

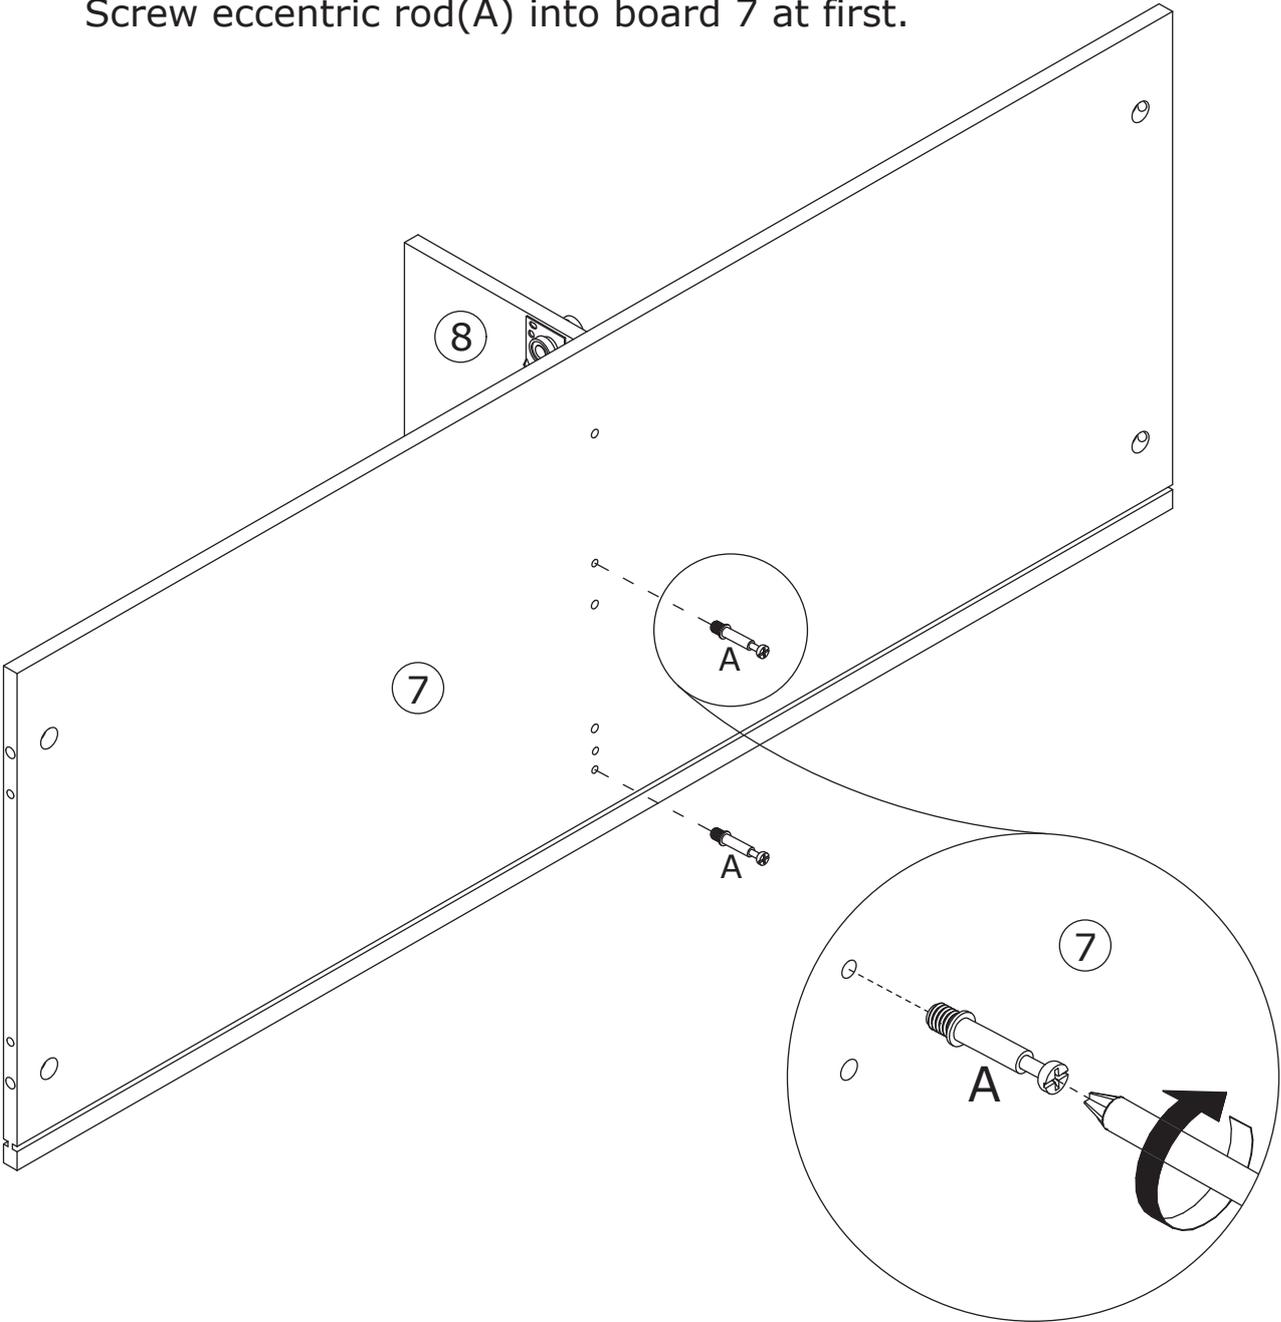

6

B x 2  
Ø15 x 10 mm

C x 2  
Ø6 x 30 mm



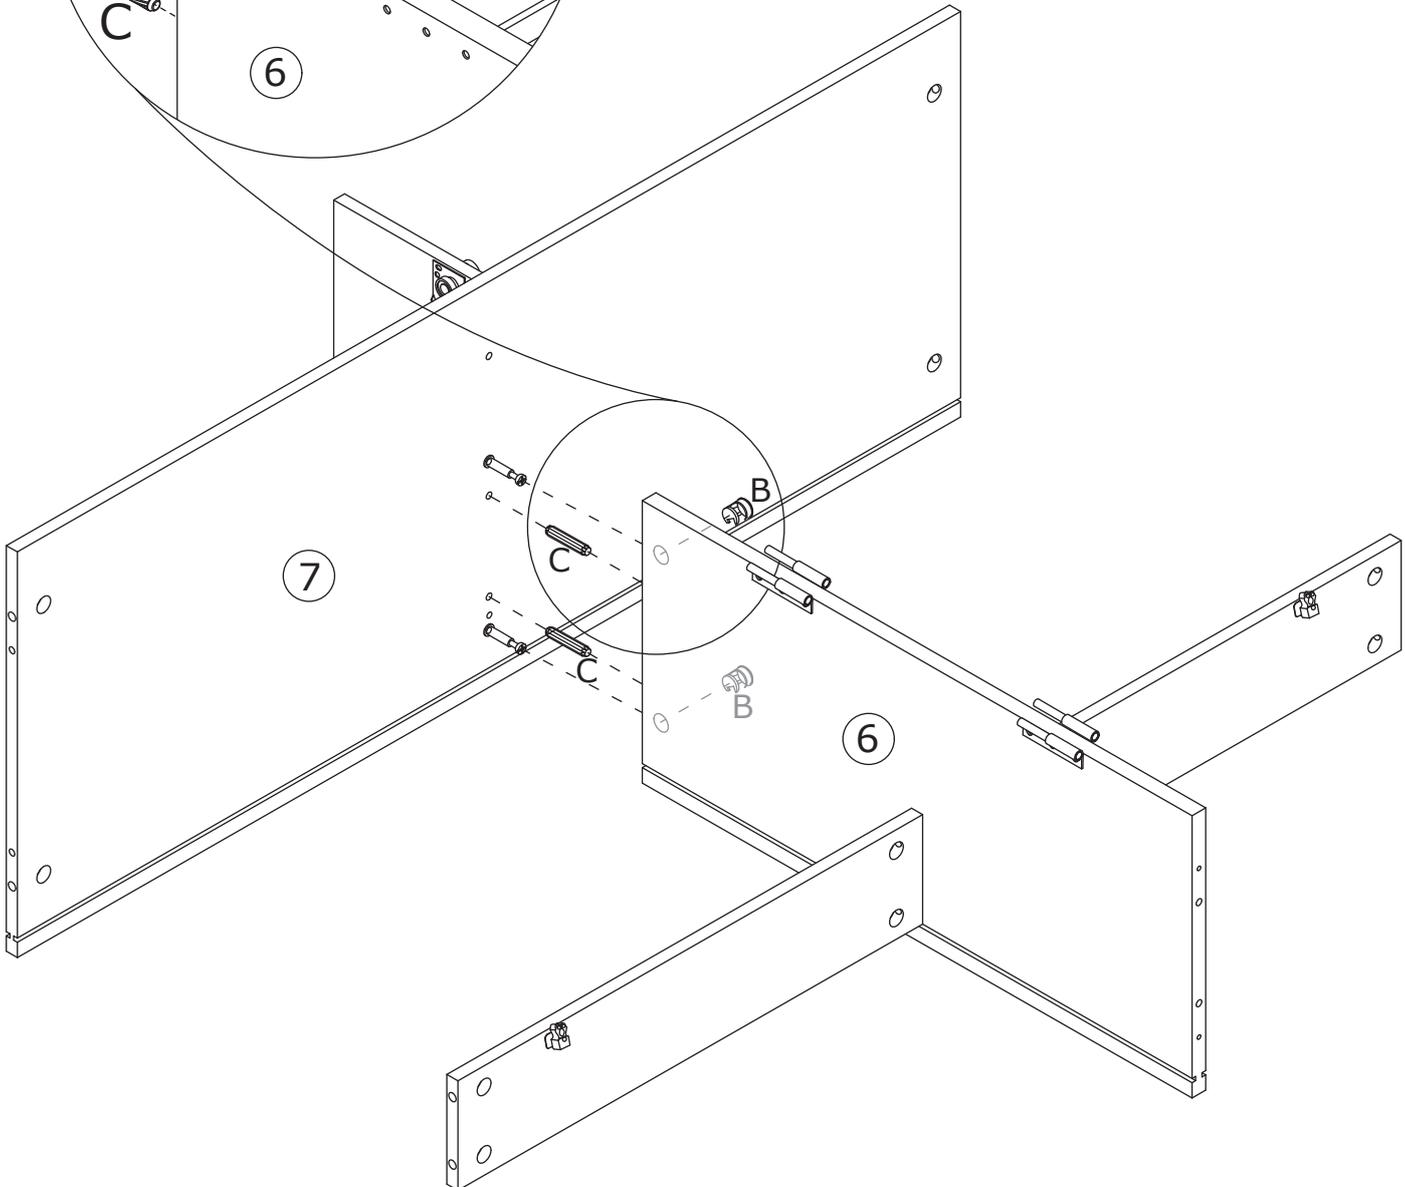
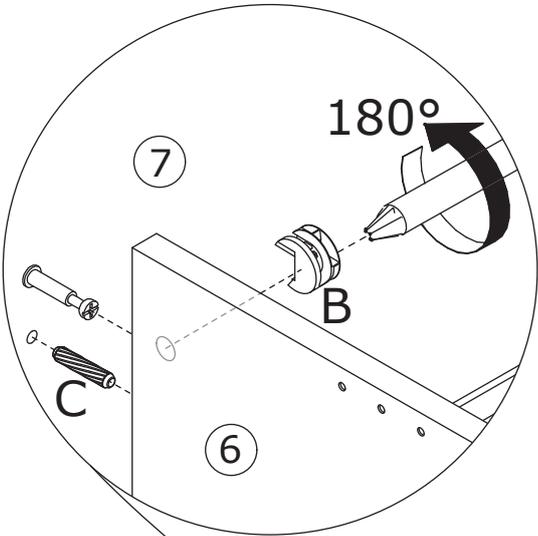
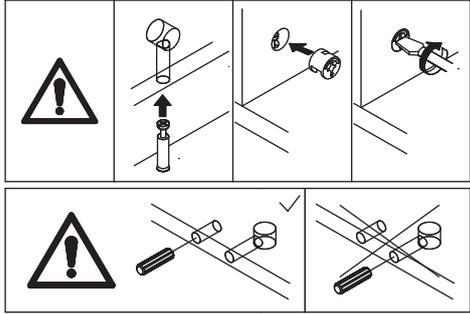
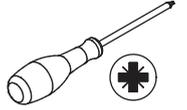


Attach board 6 to board 7 using wooden dowel(C), add cam lock(B) into board 6 and turn clockwise to tighten as shown.

7

D x 4  
Ø 3.5 x 12 mm




S x 1  
CL  
CR  
350 mm

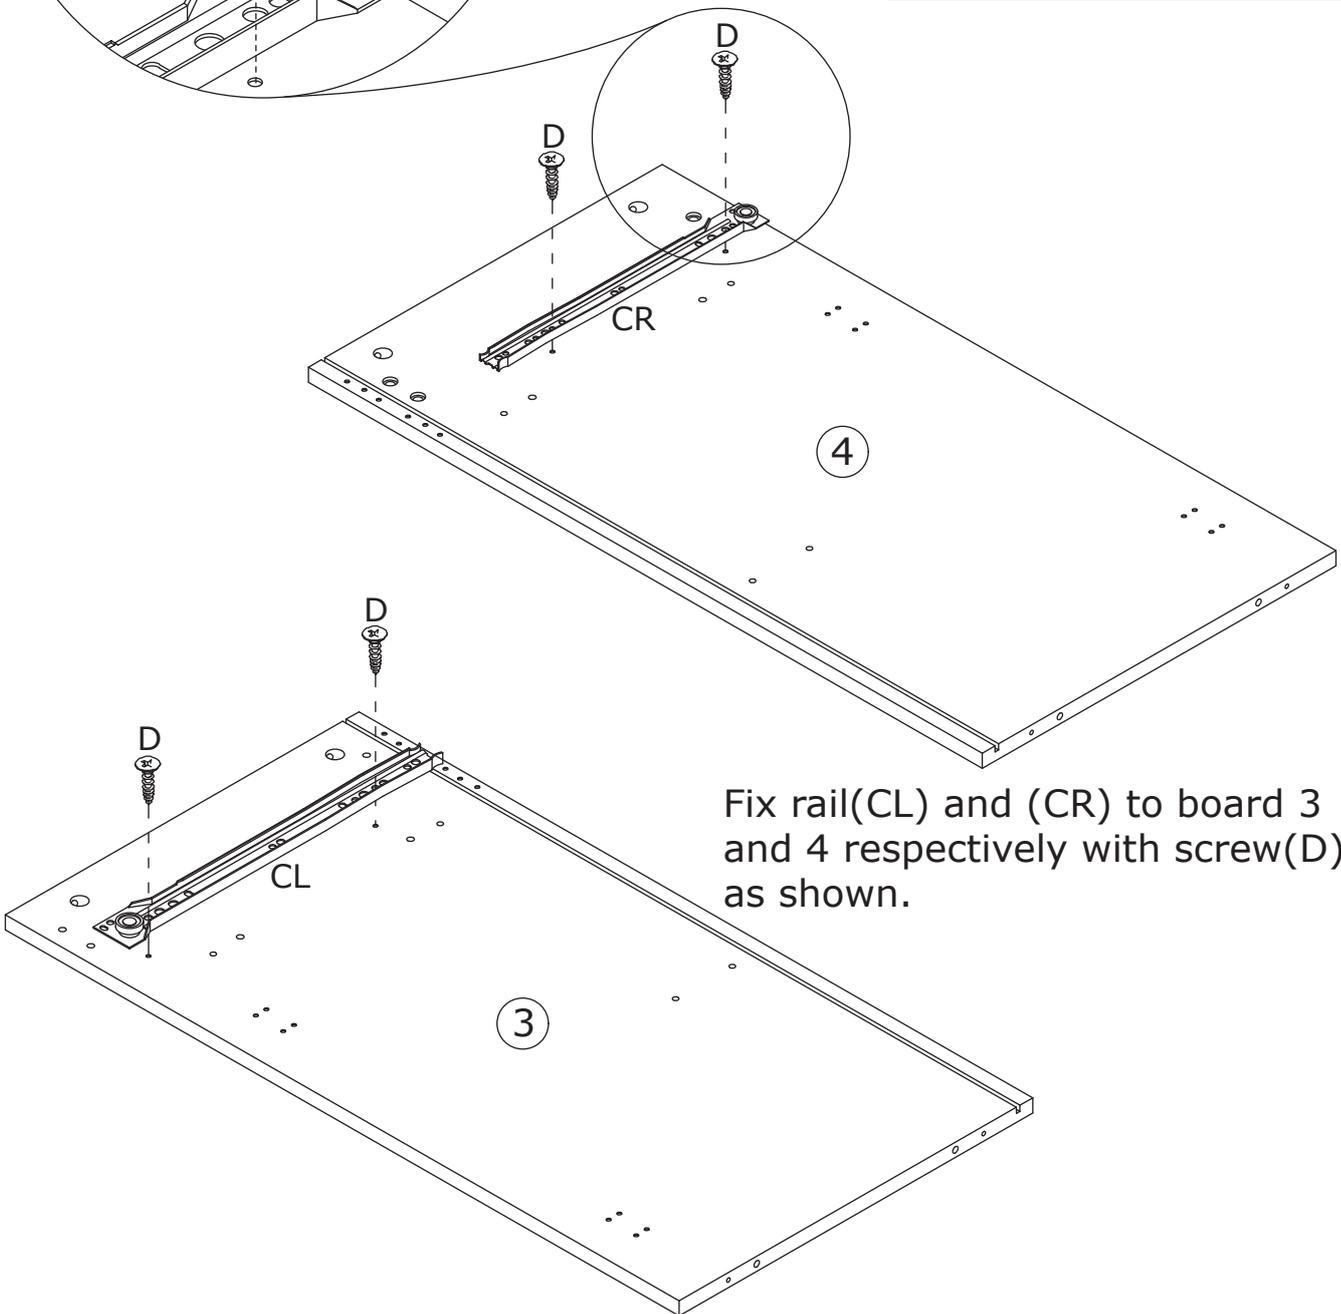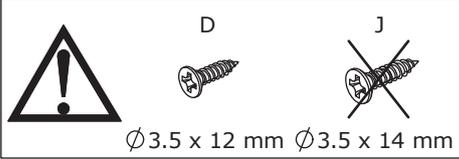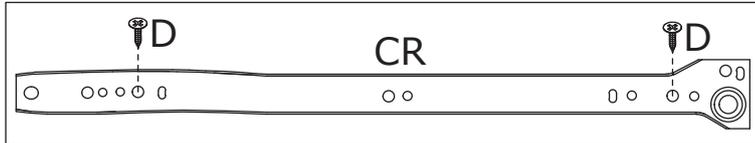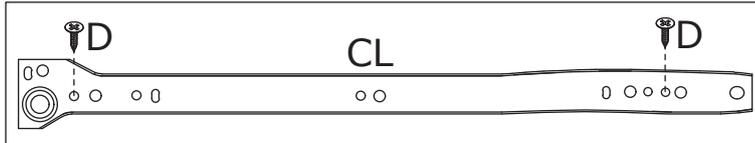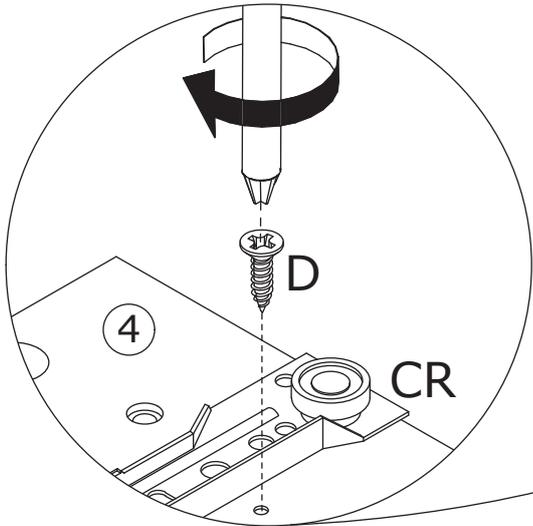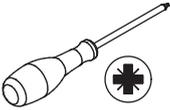


Fix rail(CL) and (CR) to board 3 and 4 respectively with screw(D) as shown.

8





A x 8  
Ø6 x 35 mm

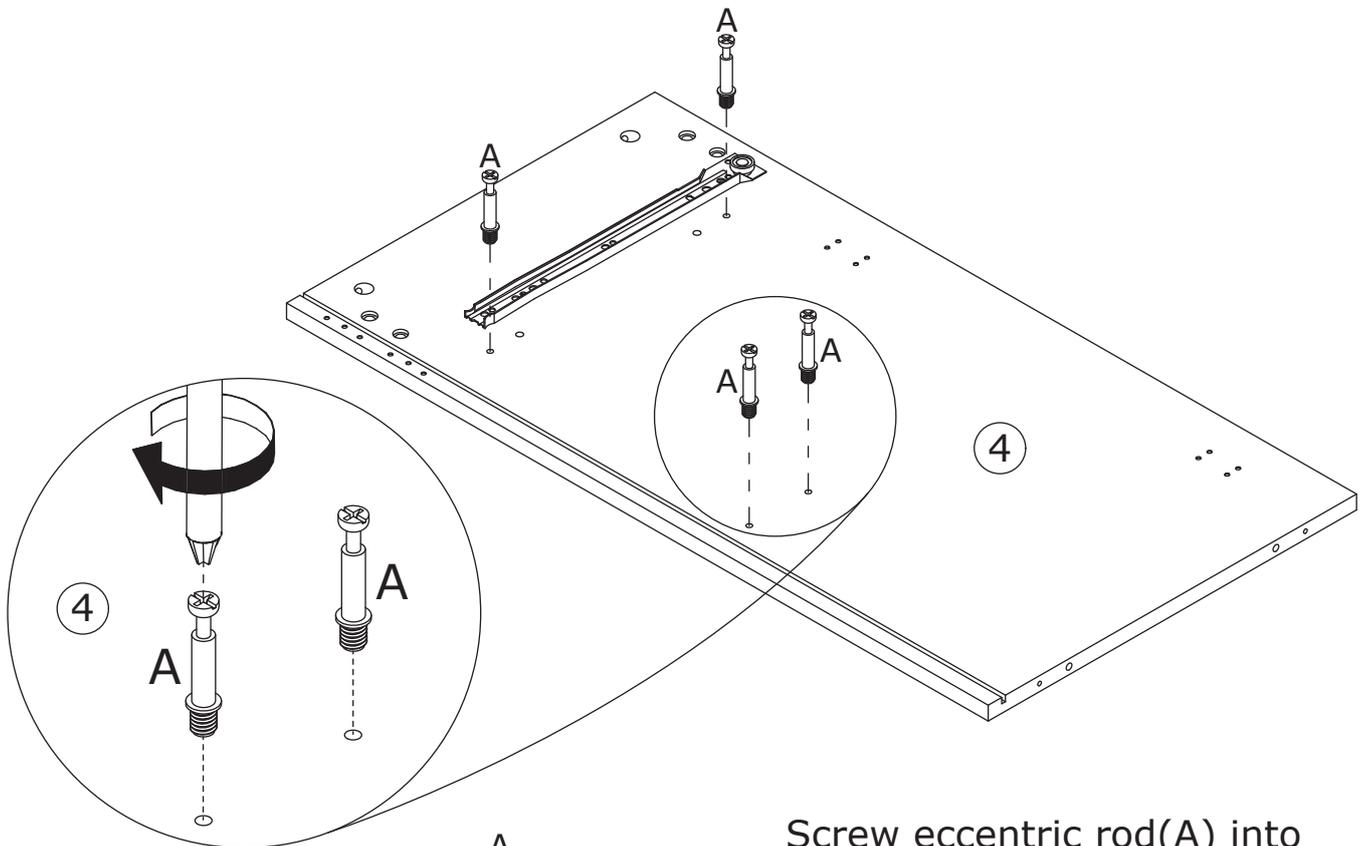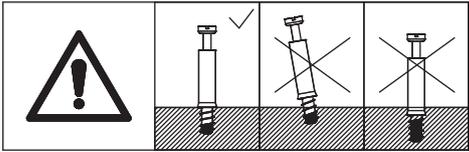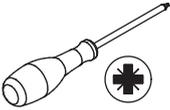

Screw eccentric rod(A) into board 3 and 4 at first.

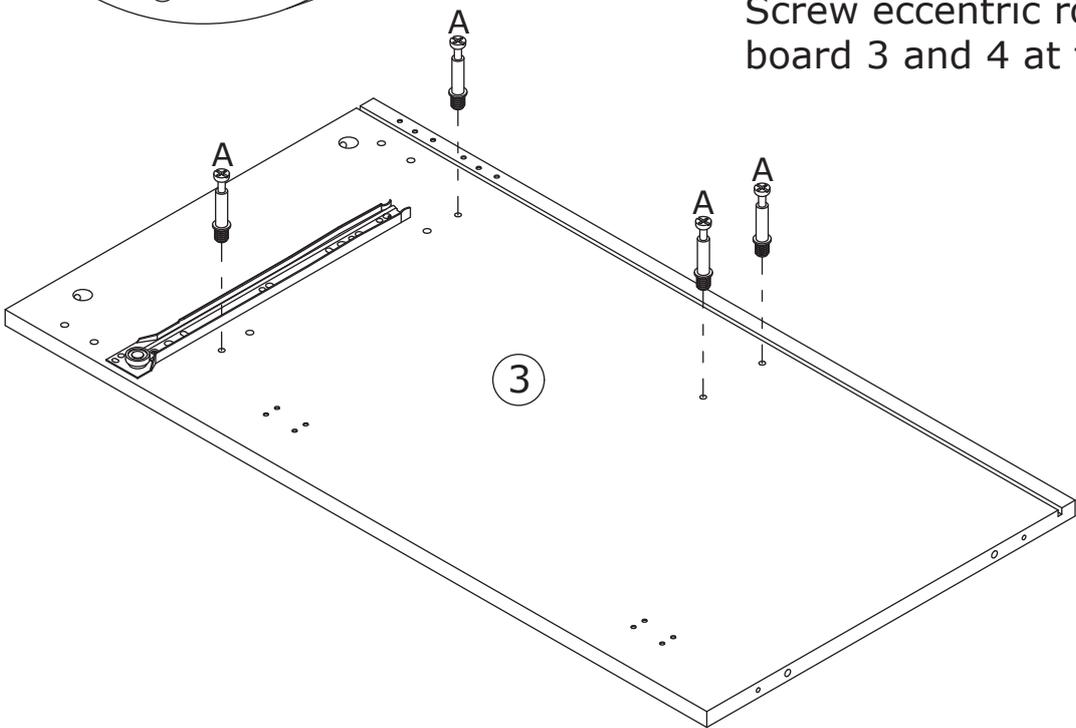


9

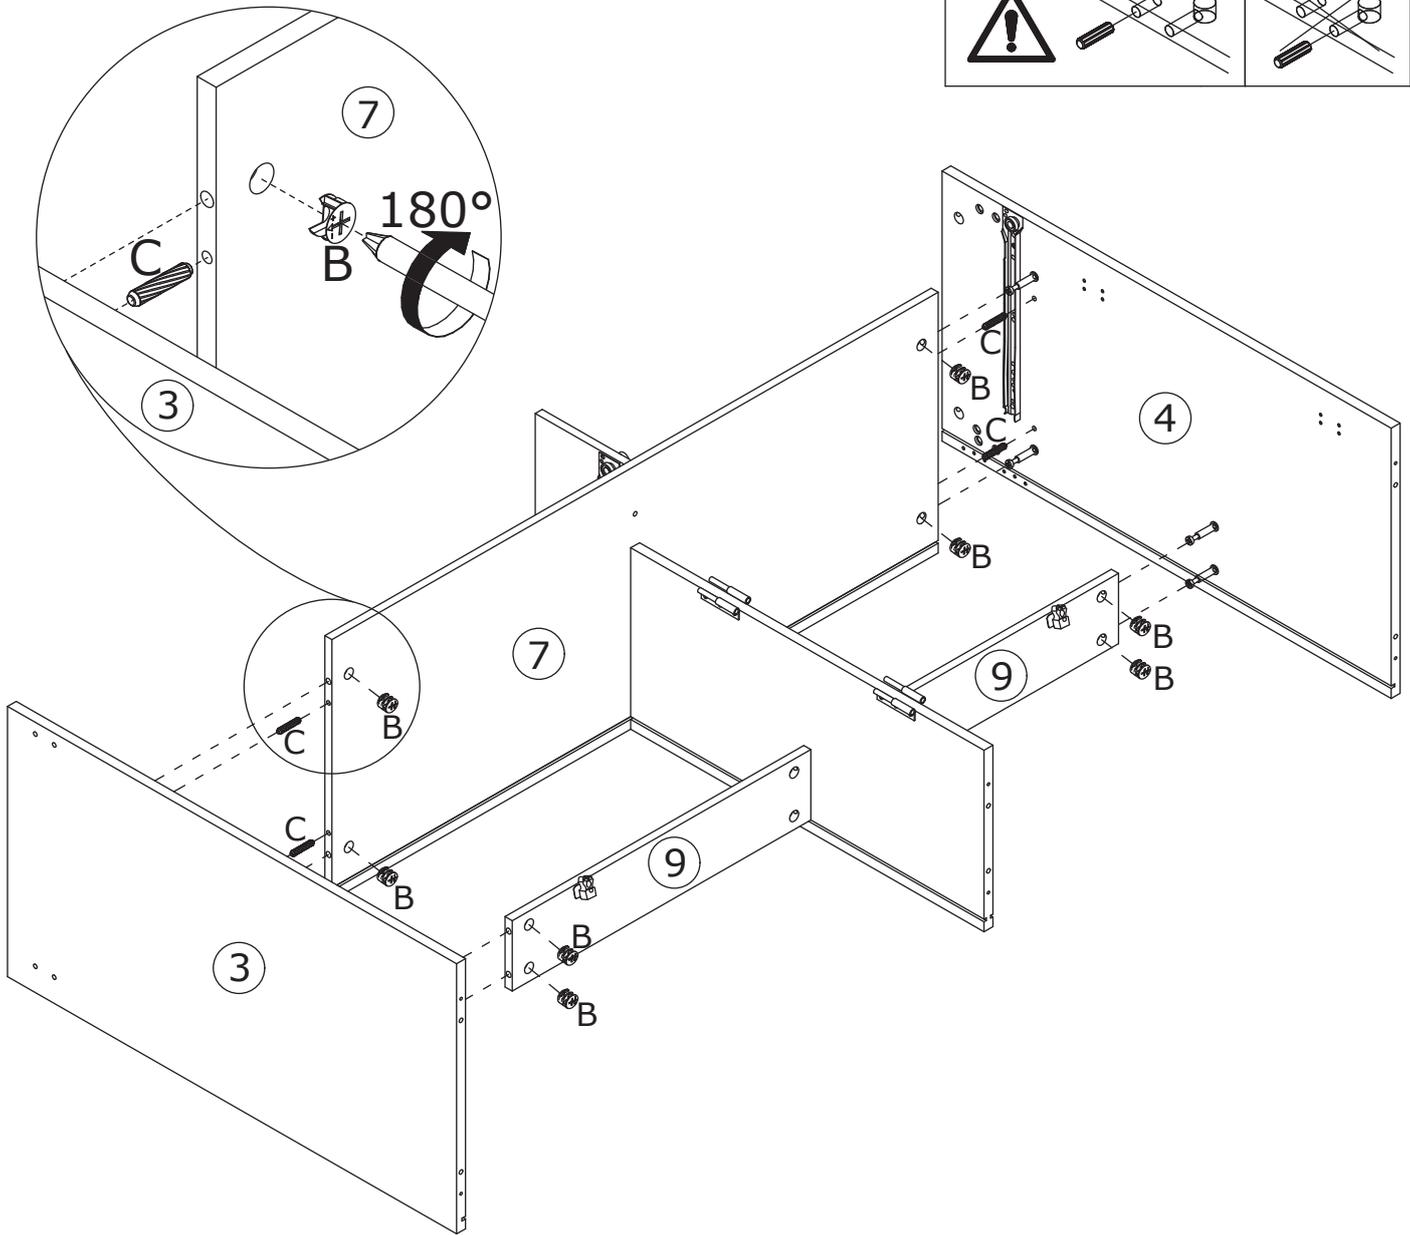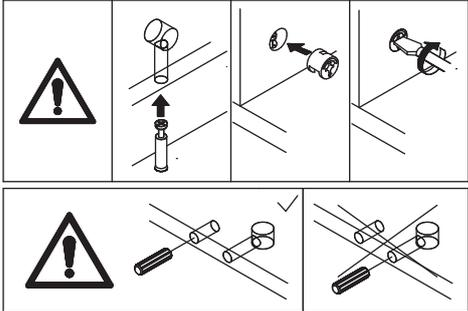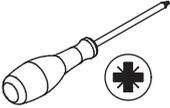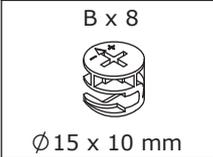




Connect board 3 and 4 to board 7 and 9 using wooden dowel(C), add cam lock(B) into board 7,9 and turn clockwise to tighten as shown.

10


Connect two board 10 with plank 12 at first.  
Insert back board 10 along available grooves as shown.

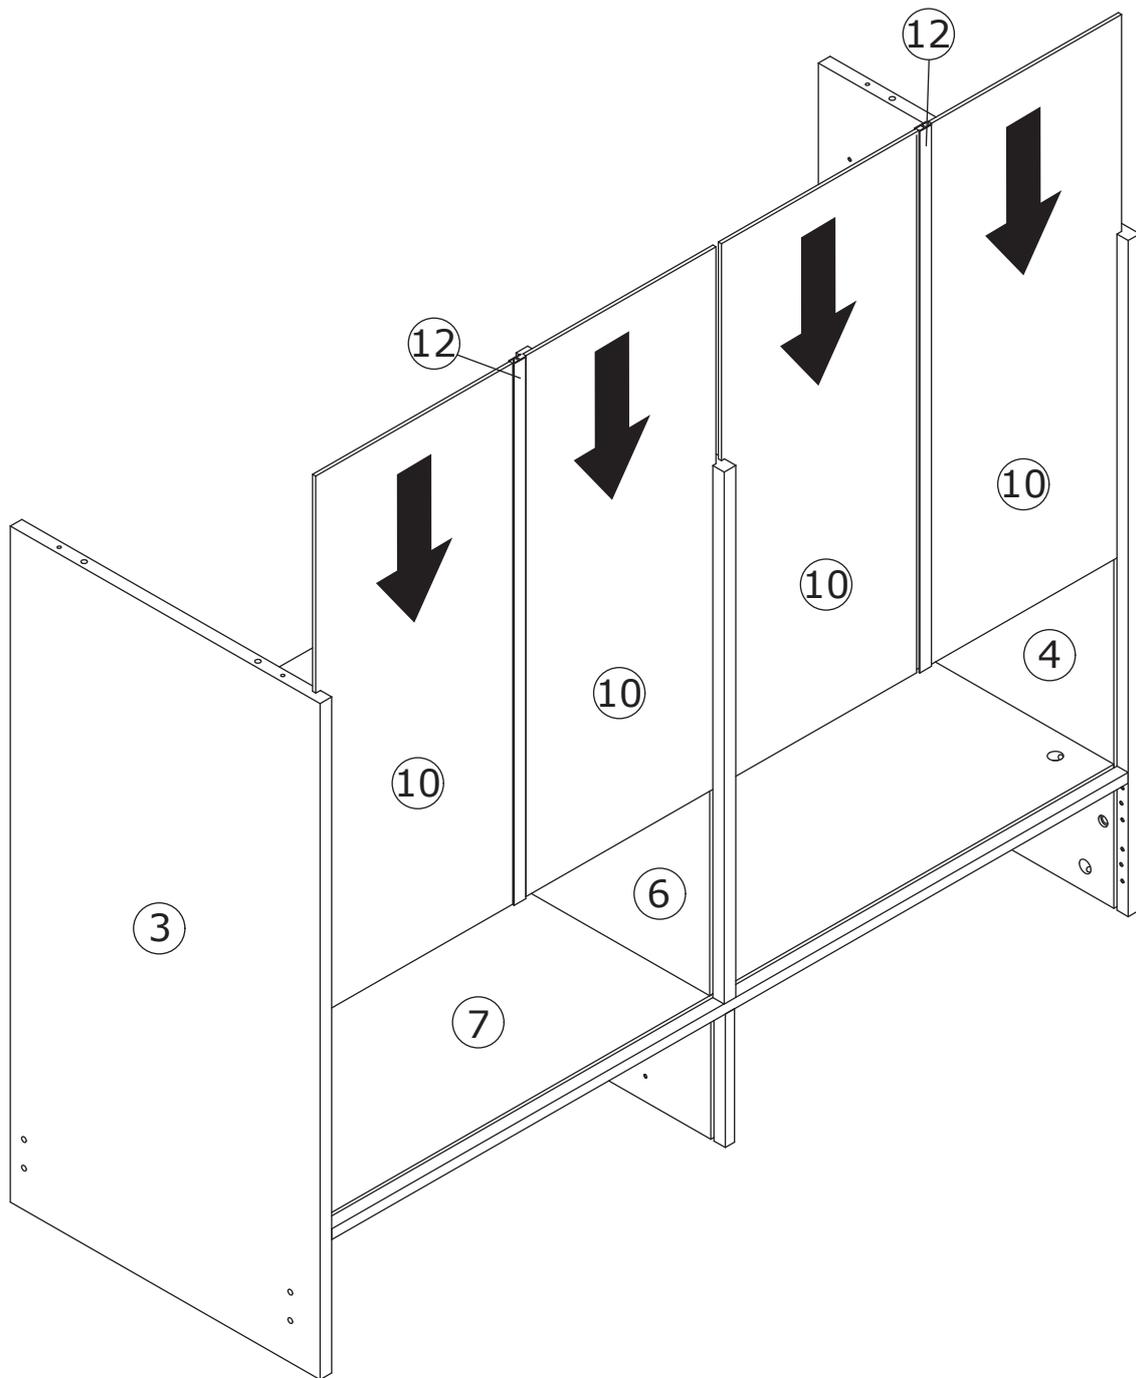


11

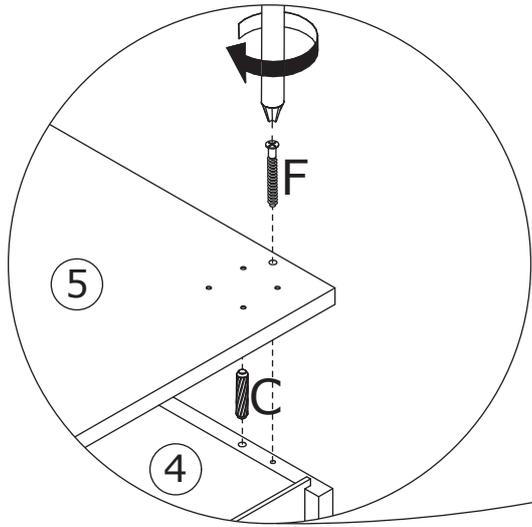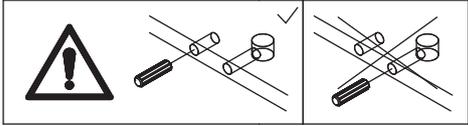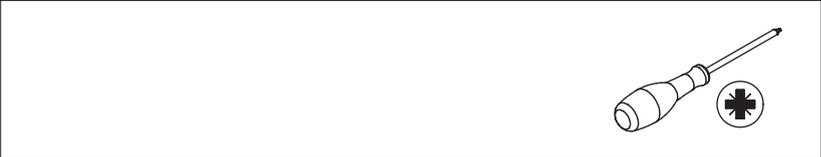

Cover board 5 to the top using wooden dowel(C), and fix with screw(F) as shown.

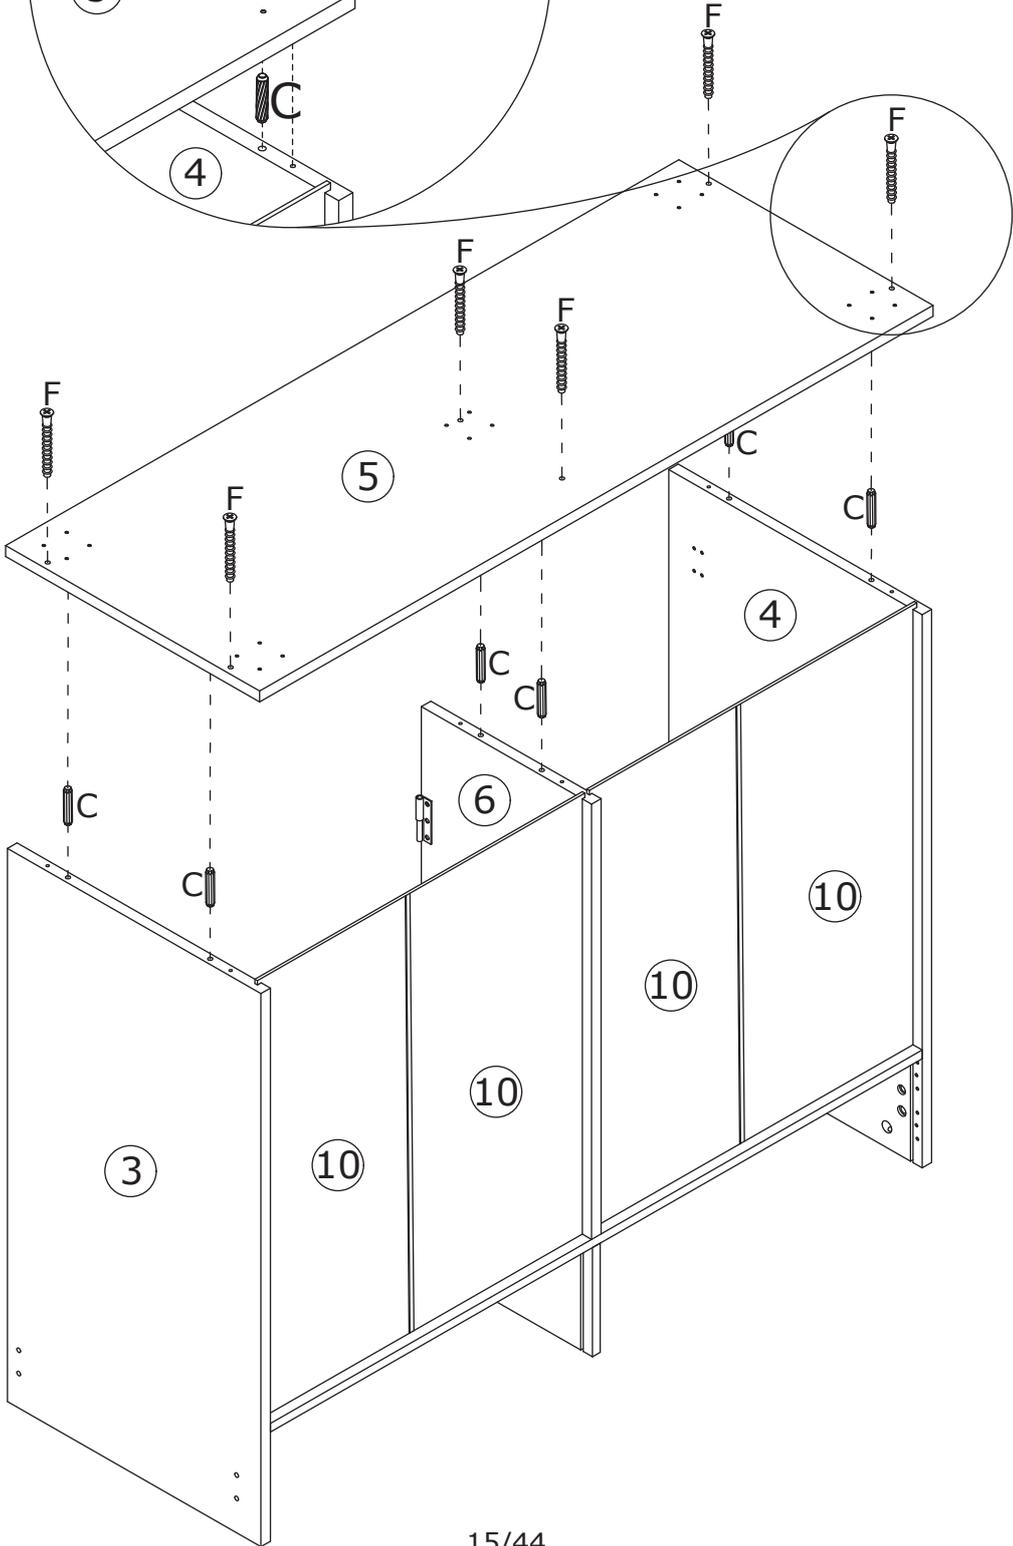


12
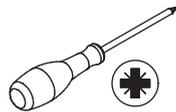
|  |  |   |
|--|--|---|
| J x 20<br><br>Ø 3.5 x 14 mm | L x 5<br> |  |
|--|--|---|


|   |   |  |
|---|---|--|
|  | <del>D</del><br> | J<br> |
|   | Ø 3.5 x 12 mm   | Ø 3.5 x 14 mm  |

Fix wheel(L) to board 5 with screw(J) as shown.

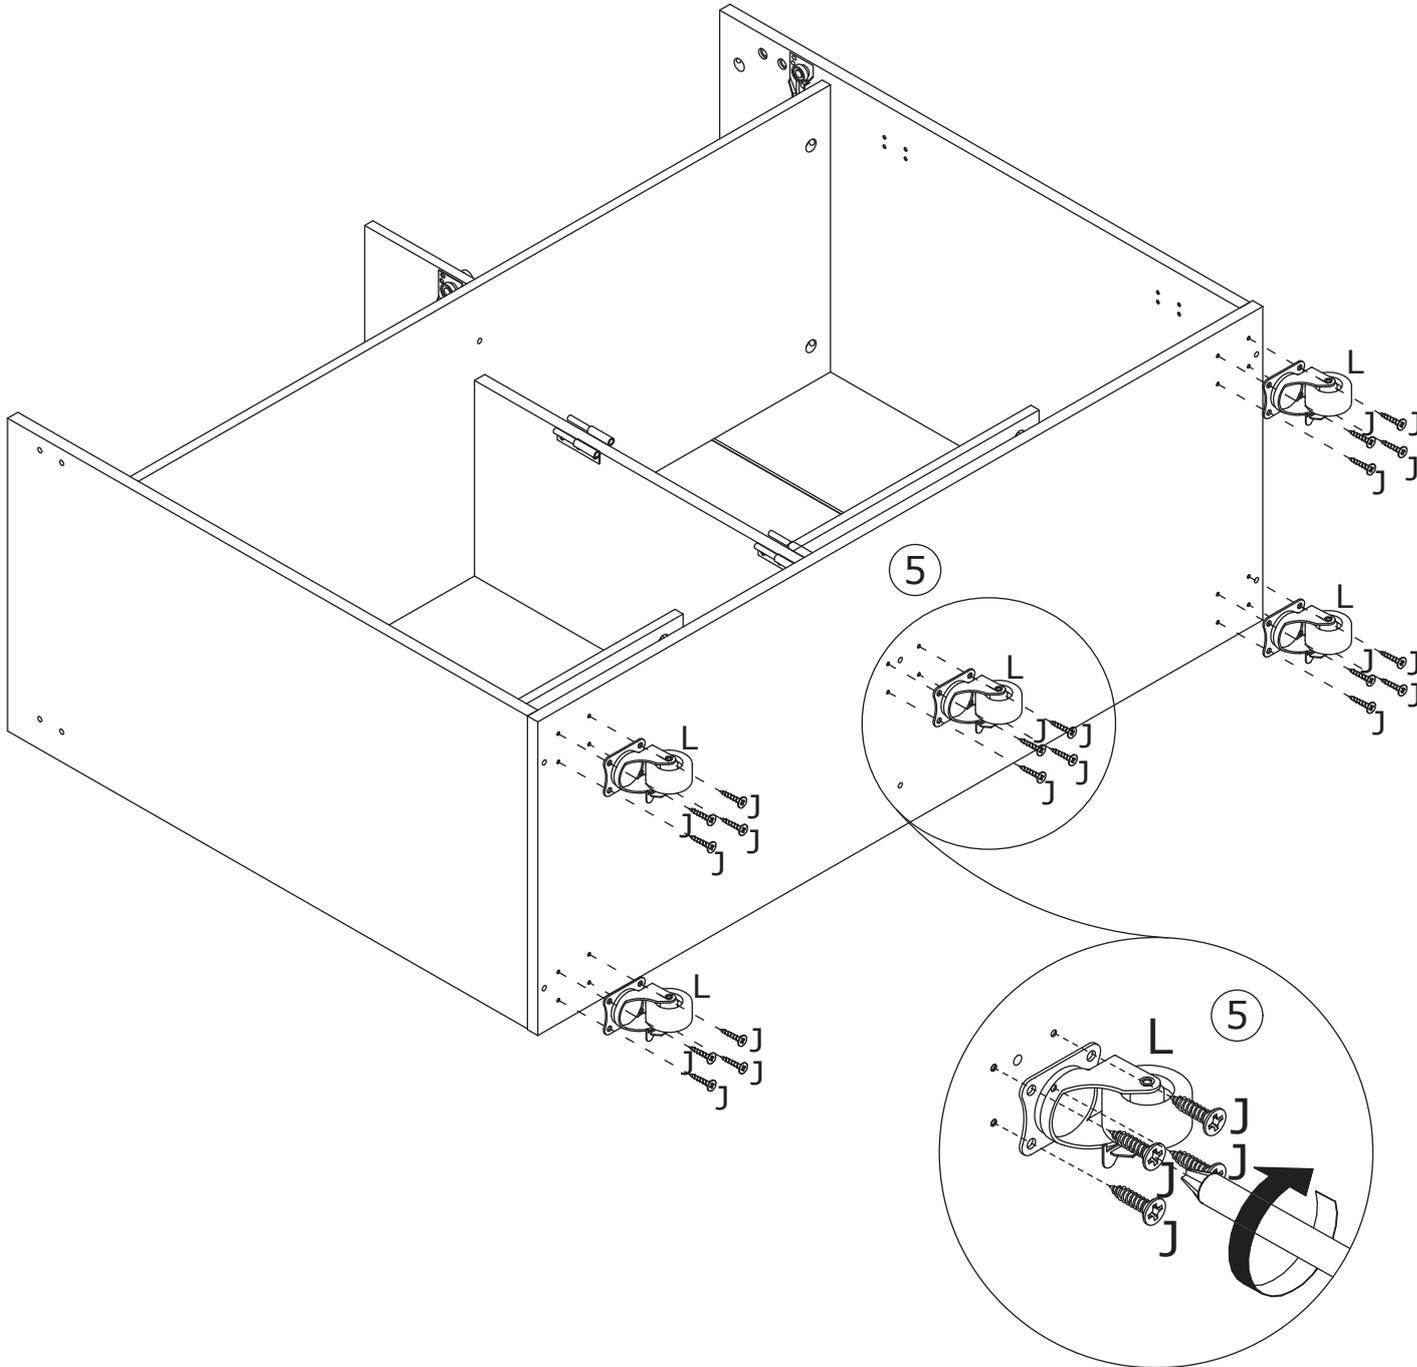


13

Insert back board 11 along available grooves as shown.

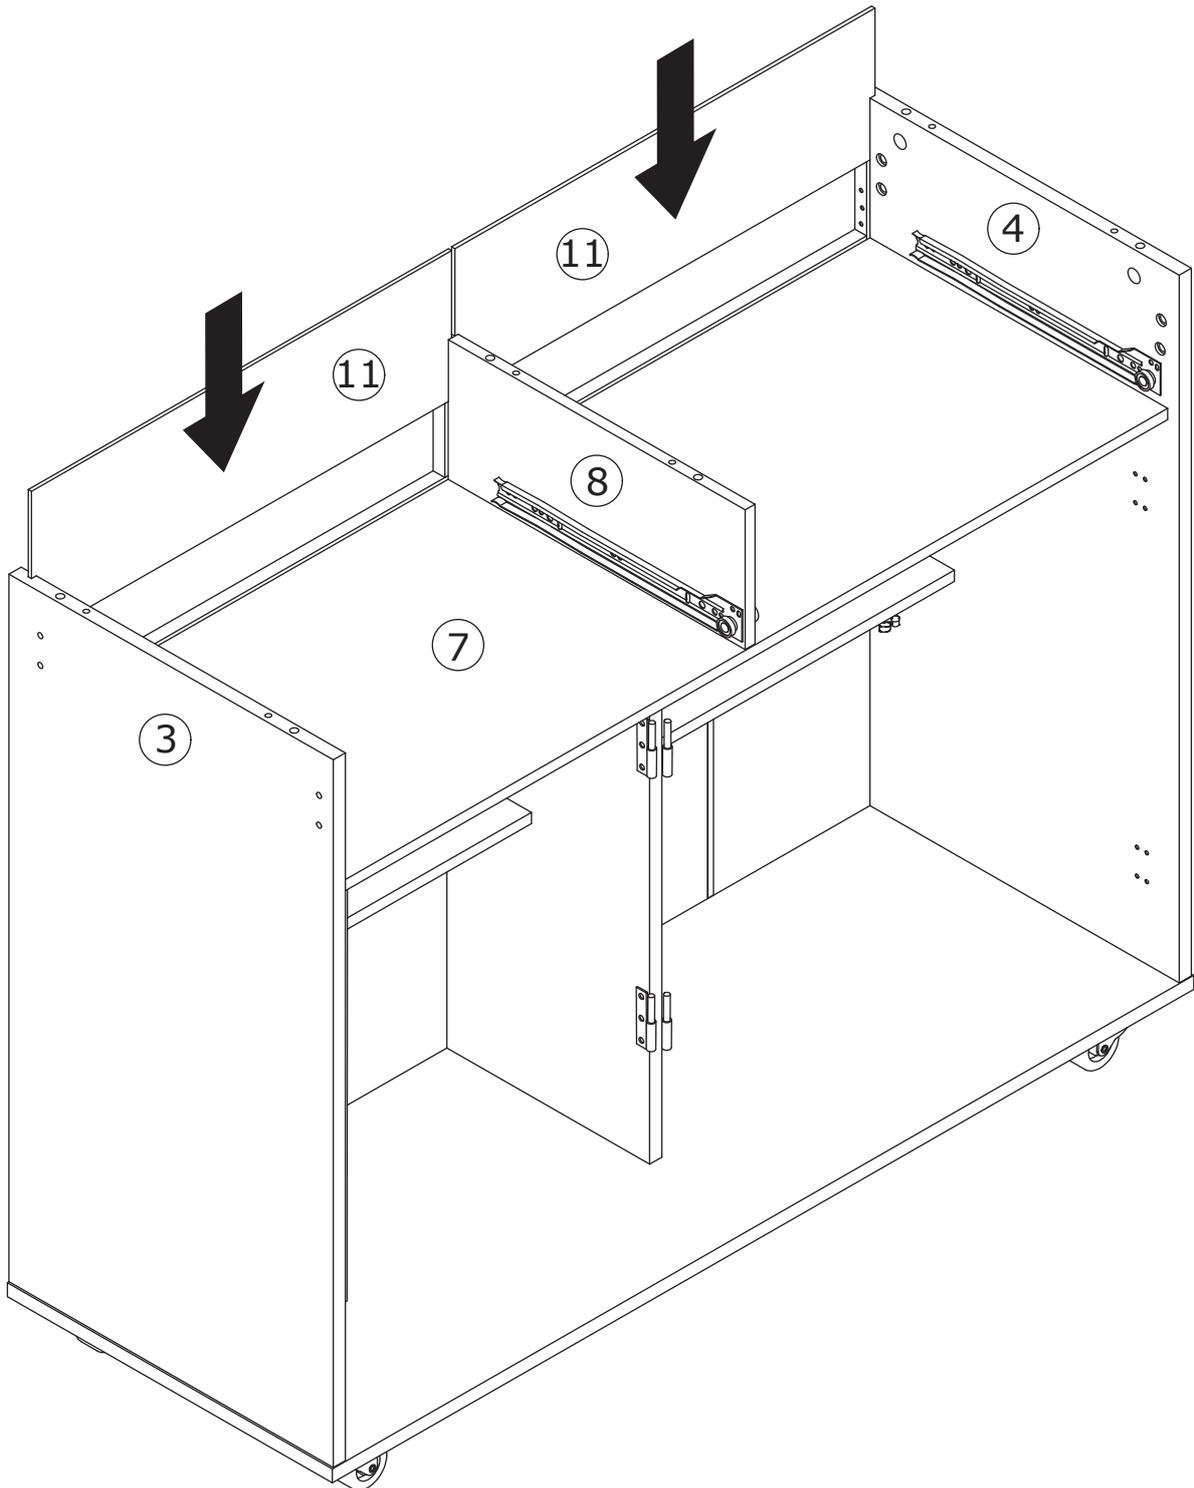


14


C x 4  
Ø6 x 30 mm

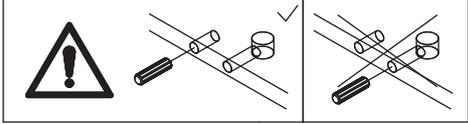


Connect board 16 and 17 to board 18 using wooden dowel(C).

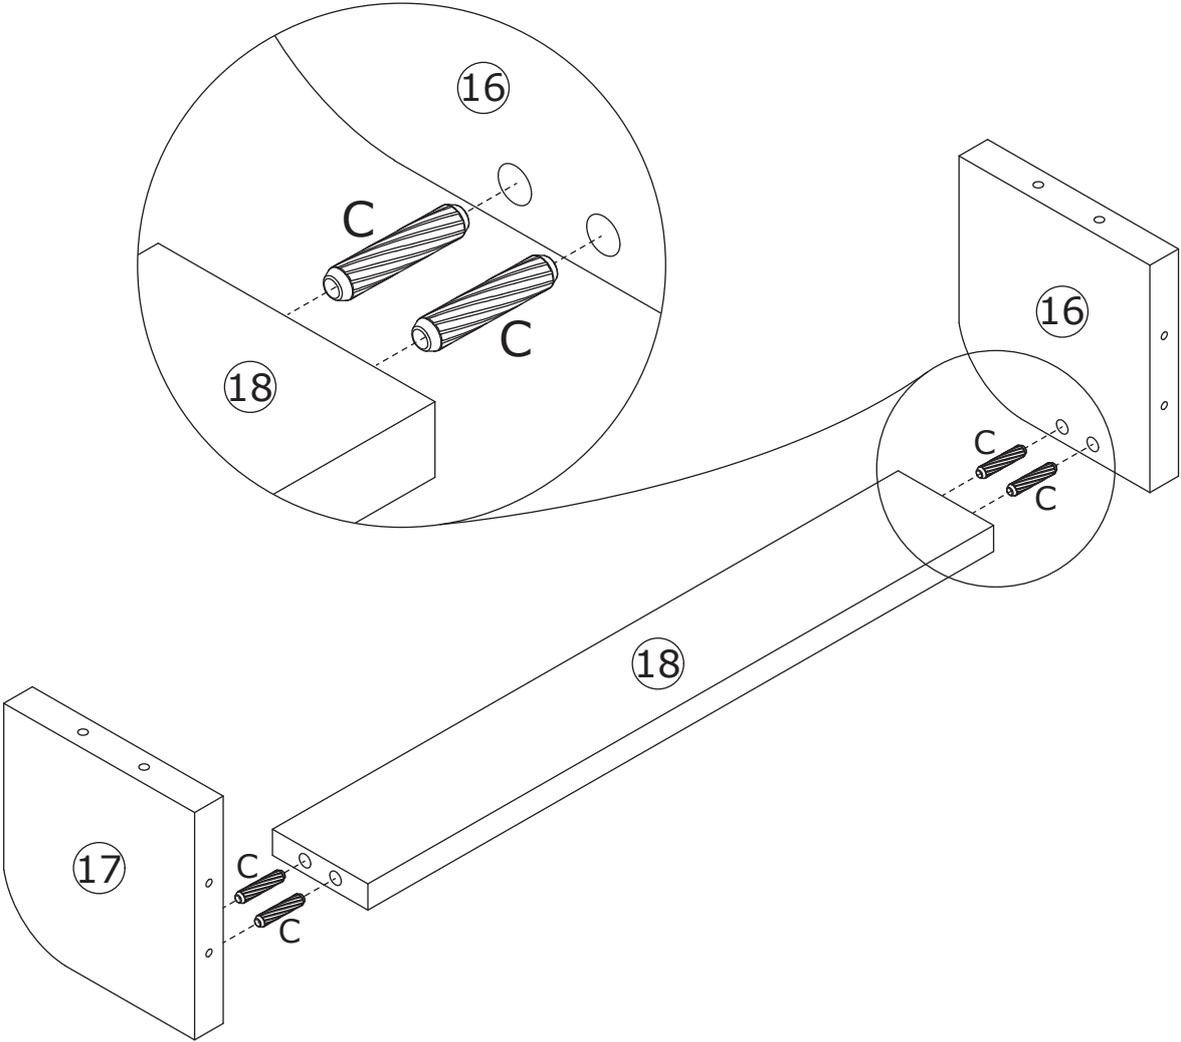

15

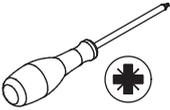


Fix board 19 to board 16 and 17 with screw(F) as shown.

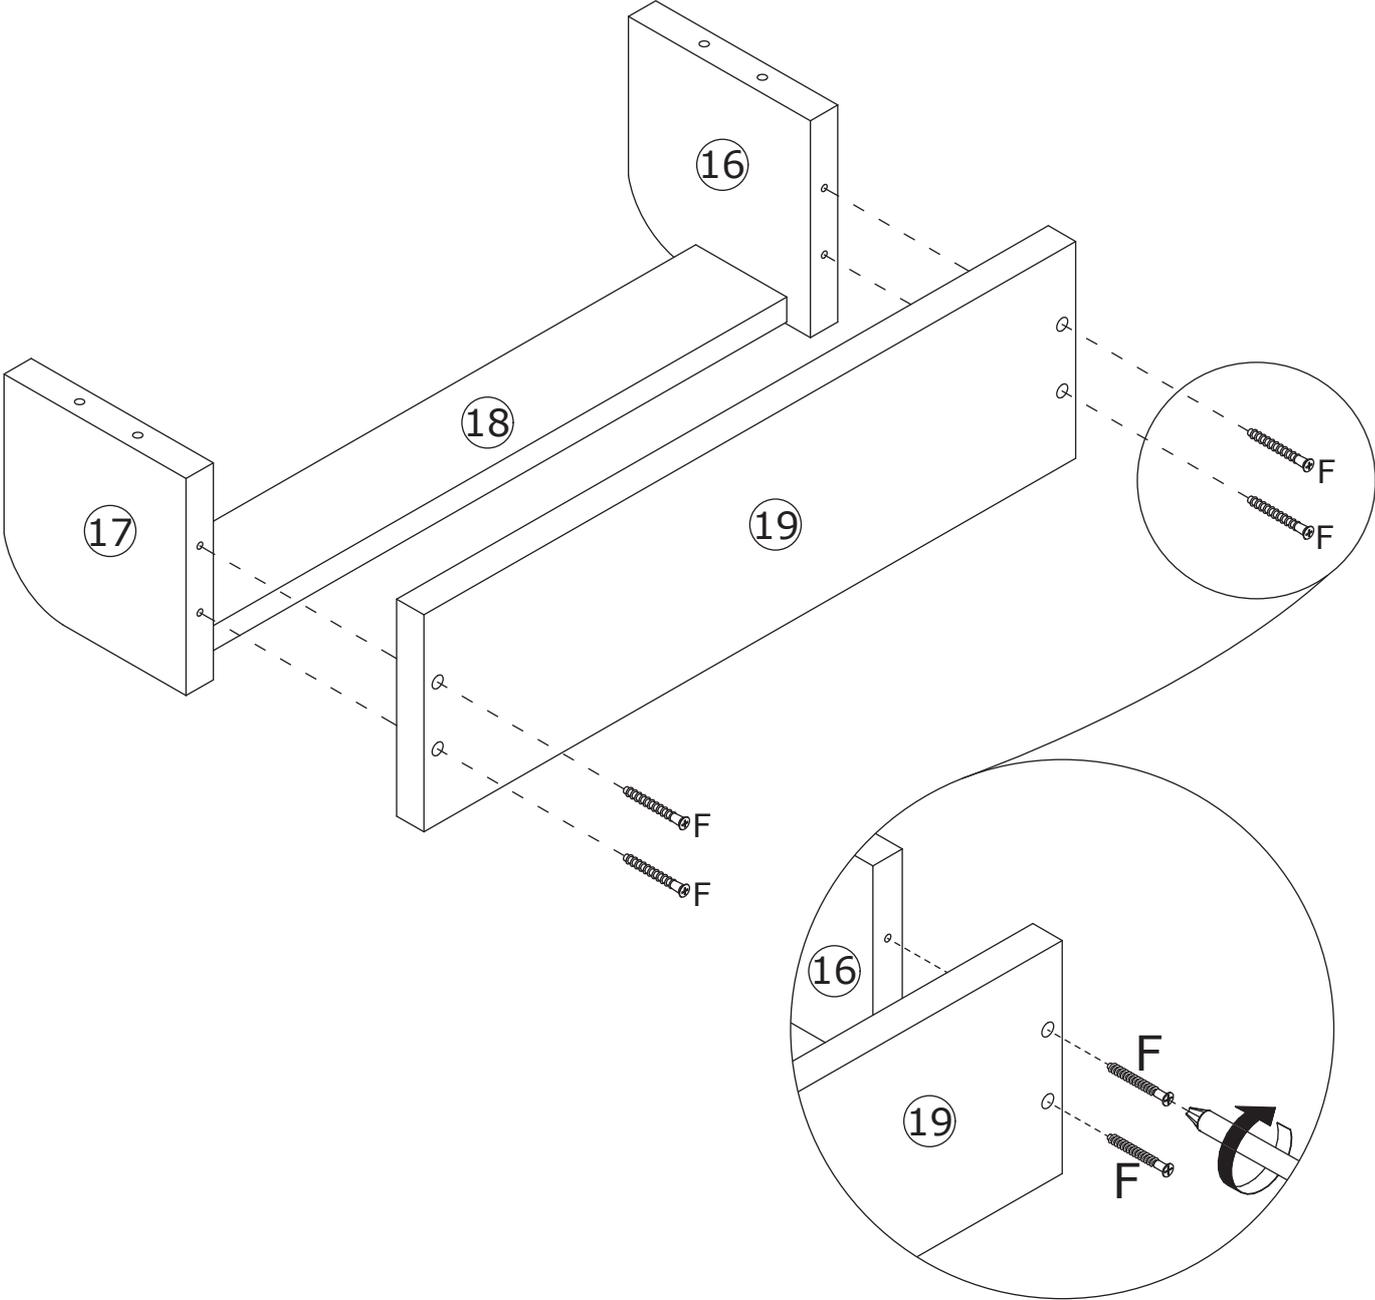


16


F x 4  
Ø5 x 40 mm

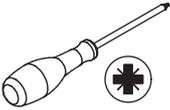



Fix the component to board 3 with screw(F) as shown.

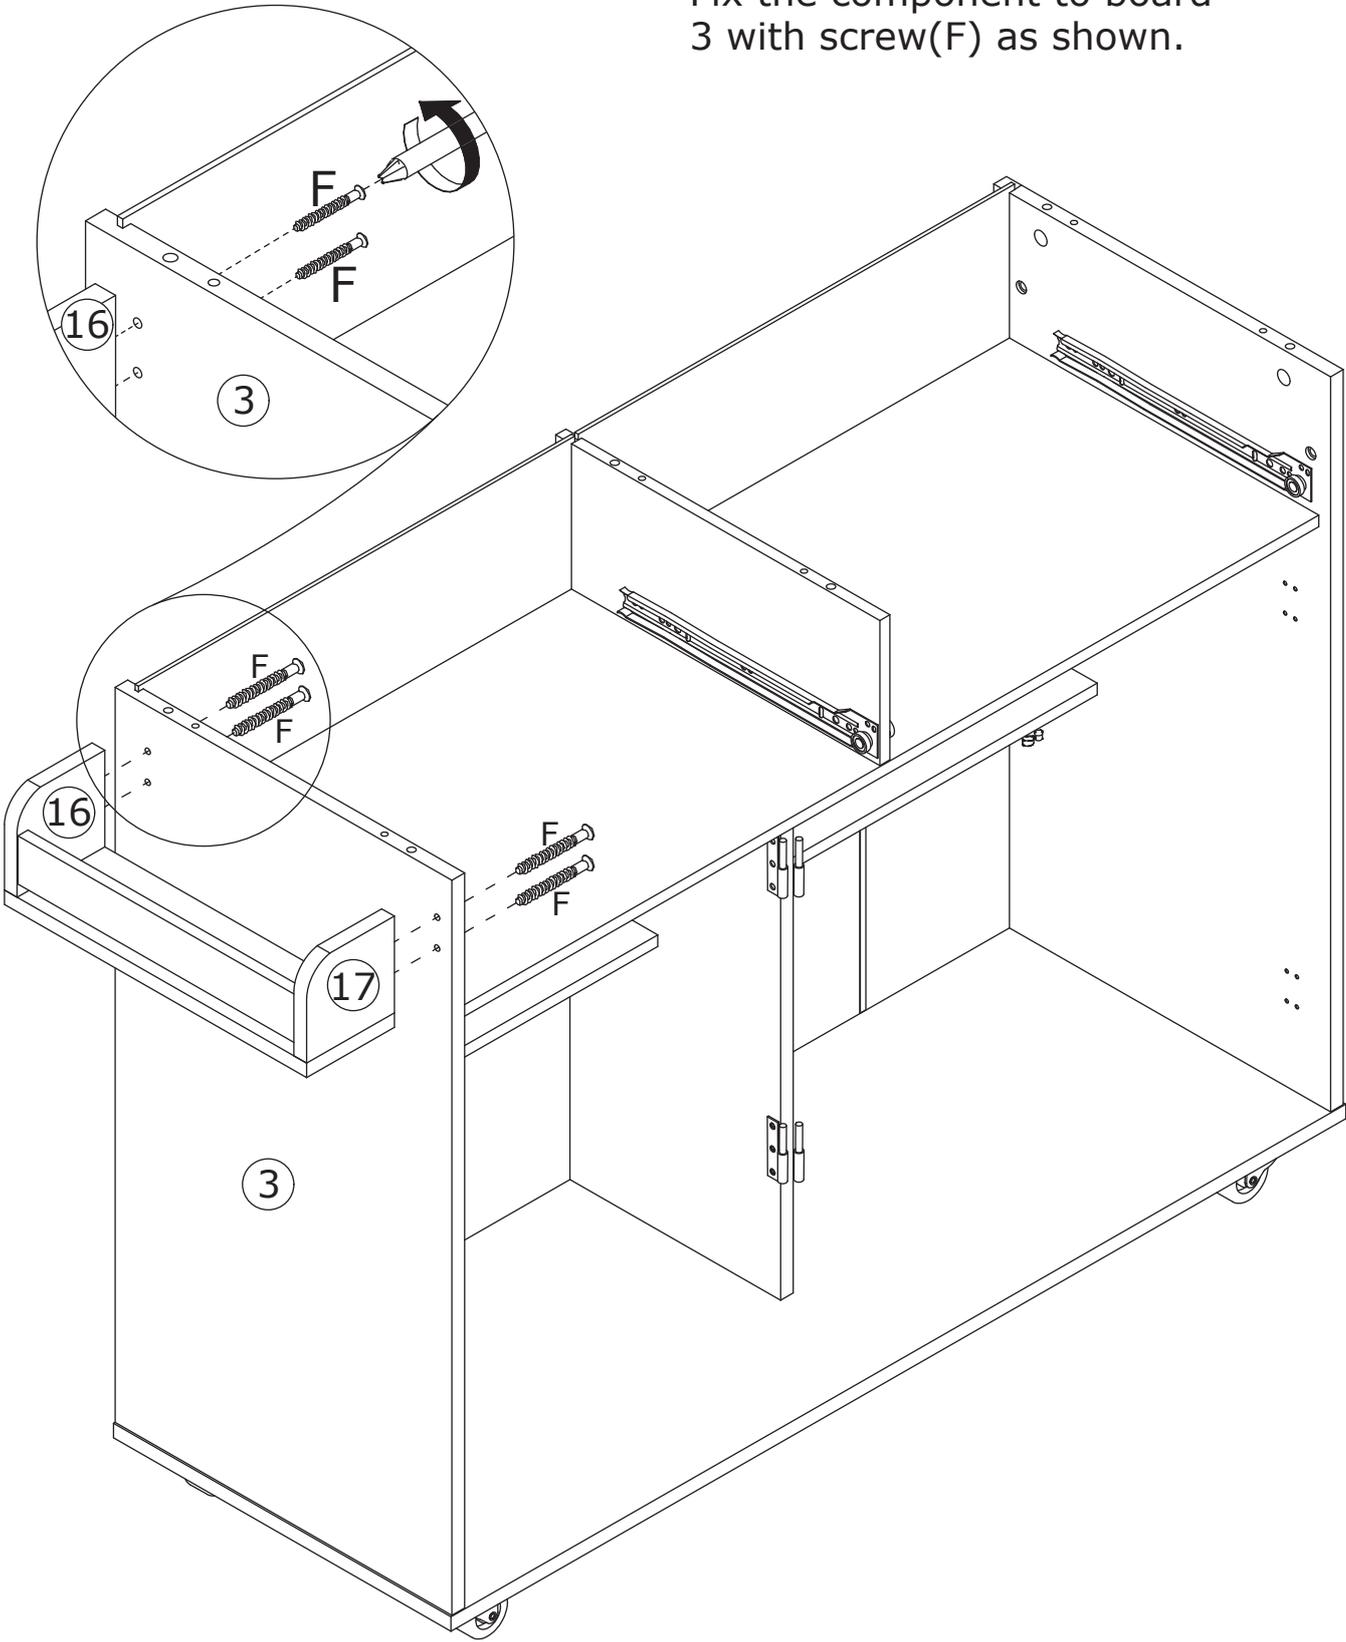


17

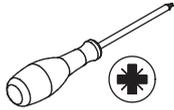


Add nut(G) into board 37 at first,  
fix board 37 to board 4 with  
screw(H) as shown.

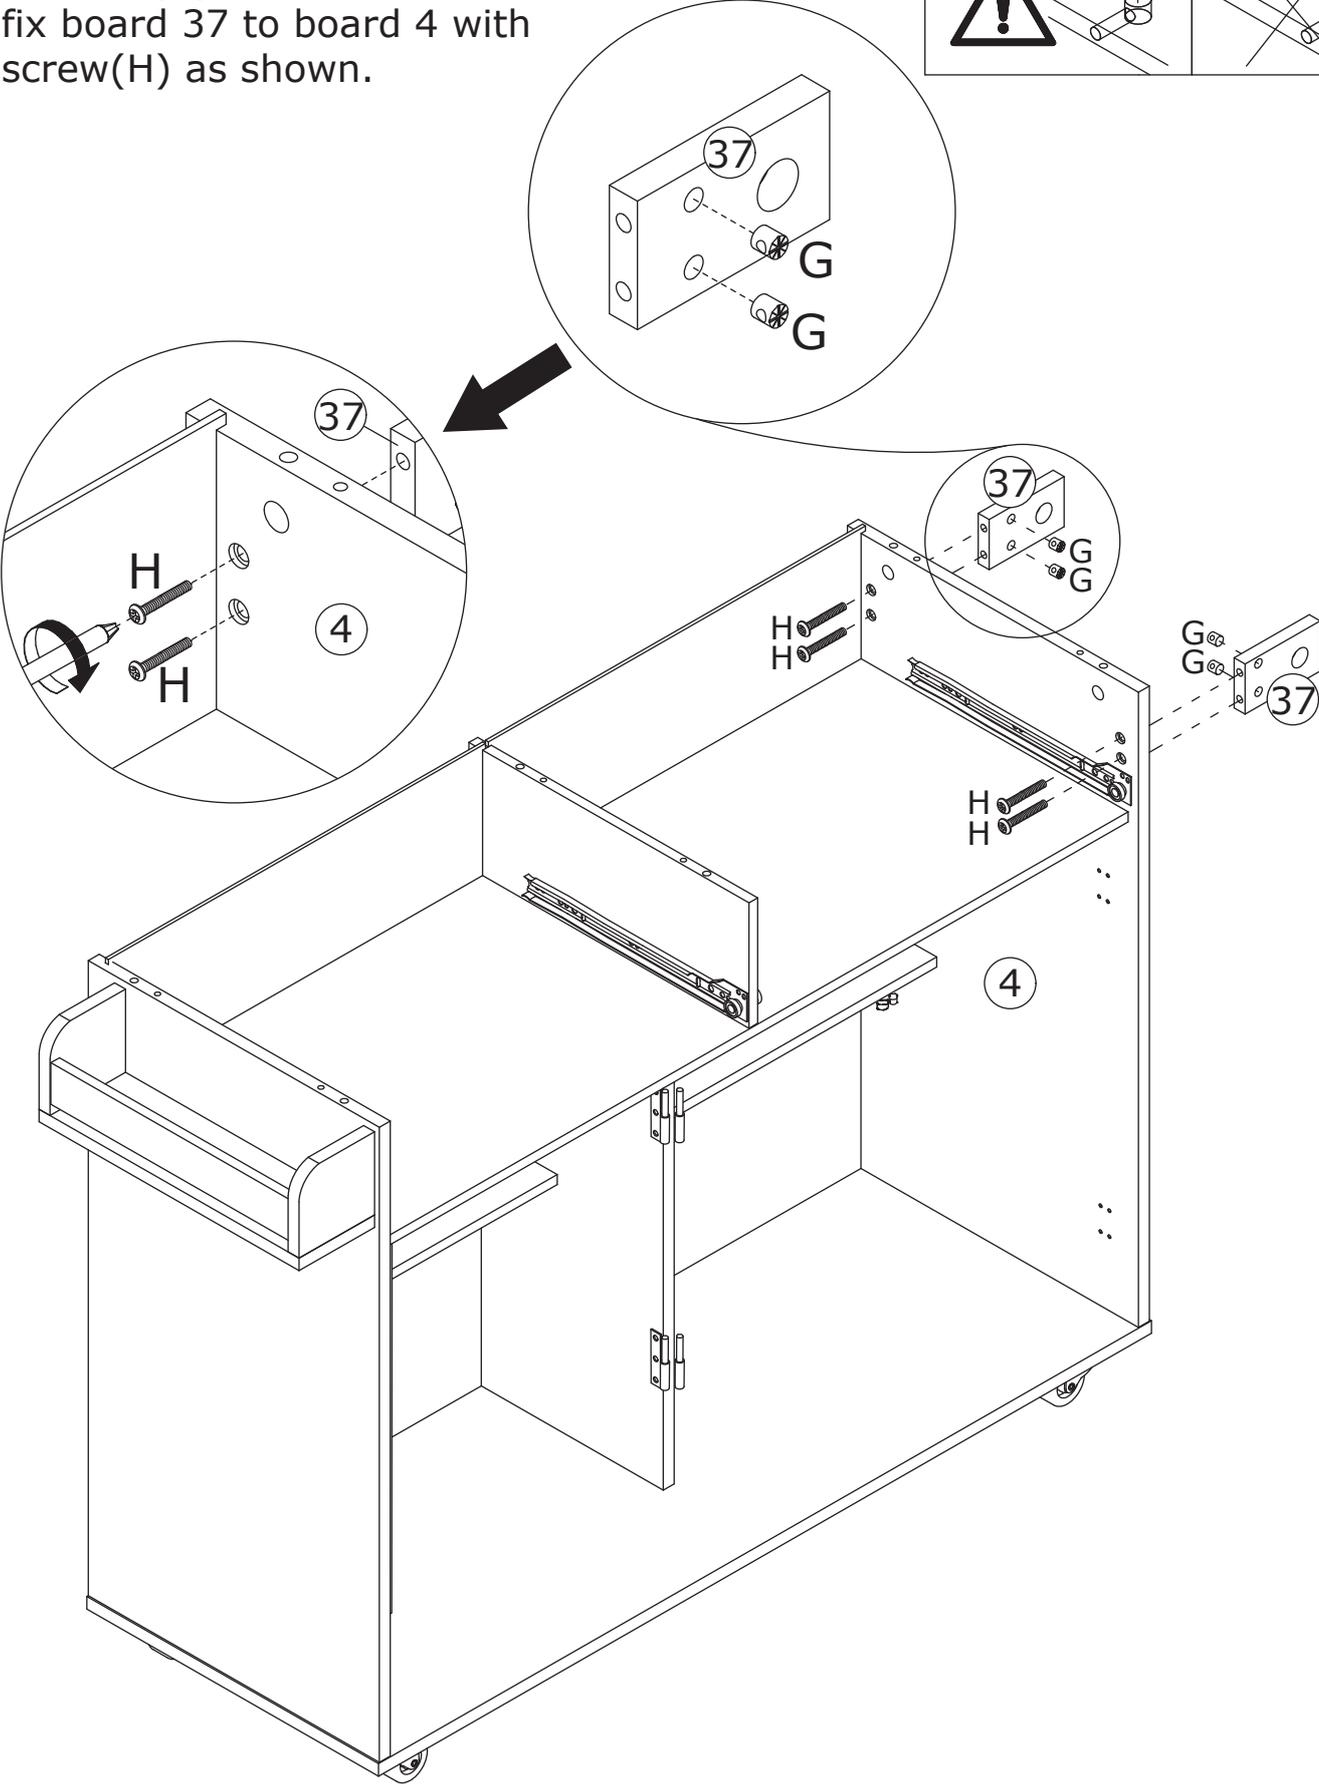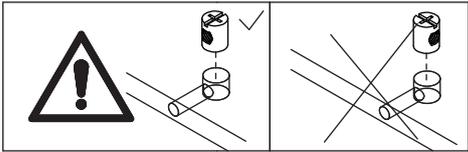


18
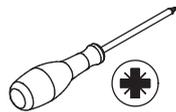
|  |  |   |
|--|--|---|
| D x 36<br><br>Ø 3.5 x 12 mm | P x 6<br> |  |
|--|--|---|




|   |  |  |
|---|--|--|
|  | D<br> | J<br> |
| Ø 3.5 x 12 mm    Ø 3.5 x 14 mm  |  |  |

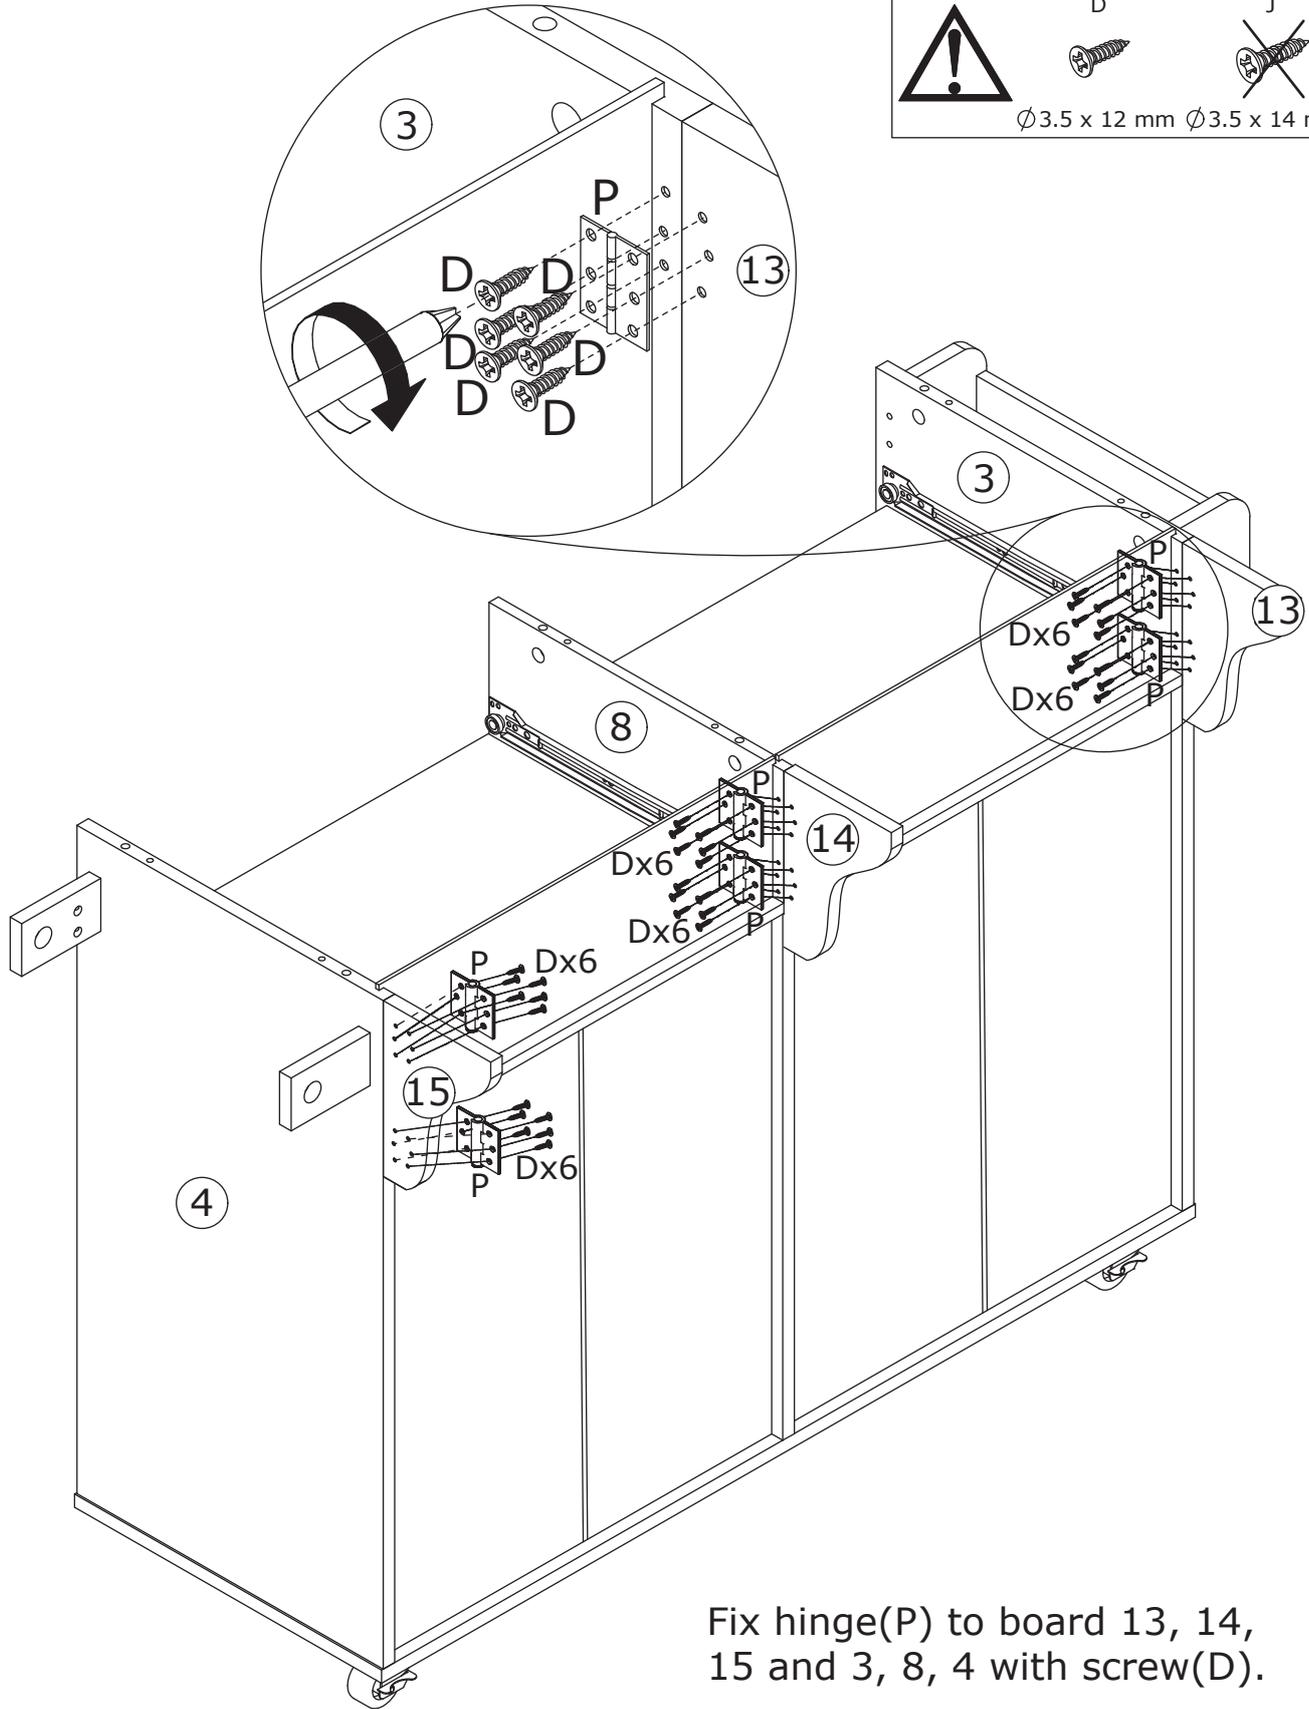

19




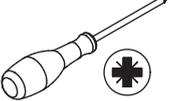
|   |  |   |
|---|--|---|
| <p>D x 8</p>  <p>Ø 3.5 x 12 mm</p> | <p>O x 2</p>  |   |
|---|--|---|

|   |   |   |
|---|---|---|
|  | <p>D</p>  <p>Ø 3.5 x 12 mm</p> | <p>J</p>  <p>Ø 3.5 x 14 mm</p> |
|---|---|---|

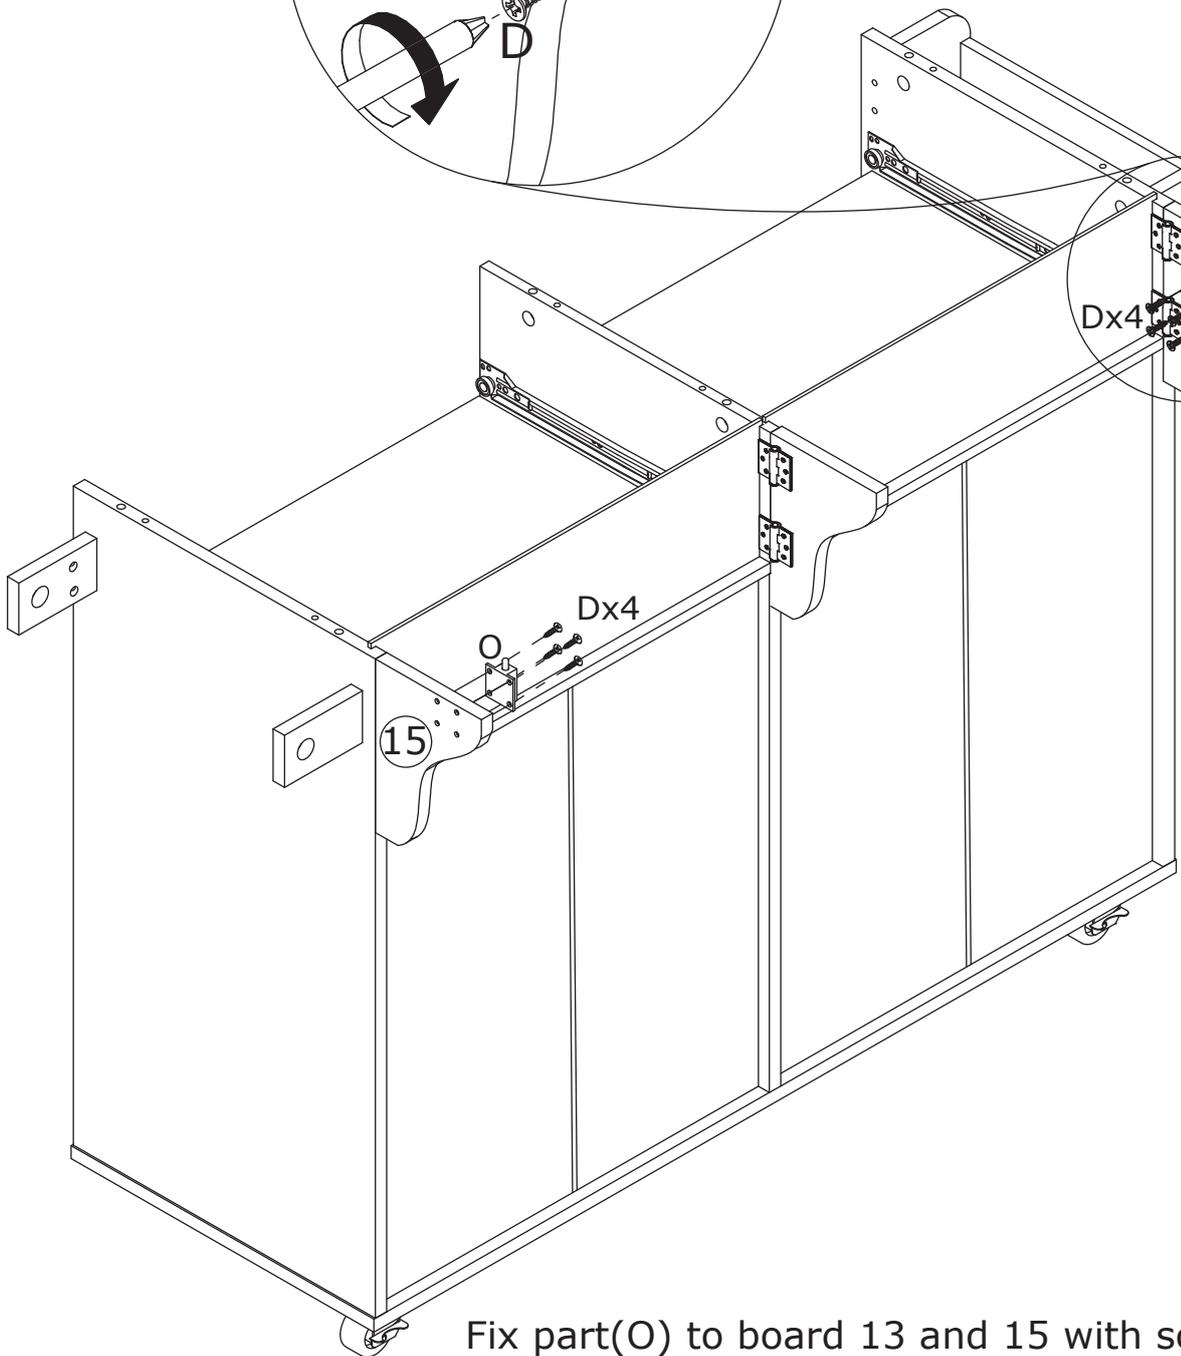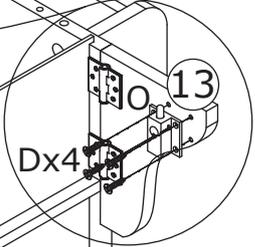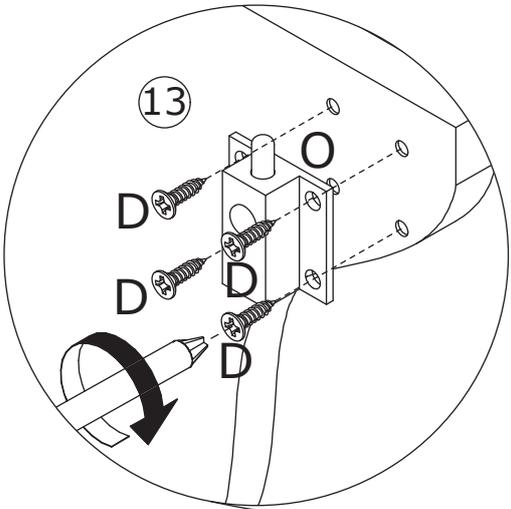







Fix part(O) to board 13 and 15 with screw(D).

20

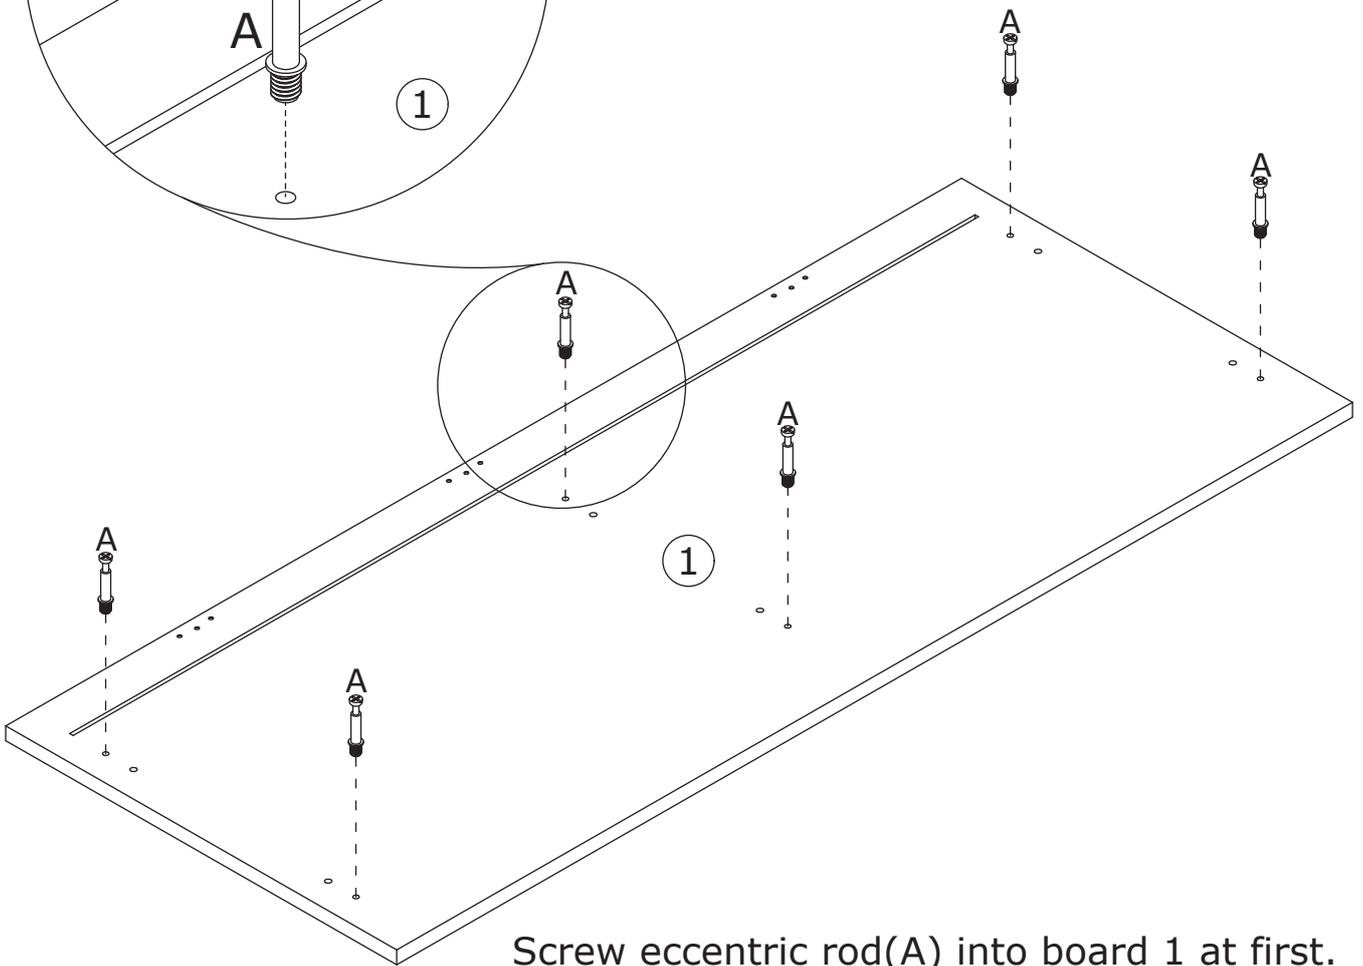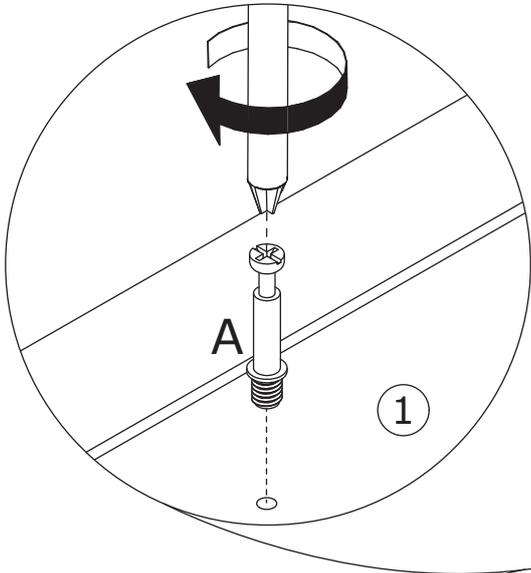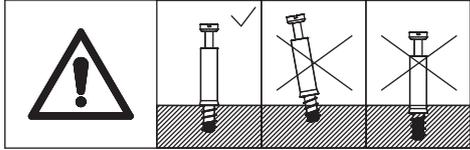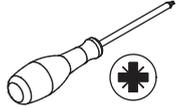



Screw eccentric rod(A) into board 1 at first.

21

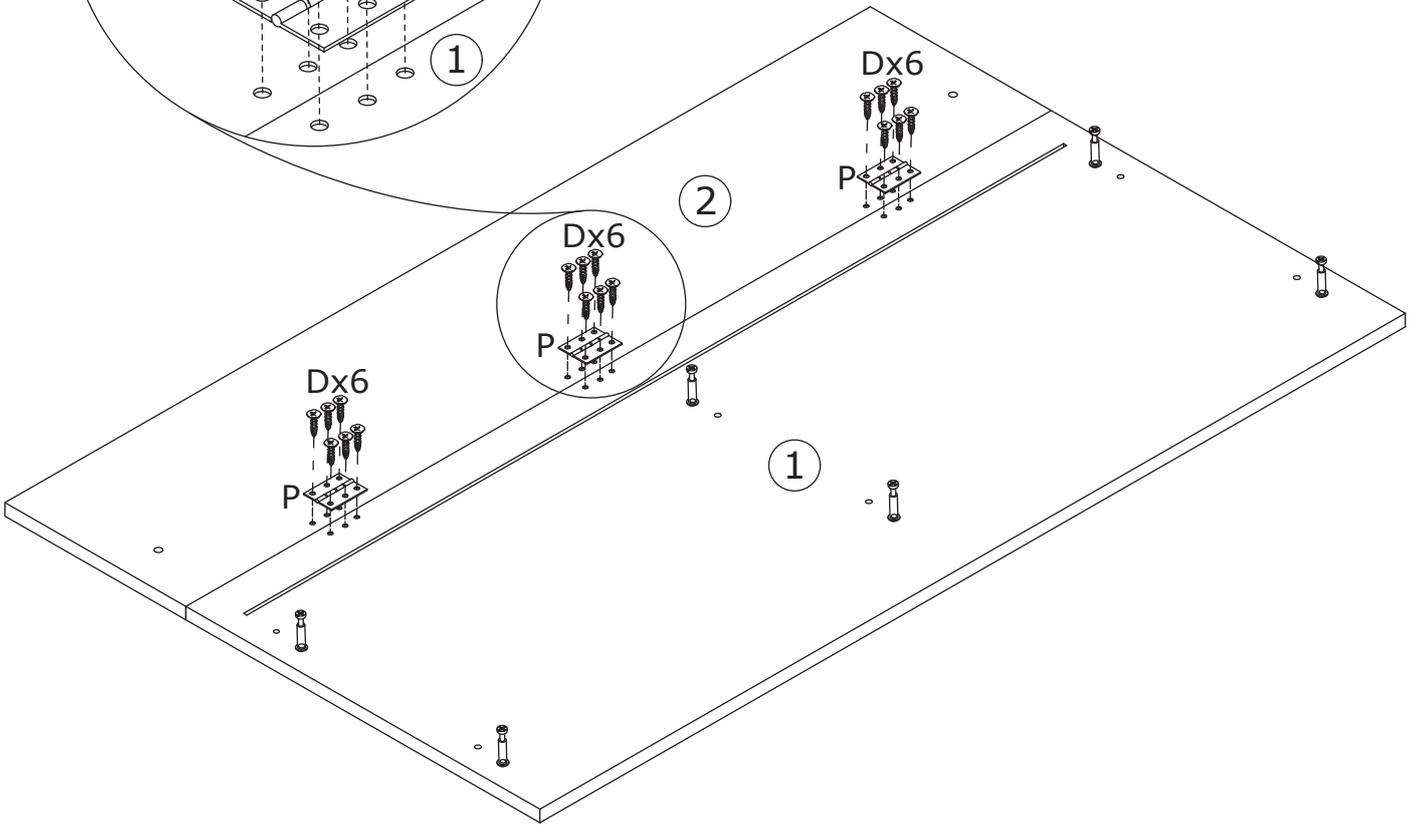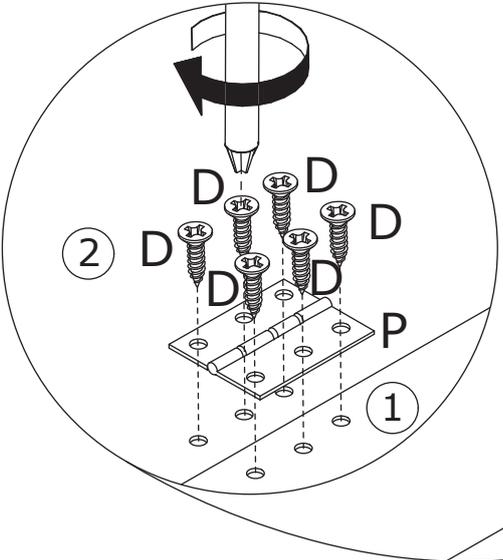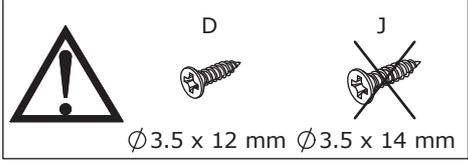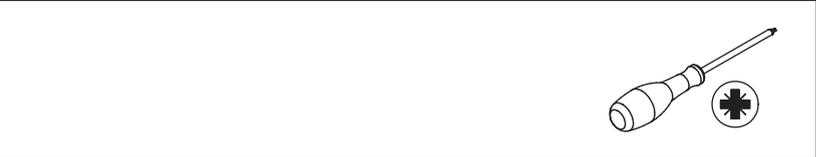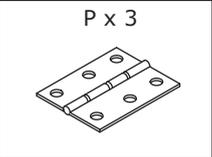
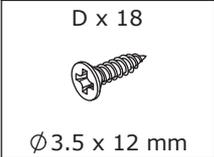


Fix hinge(P) to board 1 and 2 with screw(D).


22

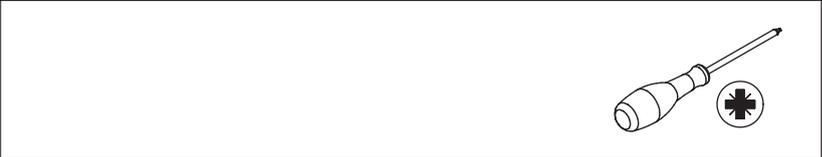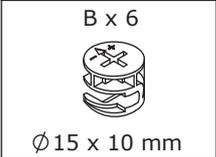

Cover board 1 to the top using wooden dowel(C), add cam lock(B) into board 3,8,4 and turn clockwise to tighten as shown.

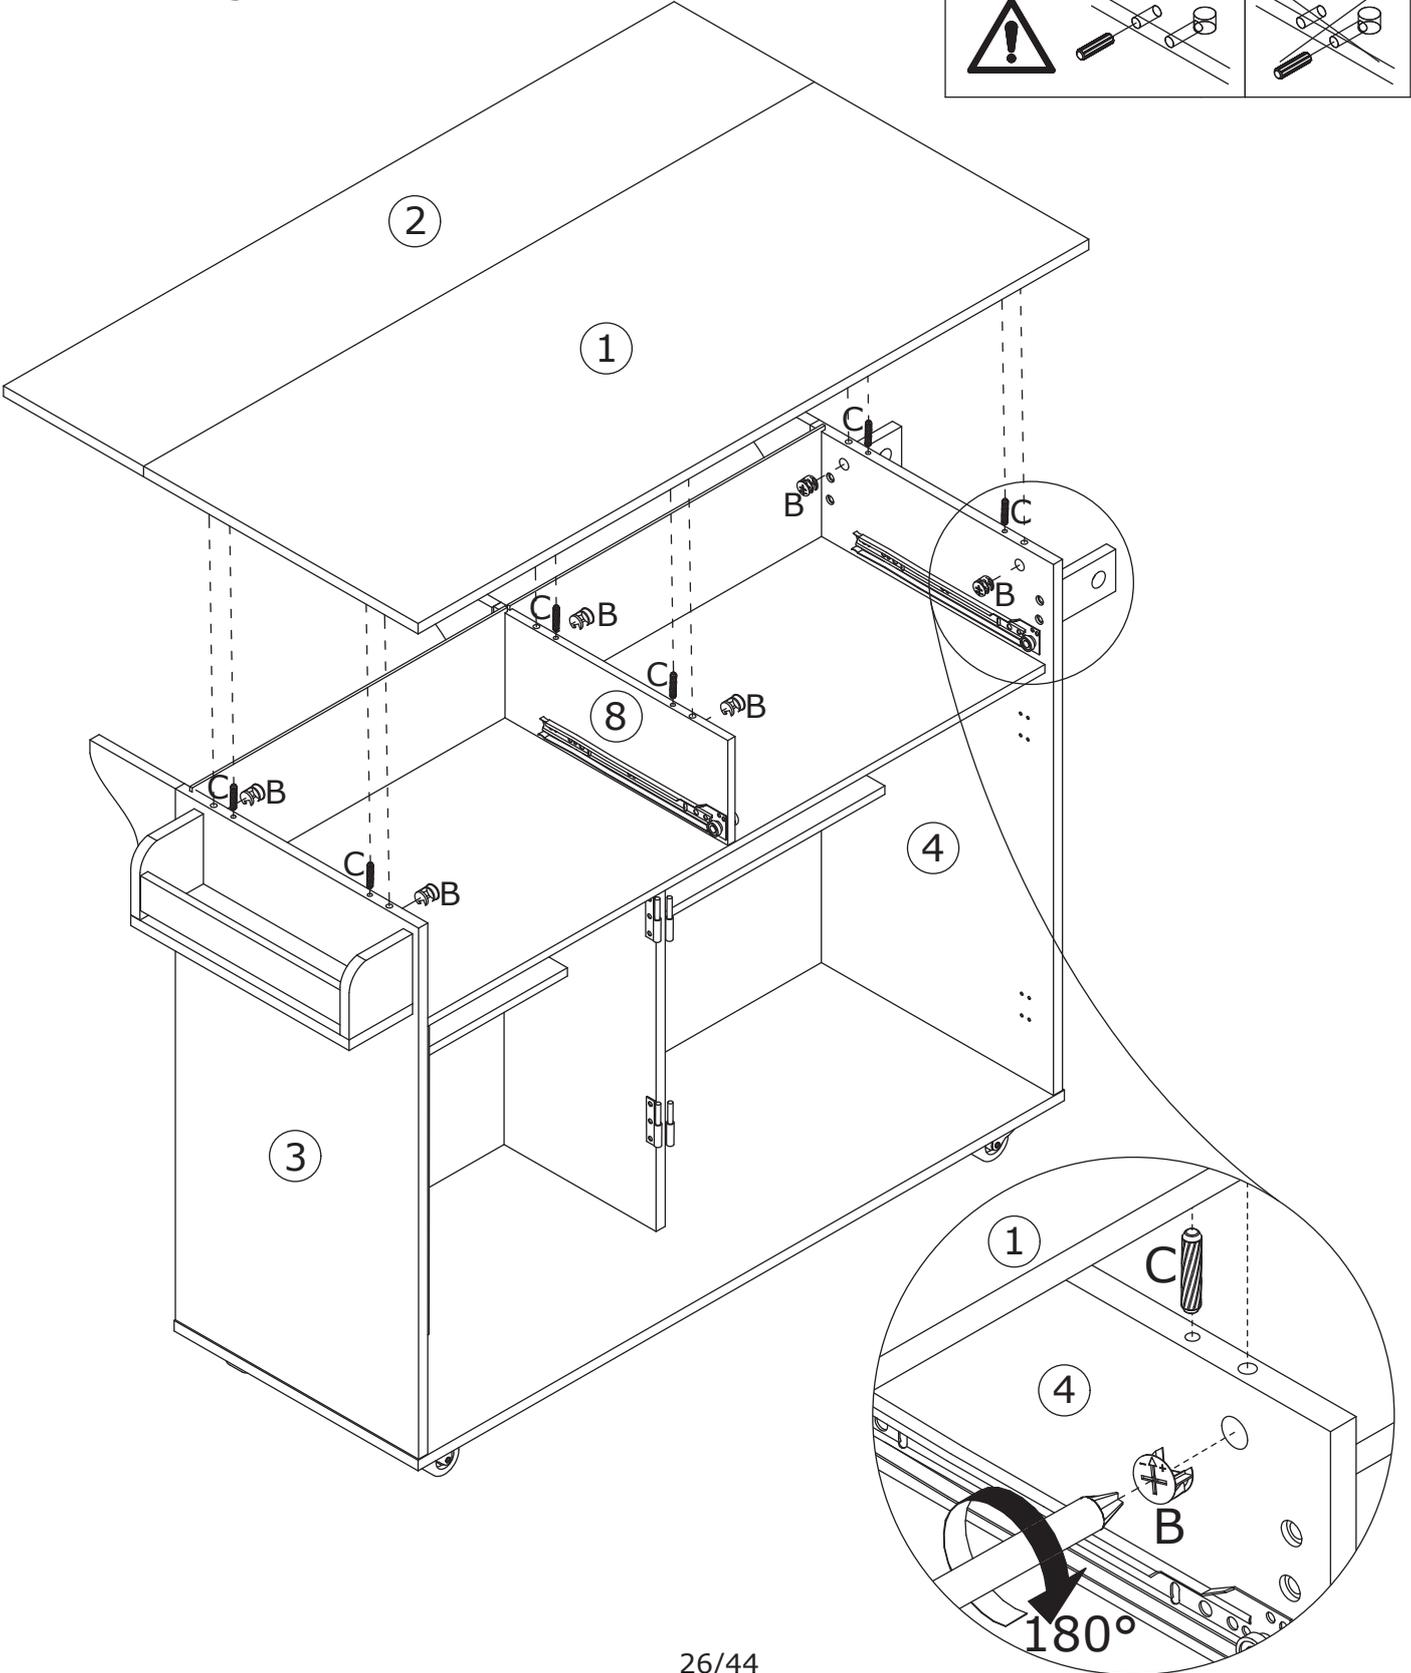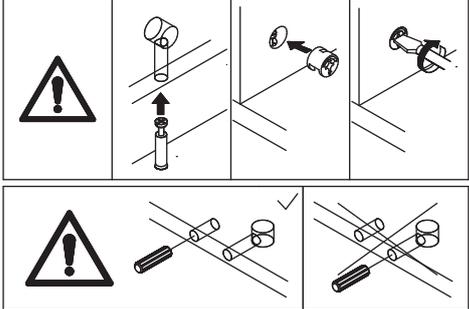


23
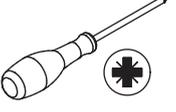
|  |   |   |
|--|---|---|
| J x 32<br><br>Ø 3.5 x 14 mm | Q x 32<br> |  |
|--|---|---|



|   |   |  |
|---|---|--|
|  | <del>D</del><br> | J<br> |
|   | Ø 3.5 x 12 mm   | Ø 3.5 x 14 mm  |

Insert buckle(Q) into back slots and fix with screw(J) as shown.

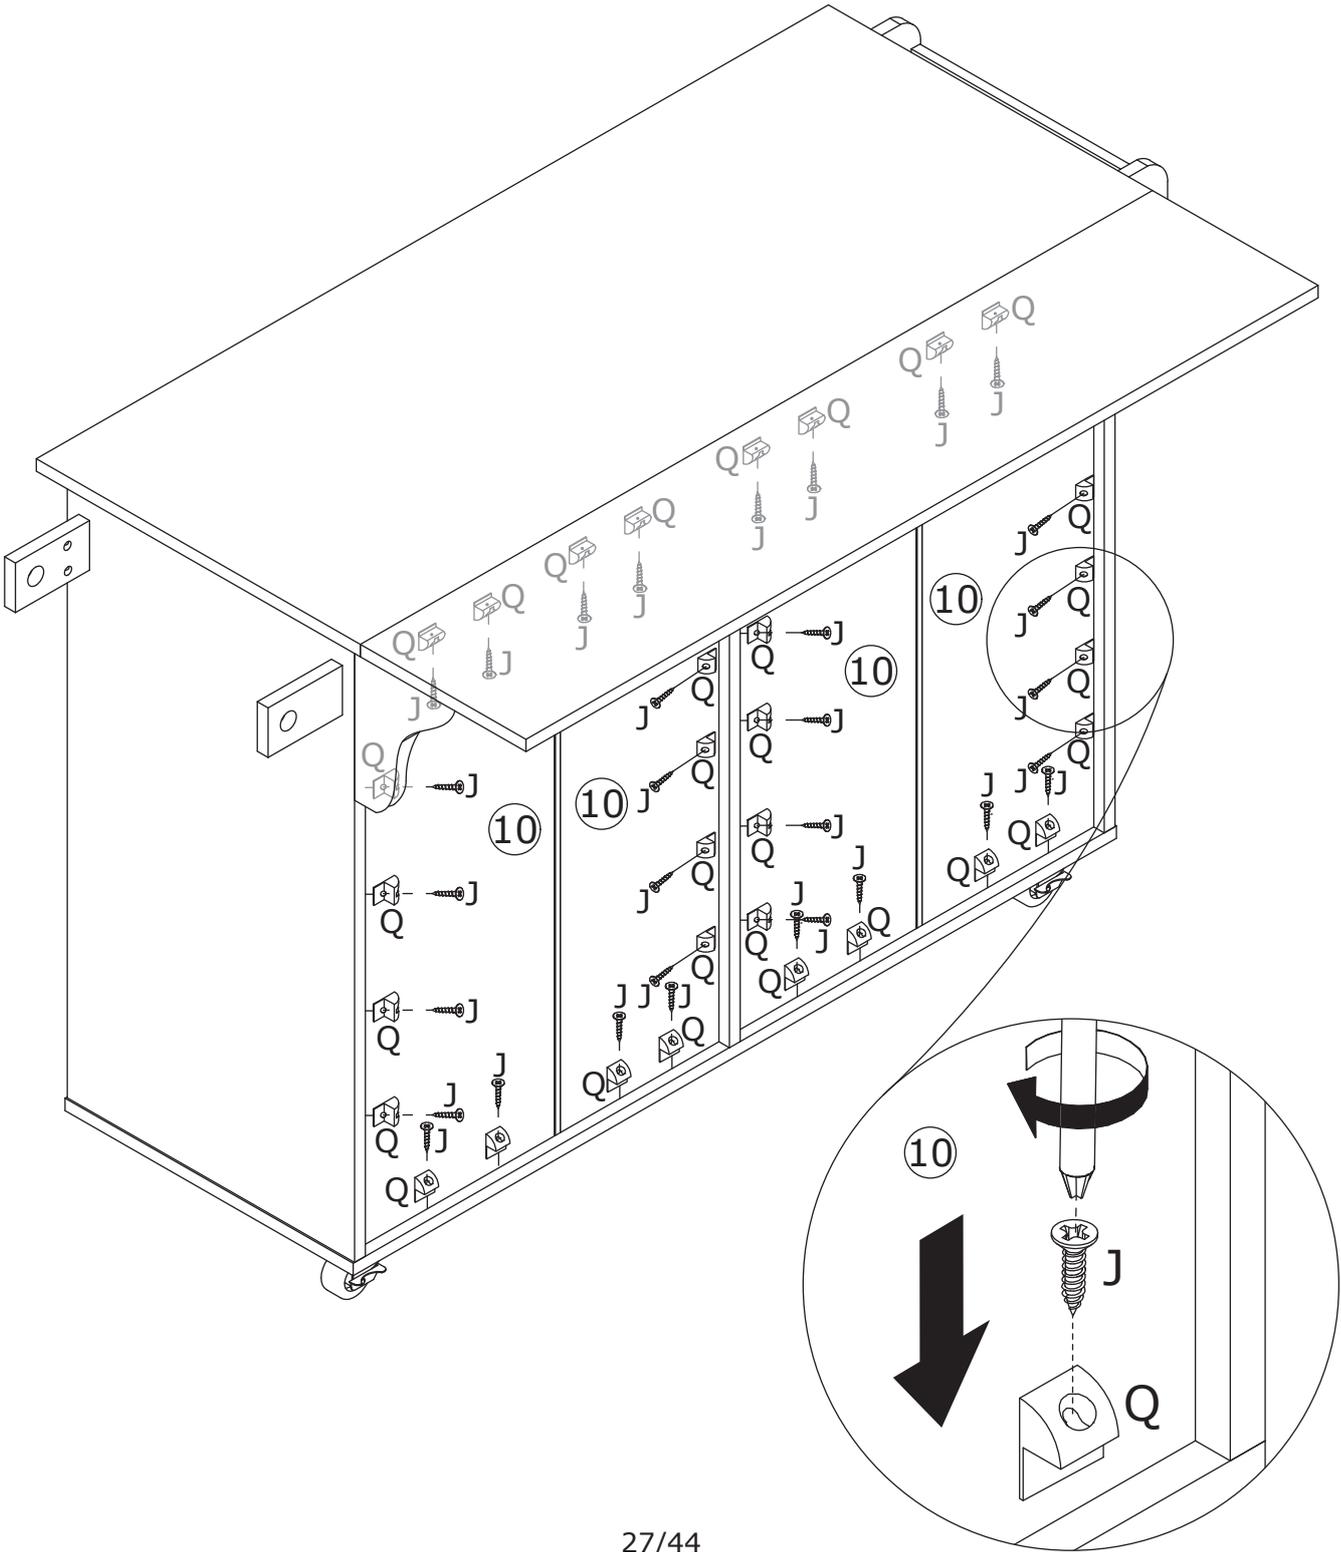

24

F x 8  
Ø5 x 40 mm

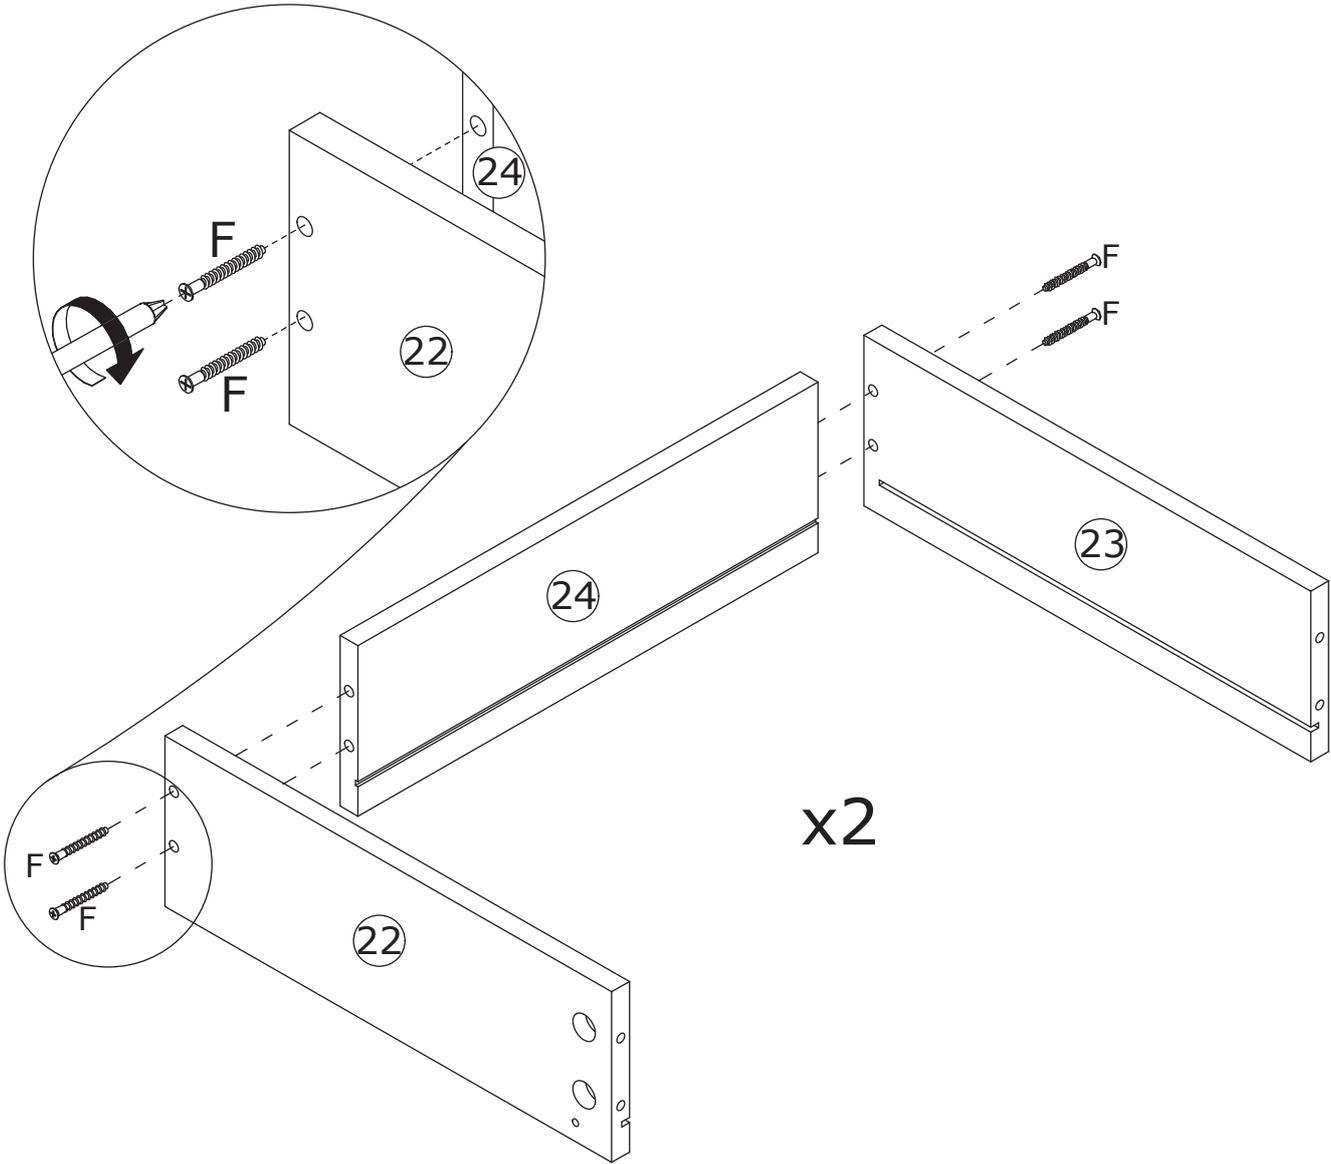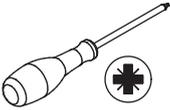


Fix board 24 to board 22 and 23 with screw(F) as shown.








25




Insert bottom board 25 along available grooves as shown.

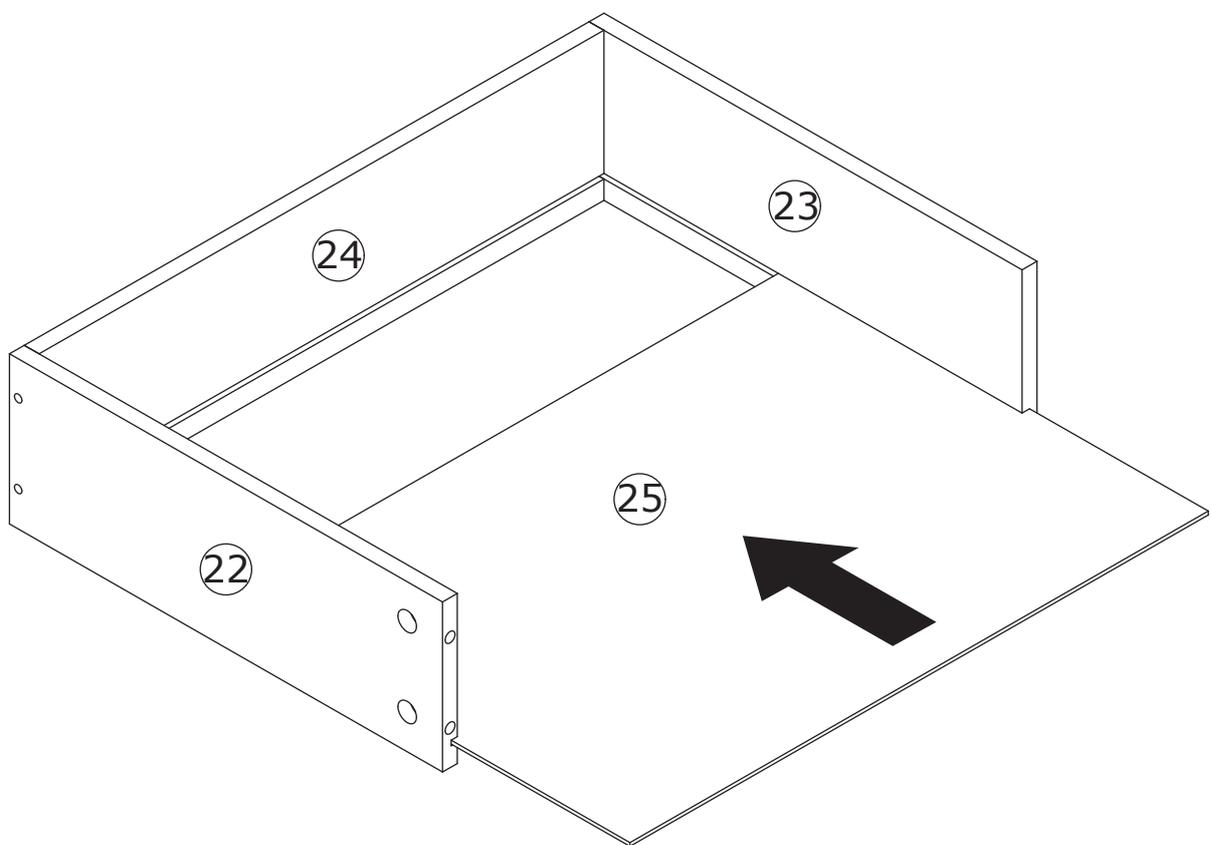

26

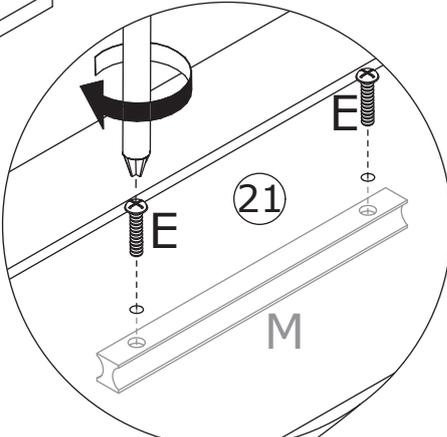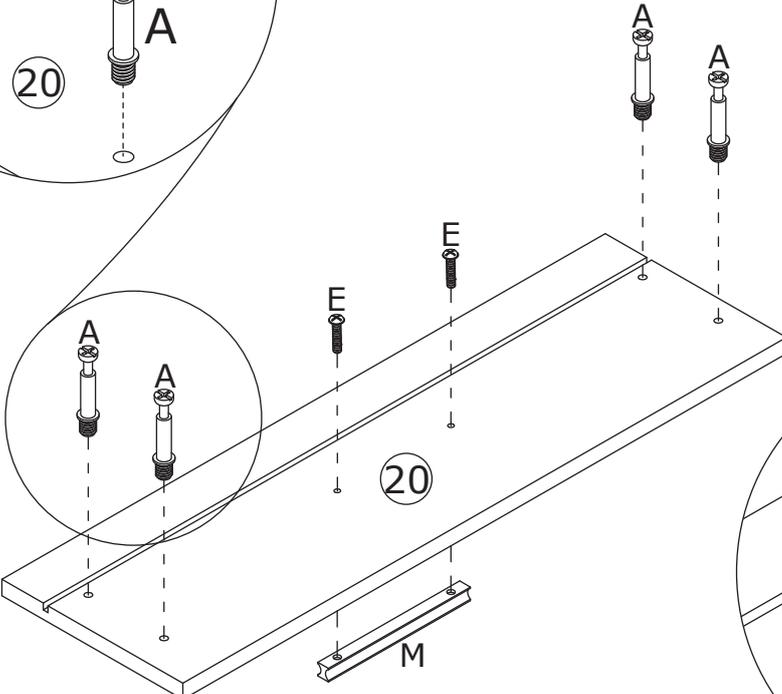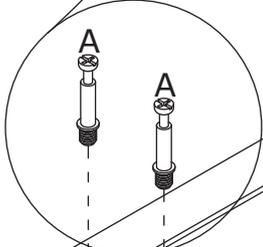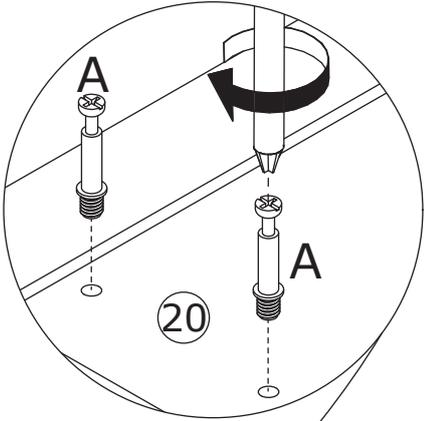
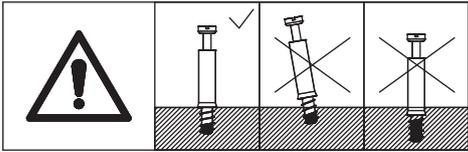
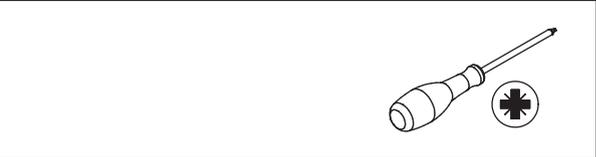
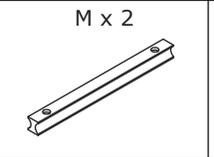


Screw eccentric rod(A) into board 20 and 21 at first.  
Fix handle(M) with screw(H) as shown.

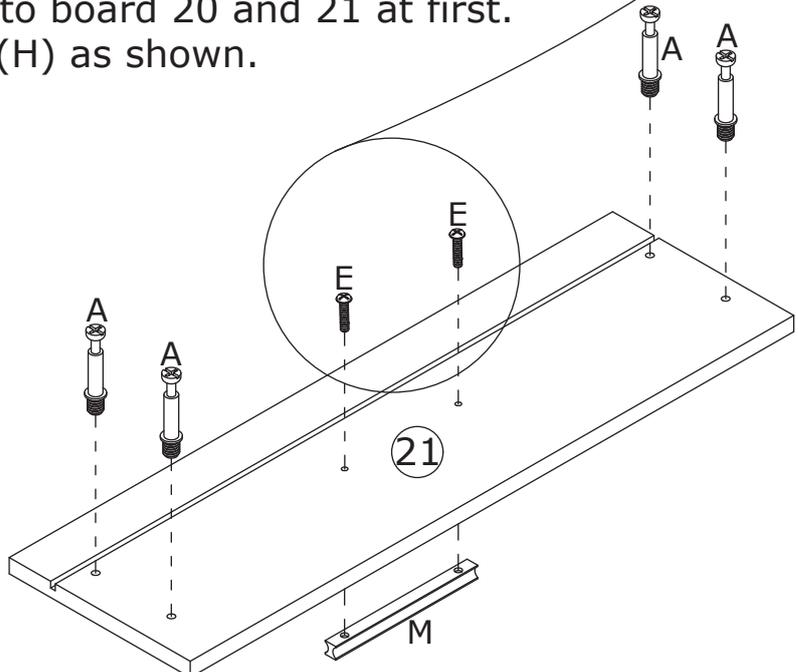


27



B x 8  
Ø 15 x 10 mm

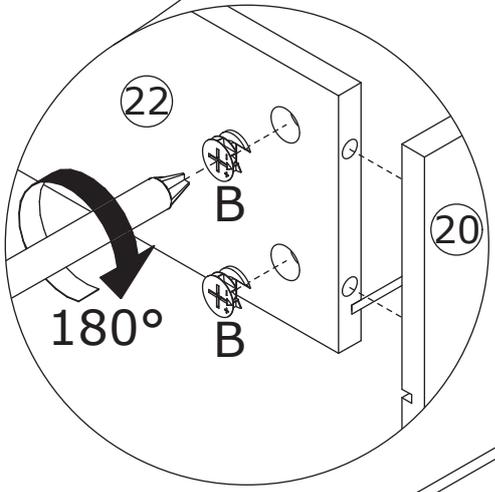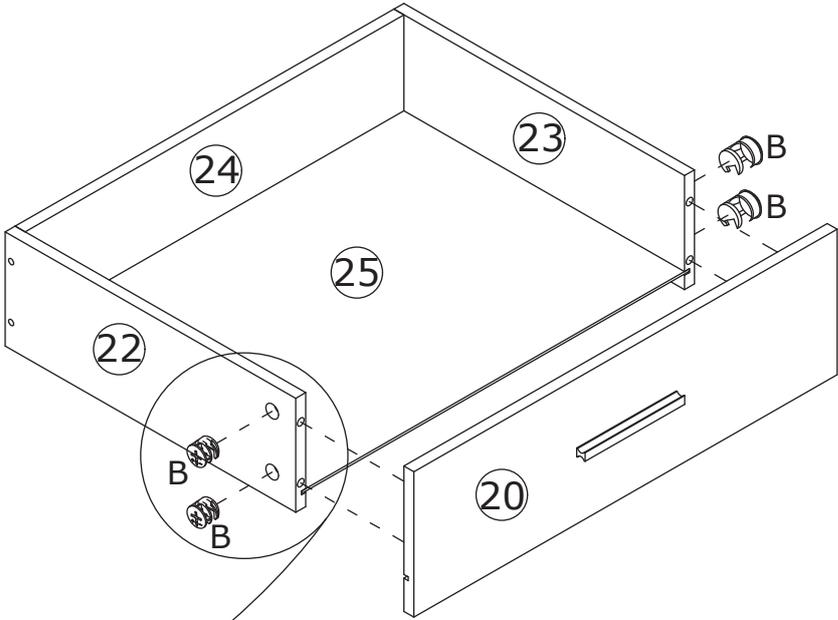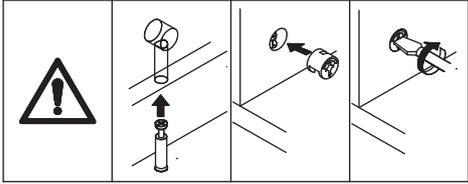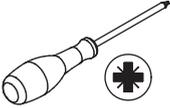



Attach board 20 and 21 to board 22 and 23 respectively, add cam lock(B) into and turn clockwise to tighten as shown.

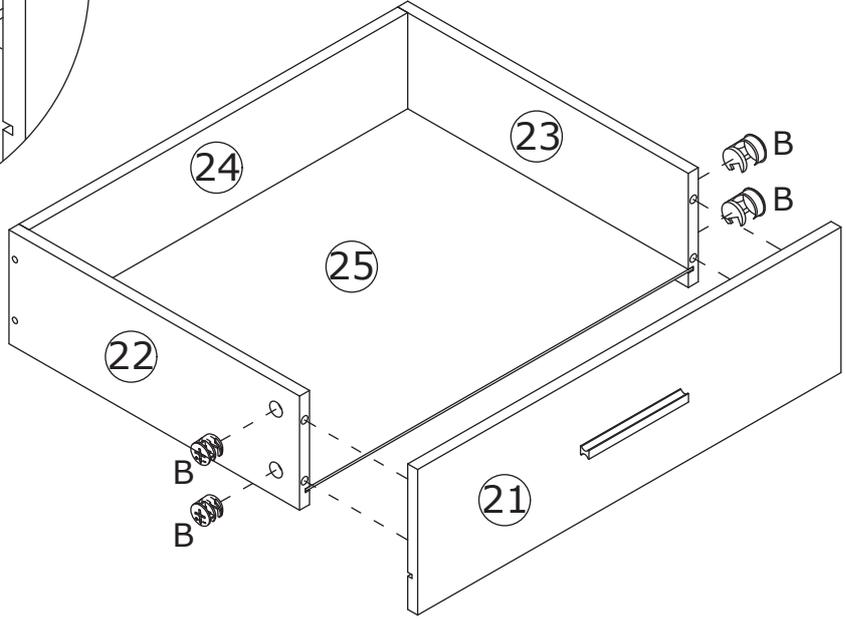

28

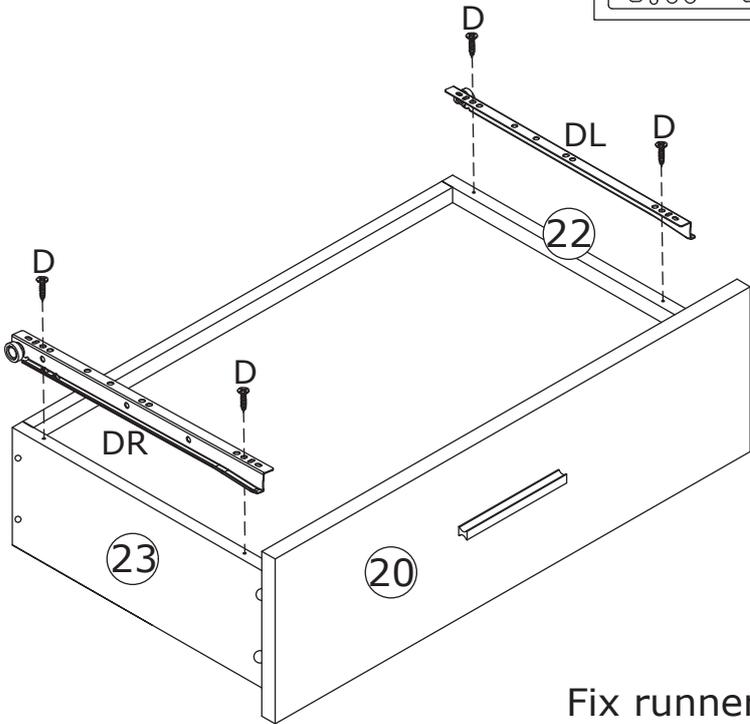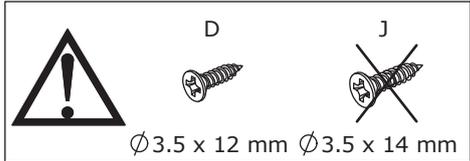


Fix runner(DL) and (DR) to board 22 and 23 with screw(D) as shown.

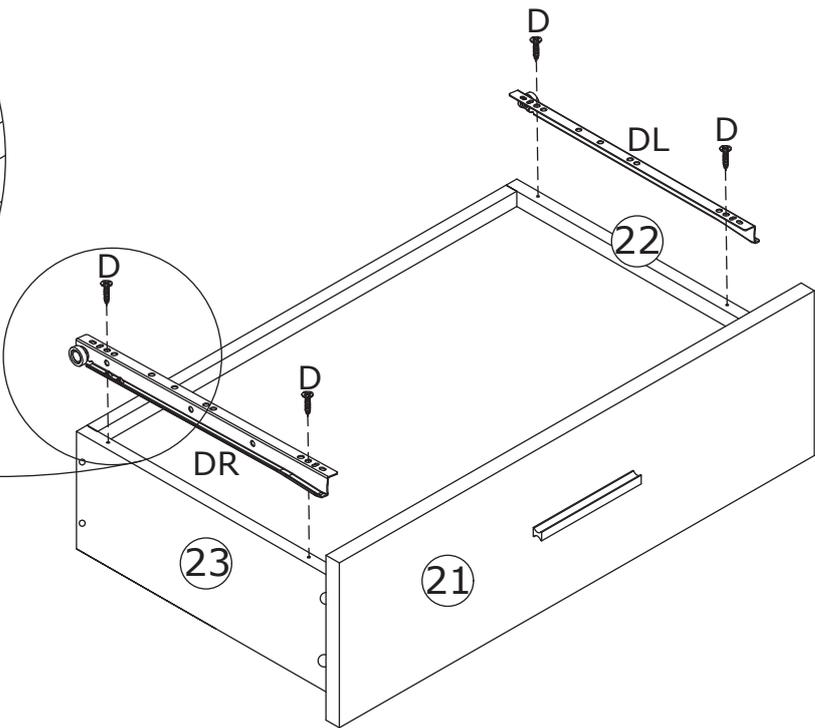
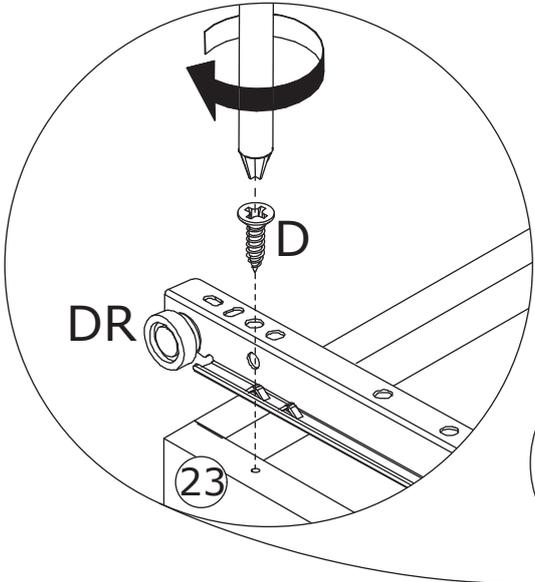


29

Insert drawers in.

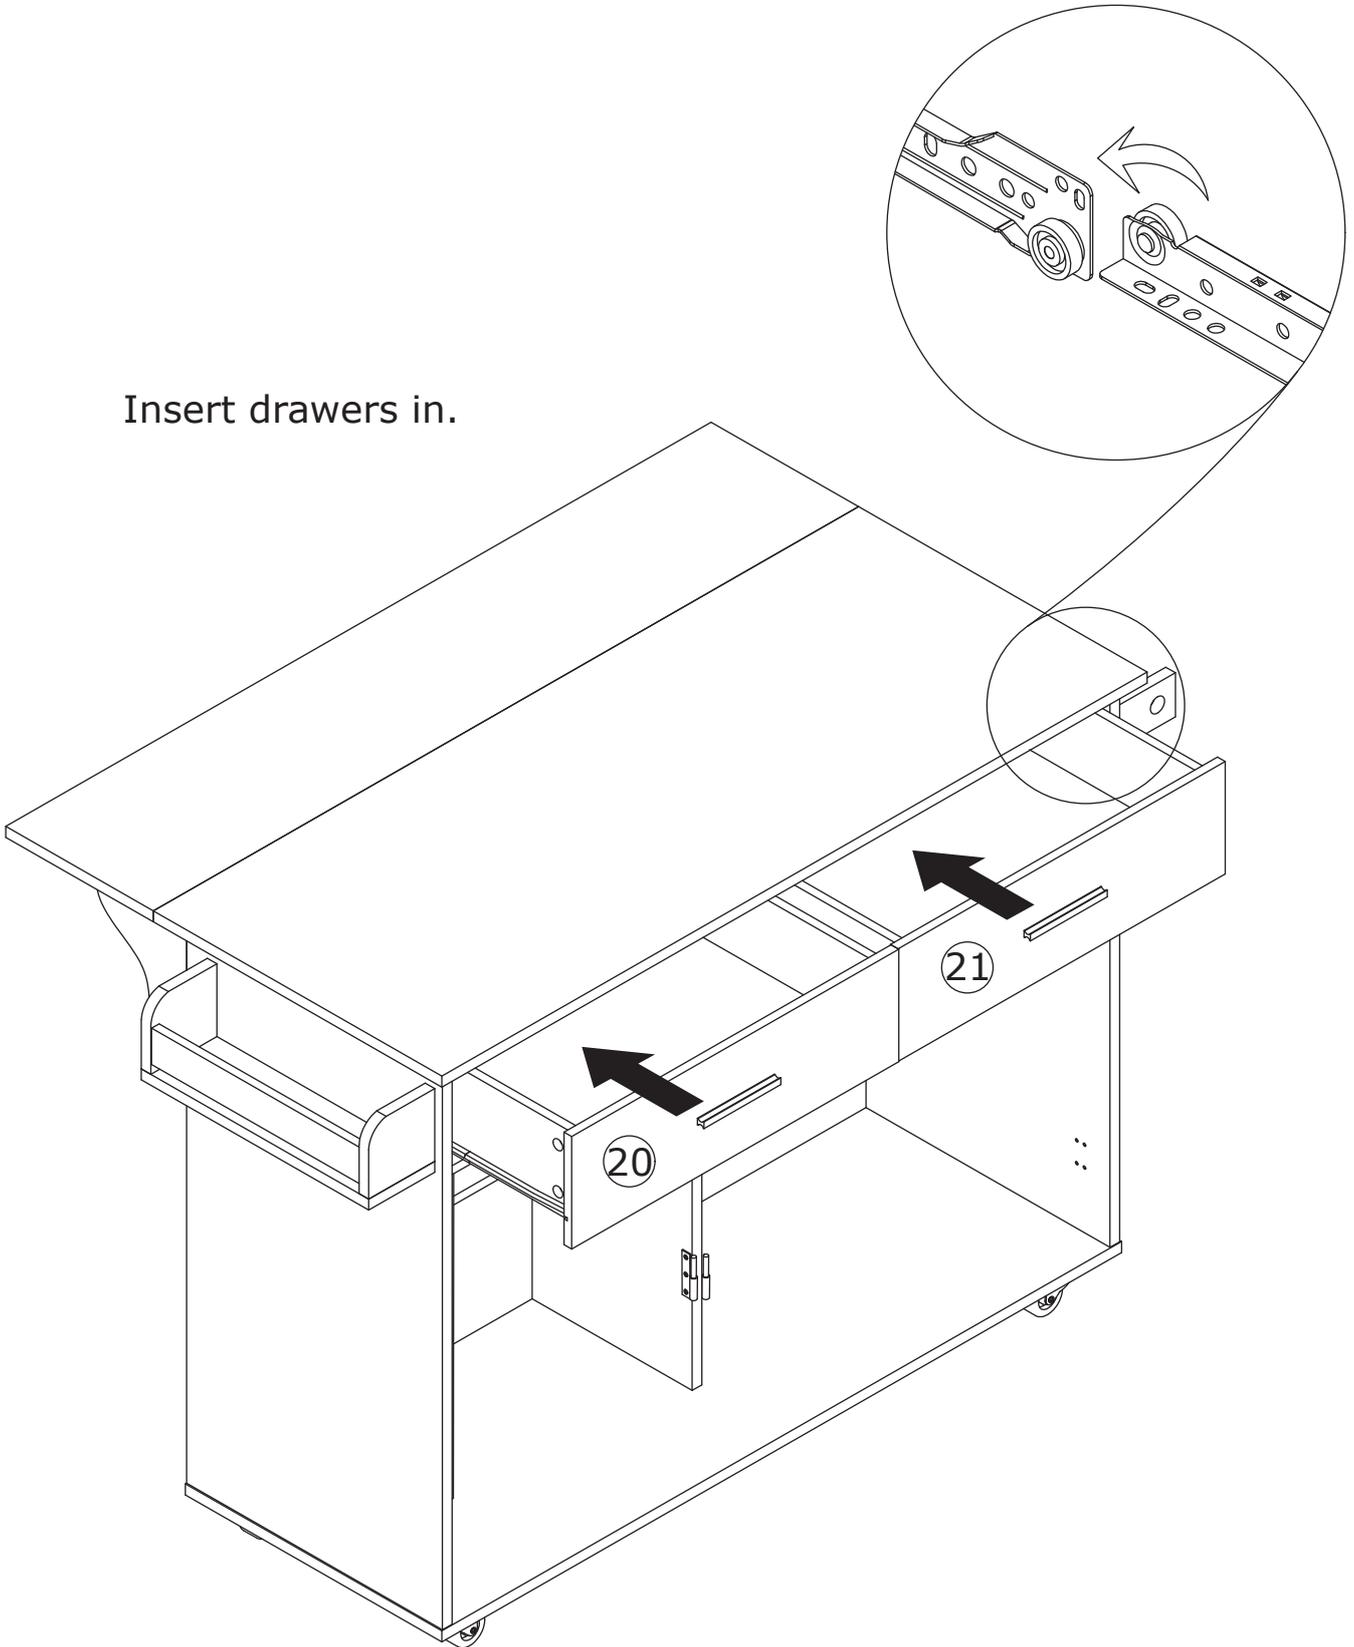




30
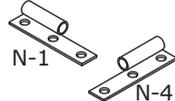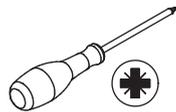
|   |   |   |   |
|---|---|---|---|
| <p>A x 24</p>  <p>Ø6 x 35 mm</p> | <p>D x 12</p>  <p>Ø3.5 x 12 mm</p> | <p>N x 2</p>  <p>N-1 N-4</p> |  |
|---|---|---|---|



Screw eccentric rod(A) into board 27, 28 and 29 at first.

Flip board 28 to back, fix hinge (N-4) with screw(D) as shown.

Flip board 29 to back, fix hinge (N-1) with screw(D) as shown.

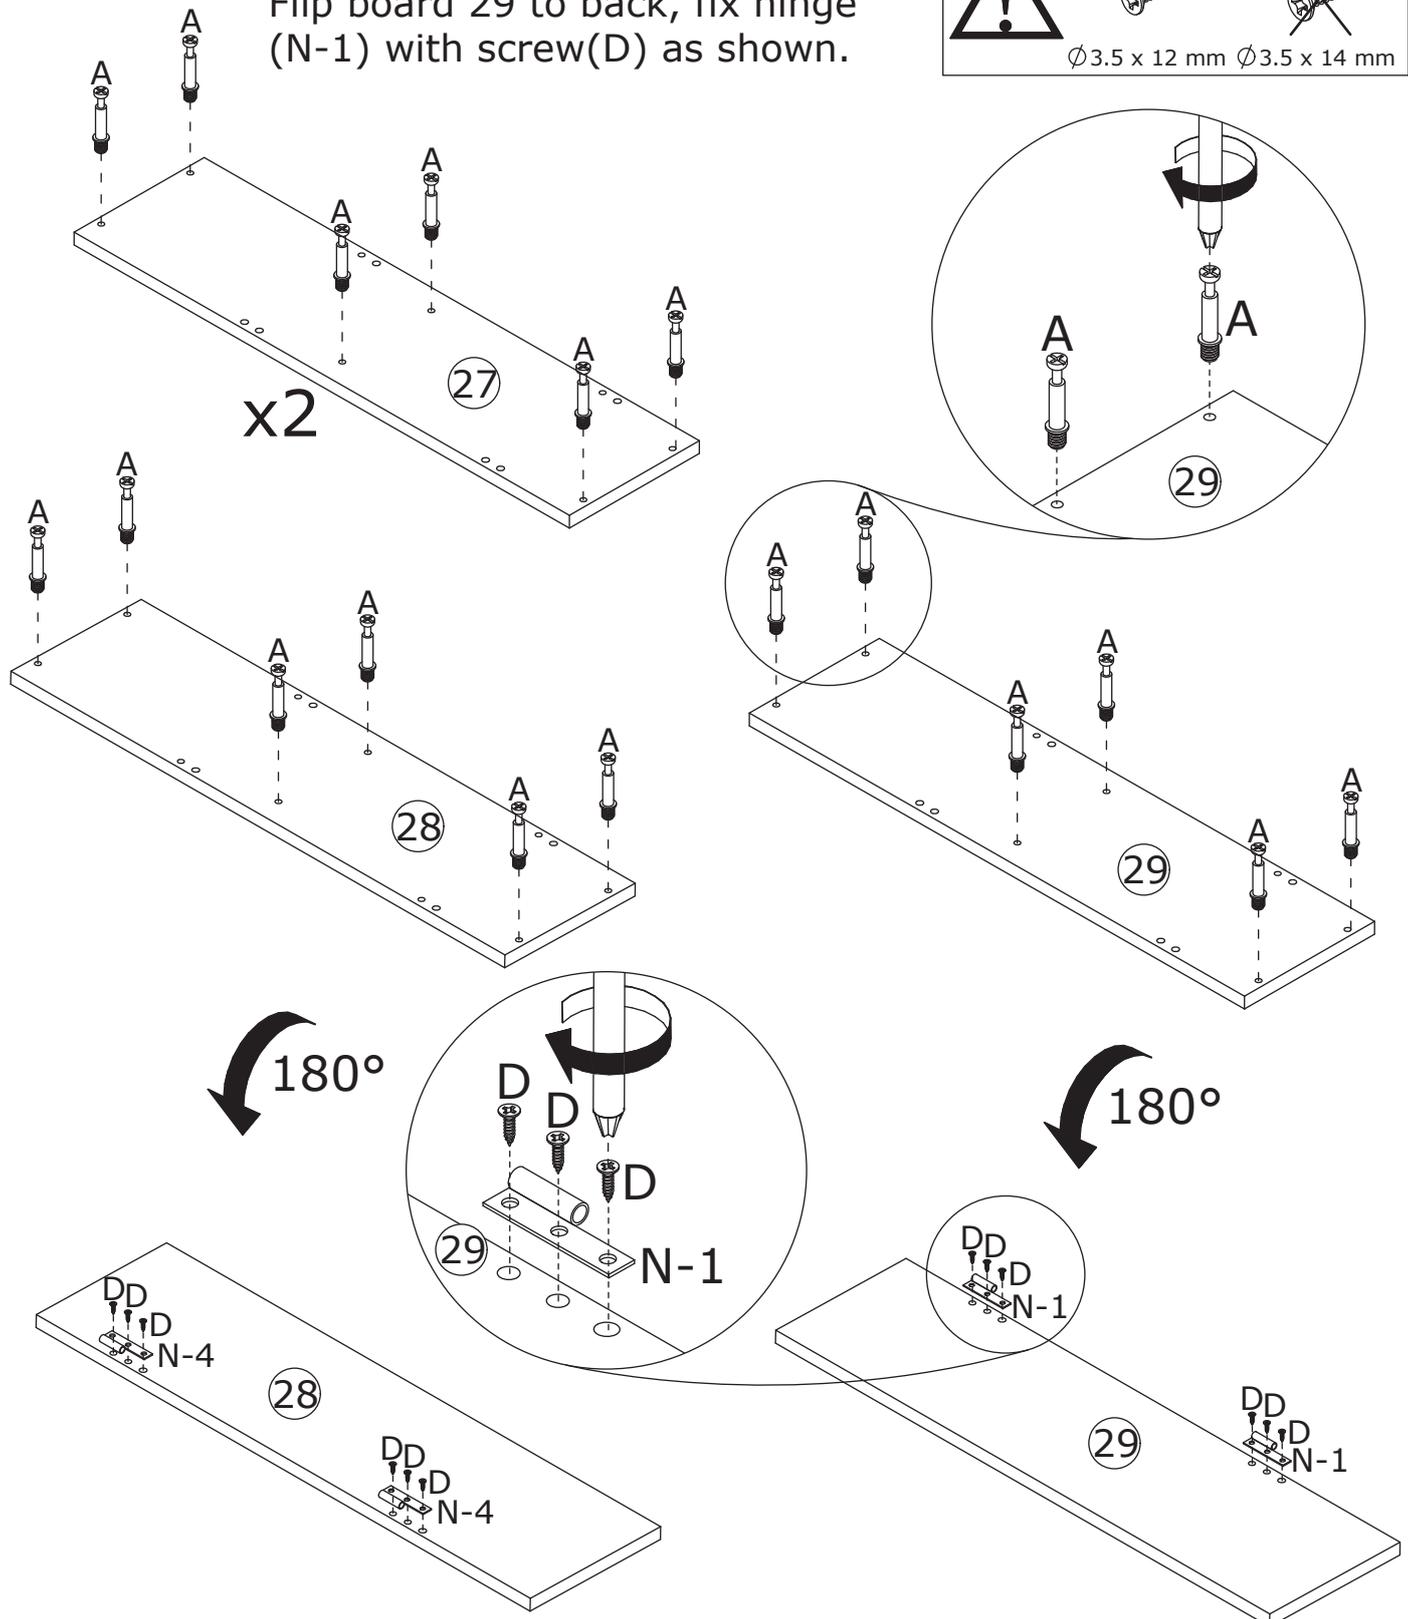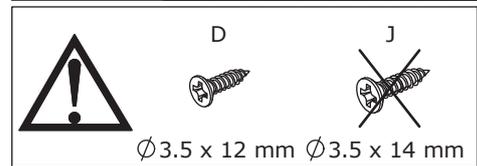
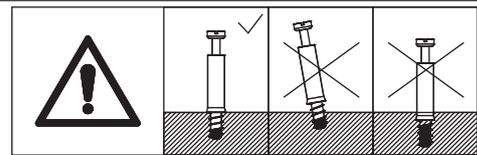


# 31



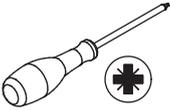
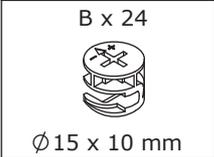


Connect board 27 and 28 to board 26 and 30 using wooden dowel(C), add cam lock(B) into board 26,30 and turn clockwise to tighten as shown.





Connect board 27 and 29 to board 26 and 30 using wooden dowel(C), add cam lock(B) into board 26,30 and turn clockwise to tighten as shown.

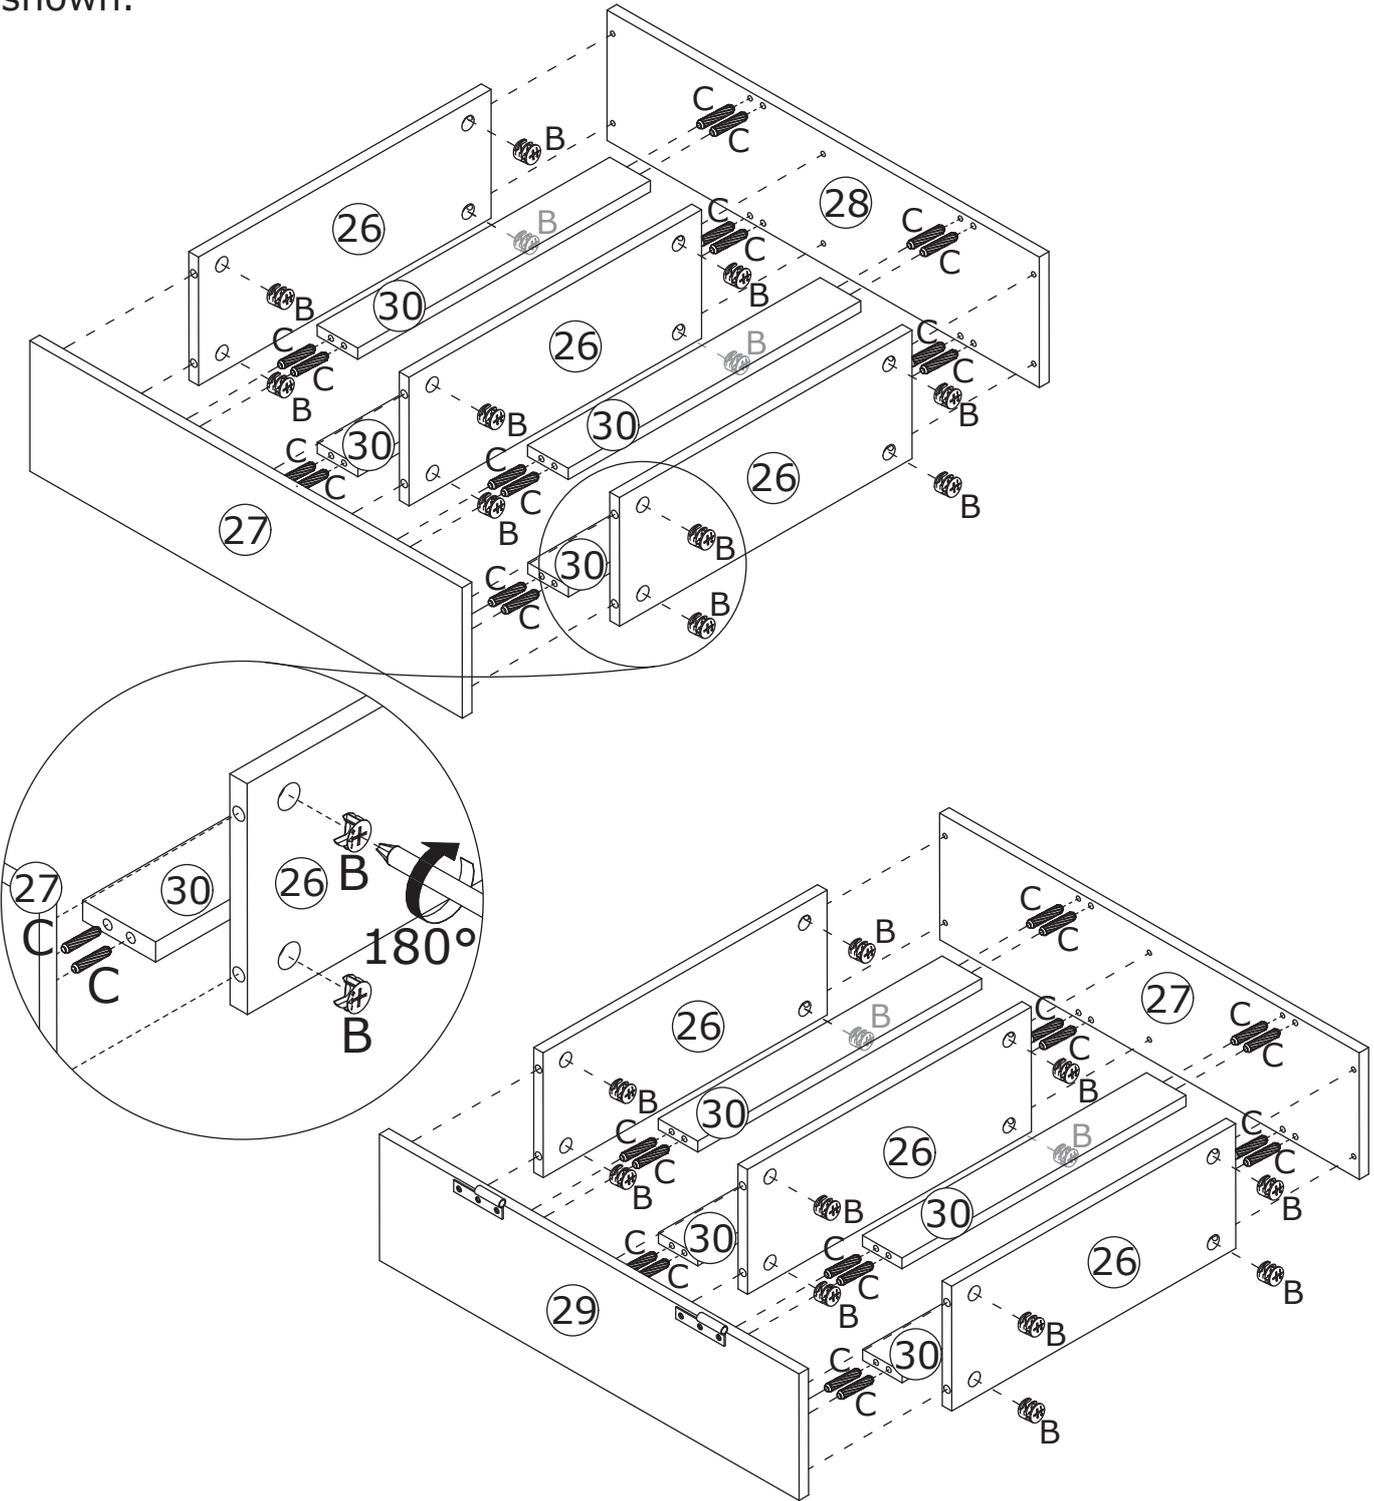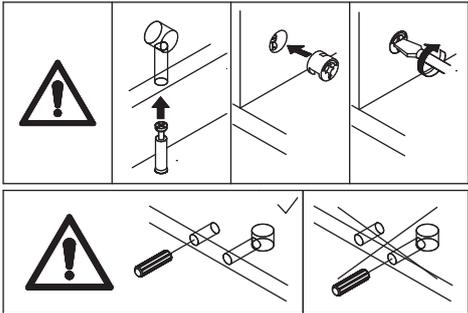





32

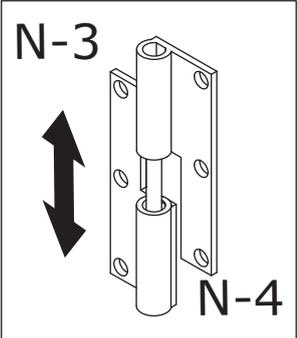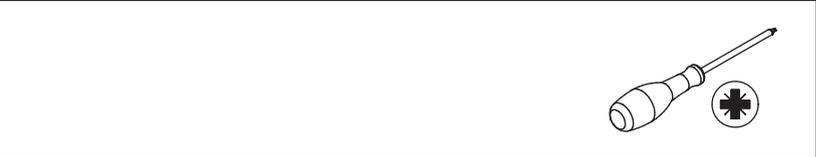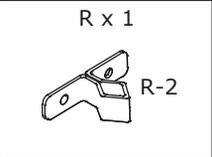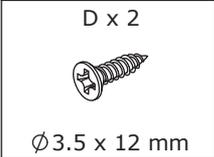




Assemble board 28 to 6 by install hinges as shown. Fix part(R) to board 26 with screw(D).

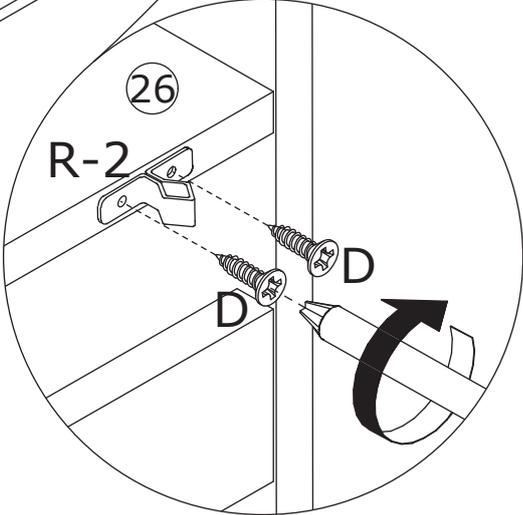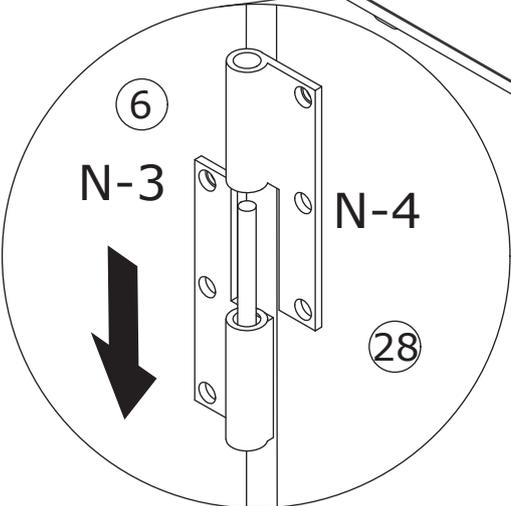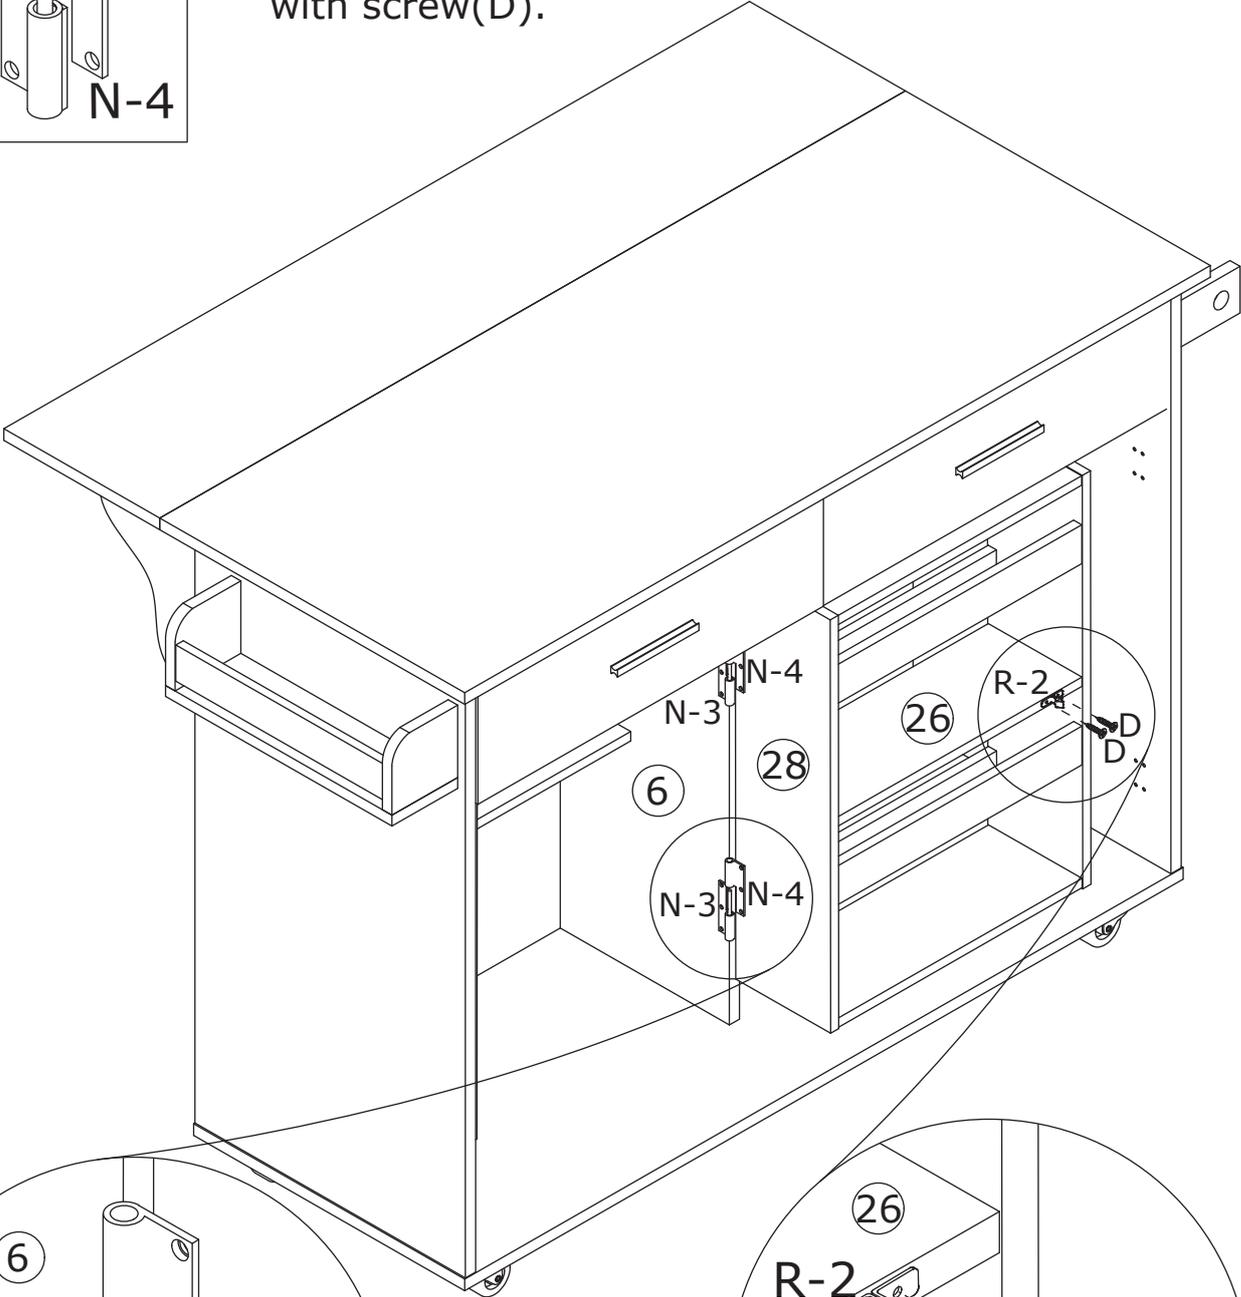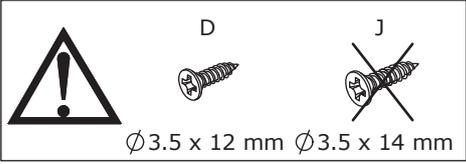




33

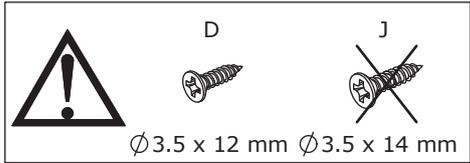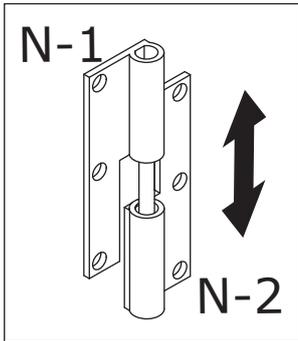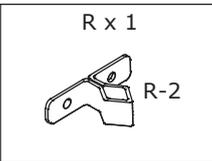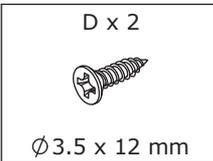


Assemble board 29 to 6 by install hinges as shown. Fix part(R) to board 26 with screw(D).

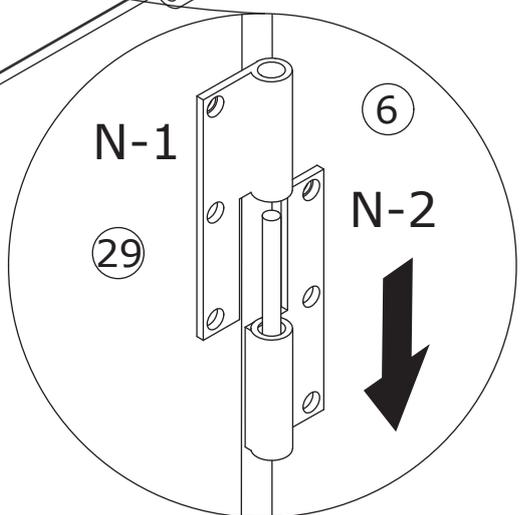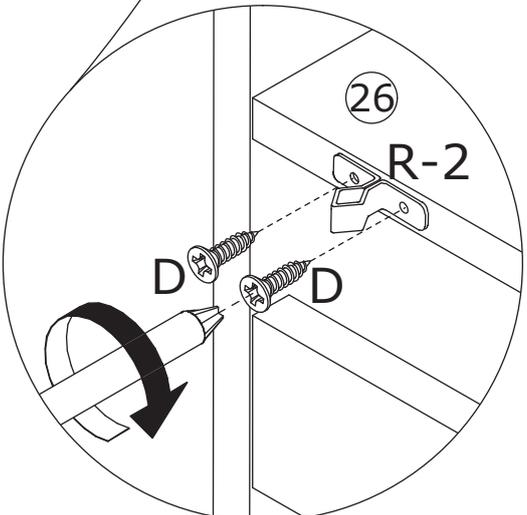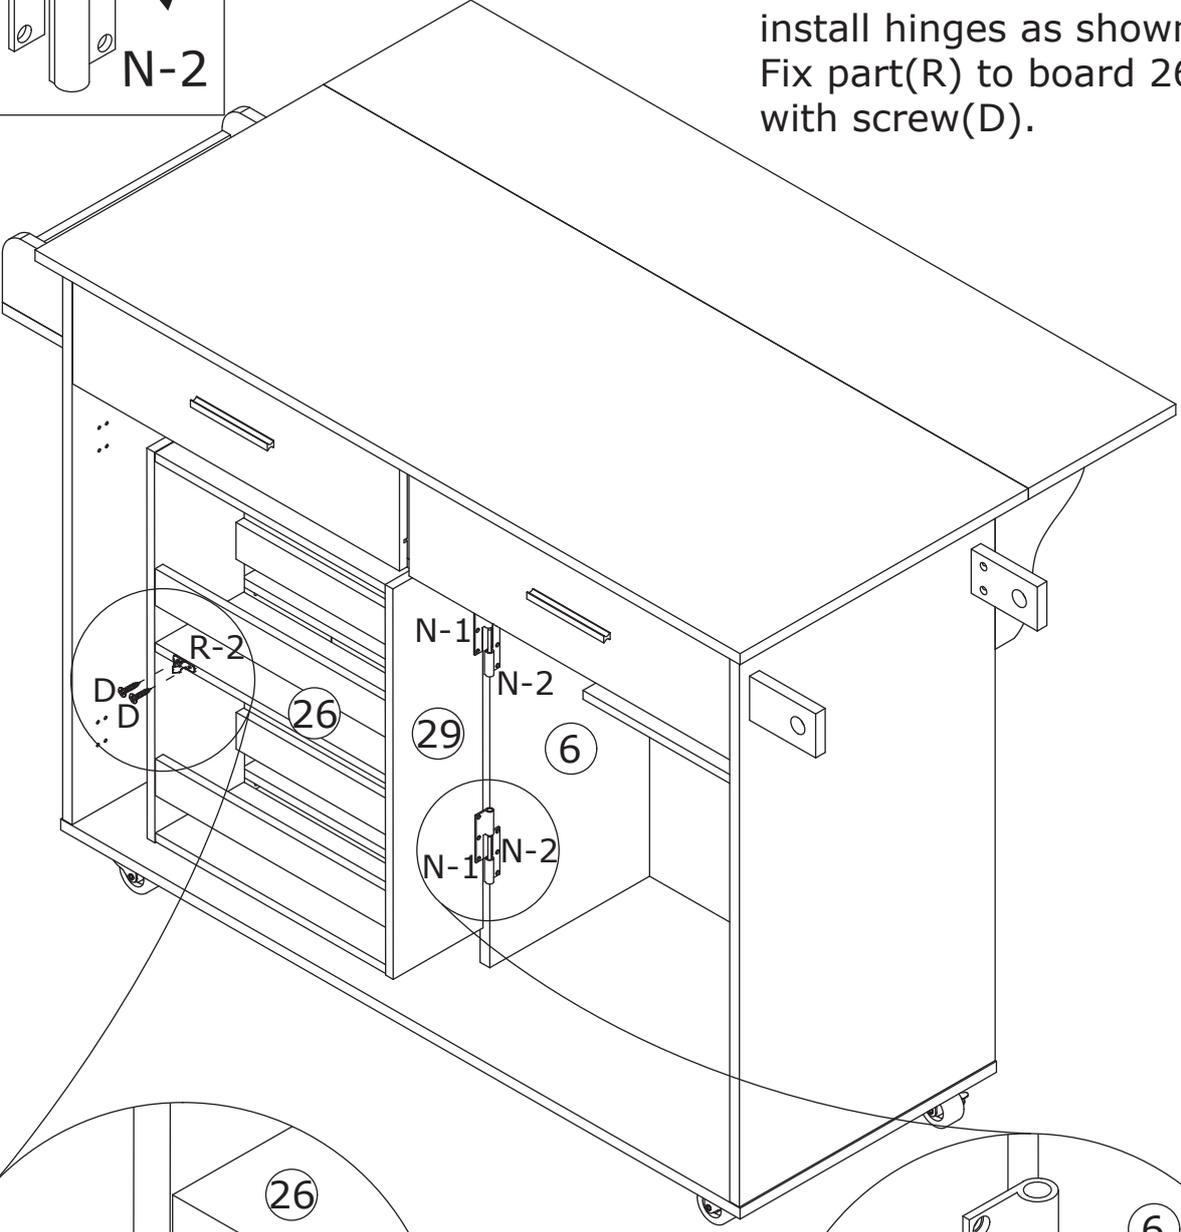





34

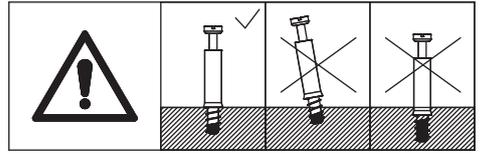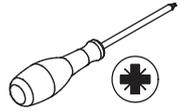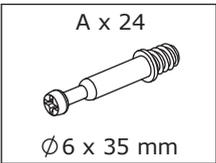


Screw eccentric rod(A)  
into board 31 and 32  
at first.

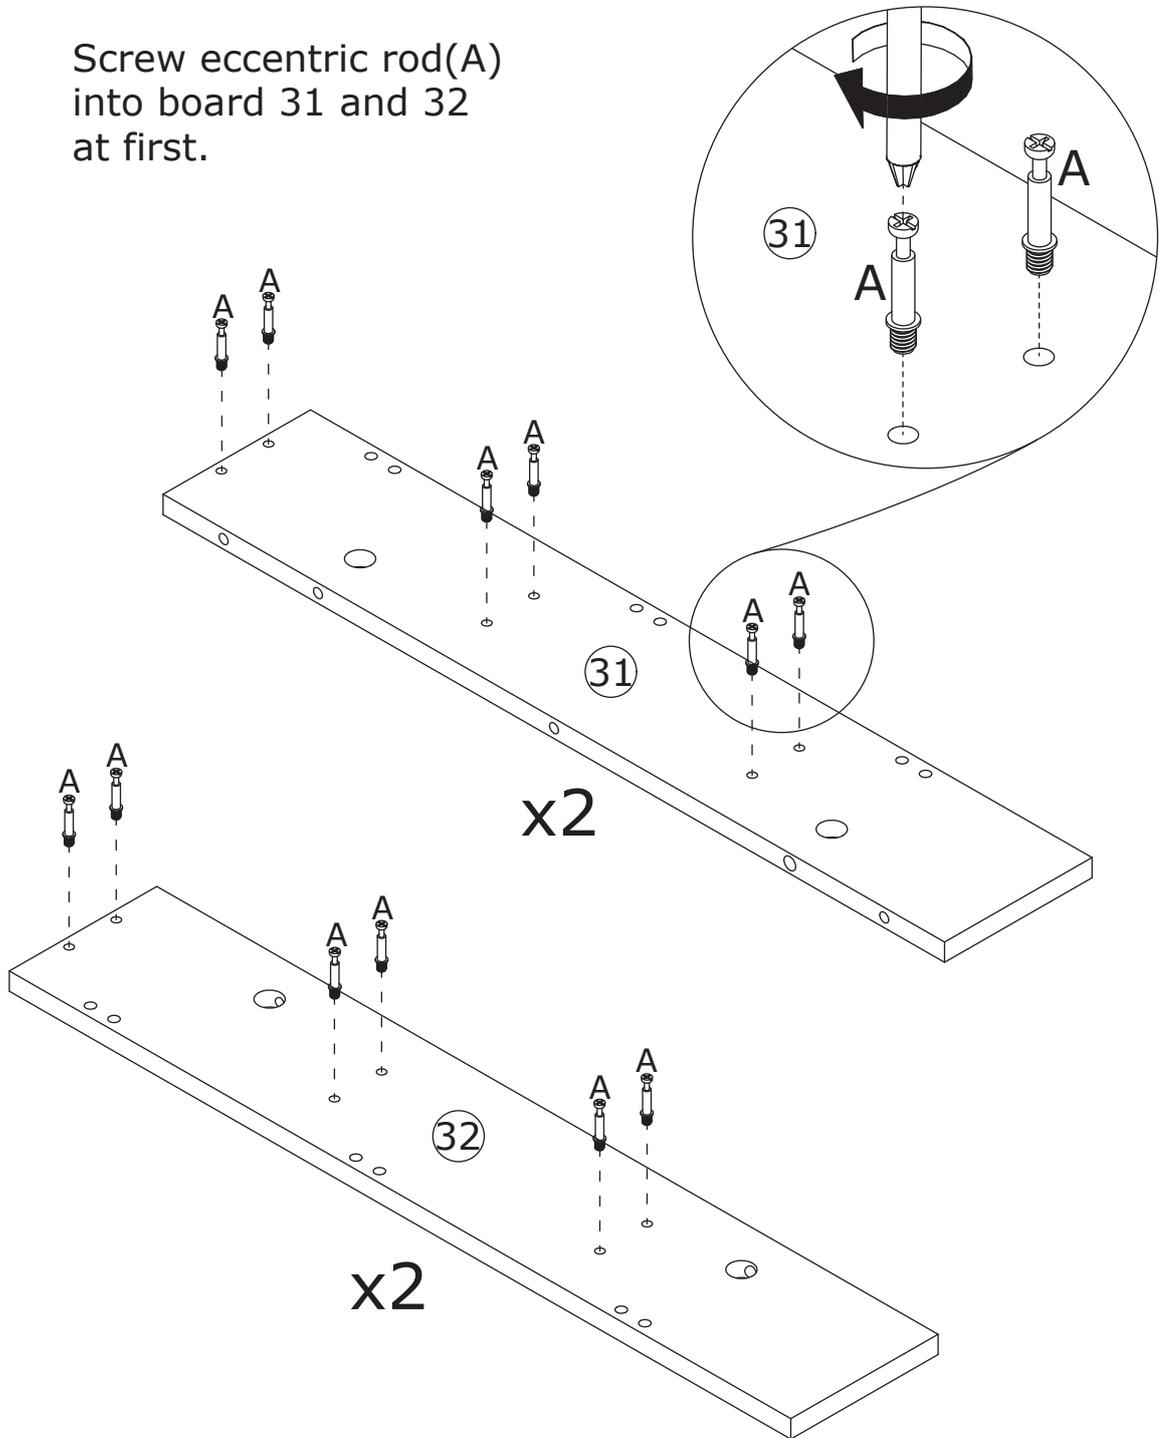




# 35

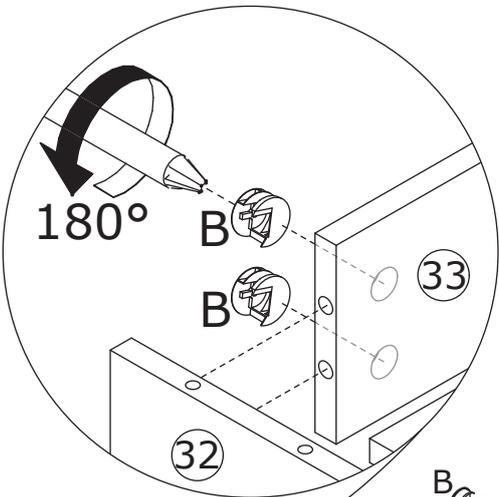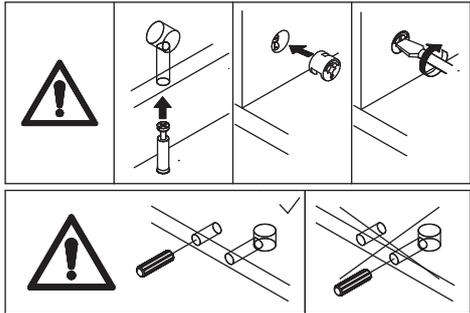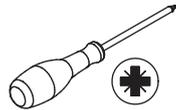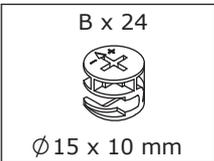


Connect board 31 and 32 to board 33 and 34 using wooden dowel(C), add cam lock(B) into board 33 and turn clockwise to tighten as shown.

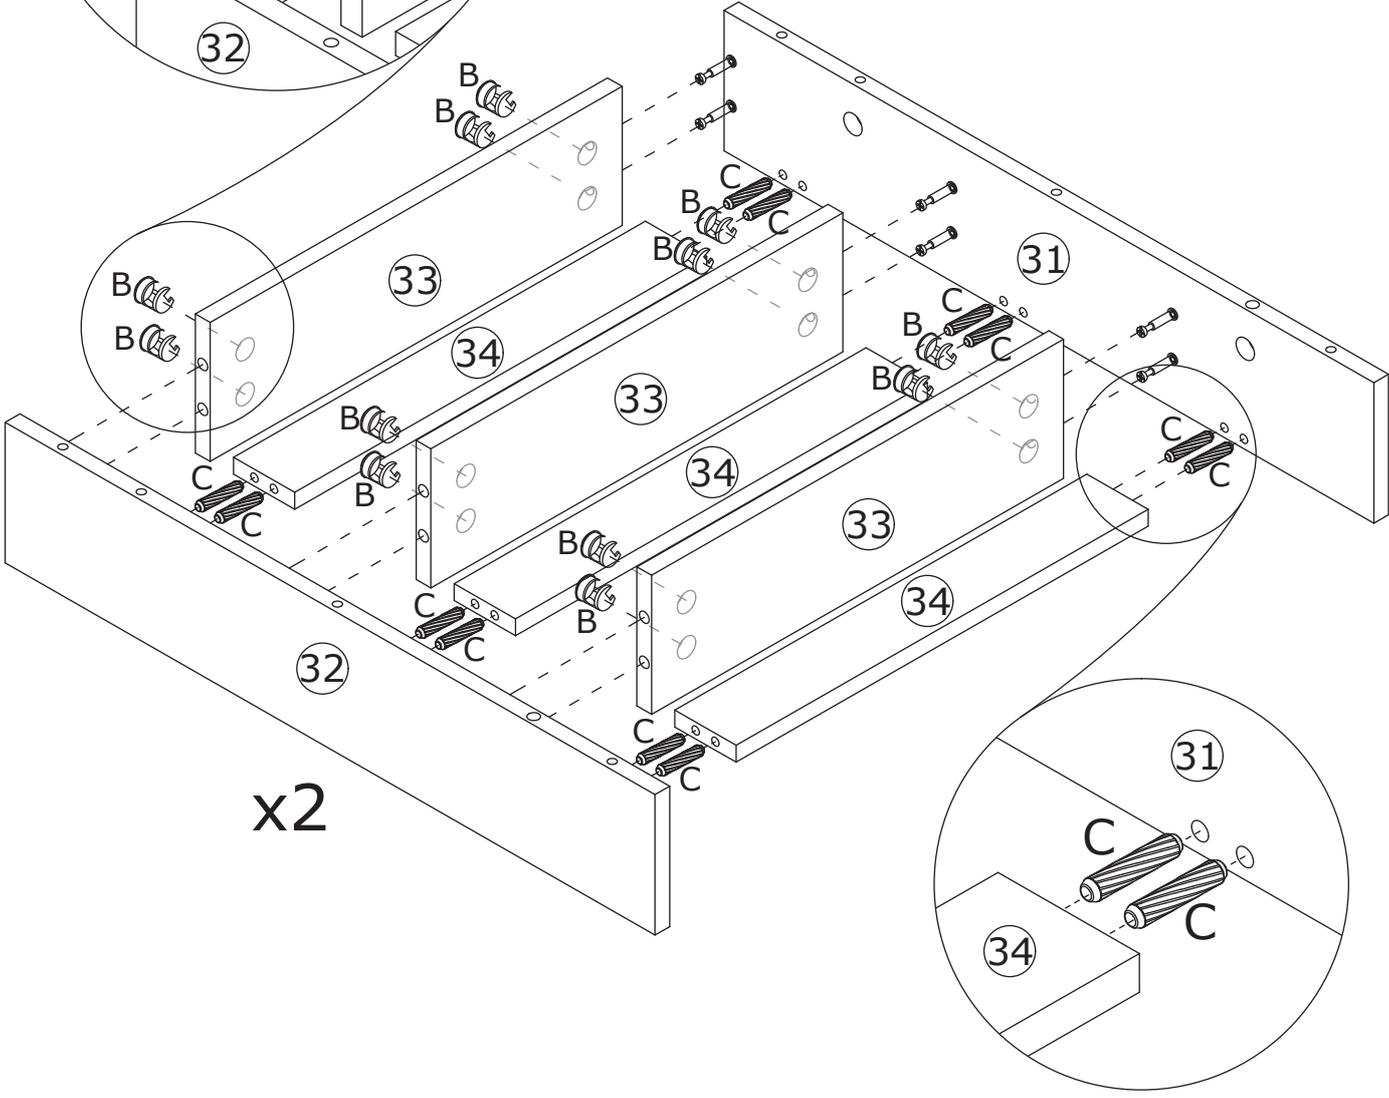




36

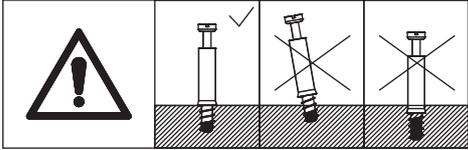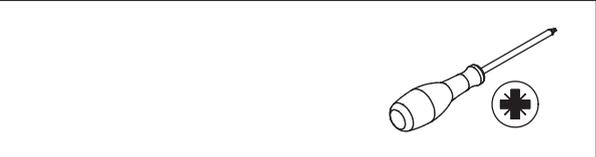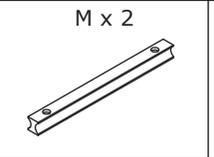


Screw eccentric rod(A) into board 35 and 36 at first.  
Fix handle(M) to board 35 and 36 with screw(E).

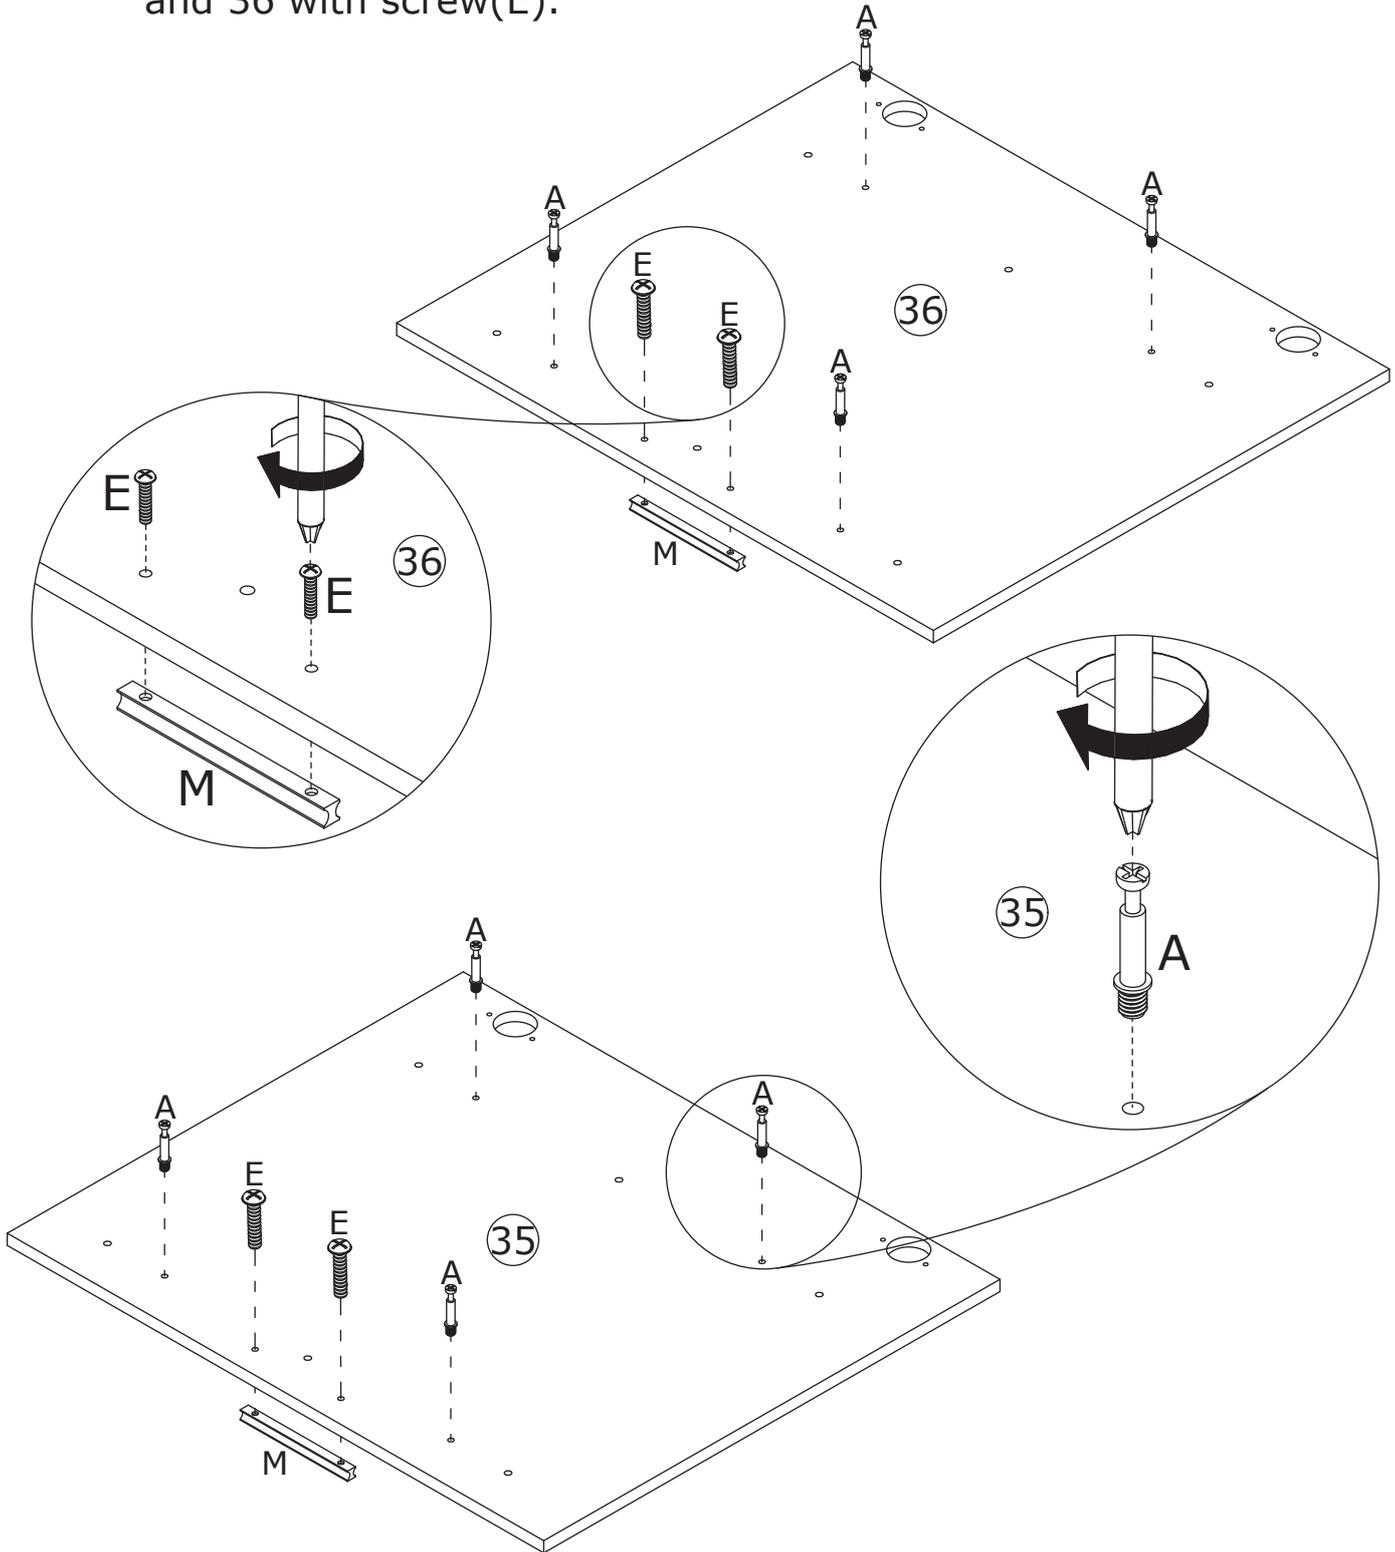



37

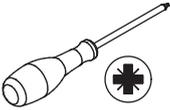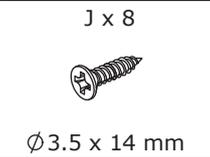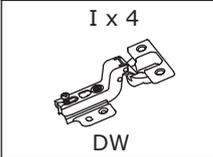





Ø 3.5 x 12 mm Ø 3.5 x 14 mm

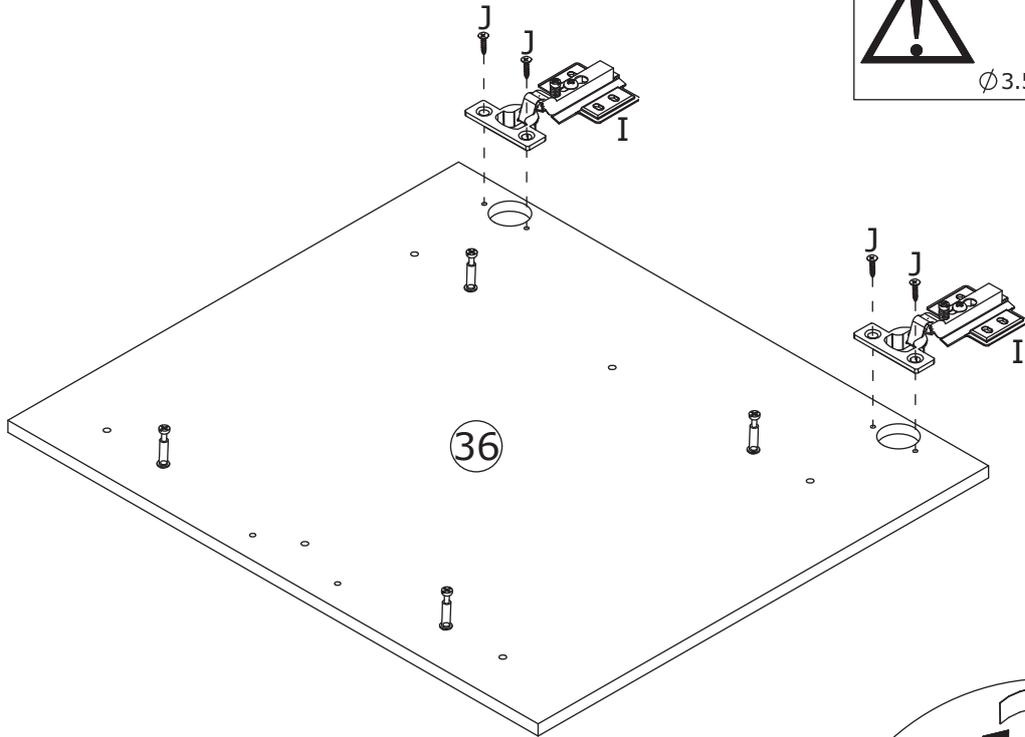



Fix hinge(I) to board 35 and 36 with screw(J).

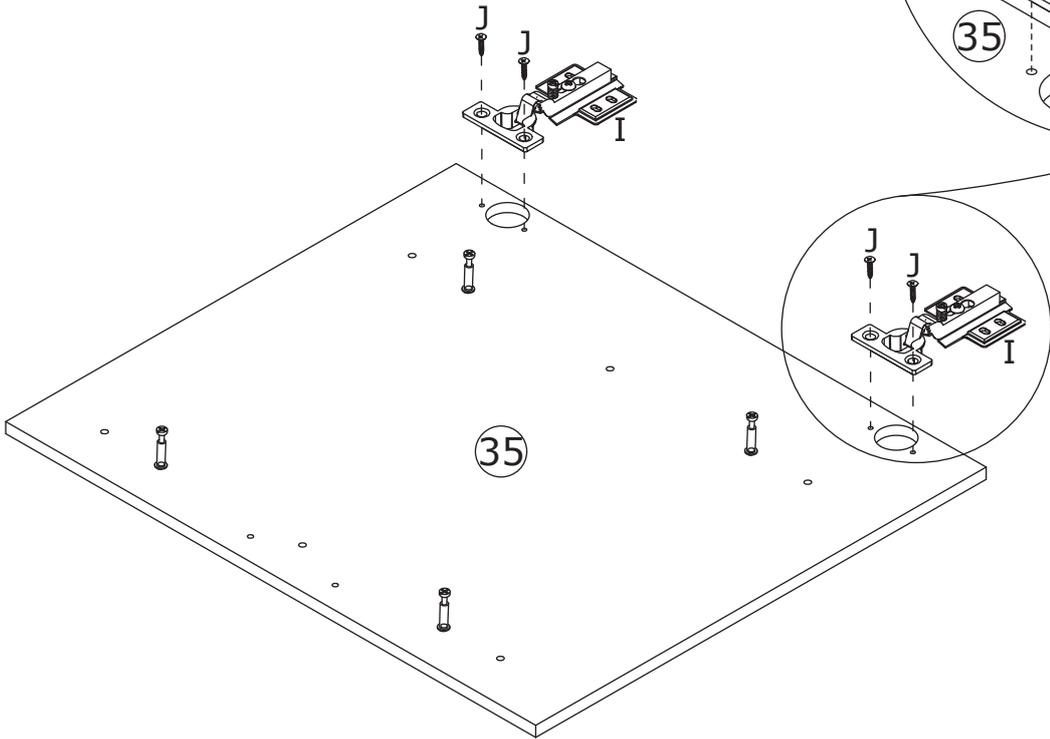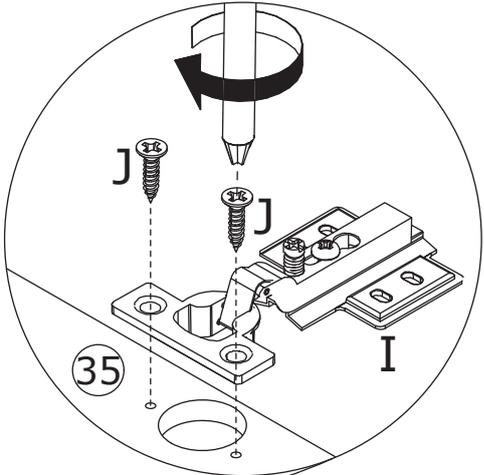

38

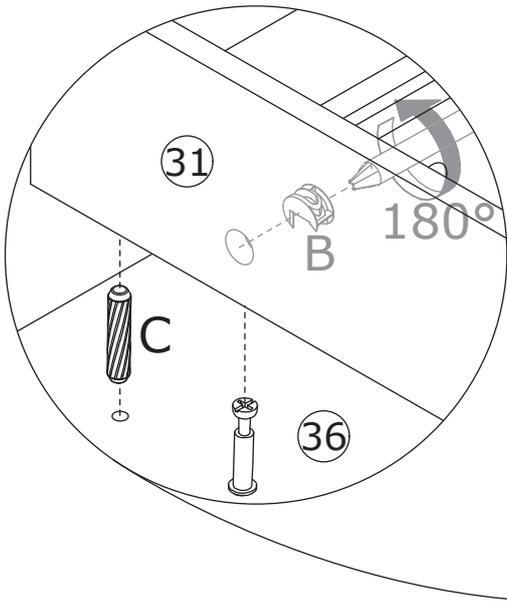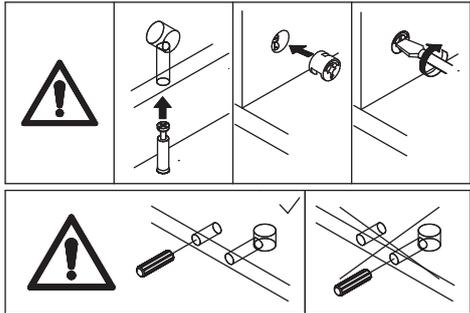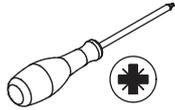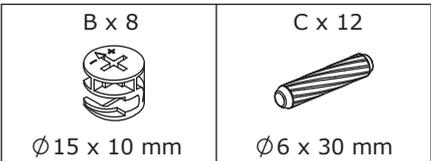


Attach the component (assembled in step 35) to board 35 and 36 using wooden dowel (C), add cam lock (B) into and turn clockwise to tighten as shown.

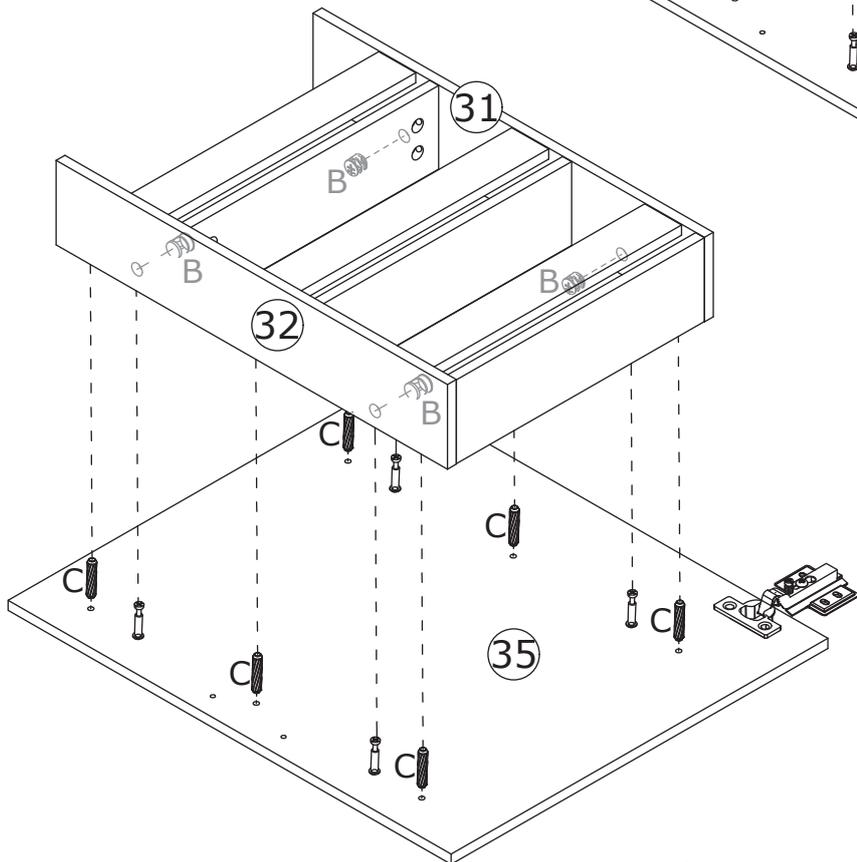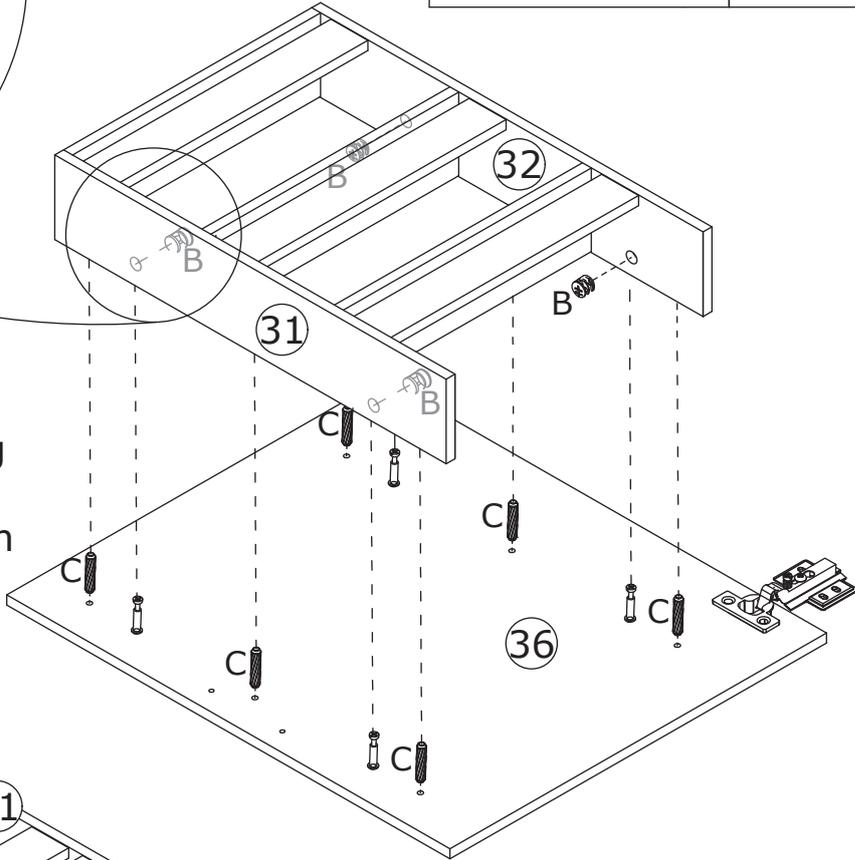


39

J x 16  
Ø 3.5 x 14 mm

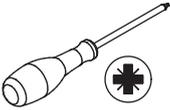


Ø 3.5 x 12 mm Ø 3.5 x 14 mm


Assemble door plate 35 and 36 to board 3 and 4 by fixing hinge with screw(J) as shown.

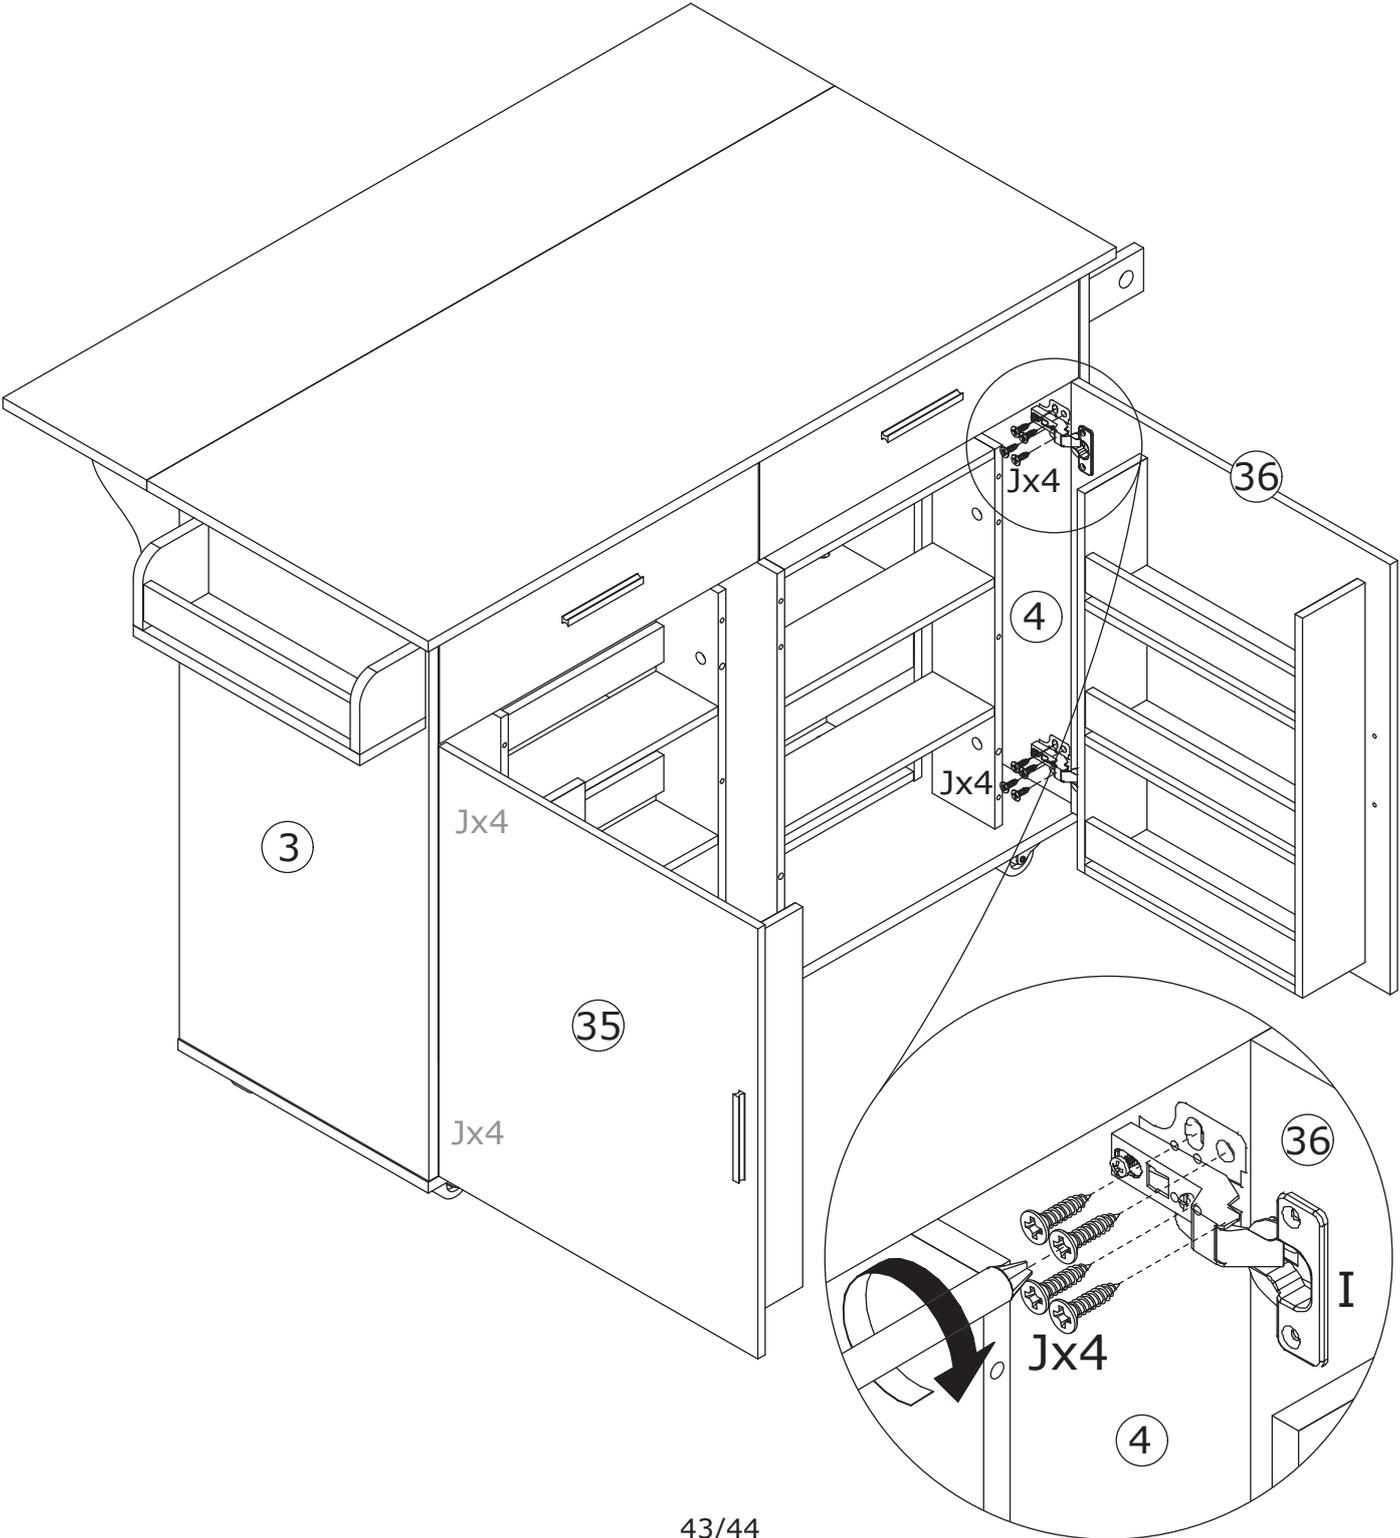

40

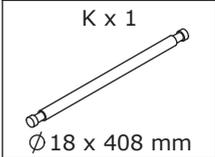

Pass the handle rod(K) through the holes of board 37.

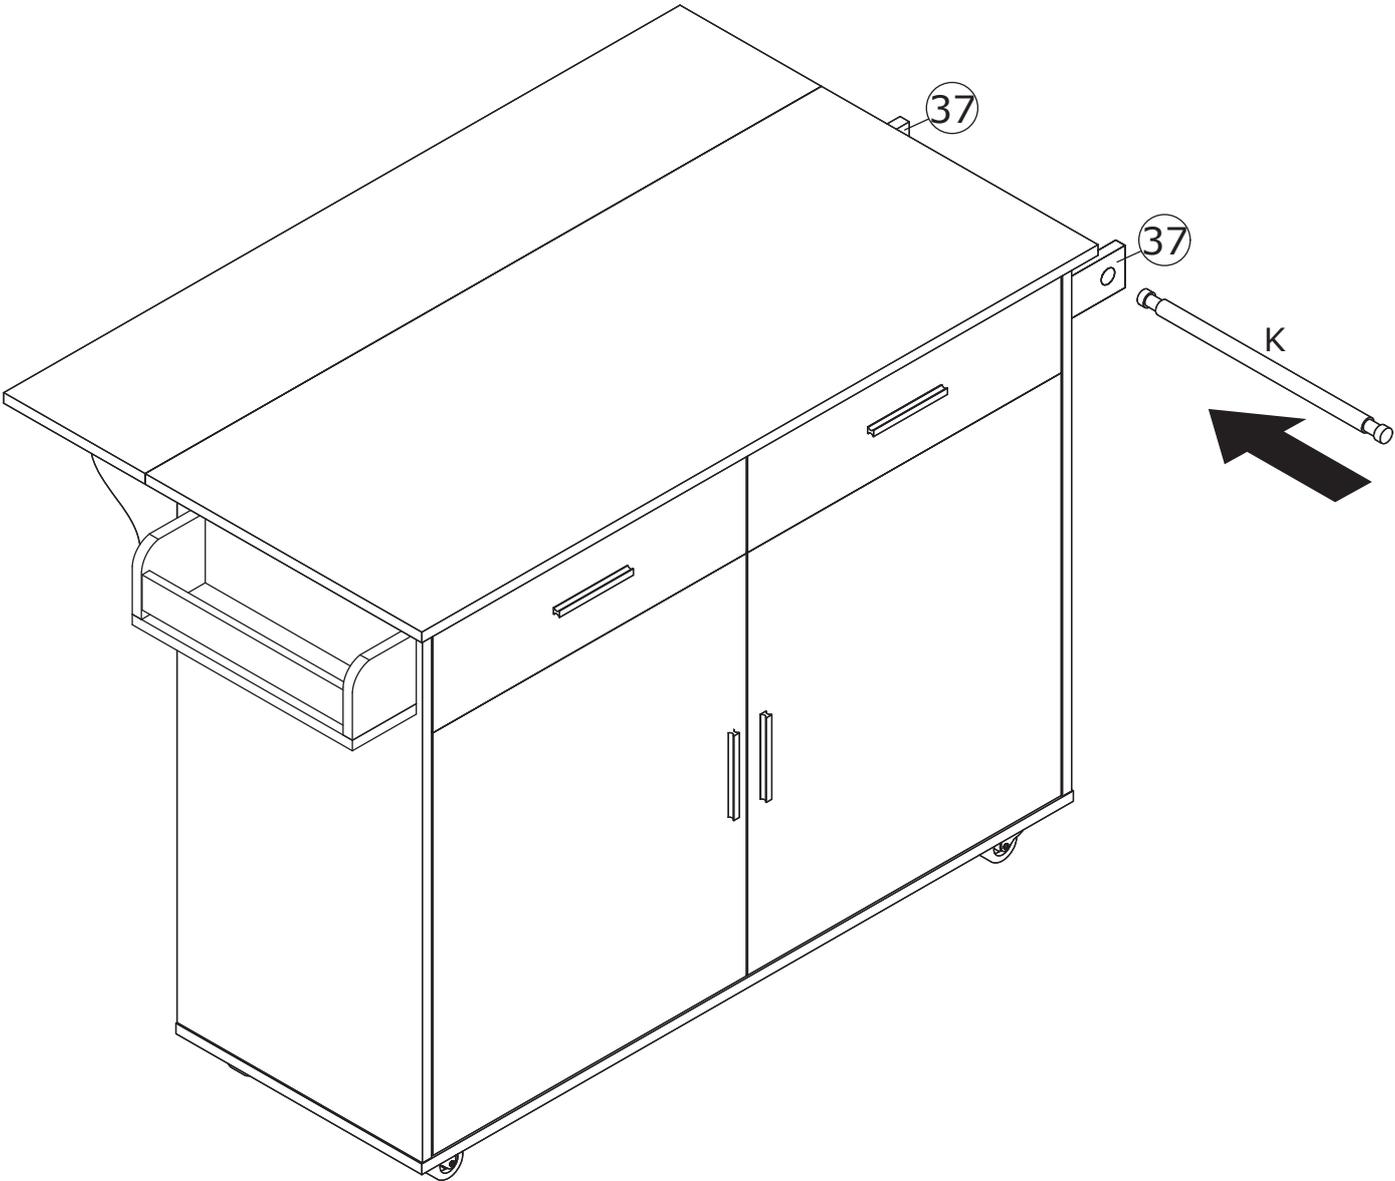

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



[feedbackstation@163.com](mailto:feedbackstation@163.com)



(303)800-6387