


ELECTRIC STANDING DESK

Instruction Manual

ELT-3P6324

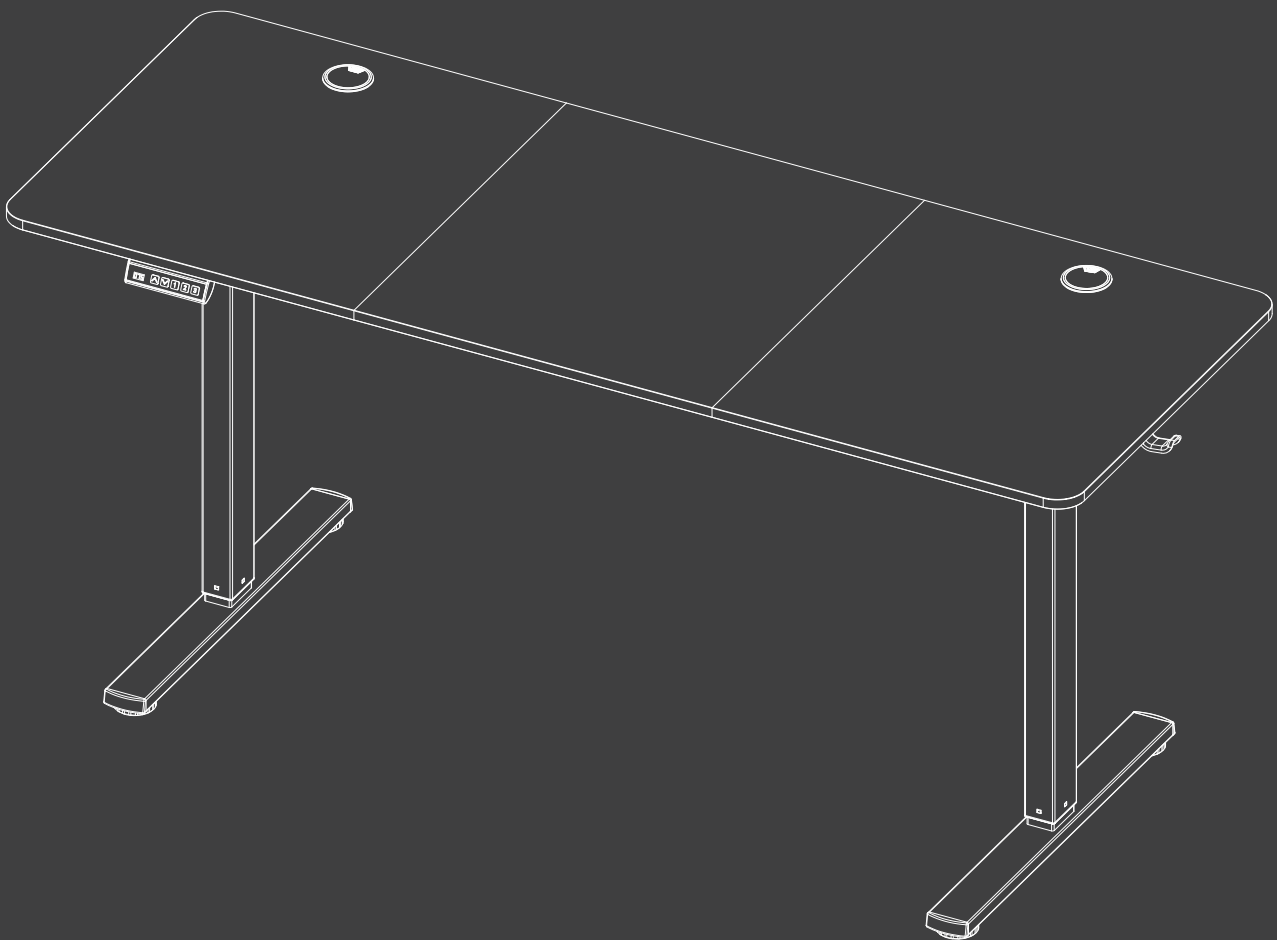

✉ HJ-Customer-Service@outlook.com

☎ (909)637-7665 | (909)637-7593

EST 9:00AM--17:00PM


1 Component List




1 x1
Left Leg




2 x1
Right Leg




3 x2
Leg Base




4 x2
Side Plate




5 x2
Beam

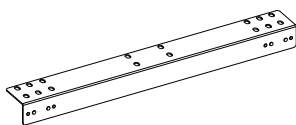


6 x1
Beam




7 x1
Drive Rod




8 x1
Hex Rod

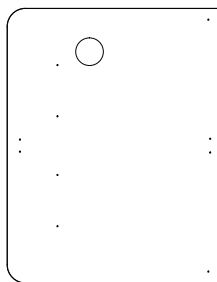


9 x1
Board

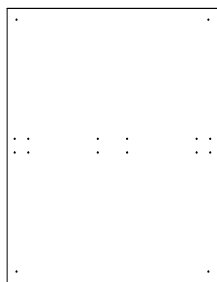


10 x1
Board

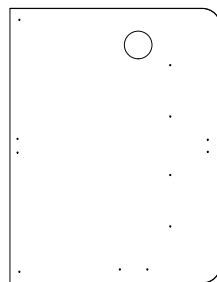

11 x1
Board




12 x4
Desktop Panel Connector



13 x1
Motor



14 x1
Hand Controller

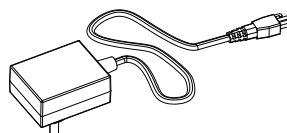

15 x1
Power Supply



16 x2
Headset Hook




17 x2
Cable Hole Cover




18 x4
Foot Pad

2 Hardware




A x10
Screws
M6x10mm



B x4
Screws
M8x16mm



C x8
Screws
M6x35mm




D x38
Screws
PWA4.2x13mm



E x8
Wooden Pin
D8x40



F x1
Wrench
M5



G x2
Cable Clip


Note: Ensure that all bolts are fully tightened.

Please read the installation instructions carefully before installation.

It is recommended to use power tools to install the screws.


(Power tools are not included in product accessories)

Step 1

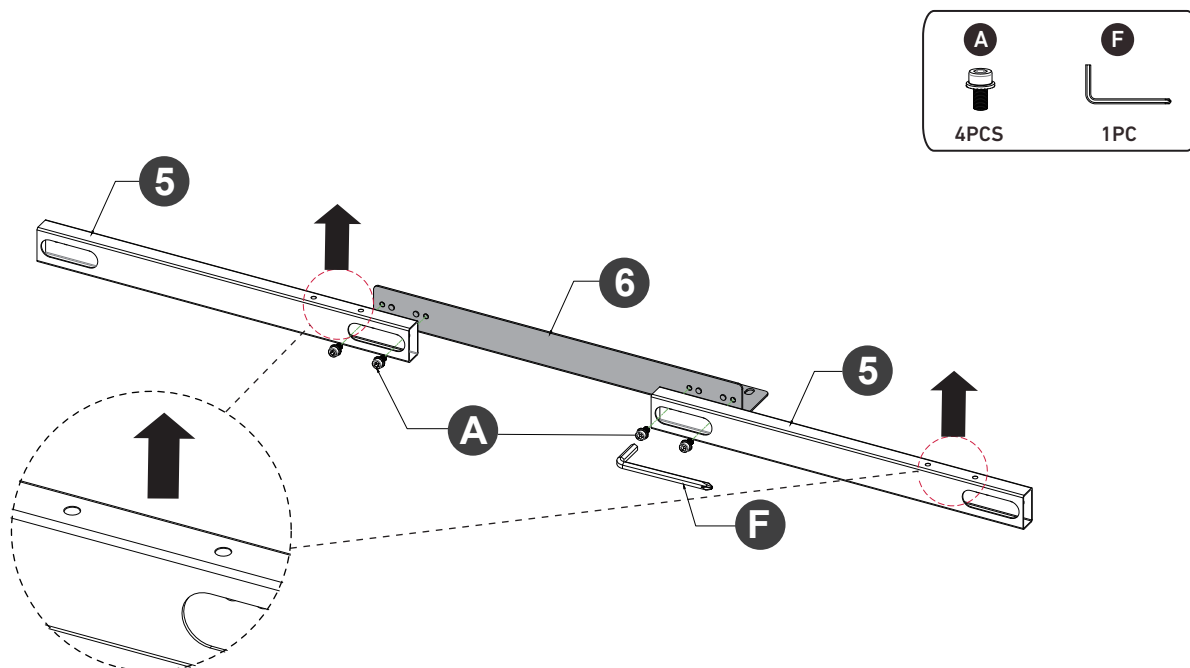


Please pay attention to the installation direction of the Beam 5 on both sides. The round holes should be on the right side and installed following the direction of the arrow.

Step 2

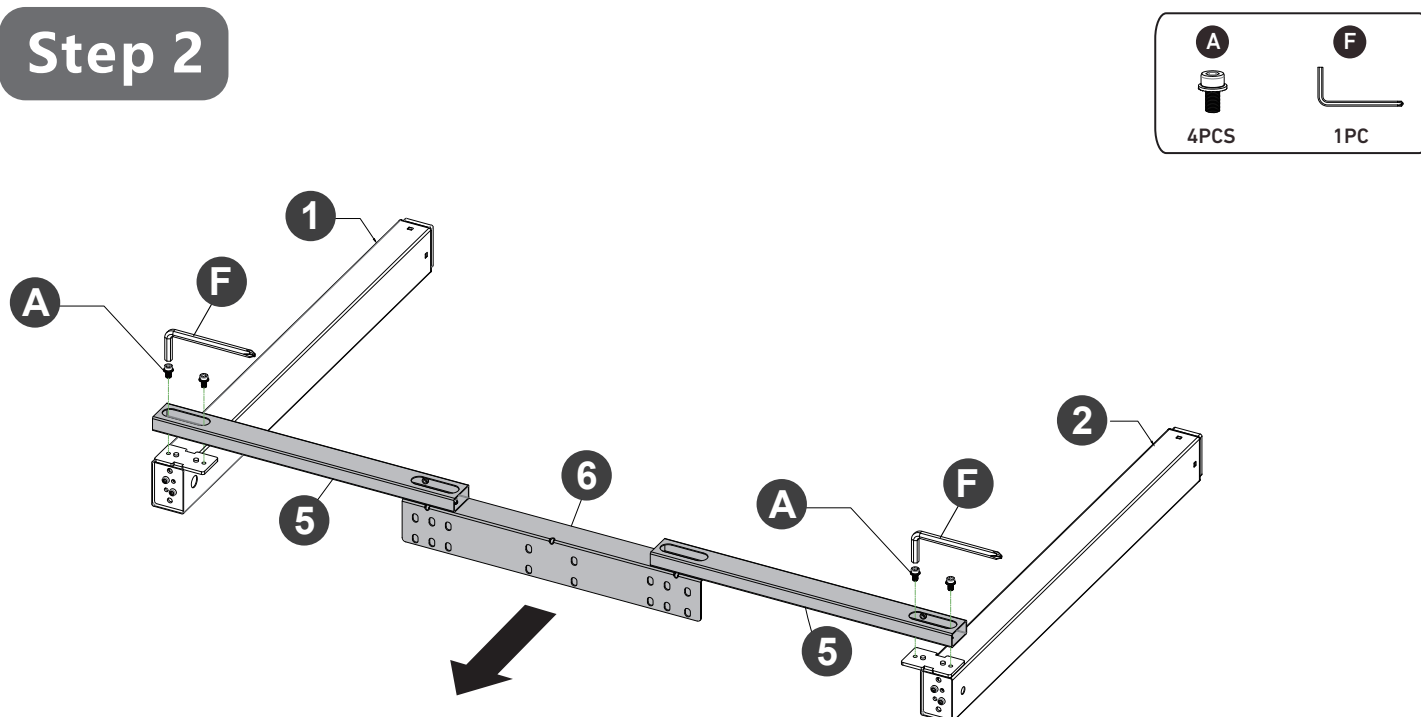


Step 3

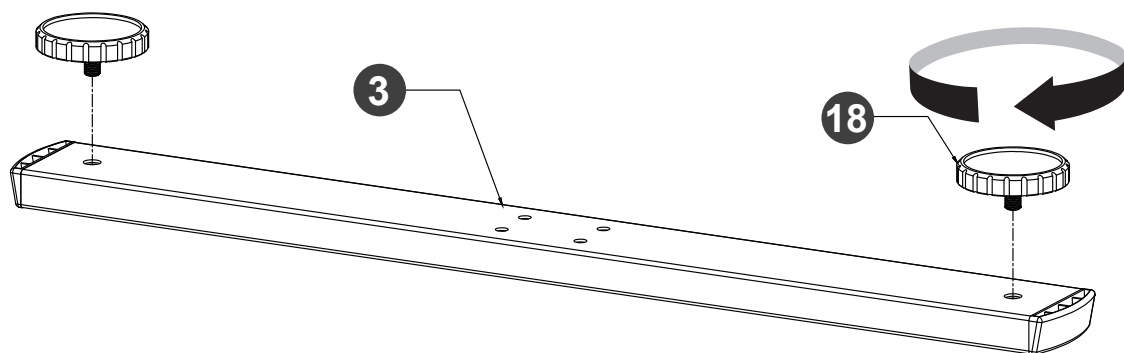


NOTE: Perform the same steps on both sides.

Step 4

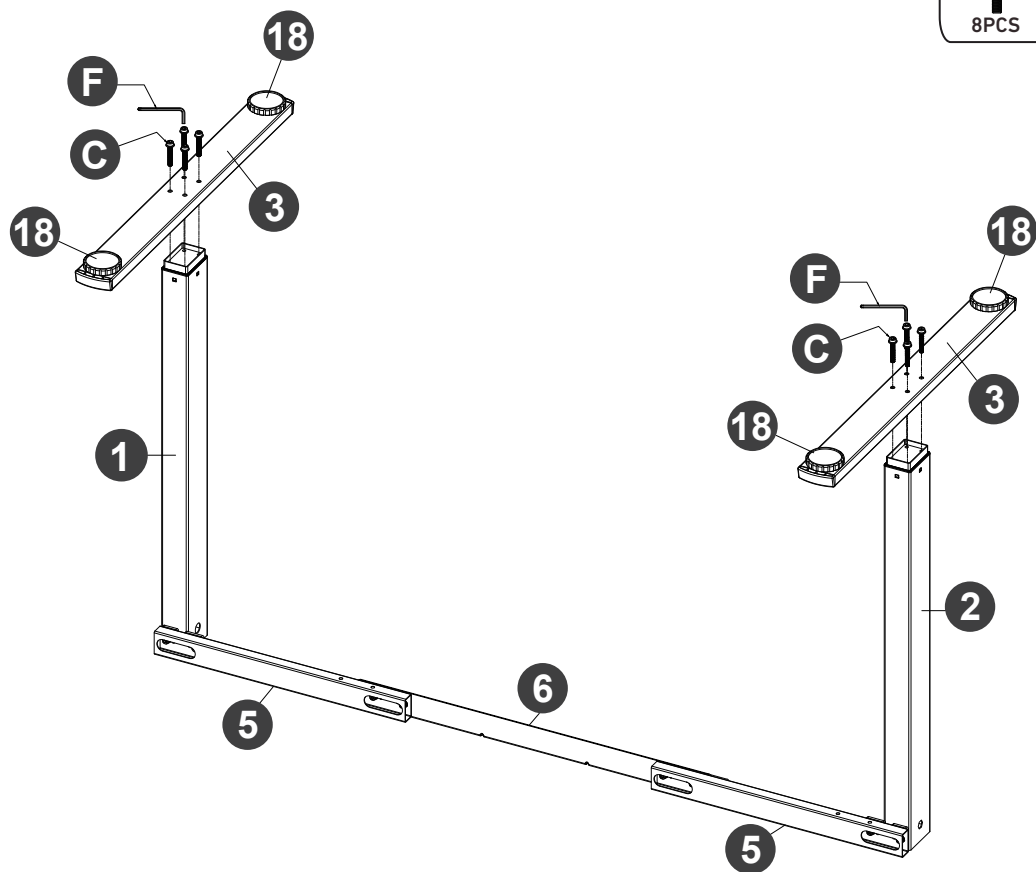


Step 5

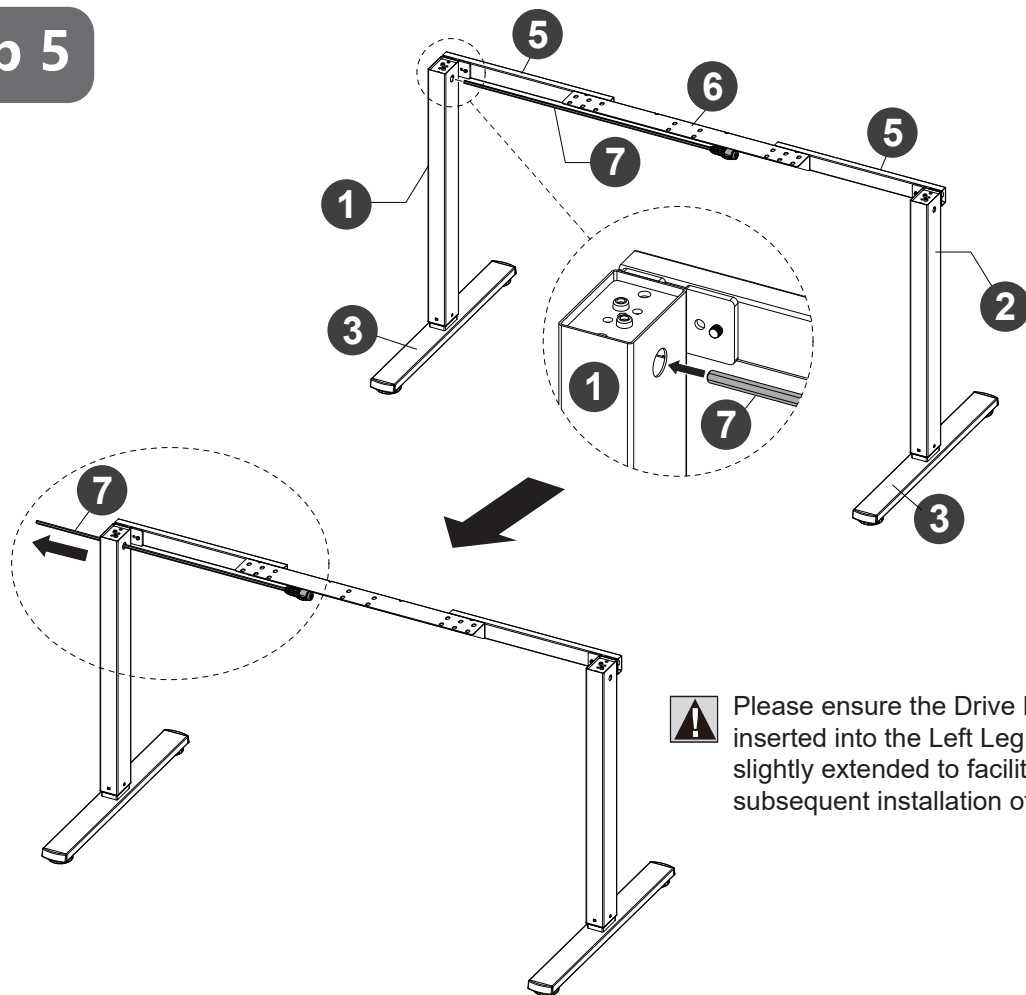


! Please ensure the Drive Rod **7** is inserted into the Left Leg **1**. It can be slightly extended to facilitate the subsequent installation of the Hex Rod **8**.


Step 6

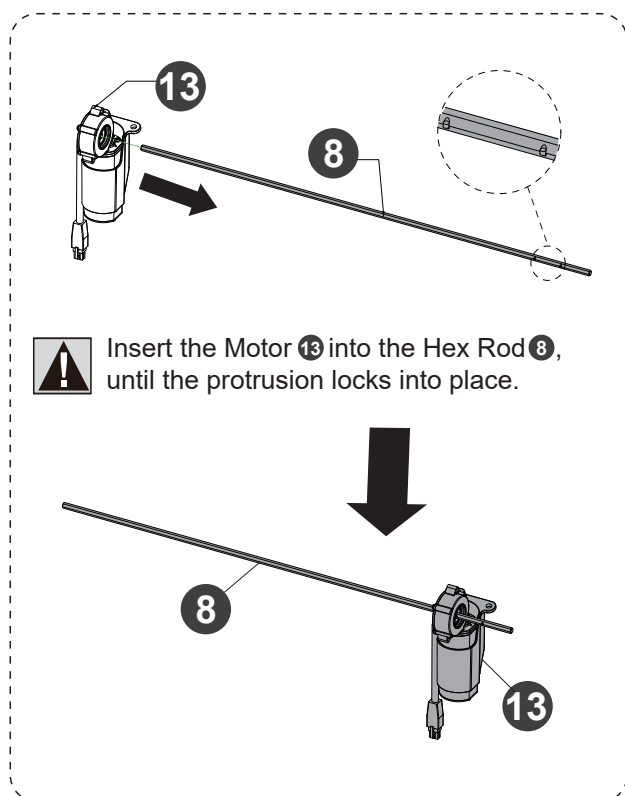

! Insert the Motor **13** into the Hex Rod **8**, until the protrusion locks into place.

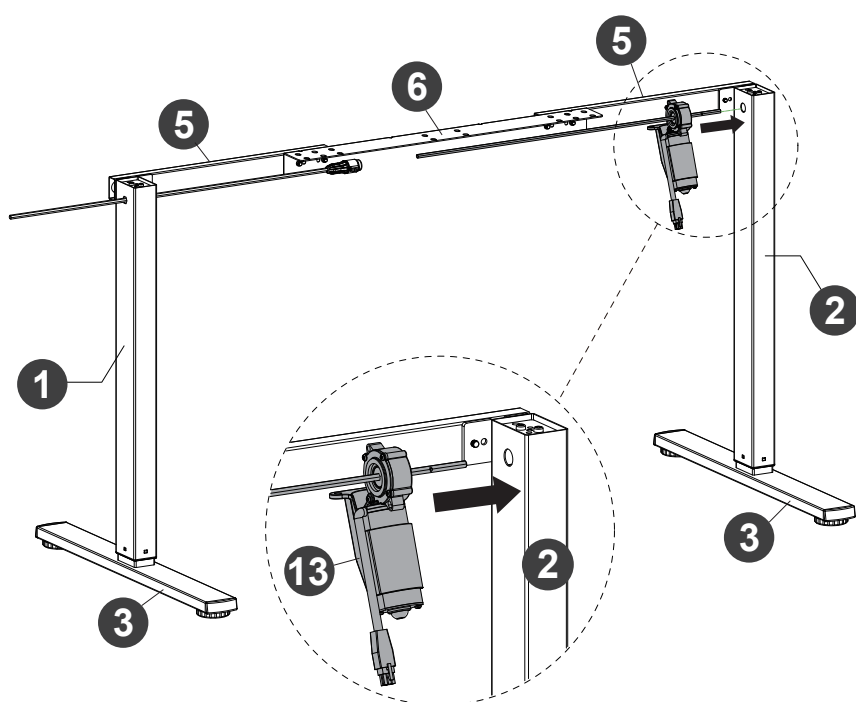


Step 7

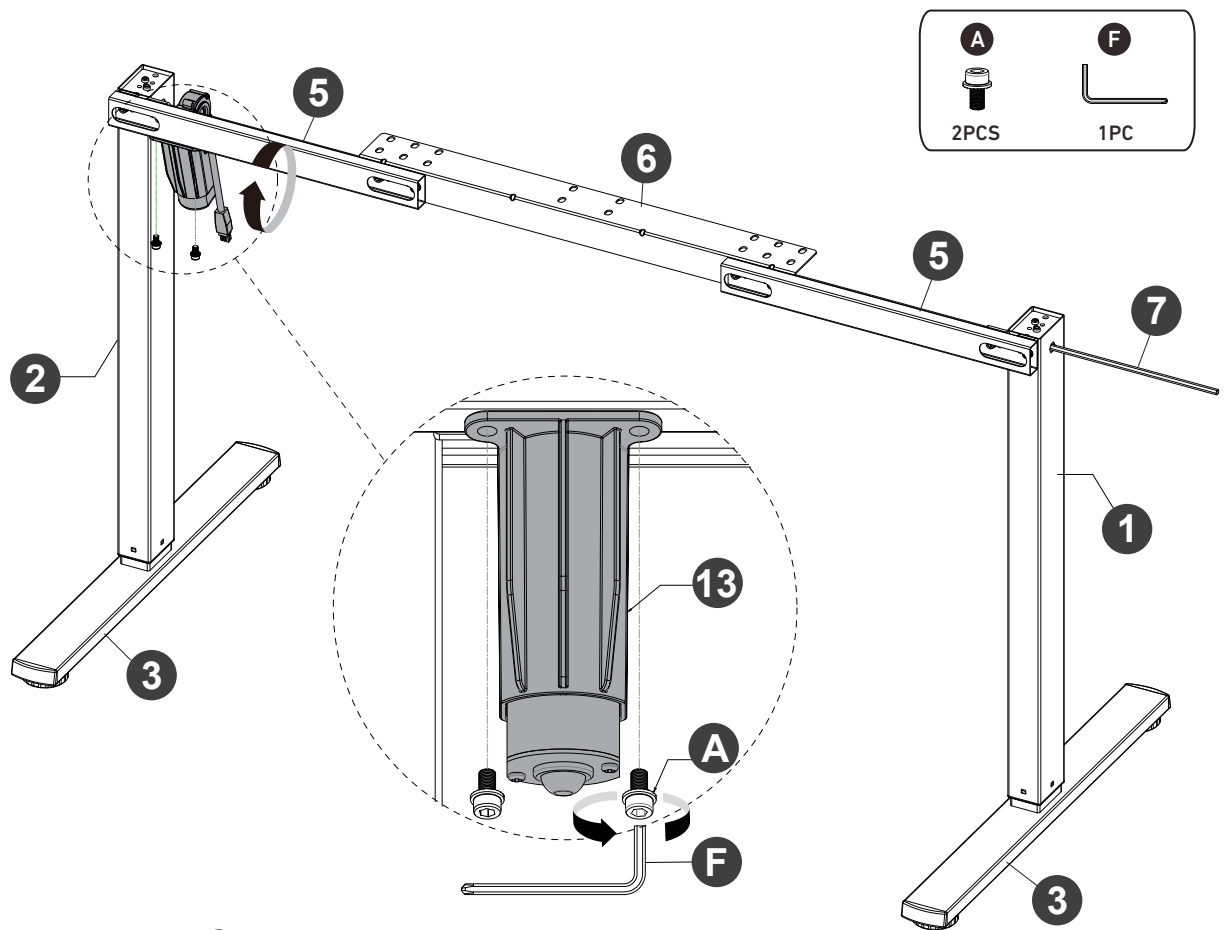



Rotate the plastic shell of Motor 13 clockwise, align the holes on the plastic shell with the pre-drilled holes on the Beam 5, and then secure the plastic shell of Motor 13 with 2 Screws A.

Step 8


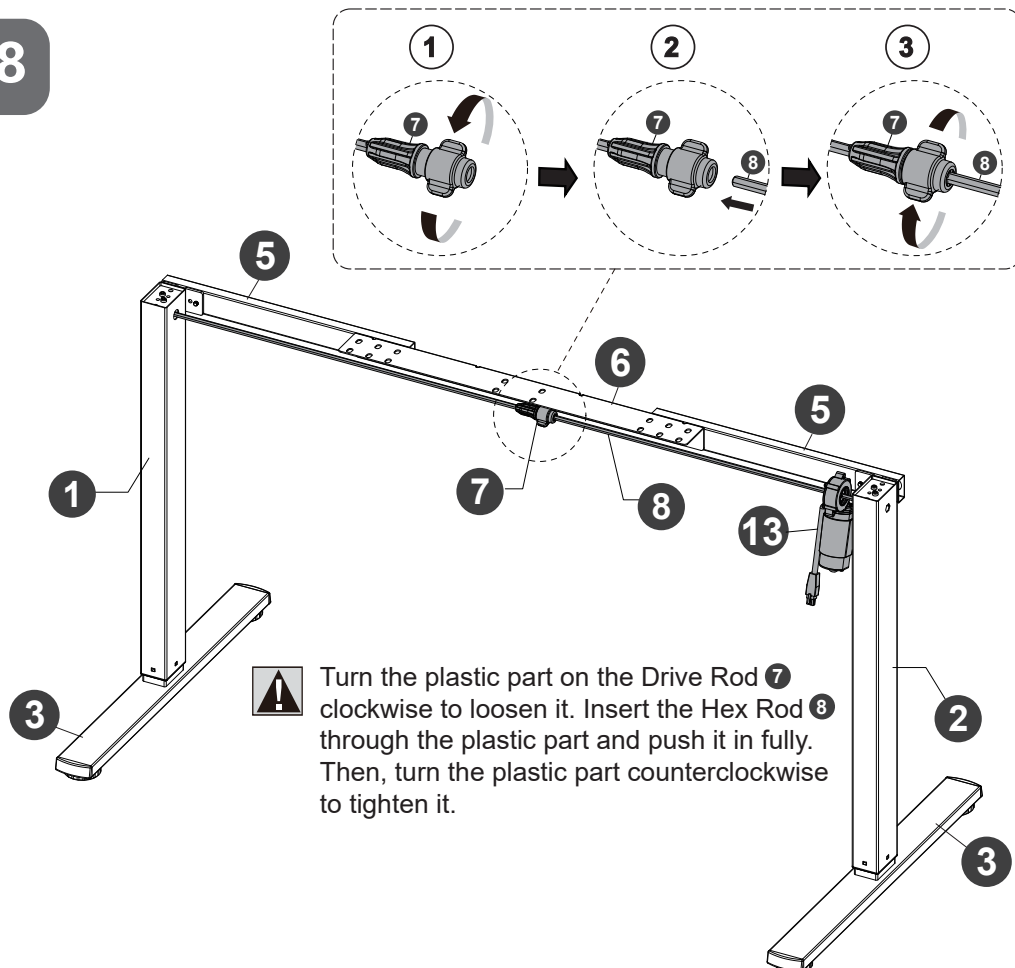


Turn the plastic part on the Drive Rod 7 clockwise to loosen it. Insert the Hex Rod 8 through the plastic part and push it in fully. Then, turn the plastic part counterclockwise to tighten it.

Step 9

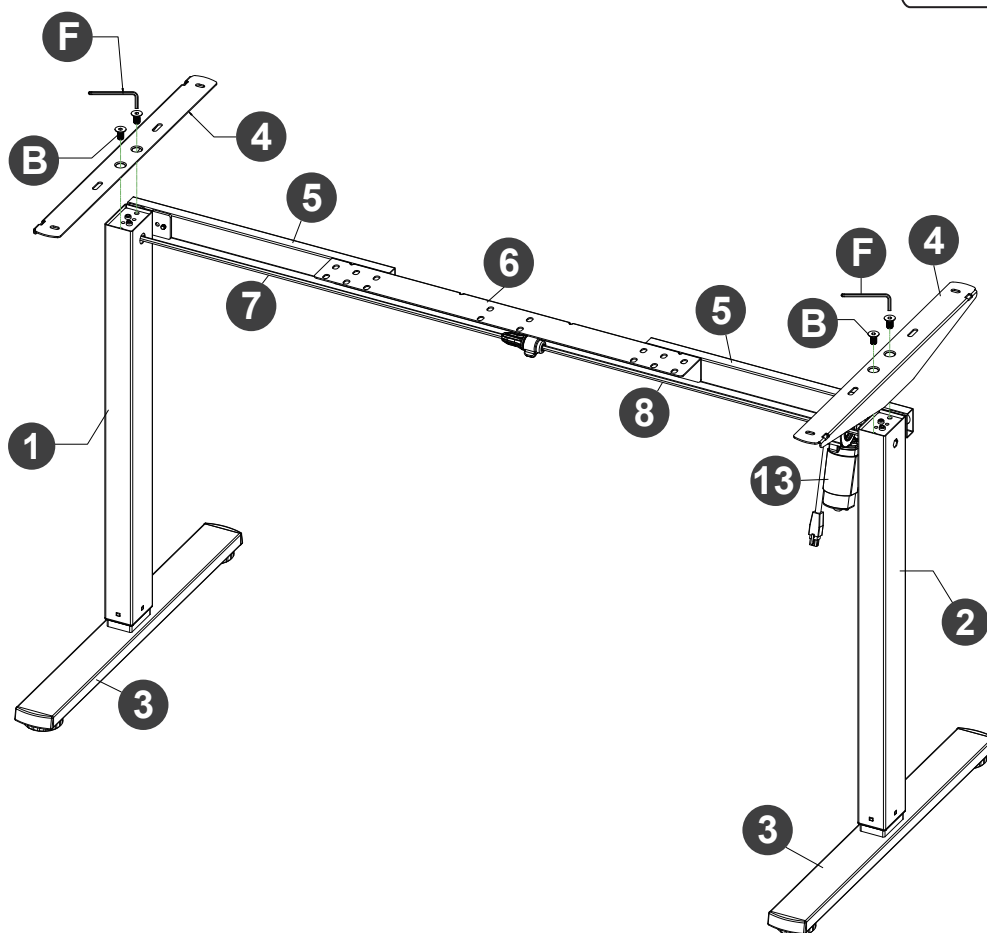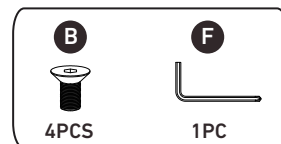


Step 10

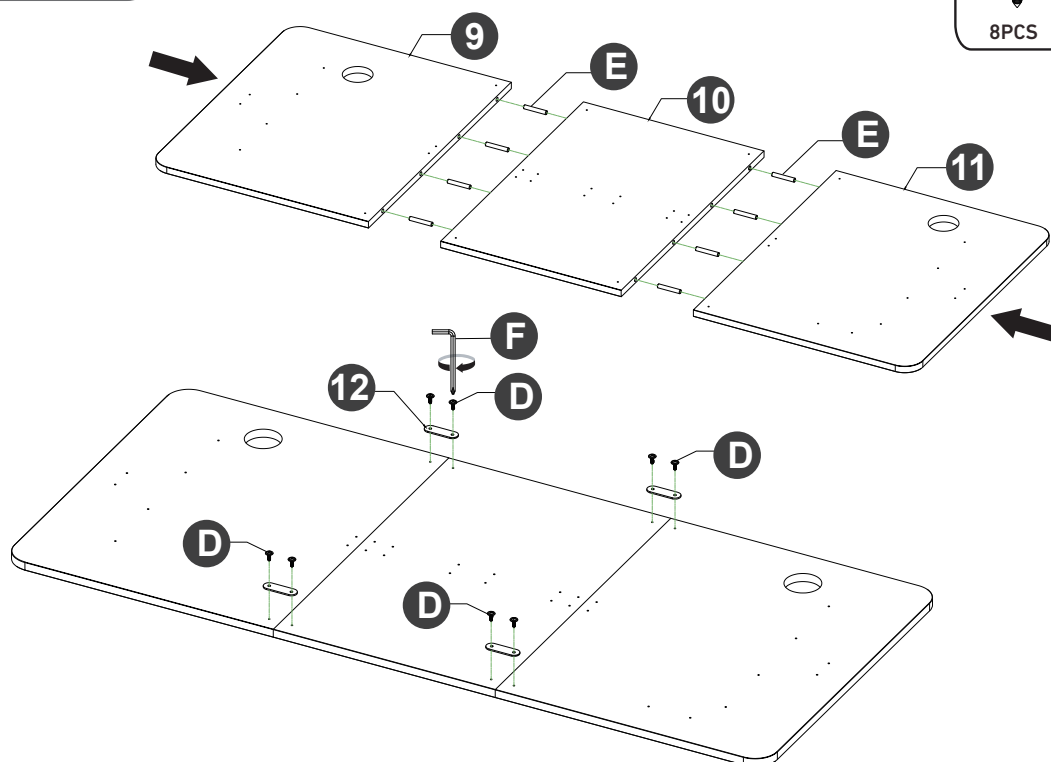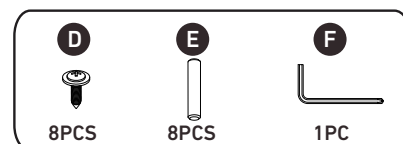

NOTE: Using a pistol drill (not included) works better.

Step 11

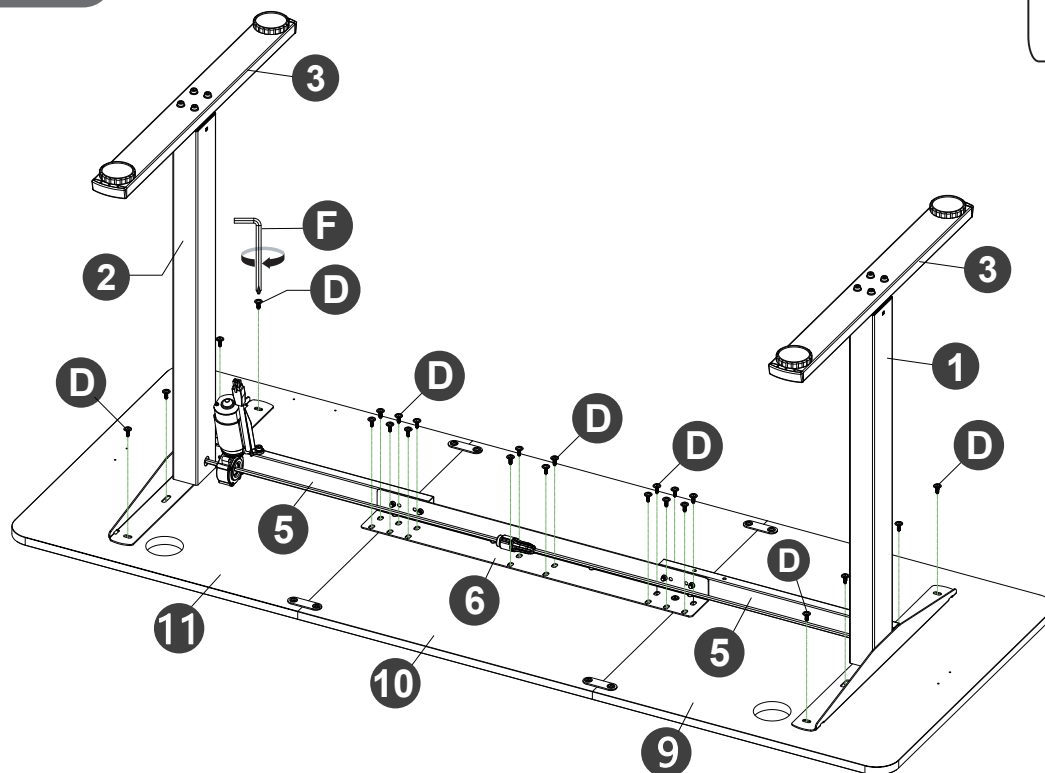


D
24PCS

F
1PC

NOTE: Using a pistol drill (not included) works better.

Step 12

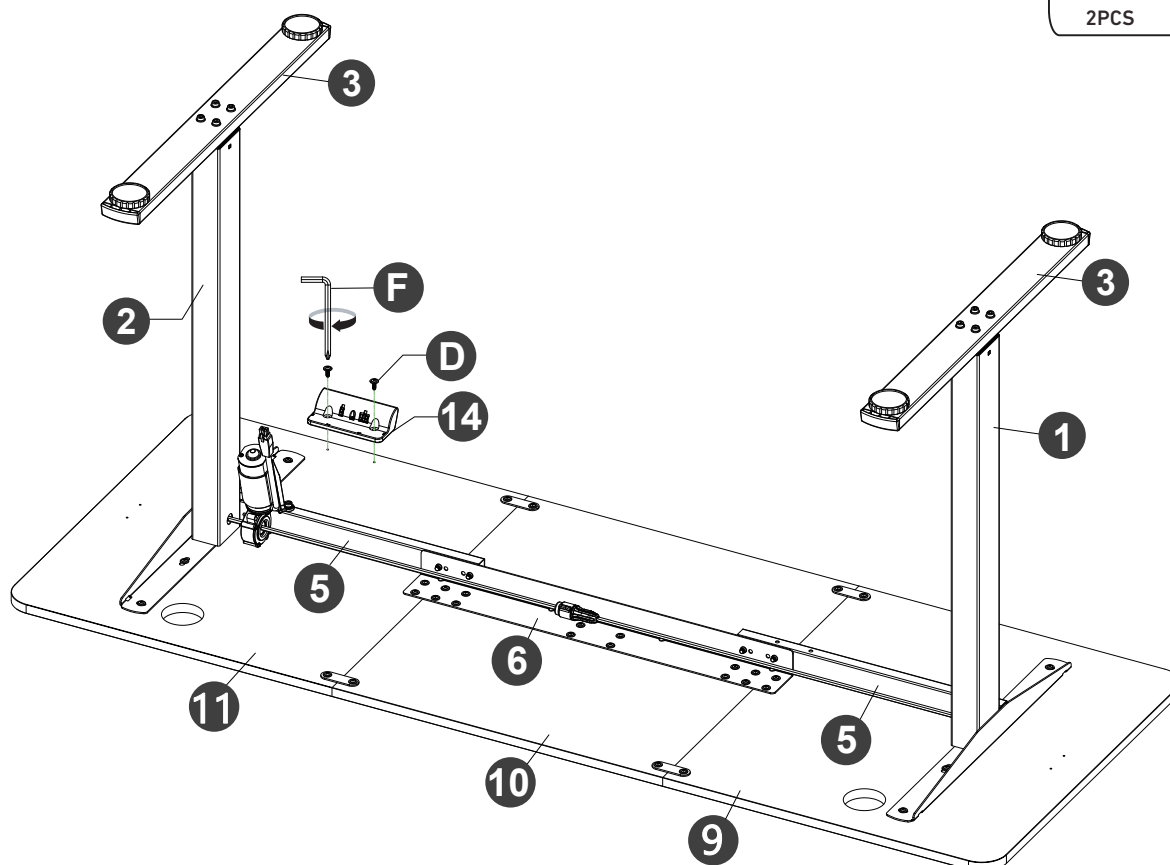


D
2PCS



F
1PC

NOTE: Using a pistol drill (not included) works better.


Step 13

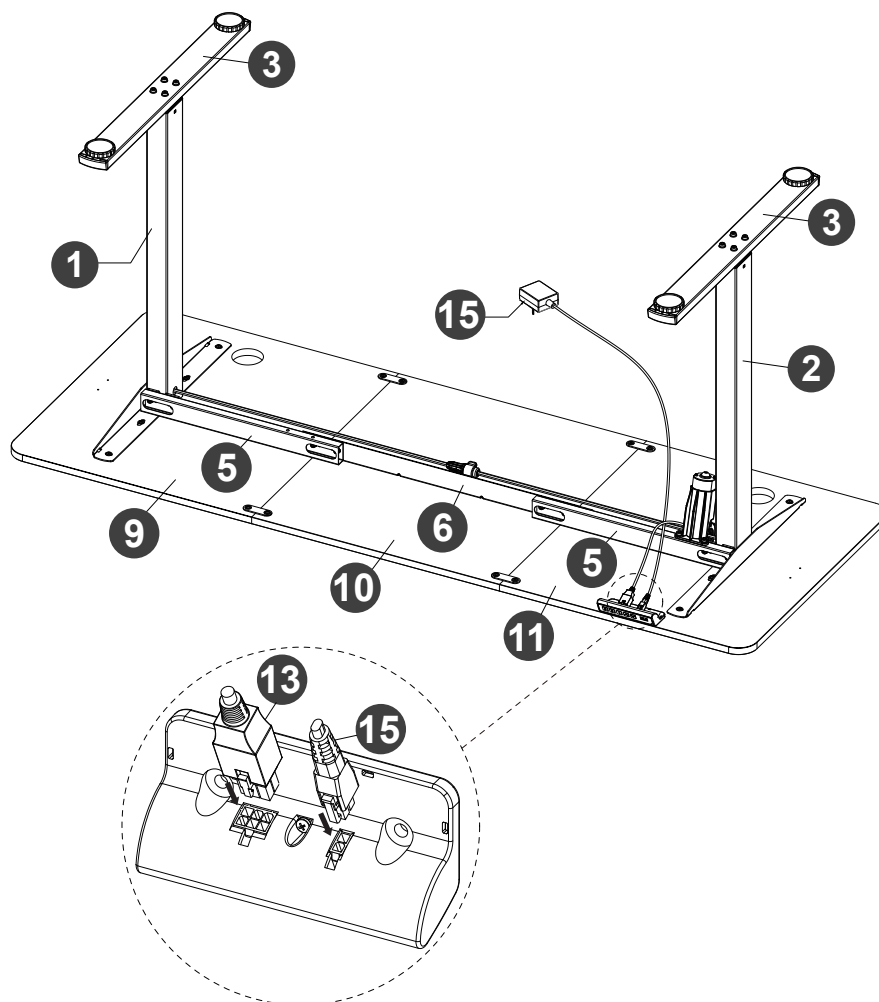

Step 14

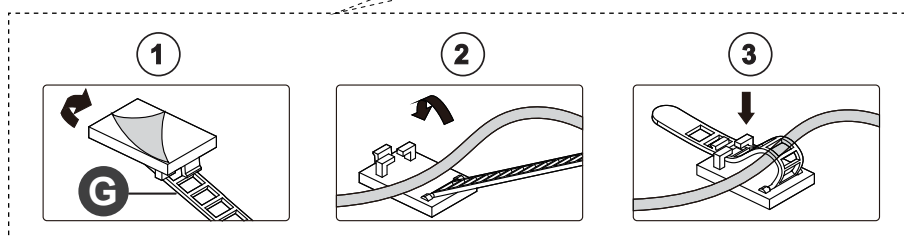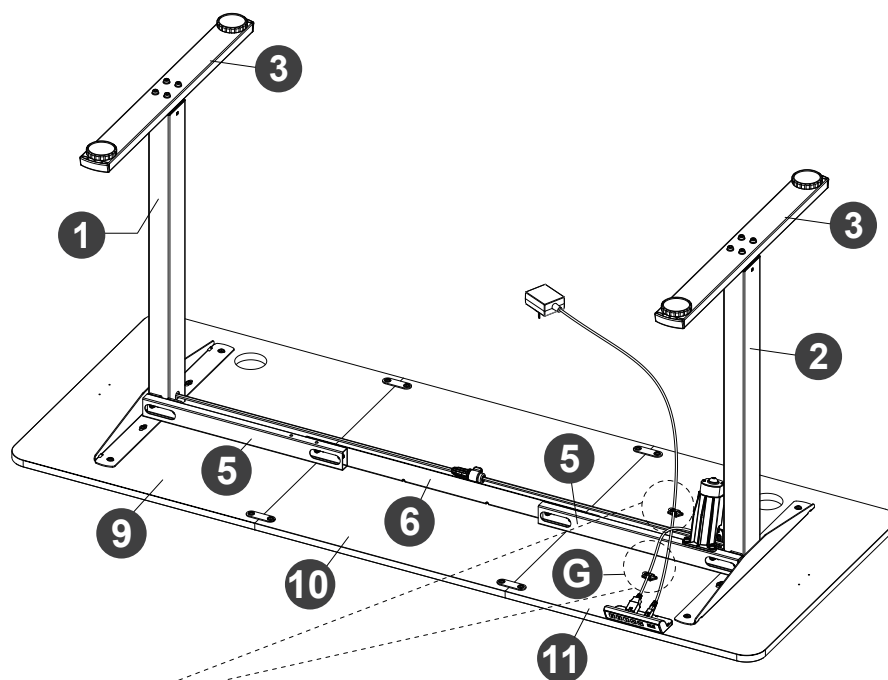


Step 15

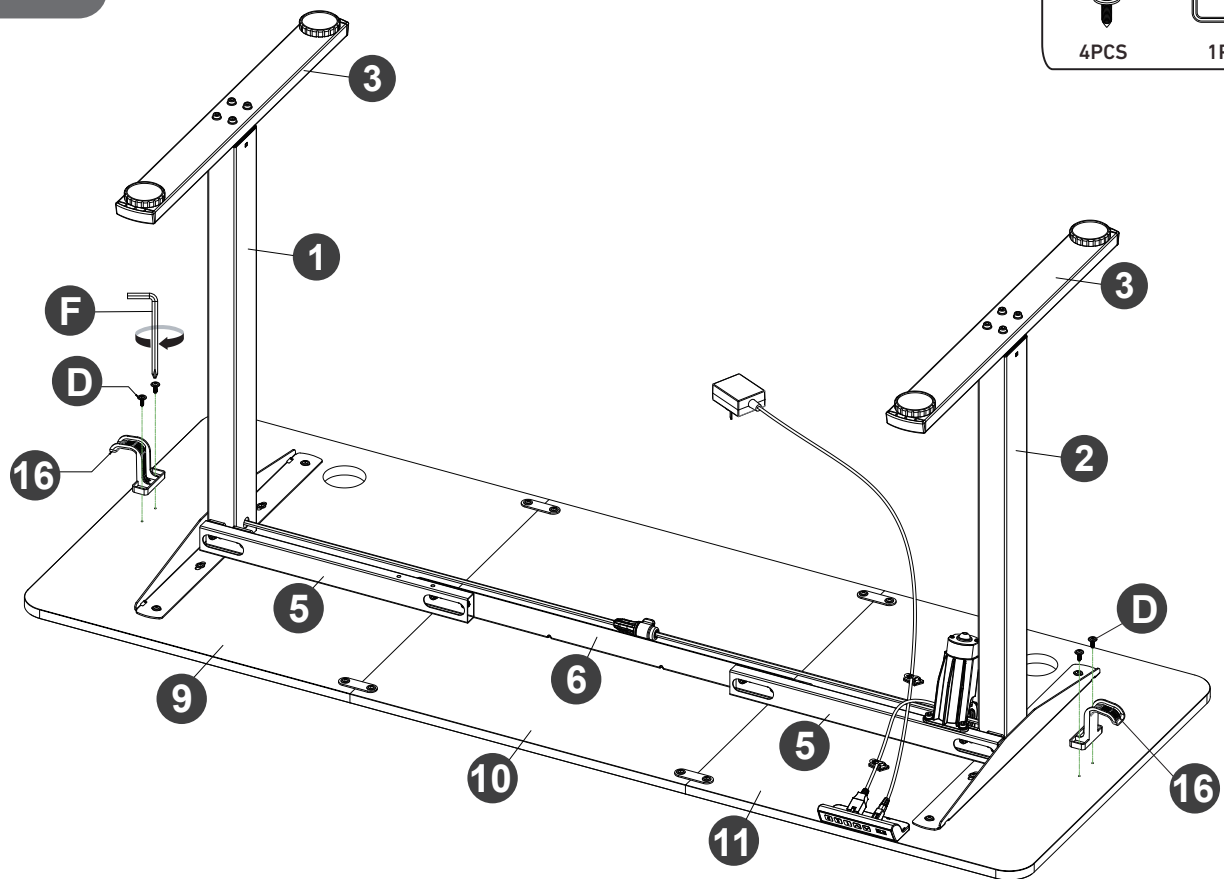

NOTE: Using a pistol drill (not included) works better.


Step 16

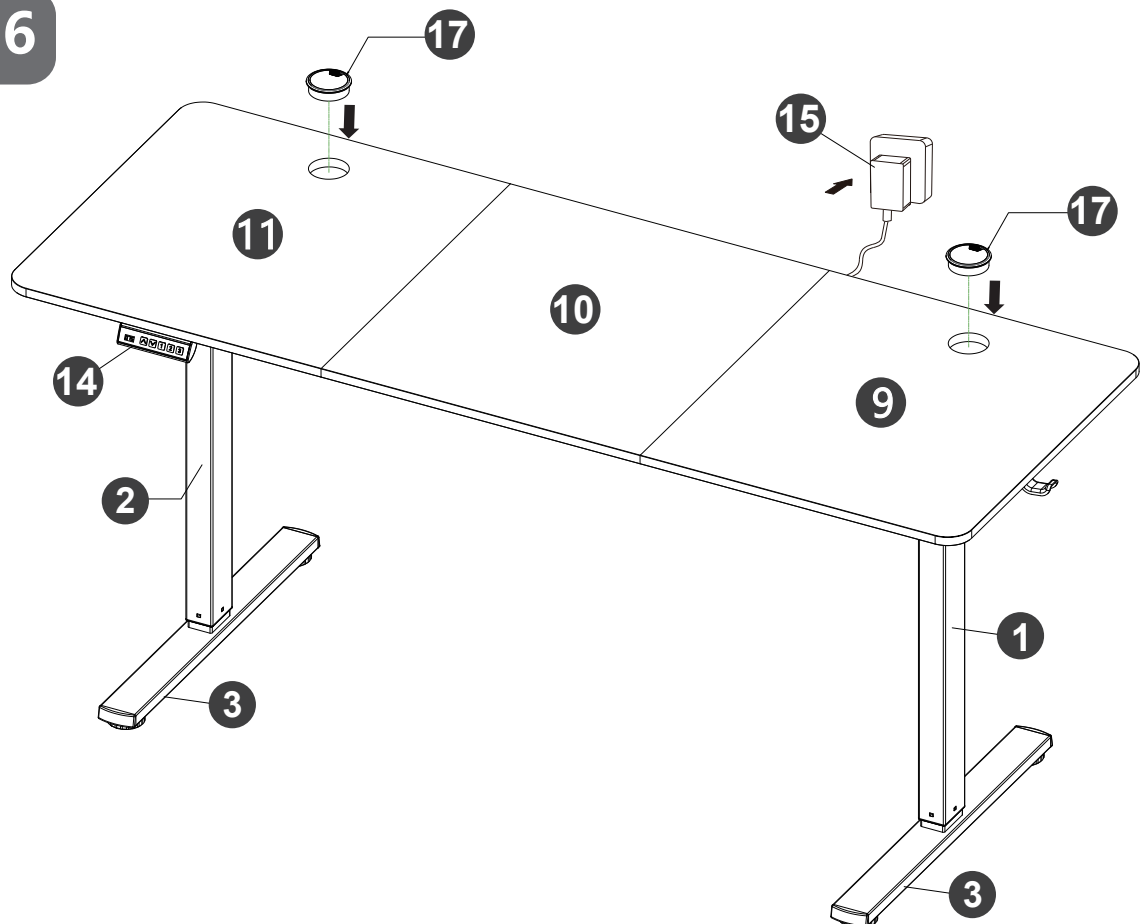




If the left side doesn't move up/down when using the desk, go back to **step 5-8**. Make sure the drive rod is installed correctly.


IMPORTANT! You must reset the desk before use:

Press and hold the "  " button for 5 seconds, and the screen will show "rES".

Continue holding until the desk goes down to its lowest level and comes back up slightly.

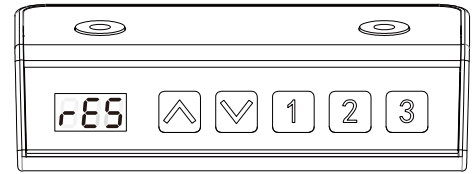

3 Using the Controller

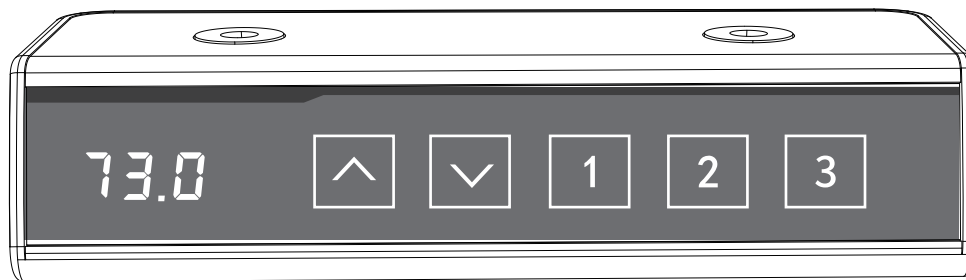


73.0

LED Display: Press any key once to wake up the display.




Press the **1** or **2** or **3** button, the desk will move to the height that was previously set for that button.



Long press the  button to raise the desk continually, and desk will stop when the button was released or at the max height (118cm)




Long press the  button to lower the desk continually, and desk will stop when the button was released or at the lowest height (73cm)




Memory button setting: Adjust desk to the height you prefer, then long press the button **1** or **2** or **3** until LED display shows H1 or H2 or H3 and flashes for about 3 seconds. Once the LED display shows the height you already set, the height memory setting is done.

Reset

Press and hold the  button for 5 seconds, and the screen will show 'RES.'
Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes

Protection Mode Error Codes	
Hot	Overheat protection: When the motor operates continuously, it will stop running to prevent damage caused by overheating. Wait for a period of time (15–20minutes) before making any further height adjustments.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.

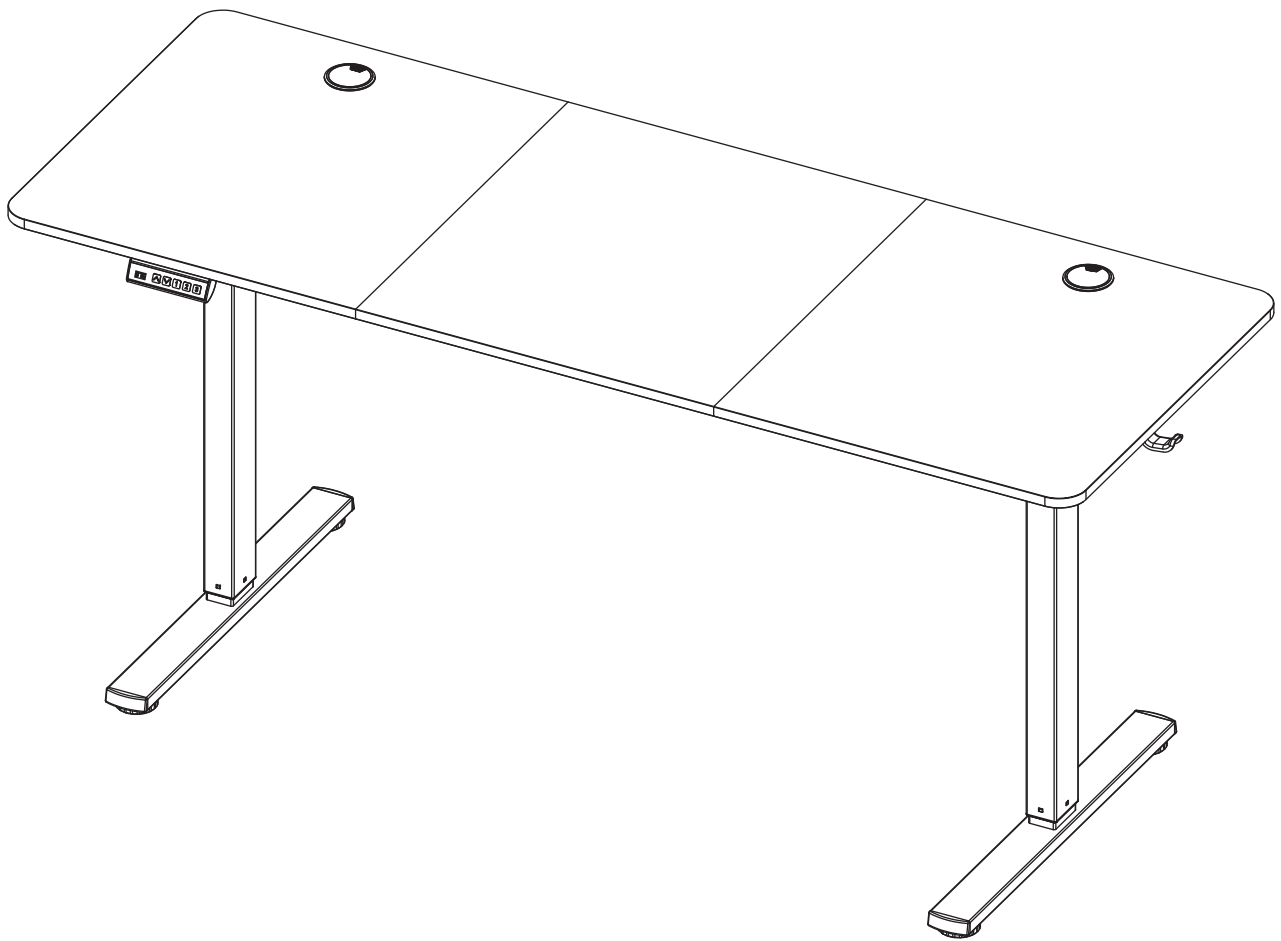

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.