ASSEMBLY AND INSTALLATION INSTRUCTIONS
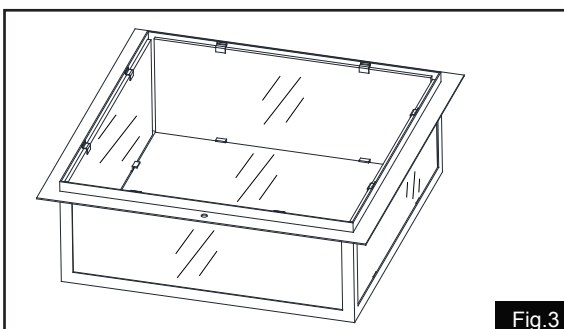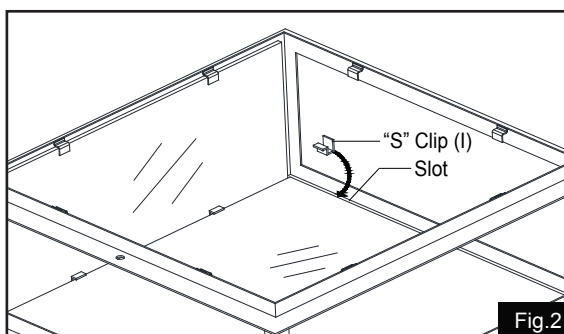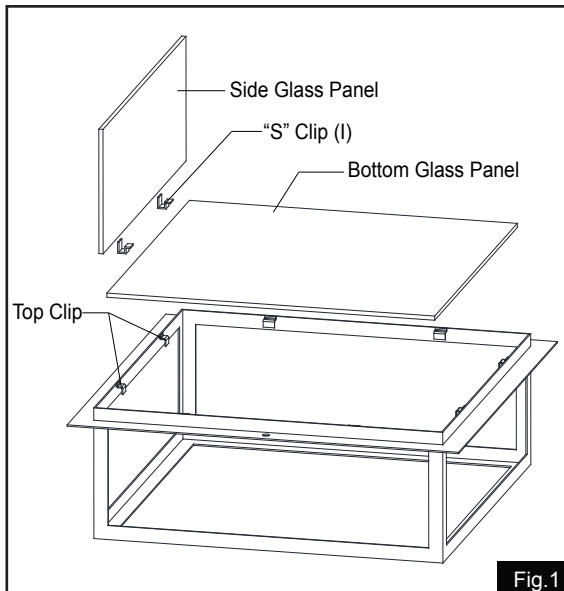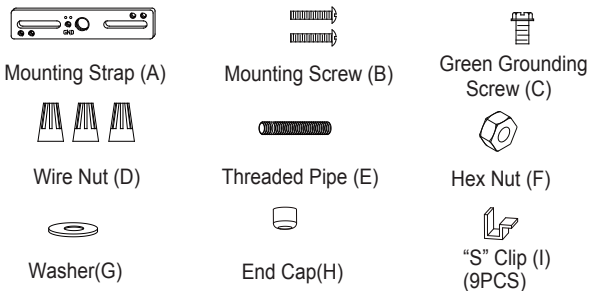
T0241

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

Mounting Strap (A)

Mounting Screw (B)

Green Grounding Screw (C)

Wire Nut (D)

Threaded Pipe (E)

Hex Nut (F)

Washer(G)

End Cap(H)

"S" Clip (I) (9PCS)

Outlet Box
House Grounding Wire
Hex Nut (F)
Washer (G)
Mounting Strap (A)
Green Grounding Screw (C)
Mounting Screw (B)
Threaded Pipe(E)
Wire Nut (D)
Fixture Wire
Fixture Grounding Wire
Ceiling Pan
Socket
Small Threaded Pipe
End Cap(H)
Bulb Type A Max.60W (not included)
Metal Frame
Bolt Nut

Side Glass Panel
"S" Clip (I)
Bottom Glass Panel
Top Clip

Fig.1

"S" Clip (I)
Slot

Fig.2

Fig.3

Installation Steps
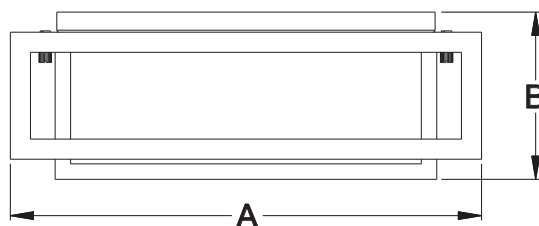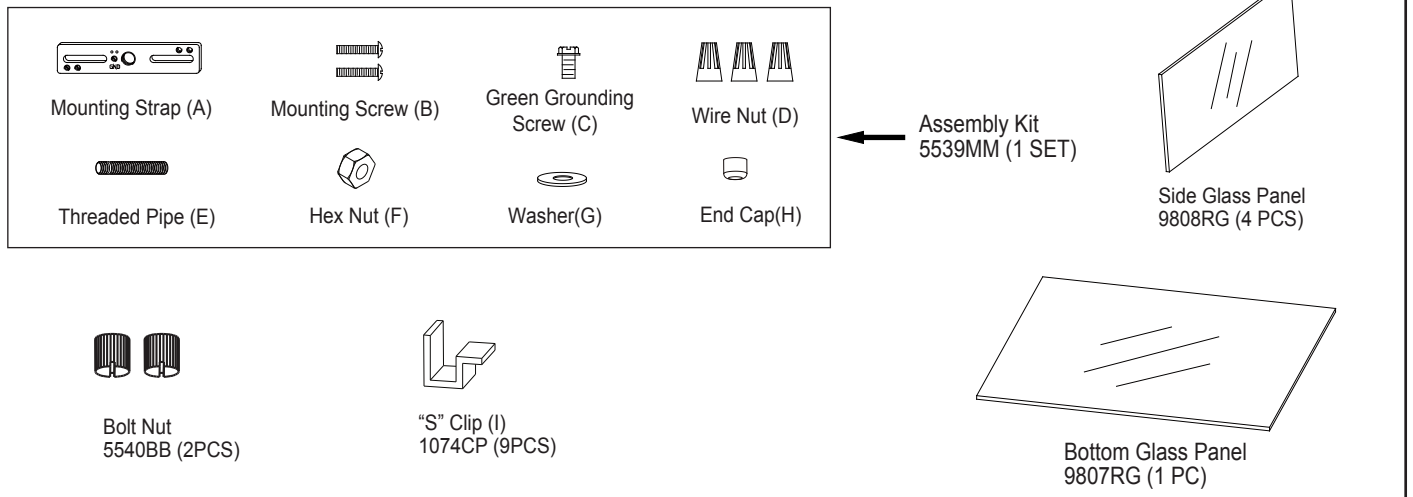
1. Attach the threaded pipe to the mounting strap, and then secure it with a washer and a hex nut.

2. Attach mounting strap to outlet box using two mounting screws.

3. Remove two bolt nuts to separate the metal frame from ceiling pan.

4. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
   ---Connect the hot wire (usually black insulation) from the power source to the black wire from the fixture.
   ---Connect the neutral wire (usually white insulation) from the power source to the white wire from the fixture.
   ---Attach the fixture grounding wire (usually green insulation or bare wire) to the mounting strap with the green grounding screw, or connect to the source grounding wire if available.
   Carefully put the wires back into the outlet box.

5. Attach the ceiling pan to the mounting strap by inserting threaded pipe into the center hole of the ceiling pan, and then screw the end cap to secure ceiling pan.

6. Install two bulbs (not included). Check relamping label at socket area or packaging for maximum allowed wattage.

7. Place the bottom glass panel into the metal frame, and then set eight "S"clips on the slot and fix the bottom glass panel by inserting the side glass panels onto the "S"clips, finally press the top clips of the metal frame to secure the side glass panels. (See Fig 1. / Fig 2. / Fig 3.)

8. Attach the metal frame back to ceiling by inserting small threaded pipes into holes on metal frame, and then secure it with two bolt nuts.

The following parts are available for re-order if damaged or missing.

Spare Parts List:

Mounting Strap (A)

Mounting Screw (B)

Green Grounding Screw (C)

Wire Nut (D)

Threaded Pipe (E)

Hex Nut (F)

Washer(G)

End Cap(H)

Assembly Kit 5539MM (1 SET)

Side Glass Panel 9808RG (4 PCS)

Bolt Nut 5540BB (2PCS)

"S" Clip (I) 1074CP (9PCS)

Bottom Glass Panel 9807RG (1 PC)

B

A

A: 12"   B: 4-1/2"

VAXCEL

160304