




# OUTDOOR POST

MODEL #LWS0547D

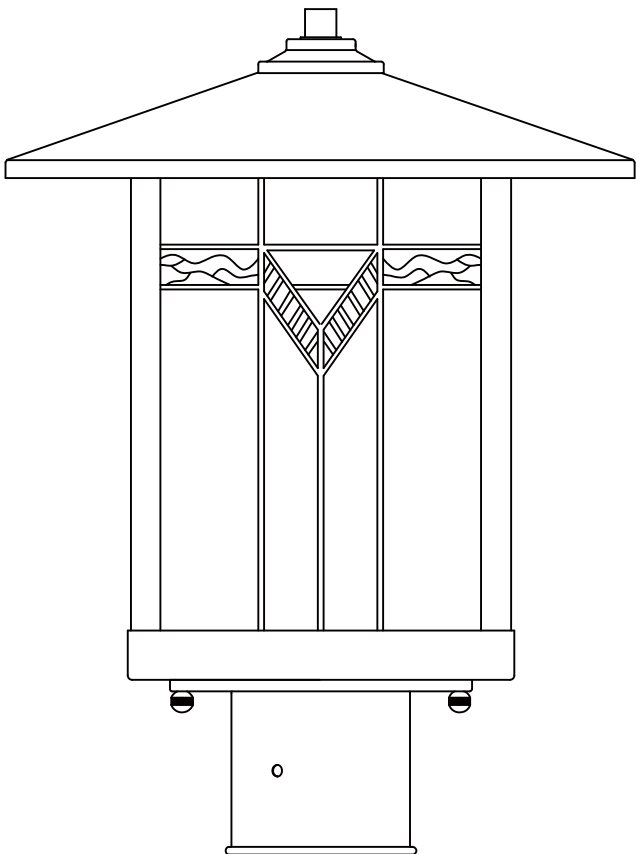

ATTACH YOUR RECEIPT HERE



Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_



**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PACKAGE CONTENTS

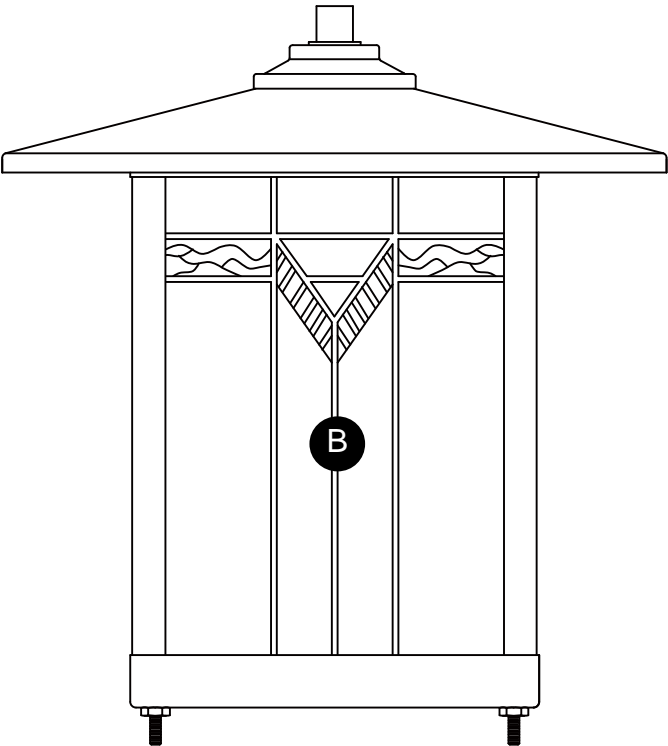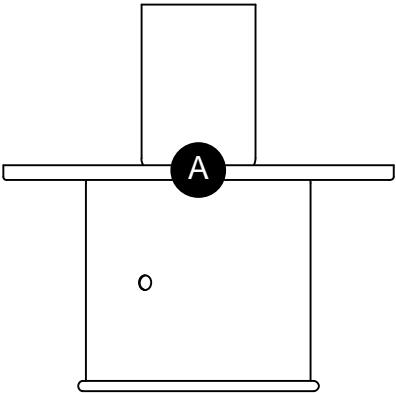


---



PART	DESCRIPTION	QUANTITY
A	Fixture body	1
B	Shade assembly	1

## HARDWARE CONTENTS (shown actual size)

---

<b>AA</b>	<b>BB</b>	<b>CC</b>
		
Wire Connector	Lock nut	Mounting Screw
Qty. 3	Qty. 2	Qty. 3

## SAFETY INFORMATION

---

Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

### WARNING

- **RISK OF ELECTRIC SHOCK** - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.
- **RISK OF FIRE** - Use bulbs specified by the markings and/or labels on the fixture.

### CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Turn off electricity to fixture before replacing the bulb(s).

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


**Estimated Assembly Time: 20 - 30 minutes**

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Wire cutters, Electrical tape, Safety goggles and Ladder.


Helpful Tools (not included): Wire strippers

## ASSEMBLY INSTRUCTIONS

1. Install the correct bulb referring to fixture markings and/or labels for maximum wattage . (Fig.1)

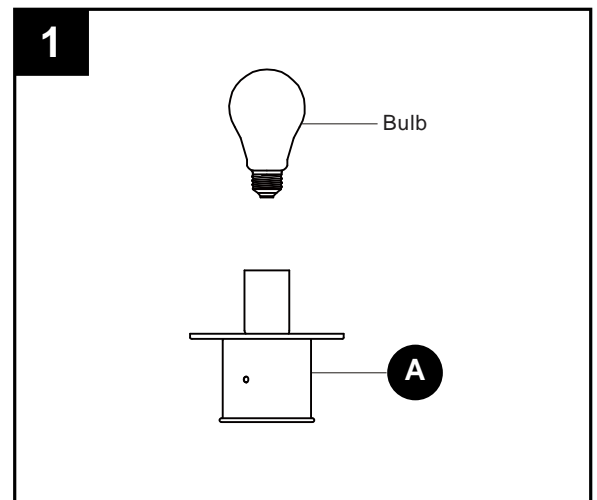

2. Place the shade assembly (B) over the socket. Pass the bolts at the bottom edge of the shade assembly (B) through the holes on the shade holder (A). secure by threading the lock balls (BB) onto the bolts. hand-tighten until snug . (Fig.2)

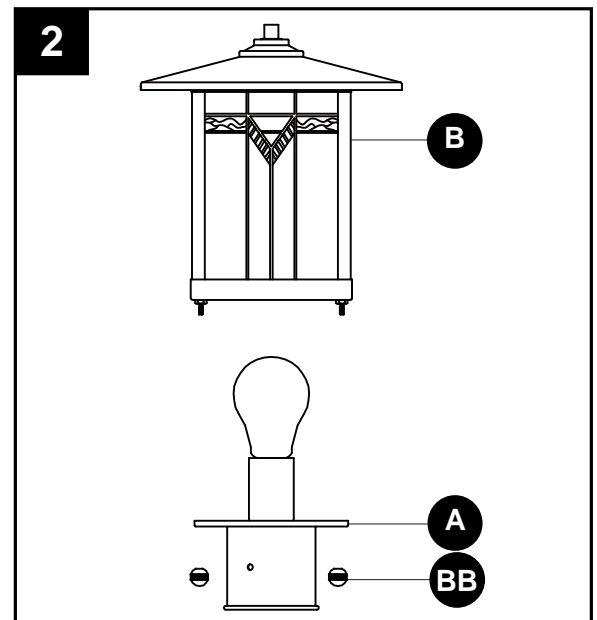

### Hardware Used

BB


Lock nut



x 2

## ASSEMBLY INSTRUCTIONS


- 3.a. Carefully fit the Post Fitter over the end of the Post (not supplied) , making sure the Post Fitter is fully seated .
- b. Mark the drill point for the (3) Mounting Screws , using (3) Mounting Holes as reference . After marking hole locations , remove Fixture from Post and drill 1/16" pilot holes for screws .
- c. Refer to Step 4 for wire connections .
- d. Coat the top 1" of the Post with Clear Silicone Caulk (not supplied) and position the Post Fitter onto the Post . Be sure to seat it completely , aligning the holes in the Fitter with the 1/16" Pilot Holes drilled into the post .
- e. Secure the Fixture to Post with (3) Mounting Screws . (Fig.3)

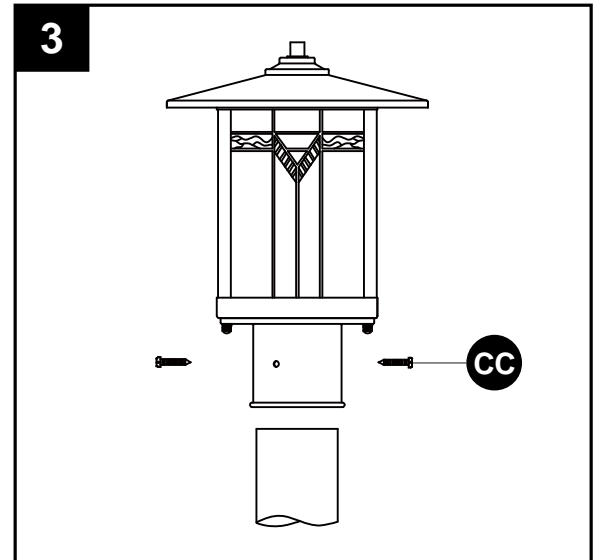

### Hardware Used

**CC** Mounting Screw  x 3

4. Attach ground fixture wire to the ground wire from the post (usually GREEN or BARE). Connect the neutral WHITE or RIBBED side fixture wire to the neutral usually WHITE wire from the post. Connect the hot BLACK or SMOOTH side fixture wire to the hot usually BLACK wire from the post. Fasten wires together with a wire connector (AA) and tightly wrap wire connector (AA) with electrical tape (not included).

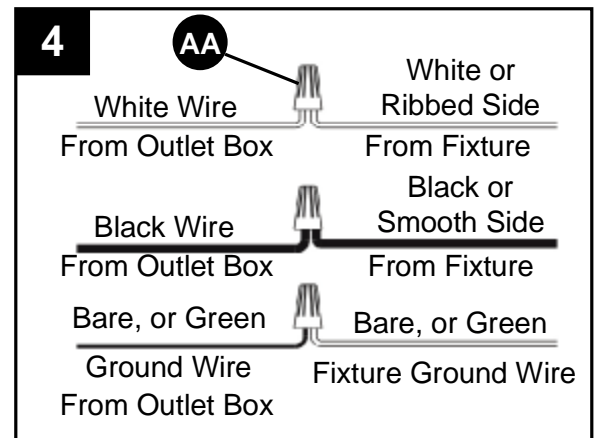

### Hardware Used

**AA** Wire Connector  x 3

## CARE AND MAINTENANCE

---

- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

## TROUBLESHOOTING

---

If you have any questions regarding the product, please call customer service at 1-866-439-9800, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulbs will not light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace the switch.
Fuse blows or the circuit breaker trips when light is turned on.	1. Crossed wires or power wire is grounding out.	1. Check wire connection.

## WARRANTY

---

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights. You may have other rights that vary from state to state.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-439-9800,  
8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
A	Fixture Body	1
B	Shade Assembly	1
AA	Wire Connector	3
BB	Lock Nut	2
CC	Mounting Screw	3

