

PENNINGTON
Aquagarden
beautifully simple water gardening

Aquagarden products by Pennington have been exclusively designed in partnership with Interpet UK a Leading British water garden company

Pennington,
1280 Atalanta Hwy, Madison.
GA 30650
www.PenningtonAquagarden.com

Leaflet Code: 10/10/14

PENNINGTON
Aquagarden
beautifully simple water gardening

Fountain pump

150-300 / 300-500

Congratulations on buying a Pennington water fountain pump.

This fountain pump is designed with advanced technology, to run a wide variety of water features. The compact powerful motors are easy to maintain having a single moving part impeller system.

Please carefully read the following guide, which will enable you to get the best from your fountain pump.

IMPORTANT

Please attach proof of purchase to this manual and file in a safe place.

Please visit www.penningtonaquagarden.com
for helpful hints, tips, how-to videos and spares

Instructions español disponible descargar en:
www.PenningtonAquagarden.com

FOR INDOOR AND OUTDOOR USE IMPORTANT SAFETY INSTRUCTIONS

WARNING - TO REDUCE THE RISK OF ELECTRIC SHOCK, USE ONLY ON PORTABLE SELF-CONTAINED FOUNTAINS NO LARGER THAN 5 FEET IN ANY DIMENSION.

WARNING - RISK OF ELECTRIC SHOCK - THIS PUMP IS SUPPLIED WITH A GROUNDING CONDUCTOR AND GROUNDING TYPE ATTACHMENT PLUG. TO REDUCE THE RISK OF ELECTRIC SHOCK, BE CERTAIN THAT IT IS CONNECTED ONLY TO PROPERLY GROUNDED, GROUNDING-TYPE RECEPTACLE.

WARNING - TO REDUCE THE RISK OF ELECTRIC SHOCK, INSTALL ONLY ON A CIRCUIT PROTECTED BY A GROUND-FAULT CIRCUIT-INTERRUPTER (GFCI).

GROUNDING INSTRUCTION

WARNING - RISK OF ELECTRIC SHOCK - THIS PUMP IS SUPPLIED WITH A GROUNDING CONDUCTOR AND GROUNDING-TYPE ATTACHMENT PLUG. TO REDUCE THE RISK OF ELECTRIC SHOCK, BE CERTAIN THAT IT IS CONNECTED ONLY TO A PROPERLY GROUNDED, GROUNDING-TYPE RECEPTACLE.

WARNING - TO GUARD AGAINST INJURY, BASIC SAFETY PRECAUTIONS SHOULD BE OBSERVED, INCLUDING THE FOLLOWING:

A)

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- B) **DANGER** - TO AVOID POSSIBLE ELECTRIC SHOCK, SPECIAL CARE SHOULD BE TAKEN SINCE WATER IS EMPLOYED AND INTENDED FOR FOUNTAINS, WATERFALLS, AND PONDS, WHICH ARE COMPLETELY SUBMERSED FOR PUMPING WATER AND ARE SUITABLE FOR OUTDOOR USE. FOR EACH OF THE FOLLOWING SITUATIONS, DO NOT ATTEMPT REPAIRS BY YOURSELF; RETURN THE APPLIANCE TO AN AUTHORIZED SERVICE FACILITY FOR SERVICE OR DISCARD THE APPLIANCE. IF THE APPLIANCE SHOWS ANY SIGN OF ABNORMAL WATER LEAKAGE, IMMEDIATELY UNPLUG IT FROM THE POWER SOURCE. DO NOT OPERATE ANY APPLIANCE IF IT HAS DAMAGED CORD OR PLUG, OR IF IT IS MALFUNCTIONING OR HAS BEEN DROPPED OR DAMAGED IN ANY MANNER.
- C) CLOSE SUPERVISION IS NECESSARY WHEN ANY APPLIANCE IS USED BY OR NEAR CHILDREN.
- D) TO AVOID INJURY, DO NOT CONTACT MOVING PARTS DIRECTLY.
- E) CAREFULLY EXAMINE THE PUMP AFTER INSTALLATION, IT SHOULD NOT BE ENERGIZED IF THERE IS WATER ON PARTS NOT INTENDED TO BE WET.
- F) ALWAYS UNPLUG AN APPLIANCE FROM AN OUTLET WHEN NOT IN USE, BEFORE PUTTING ON OR TAKING OFF PARTS, AND BEFORE CLEANING. NEVER YANK CORD TO PULL PLUG FROM OUTLET. GRASP THE PLUG AND PULL TO DISCONNECT.
- G) DO NOT USE AN APPLIANCE FOR OTHER THAN INTENDED USE.
- H) READ AND OBSERVE ALL THE IMPORTANT NOTICES ON THE APPLIANCE.
- I) DO NOT PUMP FLAMMABILITY OR HEATED LIQUIDS.
- J) **DO NOT RUN DRY.**
- K) DO NOT CONNECT TO ANY VOLTAGE OTHER THAN SHOWN ON THE PUMP.
- L) ENSURE THAT THE POWER SUPPLY CORD LOOPS BELOW THE ELECTRICAL OUTLET TO FORM A "DRIP LOOP". THIS WILL PREVENT WATER FROM RUNNING DOWN THE CORD INTO THE ELECTRIC OUTLET.


SAVE THESE INSTRUCTIONS

CONTENTS

Getting to know your fountain pump	2
Parts Description/Spare Codes	2
Pump Performance Flow Chart	3
Technical Specifications	3
Accessories Supplied	4
Auto Shut-off Feature	5
Installation	5
Electrical Installation	5
Pump Connection and Adjustment	7
Maintenance and cleaning	8
Cleaning	8
Routine Maintenance	8
Annual Maintenance & Winter Storage	10
Troubleshooting	11
Faults and Problems Procedure	12
Guarantee	13

GETTING TO KNOW YOUR FOUNTAIN PUMP

FOUNTAIN PUMP 150-300 / 300-500

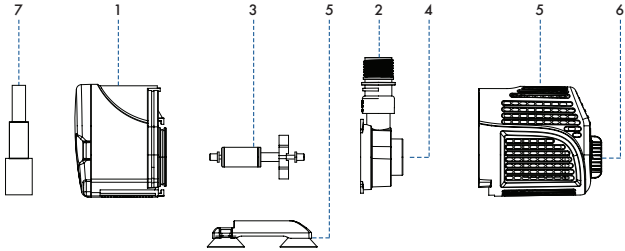

No.	Fountain Pump Part Description	Spare Code
1.	Pump motor	N/A
2.	Pump outlet	N/A
3.	Impellor complete (150-300)	100521189
3.	Impellor complete (300-500)	100521200
4.	Impellor cover	N/A
5.	Front pump cage	N/A
6.	Flow adjuster	N/A
7.	1/2"-3/4"-1" hose fitting	N/A


GETTING TO KNOW YOUR FOUNTAIN PUMP

150-300


TECHNICAL DATA

- 120 Volt
- 60Hz
- 15 Watts
- 264 gal/hr
- 3'7" max head
- 16 ft of cable

FLOW CHART

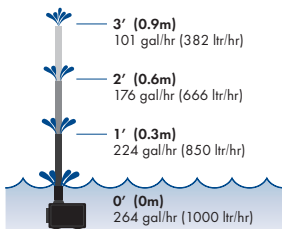

Dimensions

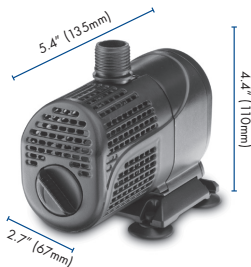


300-500

TECHNICAL DATA

- 120 Volt
- 60Hz
- 34 Watts
- 528 gal/hr
- 6'6" max head
- 16 ft of cable

FLOW CHART

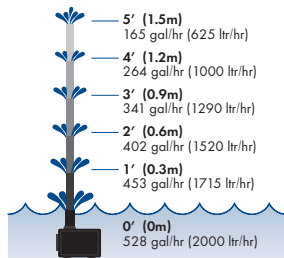

Dimensions




GETTING TO KNOW YOUR FOUNTAIN PUMP

Accessories supplied

Reduced cleaning - high surface area inlet pre-filter cover minimizes blocking

Economical, compact motor

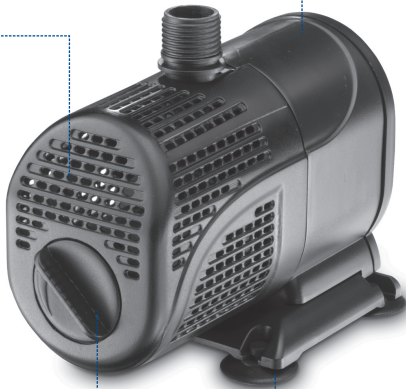

Adjustable flow control valve

Stable foot,
removable for
flexible location



For hose
1/2" / 3/4" / 1"

INSTALLATION

ELECTRICAL SAFETY INFORMATION:

Caution: Household indoor and outdoor use.



WARNING - Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface. Install only to covered Class A GFCI receptacle that has an enclosure that is weatherproof with the attachment plug cap inserted or removed.

The power supply must meet the specification of the product.

Pump

The electric cord is permanently connected and sealed in the motor body. If the supply cord is damaged the pump must not be used. Do not use the supply cord to lift the pump as this may cause damage.



WARNING - All models must be used with an GFCI. To reduce the risk of electric shock, connect only to a properly grounded, grounding-type receptacle. To reduce the risk of electric shock, install only on a circuit protected by a ground fault circuit interrupter (GFCI).

Do not remove the grounding pin from the power cord plug. This pump has been evaluated for use with fresh water only. Attention has been drawn to the fact that special rules may exist concerning the installation of your pump. These pumps must not be used in swimming pools, or areas where people are in contact with the water. Always disconnect the power source whilst the equipment is being installed, repaired, maintained or handled.



WARNING - The pump is provided with a thermal cut out that temporarily switches off the pump in case of overheating and the pump may automatically restart.

WARNING - Never run the inpond out of water for prolonged periods as this may cause irreparable damage.


WARNING - Risk of electric shock - This has not been investigated for use in swimming pools or marine areas.

INSTALLATION

GROUNDING INSTRUCTIONS - This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. The appliance is equipped with a cord having an appliance-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.



WARNING - Improper connection of the appliance-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance; if it will not fit the outlet; have a proper outlet installed by a qualified technician.

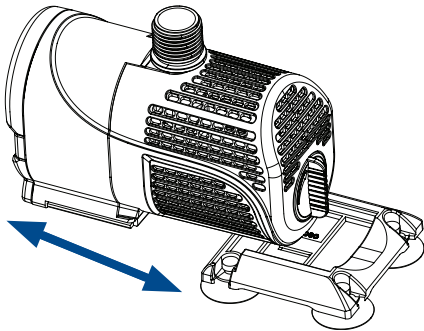

The pump foot is removable to aid installation in confined spaces.

INSTALLATION

Locating your Fountain Pump


The feature pump should be located on a firm and level base in the pond or water feature. The pump should be covered with water at all times. Make sure there is ample cable from the mains supply.

Place the pump in the desired location and then attach the hose connector that is suited to your water feature.

Tip: The larger 1" hose fitting will give maximum performance when fitted to the pump.

The flow control can now be adjusted, as seen in the adjusting flow control diagram.

Turn flow adjuster clockwise to increase flow, anticlockwise to decrease flow.

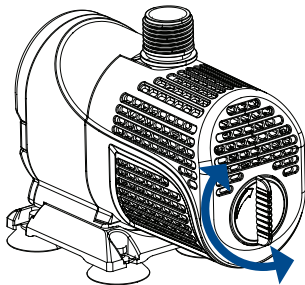


Connecting Outlet Hose

Warming the hose in a bucket of boiling water can aid fitting.

Always ensure that the smaller diameter hosetail is cut off and removed to prevent reduced pump performance.

Use the shortest possible hose lengths to minimise flow restrictions. Avoid folds and kinks in the hose, which will reduce flow and filter performance.

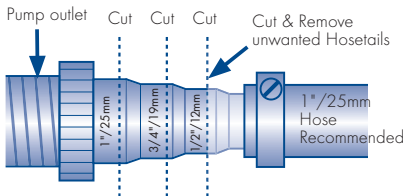

MAINTENANCE & CLEANING



WARNING - Failure to carry out routine maintenance will result in a shorter pump life and may invalidate the guarantee.


Routine Maintenance

Carry out routine maintenance when pump flow is visibly reduced.

1. Switch off electricity.
2. Remove the pump from the feature or pond (do not use the cable to lift the pump).
3. Follow steps 1 and 2.

STEP 1


Firmly pull the front and back filter cage from the motor body.
Thoroughly wash both parts and motor section in fresh water.

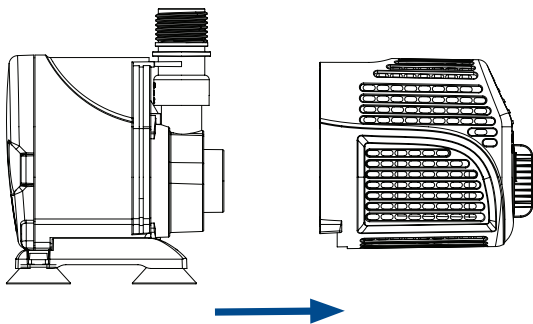


MAINTENANCE & CLEANING

STEP 2

Remove yellow impellor cover by turning anti-clockwise to release lock. Then pull firmly away from pump motor.

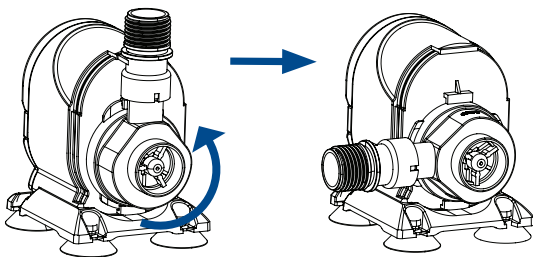

Remove impellor from the pump motor. Wash parts with fresh water carefully.

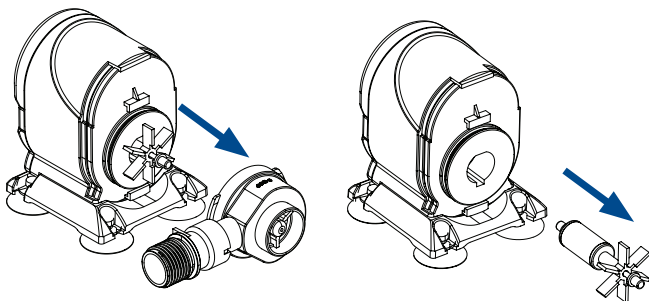

MAINTENANCE & CLEANING

Annual Maintenance

Dismantle the pump and examine all parts for wear or damage, replacing any parts that show obvious wear and/or damage. See getting to know your pump for parts/description and replacement parts codes.

Particular care should be taken to examine the cable entry point and the cable. If there is any sign of damage the pump should be discarded.

Winter Storage

The pump can be run in the pond or feature during the winter but care should be taken to ensure that it is fully immersed and cannot freeze solid. If the pump is not used during the winter, follow annual maintenance procedure and store frost-free in the house or garage until Spring.

TROUBLESHOOTING

Problem

Low flow from the pump

1. Ensure that the pump is fully submersed, and not sucking air due to lack of water in your feature.
2. Follow routine maintenance.
3. Ensure that the pipe work is not blocked, leaking or is laid so that it gets crushed or kinked.
4. Keep the height that water is to be pumped from the water surface (called head) to a minimum. The higher the head the lower the flow rate and the more wear on the pump.
5. Use the largest diameter, smoothest bore hose over the shortest distance and keep hose fittings to a minimum. This removes frictional loss of flow and so increases pump flow rates.

No flow from the pump

1. Check that the pump has not run dry due to lack of water.
2. Check power supply is on.
3. Check fuse and wiring (SEE ELECTRICAL INSTALLATION).
4. Follow low flow procedure as above.

If none of the above works see faults problem procedure on page 12 or visit www.penningtonaquagarden.com for helpful videos.

IMPORTANT

FAULTS - PROBLEMS PROCEDURE

Before returning your pump to your retailer, please carry out the following steps. This will solve most problems quickly and easily.

1. Ensure electrical procedure has been followed fully. Check fuse and any cable connectors/switch boxes.

NOTE: If the pump has overheated the thermal overload will temporarily switch off the pump.

2. Follow the steps below:
 - (a) Follow routine maintenance and check pump.
 - (b) Follow troubleshooting guide.
 - (c) Follow annual maintenance guide.
3. Return pump to point of purchase for inspection and advice.
You may need proof of purchase.

Please visit www.penningtonaquagarden.com for helpful hints, tips, how-to videos and spares.



Environment friendly disposal

You can help protect the environment. Please remember to respect the local regulations by handing in non-working electrical equipment to an appropriate waste disposal centre.

Consumer Advice contact details

Pennington

1280 Atlanta Hwy.

Madison, GA

30650

Tel: 1-800-285-7333

www.penningtonaquagarden.com

GUARANTEE

This product is guaranteed against defects in material and workmanship for 2 years from the date of purchase, under normal usage. The guarantee DOES NOT APPLY in case of improper use, negligence, lack of maintenance or accidental damage to the pump. If the pump fails due to a manufacturing fault within this period it will be either repaired or replaced free of charge. Liability is limited to replacement of the faulty product only; no other costs will be reimbursed. The guarantee is not transferable and does not affect your statutory rights. This guarantee does not confer any rights other than those expressly set out above. Excludes the pump impellor which may require replacing annually. If any parts need replacing, spares are available from your retailer.