



Magnum® TRUEAIRLESS® Electric Airless Sprayer

ProX17, ProX19

For portable spray applications of architectural paints and coatings. Not approved for use in explosive atmospheres or hazardous locations.



Important Safety Instructions

Read all warnings and instructions in this manual, related manuals, and on the unit. Be familiar with the controls and the proper usage of the equipment. Save these instructions.




Important Medical Information

Read the medical alert card provided with the gun. It contains injection injury treatment information for a doctor. Keep it with you when operating the equipment.



graco.com/contact

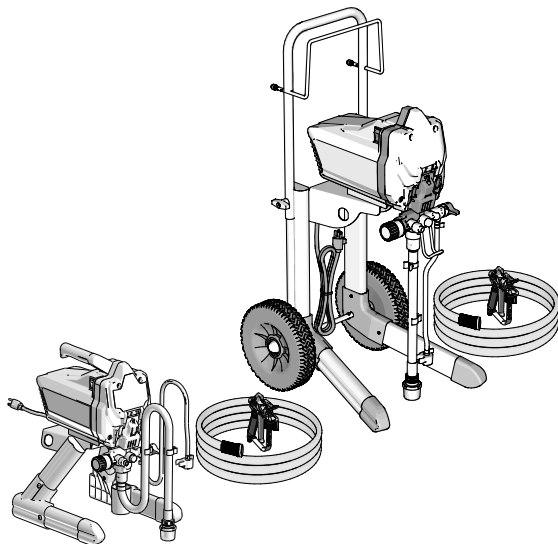

t105896a

CONTENTS

Before You Spray	3	Pump Repair	46
Models	3	Troubleshooting	50
Related Manuals	4	Magnum® TRUEAIRLESS® Electric Airless Sprayer	55
Translated Manuals	4	Parts	55
Safety Symbols	5	Electrical Schematic	63
Warnings	6	California Proposition 65	64
Technical Specifications	10		
Know Your Sprayer	12		
Know Your Controls	16		
Grounding Instructions	18		
Pressure Relief Procedure	20		
Setup	21		
Startup	22		
Flush Storage Fluid	22		
Strain the Paint	23		
Fill Pump (Prime Pump)	23		
Fill Gun and Hose	24		
Refill Paint Pail	25		
Blockages	25		
Spray	26		
Start	26		
Adjust Pressure Control	26		
Spray Pattern Quality	27		
Spray Techniques	27		
Trigger Gun	28		
Aim Gun	28		
Align Spray Pattern	29		
Spray Tip and Pressure Selection	30		
Clear Spray Tip Clog	32		
Spray Tip Installation	33		
Cleanup	34		
Cleaning from a Pail	34		
Cleanup with Power Flush Valve	36		
Clean InstaClean Filter	37		
Clean the Gun and Gun Filter	38		
Storage	39		
Short-Term Storage	39		
Long-Term Storage	40		
Reference	42		
Lacquer Conversion Kit	42		
Cleaning Fluid Compatibility	42		
Quick Reference	43		
Maintenance	45		
Airless Hoses	45		
Spray Tips	45		
Storage/Priming Tool	45		

BEFORE YOU SPRAY

REVIEW WARNINGS FOR IMPORTANT SAFETY INFORMATION


Important! Read carefully and practice good safety habits.

MODELS

The part numbers reflect distinct features and characteristics of the Magnum® TRUEAIRLESS® Electric Airless Sprayer.

MAGNUM TRUEAIRLESS ELECTRIC AIRLESS SPRAYER MODELS AND APPROVALS

Maximum Working Pressure: 3000 psi (20.7 MPa, 207 bar)

MODEL	STAND (SERIES)	CART (SERIES)	VAC	APPROVALS
ProX17	17G177 (A) 17K438 (A) CAN177 (A)	17G178 (A) CAN178 (A)	120 USA	 Intertek 110474 Certified to CAN/CSA C22.2 No. 68 Conforms to UL 1450
ProX19	17G179 (A) CAN179 (A)	17G180 (A) 17K439 (A) CAN180 (A)		

RELATED MANUALS

Additional documents are available to support the operation, repair, and maintenance of the Magnum® TRUEAIRLESS® Electric Airless Sprayer. Find English manuals and any available translations at www.graco.com.

Table 2-1: Related Manuals for Magnum TRUEAIRLESS Electric Airless Sprayer Operation Manual X017686

ENGLISH MANUAL	DESCRIPTION
X049555EN	SG Spray Guns, Instructions
X049031EN	ProXChange™ Repair Kit 24Y472, Repair

TRANSLATED MANUALS

Additional language documents are available to support all regions where the Magnum® TRUEAIRLESS® Electric Airless Sprayer is sold. Find any available translations at www.graco.com.









Table 2-2: Translations for Magnum TRUEAIRLESS Electric Airless Sprayer Operation Manual

LANGUAGE	MANUAL NUMBER
English	X017686EN
French	X017686FR
Spanish	X017686ES

SAFETY SYMBOLS

The following safety symbols appear throughout this manual and on warning labels. Read the table below to understand what each symbol means.

SYMBOL	MEANING
	Electric Shock Hazard
	Equipment Misuse Hazard
	Fire and Explosion Hazard
	Moving Parts Hazard
	Skin Injection Hazard
	Skin Injection Hazard
	Splash Hazard
	Toxic Fluid or Fumes Hazard
	Do Not Place Hands or Other Body Parts Near Fluid Outlet

SYMBOL	MEANING
	Do Not Put Hand in Front of Spray Tip
	Do Not Stop Leaks with Hand, Body, Glove or Rag
	Eliminate Ignition Sources
	Follow Pressure Relief Procedure
	Ground Equipment
	Read Manual
	Ventilate Work Area
	Wear Personal Protective Equipment



Safety Alert Symbol

This symbol indicates: Attention! Become Alert! Look for this symbol throughout the manual to indicate important safety messages.

WARNINGS

The following warnings apply throughout this manual. Read, understand, and follow the warnings before using this equipment. Failure to follow these warnings can result in serious injury.

WARNING



FIRE AND EXPLOSION HAZARD

Flammable fumes, such as solvent and paint fumes, **in work area** can ignite or explode. To help prevent fire and explosion:



- Do not spray flammable or combustible materials near an open flame or sources of ignition such as cigarettes, motors, and electrical equipment.



- Paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent fumes. All parts of the spray system, including the pump, hose assembly, spray gun, and objects in and around the spray area shall be properly grounded to protect against static discharge and sparks. Use Graco conductive or grounded high-pressure airless paint sprayer hoses.



- Verify that all containers and collection systems are grounded to prevent static discharge. Do not use pail liners unless they are anti-static or conductive.
- Connect to a grounded outlet and use grounded extensions cords. Do not use a 3-to-2 adapter.
- Do not use a paint or a solvent containing halogenated hydrocarbons.
- Keep spray area well-ventilated. Keep a good supply of fresh air moving through the area.
- Sprayer generates sparks. Keep pump assembly in a well-ventilated area at least 20 feet (6.1 m) from the spray area when spraying, flushing, cleaning, or servicing. Do not spray pump assembly.
- Do not smoke in the spray area or spray where sparks or flame is present.
- Do not operate light switches, engines, or similar spark producing products in the spray area.
- Do not plug or unplug power cords when flammable fumes are present.
- **Stop operation immediately** if static sparking occurs or you feel a shock. Do not use equipment until you identify and correct the problem.
- Keep area clean and free of paint or solvent containers, rags, and other flammable materials.
- Know the contents of the paints and solvents being sprayed. Read all Safety Data Sheets (SDSs) and container labels provided with the paints and solvents. Follow the paint and solvent manufacturer's safety instructions.
- Keep a working fire extinguisher in the work area.

 **WARNING**



ELECTRIC SHOCK HAZARD

This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.



- Turn off and disconnect power cord before servicing equipment.
- Connect only to grounded electrical outlets.
- Use only 3-wire extension cords.
- Ensure ground prongs are intact on power and extension cords.
- Do not expose to rain. Store indoors.
- Only use an authorized service center to replace a damaged power cord.



SKIN INJECTION HAZARD

High-pressure spray is able to inject toxins into the body and cause serious injury that can result in amputation. In the event that injection occurs, **get immediate surgical treatment.**



- Do not aim the gun at, or spray, any person or animal.
- Keep hands and other body parts away from the discharge. For example, do not try to stop leaks with any part of the body.
- Always use the spray tip guard. Do not spray without spray tip guard in place.
- Use Graco spray tips.
- Use caution when cleaning and changing spray tips. In the case where the spray tip clogs while spraying, follow the **Pressure Relief Procedure** for turning off the unit and relieving the pressure before removing the spray tip to clean.
- Equipment maintains pressure after power is turned off. Do not leave the equipment energized or under pressure while unattended. Follow the **Pressure Relief Procedure** when the equipment is unattended or not in use, and before servicing, cleaning, or removing parts.
- Check hoses and parts for signs of damage. Replace any damaged hoses or parts.
- This system is capable of producing 3000 psi (207 bar, 20.7 MPa). Use Graco parts or accessories that are rated a minimum of 3000 psi (207 bar, 20.7 MPa).
- Always engage the trigger lock when not spraying. Verify the trigger lock is functioning properly.
- Verify that all connections are secure before operating the unit.
- Know how to stop the unit and bleed pressure quickly. Be thoroughly familiar with the controls.

 **WARNING**



EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Always wear appropriate gloves, eye protection, and a respirator or mask when painting.
- Do not operate or spray near children. Keep children away from equipment at all times.
- Do not overreach or stand on an unstable support. Keep effective footing and balance at all times.
- Stay alert and watch what you are doing.
- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not kink or overbend the hose.
- Do not expose the hose to temperatures or to pressures in excess of those specified by Graco.
- Do not use the hose as a strength member to pull or lift the equipment.
- Do not spray with a hose shorter than 25 feet (7.6 m).
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.



PRESSURIZED ALUMINUM PARTS HAZARD

Use of fluids that are incompatible with aluminum in pressurized equipment can cause serious chemical reaction and equipment rupture. Failure to follow this warning can result in death, serious injury, or property damage.

- Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents.
- Do not use chlorine bleach.
- Many other fluids may contain chemicals that can react with aluminum. Contact your material supplier for compatibility.



MOVING PARTS HAZARD

Moving parts can pinch, cut, or amputate fingers and other body parts.



- Keep clear of moving parts.
- Do not operate equipment with protective guards or covers removed.
- Equipment can start without warning. Before checking, moving, or servicing equipment, follow the **Pressure Relief Procedure** and disconnect all power sources.



WARNING



TOXIC FLUID OR FUMES HAZARD

Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.

- Read Safety Data Sheets (SDSs) to know the specific hazards of the fluids you are using.
- Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.



PERSONAL PROTECTIVE EQUIPMENT

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to:

- Protective eyewear and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.

TECHNICAL SPECIFICATIONS

The table provides important information related to the Magnum® TRUEAIRLESS® Electric Airless Sprayer, including product attributes, measurements, and performance characteristics that support the use of the equipment.

Table 5-1: Technical Specifications for Magnum TRUEAIRLESS Electric Airless Sprayer

	US	METRIC
Sprayer		
Maximum fluid working pressure	3000 psi	20.7 MPa, 207 bar
Maximum delivery		
ProX17	0.34 gpm	1.3 lpm
ProX19	0.38 gpm	1.4 lpm
Maximum spray tip size		
ProX17	0.017 in.	0.43 mm
ProX19	0.019 in.	0.48 mm
Fluid outlet NPSM	1/4 in.	1/4 in.
Generator minimum	2500 W	
Power requirements	110–120 V, 8 A, 1Ø	
Dimensions		
Height		
ProX17, ProX19 Stand	21.2 in.	53.9 cm
ProX17 Cart	37 in.	94 cm
ProX19 Cart	36.7 in.	93 cm
Length		
ProX17, ProX19 Stand	15.1 in.	38.4 cm
ProX17 Cart	19.6 in.	49.8 cm
ProX19 Cart	20.2 in.	51.3 cm
Width		
ProX17, ProX19 Stand	13.2 in.	33.5 cm
ProX17 Cart	15.2 in.	38.6 cm


TECHNICAL SPECIFICATIONS

	US	METRIC
ProX19 Cart	17.2 in.	43.7 cm
Weight		
ProX17, ProX19 Stand	27.3 lb.	12.4 kg
ProX17 Cart	37.5 lb.	17 kg
ProX19 Cart	41.2 lb.	18.7 kg
Storage temperature range ♦ ❖	-30° to 160°F	-35° to 71°C
Operating temperature range †	40° to 115°F	4° to 46°C
Materials of Construction		
Wetted materials on all models	Stainless steel, brass, leather, ultra-high molecular weight polyethylene (UHMWPE), carbide, nylon, aluminum, PVC, polypropylene, fluoroelastomer, plated steel	
Notes		
* Startup pressures and displacement per cycle may vary based on suction condition, discharge head, air pressure, and fluid type.		
♦ When pump is stored with non-freezing fluid. Pump damage will occur if water or latex paint freezes in pump.		
❖ Damage to plastic parts may result if impact occurs in low temperature conditions.		
† Changes in paint viscosity at very low or very high temperatures can affect sprayer performance.		

KNOW YOUR SPRAYER

The diagrams highlight the controls and features on the Magnum® TRUEAIRLESS® Electric Airless Sprayer that are used during typical operation.

PROX STAND MODEL

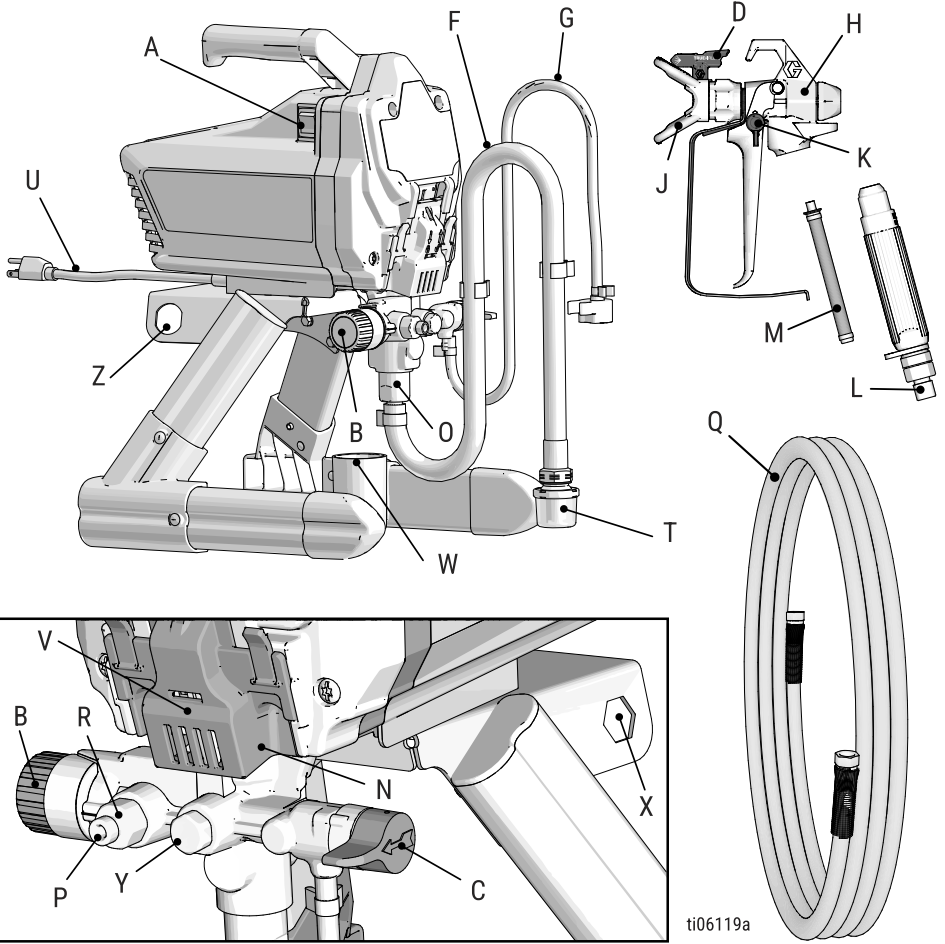

ti06119a


Figure 6-1: Components for ProX Stand Model

KEY

- A Power - ON/OFF Switch
 - B Pressure Control Knob
 - C Prime/Spray Valve
 - D Spray Tip
 - F Suction Tube
 - G Drain Tube (with diffuser)
 - H Airless Spray Gun
 - J Spray Tip Guard
 - K Gun Trigger Lock
 - L Gun Fitting
 - M Gun Filter (inside handle)
 - N ProXChange™ Pump (behind Easy Access Door)
 - O Inlet Valve
 - P Airless Hose Connection
 - Q Airless Hose
 - R InstaClean™ Filter (inside fluid outlet)
 - T Inlet Screen
 - U Power Cord
 - V Easy Access Door
 - W Suction Tube Drip Cup
 - X Pump Removal Tool
 - Y Outlet Valve
 - Z Inlet Valve Removal Tool
- Model/Serial Tag (Not shown, located on bottom of unit.)

See **Quick Reference** for more information.

PROX CART MODEL

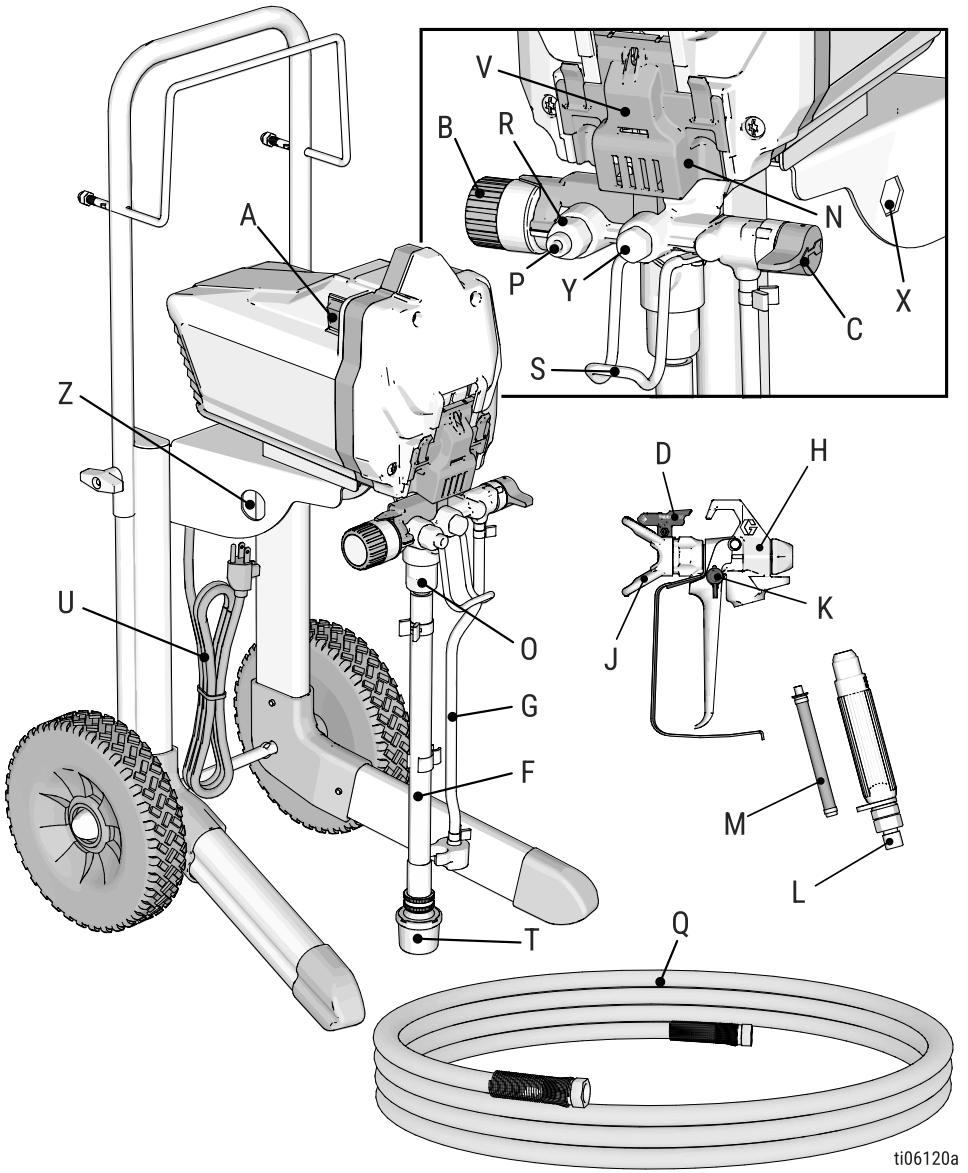

ti06120a

Figure 6-2: Components for ProX Cart Model


KEY

- A Power - ON/OFF Switch
 - B Pressure Control Knob
 - C Prime/Spray Valve
 - D Spray Tip
 - F Suction Tube
 - G Drain Tube (with diffuser)
 - H Airless Spray Gun
 - J Spray Tip Guard
 - K Gun Trigger Lock
 - L Gun Fitting
 - M Gun Filter (inside handle)
 - N ProXChange™ Pump (behind Easy Access Door)
 - O Inlet Valve
 - P Airless Hose Connection
 - Q Airless Hose
 - R InstaClean Filter (inside fluid outlet)
 - S Pail Hanger
 - T Inlet Screen
 - U Power Cord
 - V Easy Access Door
 - X Pump Removal Tool
 - Y Outlet Valve
 - Z Inlet Valve Removal Tool
- Model/Serial Tag (Not shown, located on bottom of unit.)

See **Quick Reference** for more information.


KNOW YOUR CONTROLS

Power

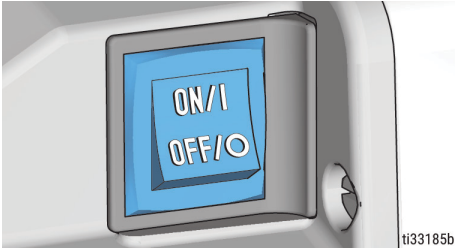


The ON/OFF power switch controls the main power to your sprayer.

Pressure

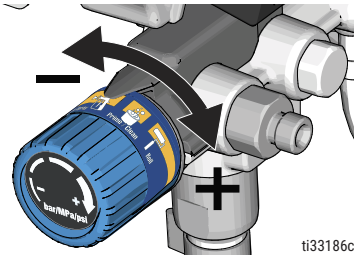

The Pressure Control Knob increases or decreases the pressure and flow of the paint.

Prime/Spray

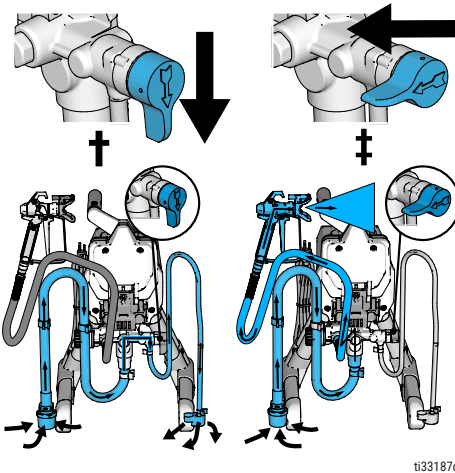


The Prime/Spray Valve directs the fluid to either the Drain Tube or the hose and gun. The Prime/Spray Valve is used to prime the sprayer, which means to evacuate the air out of the pump, hose, and gun.

The gun will not spray if there is air in the system. It is necessary to prime the pump, hose, and gun any time air enters the Suction Tube.

† Prime Position - Fill Pump (Prime Pump)

‡ Spray Position - Fill Gun and Hose

Spray Tip

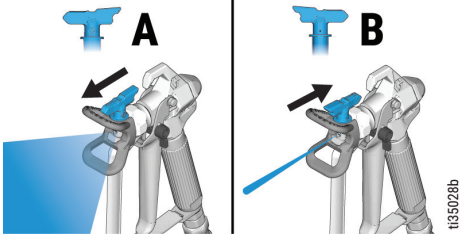




The Spray Tip is the key to airless spray technology. High-pressure paint pumped through the very small hole in the Spray Tip comes out as a spray.

The Spray Tip has the ability to be reversed and quickly clear clogs.


- A) Spray
- B) Unclog

GROUNDING INSTRUCTIONS


Properly ground the Magnum® TRUEAIRLESS® Electric Airless Sprayer to help ensure correct operation.

⚠ WARNING			
			
<p>The equipment must be grounded to reduce the risk of static sparking. Electric or static sparking can cause fumes to ignite or explode. Grounding provides an escape wire for the electric current. To avoid static sparking and electric shock:</p> <ul style="list-style-type: none"> • Only connect the sprayer to an outlet having the same configuration as the plug. • Do not modify the plug provided. If it does not fit the outlet, have the proper outlet installed by a qualified electrician. • Do not use a 3-to-2 adapter with this sprayer. 			

This sprayer is equipped with a cord having a grounding wire with an appropriate grounding plug. This sprayer is for use on a nominal 120 V circuit and has a grounding plug similar to the plug installed in the figure below. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and regulations.

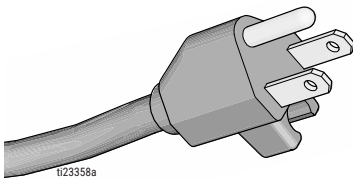

Check with a qualified electrician or serviceman when the grounding instructions are not completely understood, or when in doubt as to whether the sprayer is properly grounded.


⚠ WARNING			
			
<p>Improper installation of the grounding plug is able to result in a risk of electric shock. When repairing or replacing the cord or plug, do not connect the grounding wire to either power terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.</p>			

Always use a metal pail for oil-based materials when sprayer is flushed or pressure is relieved.


Follow local code. Use only conductive metal pails placed on a grounded surface such as concrete.

Do not place pail on a non-conductive surface such as paper or cardboard, which interrupts grounding continuity.

Always ground a metal pail: Connect a ground wire to the pail. Clamp one end to the pail and the other end to a true earth ground such as a water pipe.

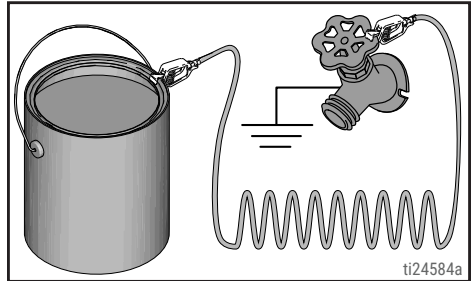

To maintain ground continuity when sprayer is flushed or pressure is relieved: Hold metal part of gun firmly to the side of a grounded metal pail, then trigger the gun.

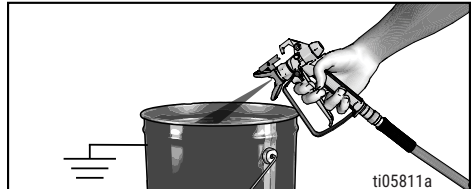

EXTENSION CORDS

- Use only a 3-wire extension cord that has a grounding plug and a grounding receptacle that accepts the plug on the product.
- Make sure the extension cord is not damaged.
- If an extension cord is necessary, use 12 AWG (2.5 mm²) minimum to carry the current that the sprayer draws. An undersized cord results in a drop in line voltage and loss of power and overheating.

PRESSURE RELIEF PROCEDURE

Relieve pressure on the Magnum® TRUEAIRLESS® Electric Airless Sprayer when operation is stopped, and before cleaning, checking, or servicing the equipment.




Follow the Pressure Relief Procedure whenever you see this symbol.

WARNING




This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashed fluid and moving parts, follow the **Pressure Relief Procedure** whenever sprayer is stopped and before sprayer is cleaned or checked, and before equipment is serviced.


1. Turn ON/OFF switch to the **OFF** position.

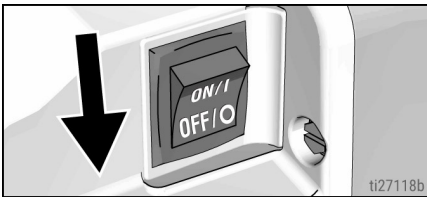


2. Engage the Gun Trigger Lock. Always engage the Gun Trigger Lock when sprayer is stopped to prevent the gun from being triggered accidentally.

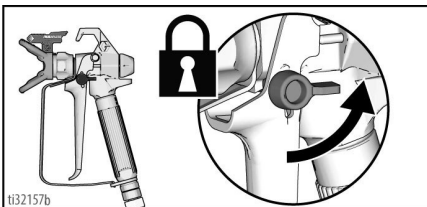


3. Turn Pressure Control Knob to lowest setting.

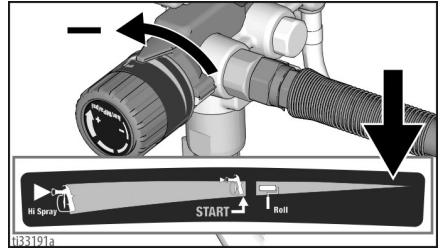


4. Put Drain Tube into a waste pail and turn Prime/Spray Valve down to **PRIME** position to relieve pressure.

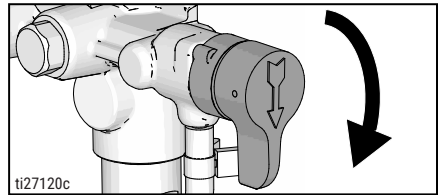

5. Hold the gun firmly to a pail. Point gun into pail. Disengage the Gun Trigger Lock and trigger the gun to relieve pressure.

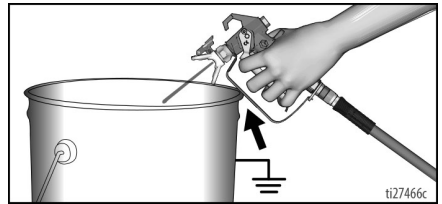

6. Engage the Gun Trigger Lock.

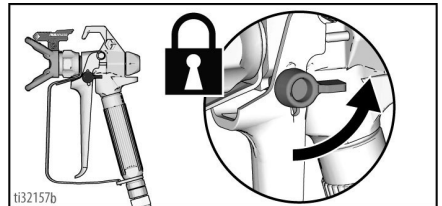

7. If you suspect that pressure has not been fully relieved, see **Blockages**.

NOTE:

Leave Prime/Spray Valve in the **PRIME** position until you are ready to spray.


SETUP

When using the equipment for the first time or after long term storage, follow the steps to prepare the Magnum® TRUEAIRLESS® Electric Airless Sprayer for operation.


ASSEMBLE YOUR SPRAYER

1. Connect airless hose to airless hose connection (P) on sprayer. Use wrench to tighten securely.
2. Connect the other end of the hose to the gun. Use two wrenches to tighten securely to gun.

If hose is already connected, make sure connections are tight.

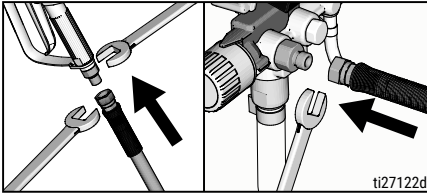

3. Assure Spray Tip is properly inserted into the Spray Tip Guard, and the Spray Tip Guard assembly is tightened securely to gun. See **Spray Tip Installation**.

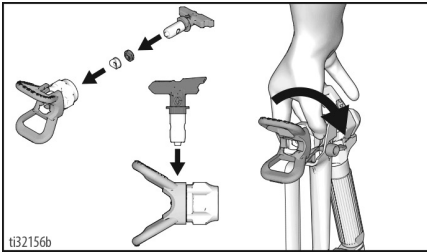


STARTUP


FLUSH STORAGE FLUID

You must flush storage fluid from the sprayer before using it.


1. Make certain ON/OFF switch is **OFF**.
2. Separate Drain Tube (smaller) from Suction Tube (larger). Place Drain Tube in a waste pail.
3. Submerge Suction Tube into pail filled with water if spraying water-based material, or mineral spirits if spraying oil-based material.

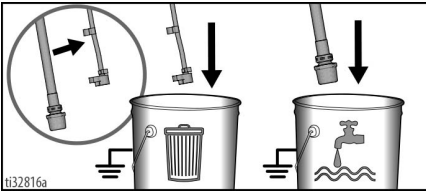


4. Turn Prime/Spray Valve down to **PRIME** position.

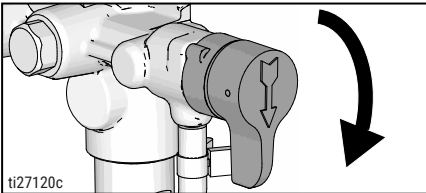


5. Plug power supply cord into a properly grounded electrical outlet.
6. Align setting indicator with the **START** setting on the Pressure Control Knob.

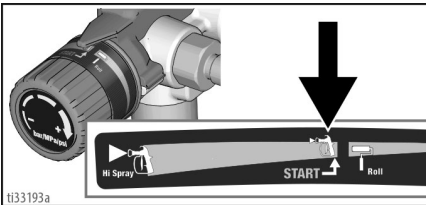


7. Turn ON/OFF switch to **ON** position.

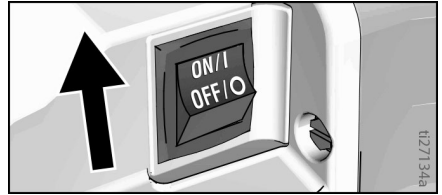

8. When sprayer starts pumping, flushing fluid will flow up the Suction Tube and out the Drain Tube. Allow fluid to flow out of Drain Tube, into waste pail, for 30 to 60 seconds.

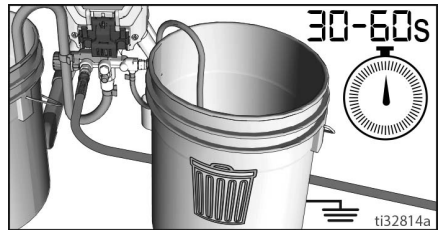

9. Turn the ON/OFF switch to **OFF** position.

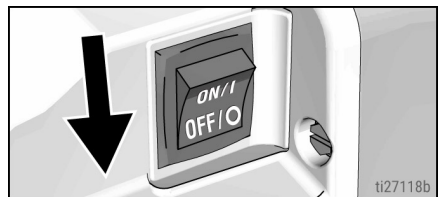



NOTE:

If flushing fluid fails to come out of the Drain Tube, see **Storage/Priming Tool**.

STRAIN THE PAINT

Use disposable paint strainer bags to remove coarse particles and debris from new or previously opened paint or stain. These bags are available where paint is sold. To avoid priming problems and Spray Tip clogs, strain all paints and stains before spraying.




WARNING				
				
<p>High-pressure spray is able to inject toxins into the body and cause serious bodily injury. Do not stop leaks with hand or rag.</p>				

FILL PUMP (PRIME PUMP)

The Prime/Spray Valve directs the fluid to either the Drain Tube or the hose and gun. The Prime/Spray Valve primes the sprayer. Priming evacuates air out of the pump, hose, and gun.

Your gun will not spray if there is air in the system. You must prime the pump, hose, and gun any time air enters the Suction Tube.

1. Move Suction Tube to paint pail and submerge Suction Tube in paint.

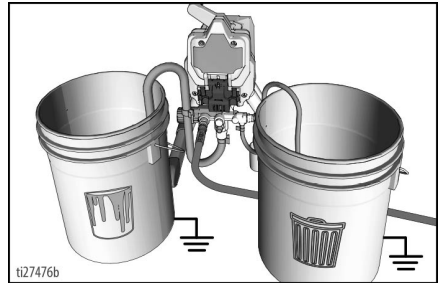


2. Turn ON/OFF switch to **ON** position.
3. Wait to see paint coming out of Drain Tube.
4. Turn ON/OFF switch to **OFF** position.

NOTE:


If paint does NOT flow up the Suction Tube and out the Drain Tube, flush the sprayer using the **Flush Storage Fluid** procedure.

FILL GUN AND HOSE

1. Rotate Spray Tip to UNCLOG position and ensure the Spray Tip Guard is tight.

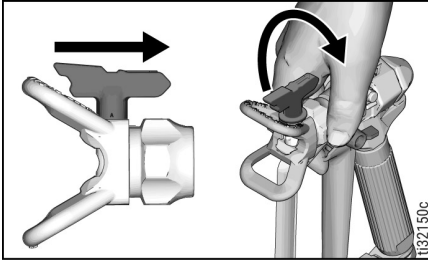




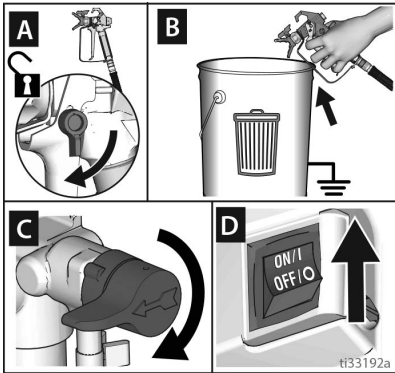

2. Hold gun against waste pail. Point gun into waste pail.
 - a. Disengage Gun Trigger Lock (A).
 - b. Pull and hold gun trigger (B).
 - c. Turn Prime/Spray Valve horizontal to SPRAY position (C).
 - d. Turn ON/OFF switch to **ON** position (D).

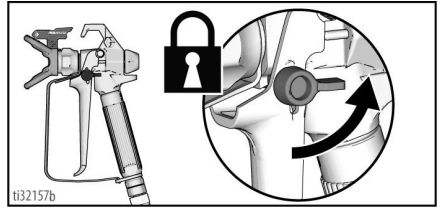

3. Trigger gun into waste pail until only paint comes out of the gun.


4. Release trigger. Engage Gun Trigger Lock.




 WARNING			
			
High-pressure spray is able to inject toxins into the body and cause serious bodily injury. Do not stop leaks with hand or rag.			

NOTE:
 Inspect for leaks. If leaking occurs, perform **Pressure Relief Procedure** then tighten all fittings and repeat **Fill Pump (Prime Pump)**.

5. Transfer Drain Tube to paint pail and clip to Suction Tube.

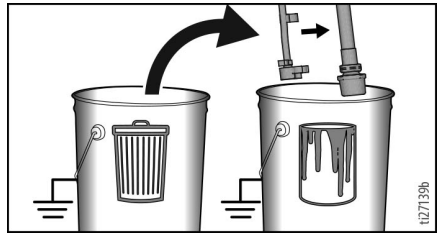

6. Rotate Spray Tip back to SPRAY position and ensure the Spray Tip Guard is tight.

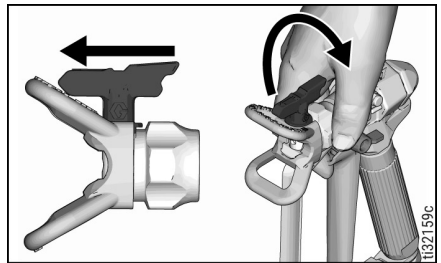

REFILL PAINT PAIL

When the paint pail runs low and the gun stops spraying, refill the paint pail and repeat the **Fill Pump (Prime Pump)** procedure, then the **Fill Gun and Hose** procedure.

YOU ARE NOW READY TO SPRAY!

NOTE:

It is normal for the motor to stop once the sprayer is primed and under pressure. If the motor continues to run, the sprayer is not primed. Repeat the **Fill Pump (Prime Pump)** and **Fill Gun and Hose** processes.

BLOCKAGES

If paint does not come out of the gun, or if you have performed the pressure relief procedure and suspect pressure has not been fully relieved:


1. VERY SLOWLY loosen the hose connection to the gun and disconnect the airless spray hose from the gun.
2. Turn Prime/Spray Valve horizontal to SPRAY position.
3. While holding hose firmly, point end of hose into paint pail and turn ON/OFF switch to **ON** position.
 - a. If fluid does not flow out of hose, replace the hose and continue to step 4.
 - b. If fluid flows out of hose, see **Clean the Gun and Gun Filter**.
4. Reassemble the hose and gun, and repeat **Fill Gun and Hose**.

SPRAY




START

1. Turn Pressure Control Knob to **START** position.

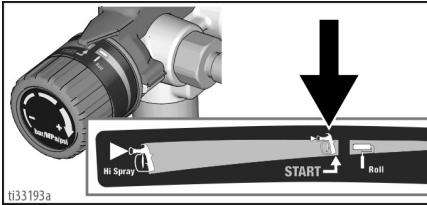


2. Disengage Gun Trigger Lock.

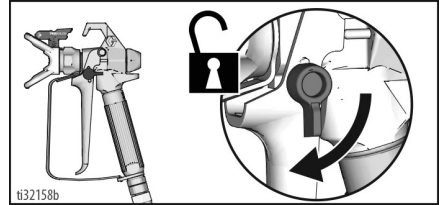

ADJUST PRESSURE CONTROL

To select a setting, align symbol on Pressure Control Knob with setting indicator on the Magnum® TRUEAIRLESS® Sprayer.

1. For best spray results with lowest overspray, adjust pressure control to **START** setting.
2. Test the spray pattern on a test area or piece of cardboard.
3. If needed, increase Pressure Control Knob setting to minimum setting that results in an acceptable spray pattern.

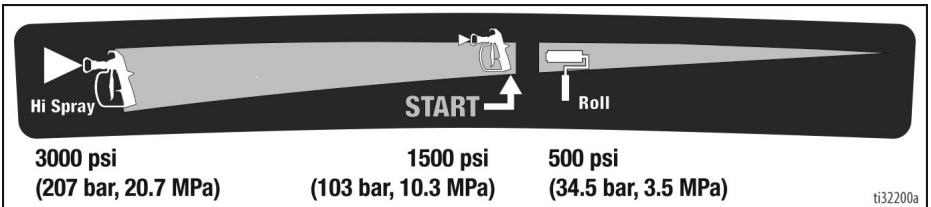

SPRAY PATTERN QUALITY


A good spray pattern is evenly distributed as it hits the surface.

- Spray should be atomized (evenly distributed, no gaps at edges).
- Increase Pressure Control Knob setting if needed until spray is even and without gaps at edges.
- Spray Tip may be worn or a smaller tip may be needed. See **Spray Tip and Pressure Selection**.
- Material may need to be thinned. If material needs to be thinned, follow manufacturer's recommendations.



SPRAY TECHNIQUES

Use a piece of scrap cardboard to practice these basic spraying techniques before you begin spraying the surface.

- Hold gun 12 in. (30 cm) from surface and aim straight at surface. Tilting gun to direct spray angle causes an uneven finish.

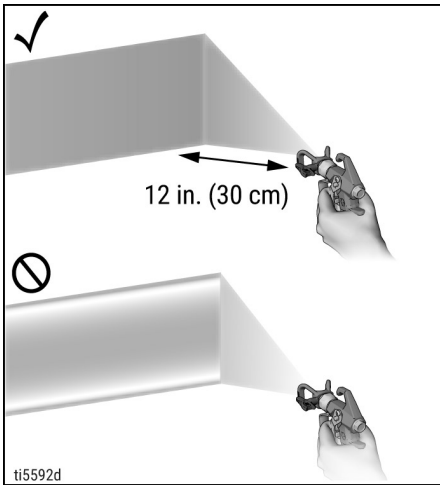


- Flex wrist to keep gun pointed straight. Fanning gun to direct spray at angle causes uneven finish.

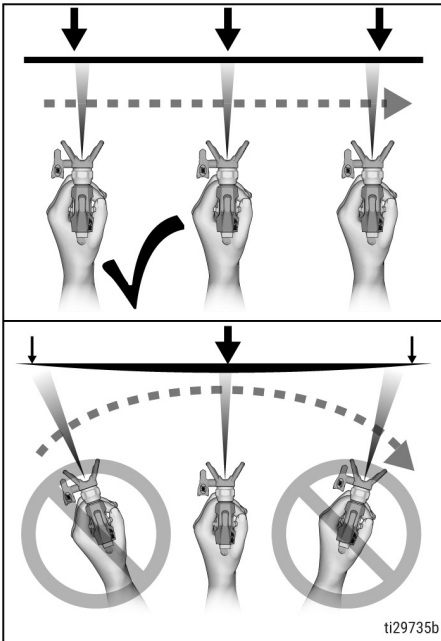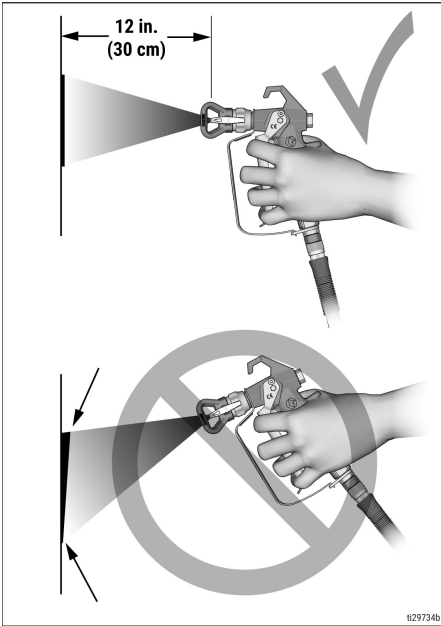


TRIGGER GUN

Pull trigger after starting stroke. Release trigger before end of stroke. Gun must be moving when trigger is pulled and released.

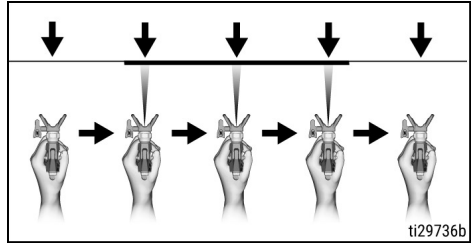


AIM GUN

Aim center of spray of gun at bottom edge of previous stroke, overlapping each stroke by half.

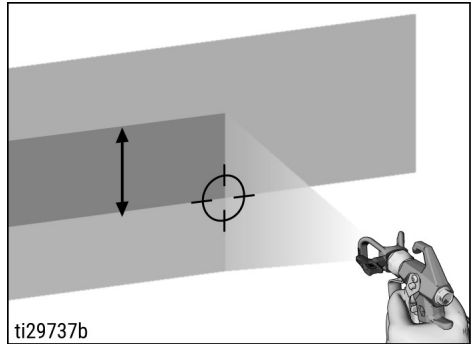


ALIGN SPRAY PATTERN

 WARNING			
			
<p>High-pressure spray is able to inject toxins into the body and cause serious bodily injury. Do not stop leaks with hand or rag.</p>			

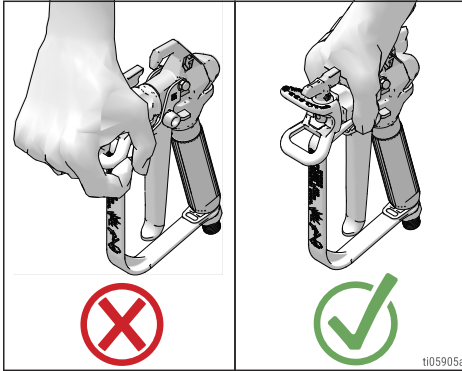

1. Relieve pressure. See **Pressure Relief Procedure**. Engage Gun Trigger Lock.
2. Align guard horizontally to spray a horizontal pattern.
3. Align guard vertically to spray a vertical pattern.

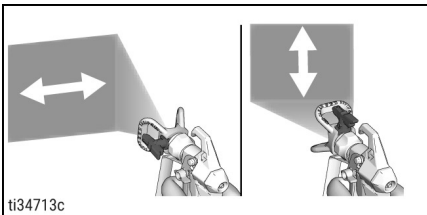

SPRAY TIP AND PRESSURE SELECTION

Spray Tips come in a variety of sizes for spraying a wide range of materials. Your sprayer includes a 515 Spray Tip for use with most paints on large surfaces such as walls and ceilings. If you are spraying stain or need a different spray fan width, refer to the Spray Tip chart to select the best Spray Tip for your project. Additional Spray Tip sizes are available where paint sprayers are sold.

- 1 What material are you spraying?
 - The thicker the material, the larger Spray Tip size you will need.
- 2 What spray fan width is needed for your project?
 - Narrow spray fan for smaller projects.
 - Wider spray fan for larger projects.
- 3 Confirm your sprayer can be used with your Spray Tip size.

Tip Number Calculation:

- The first digit is half of the fan width (#5 x 2 = 10 inch fan width).
- The last two digits are the size of the tip opening in thousandths of an inch.

↓
515
 ↑



ti34754a

SPRAY

1 Material	2 Fan Width					3 Sprayer Compatibility Each Sprayer Supports a Maximum Spray Tip Size
	4 in. Fan Width	6 in. Fan Width	8 in. Fan Width	10 in. Fan Width	12 in. Fan Width	
Stain and Sealer	209	309				ProX17, ProX19
	211	311	411			ProX17, ProX19
Semi Transparent Stain	211	311	411			ProX17, ProX19
		313	413			ProX17, ProX19
Solid Stain	211	311	411			ProX17, ProX19
		313	413			ProX17, ProX19
Interior Paint/Primer		315	415	515		ProX17, ProX19
			417	517		ProX17, ProX19
Exterior Paint/Primer			415	515		ProX17, ProX19
			417	517		ProX17, ProX19
				519	619	ProX19

- As you spray, the Spray Tip wears and as a result, the hole size gets larger. Starting with a Spray Tip hole size smaller than the maximum will allow you to spray longer within the compatibility of the sprayer.
- Spray Tips wear with use and need periodic replacement.


CLEAR SPRAY TIP CLOG

⚠ WARNING				
<p>To avoid injury, never point gun at your hand or into rag.</p>				


If particles or debris clog the Spray Tip, the Spray Tip can be reversed to quickly and easily clear particles without disassembling the sprayer.

See **Strain the Paint** for additional information.

1. Engage Gun Trigger Lock. Rotate Spray Tip to UNCLOG position. Ensure spray tip remains fully seated, pushed all the way into the Spray Tip Guard. Disengage Gun Trigger Lock. Trigger gun at waste area to clear clog.

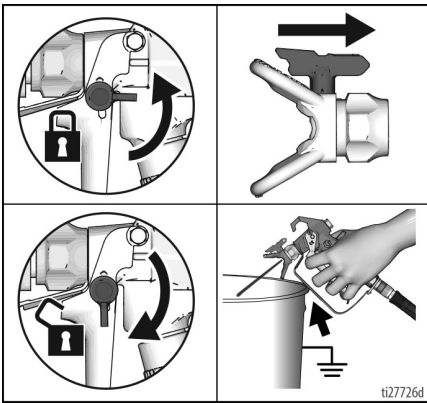

2. Engage Gun Trigger Lock. Rotate Spray Tip back to SPRAY position. Disengage Gun Trigger Lock and continue spraying.

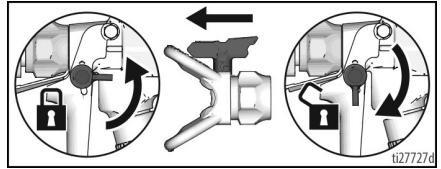

NOTE:

If Spray Tip is difficult to rotate when turning to the UNCLOG position, perform **Pressure Relief Procedure** then turn Prime/Spray Valve horizontal to SPRAY position and repeat step 1.

SPRAY TIP INSTALLATION

⚠ WARNING







To avoid serious injury from skin injection do not put your hand in front of the spray tip when installing or removing the spray tip and spray tip guard.

To prevent Spray Tip leaks, properly install the Spray Tip and Spray Tip Guard.


1. Perform **Pressure Relief Procedure**.
2. Engage Gun Trigger Lock.
3. Verify Spray Tip Guard parts are assembled in the order shown.

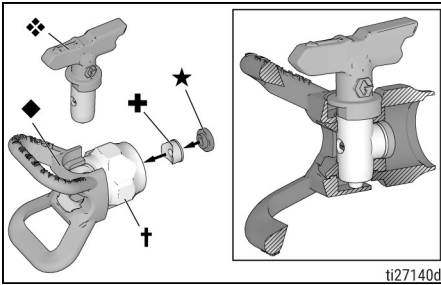

ti27140d


❖ Spray Tip	+ Metal Seal
◆ Tip Guard	† Retaining Nut
★ Rubber Gasket	

- a. Use Spray Tip to align gasket and seal in the Spray Tip Guard.

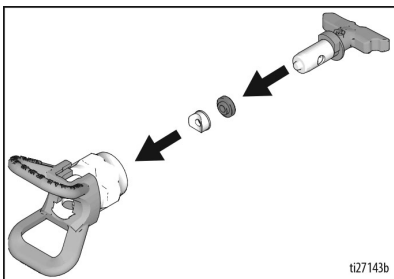


ti27143b

- b. Spray Tip must be pushed all the way into the Spray Tip Guard. Rotate Spray Tip while pushing down.

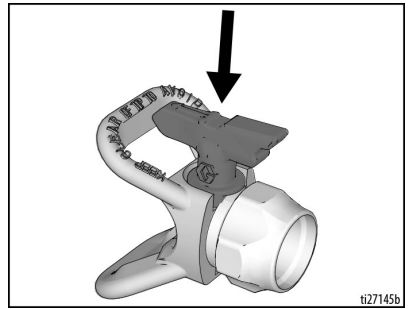

ti27145b


- c. Turn the arrow-shaped handle on the Spray Tip forward to the SPRAY position.
4. Screw Spray Tip Guard assembly onto the gun and tighten.

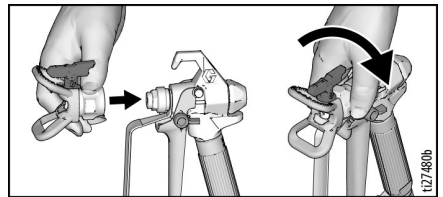

ti27480b

CLEANUP


Clean the sprayer after each use for a trouble-free startup the next time you use your sprayer.

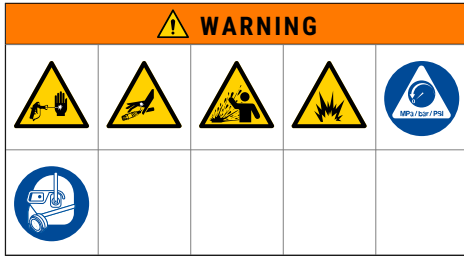

- For short-term shutdown periods (overnight to two days), refer to **Short-Term Storage**.
- For cleanup after using water-based materials only (by use of a garden hose), refer to **Clean with Power Flush Valve**.
- For cleanup from pails, refer to **Clean from a Pail**.
- For cleanup after using oil-based or solvent-based flammable materials, see **Cleaning Fluid Compatibility**.


CLEANING FROM A PAIL

1. Perform **Pressure Relief Procedure**.
2. Remove Spray Tip Guard assembly from gun and place in waste pail.

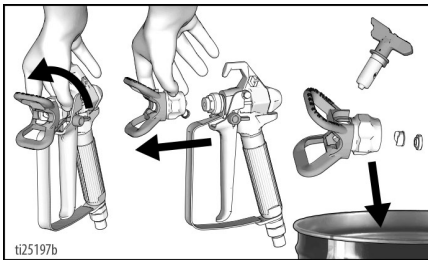


3. Lift Suction Tube and Drain Tube from paint pail. Let paint drain into the pail.


4. Separate Drain Tube (smaller) from Suction Tube (larger).

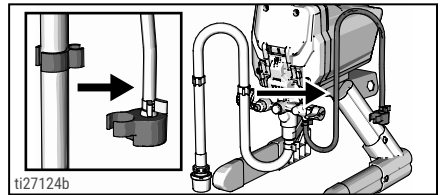


5. Place empty waste and flushing fluid pails side by side.
6. Place Suction Tube in flushing fluid. For water-based paint, use water. For non-water-based paints, use mineral spirits, paint thinner, or compatible flushing fluid. Place Drain Tube in waste pail.

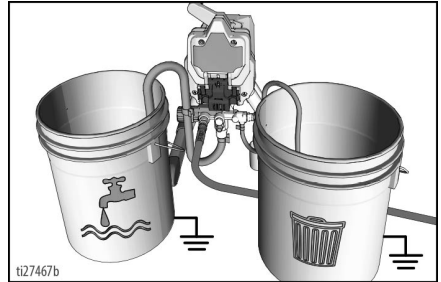

7. Turn Pressure Control Knob to the **START** position.

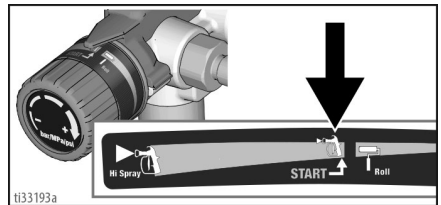

8. Turn Prime/Spray valve down to **PRIME** position.

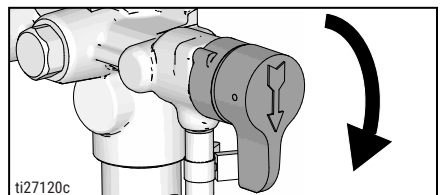


9. Turn ON/OFF switch to **ON** position.

10. Flush until approximately one-third of the flushing fluid is emptied from the pail.
11. Turn ON/OFF switch to **OFF** position.


NOTE:

Step 12 is for returning paint in hose to paint pail. One 50 ft (15.2 m) hose holds approximately 1 quart (1 liter) of paint.


12. To recover paint in hose, point gun into paint pail while holding gun firmly to the pail.
 - a. Disengage Gun Trigger Lock (A).
 - b. Pull and hold gun trigger (B).
 - c. Turn Prime/Spray Valve horizontal to SPRAY position (C).
 - d. Turn ON/OFF switch to **ON** position (D).

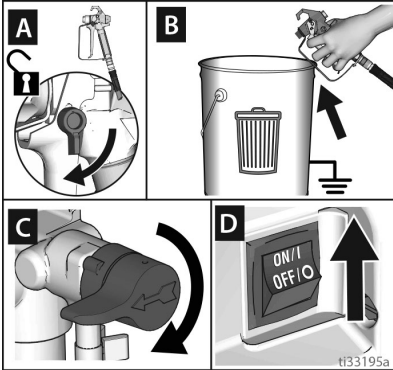

- e. Continue to hold gun trigger until you see paint diluted with flushing fluid starting to come out of gun.
13. While continuing to trigger gun, quickly move gun to redirect spray into waste pail. Continue triggering gun into waste pail until flushing fluid dispensed from gun is relatively clear.

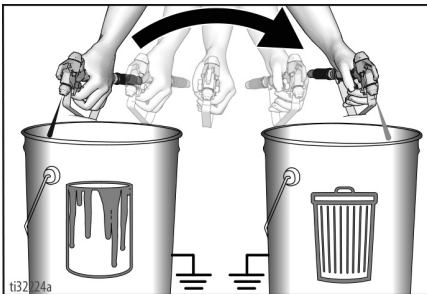

14. Turn Pressure Control Knob to the lowest setting.
15. Stop triggering gun. Engage the Gun Trigger Lock.

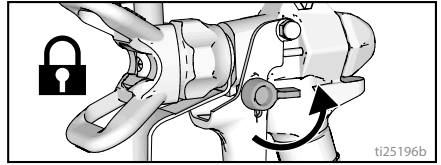


16. Turn Prime/Spray Valve down to PRIME position.
17. Turn ON/OFF switch to **OFF** position.
18. Follow **Short-Term Storage** or **Long-Term Storage**.

CLEANUP WITH POWER FLUSH VALVE


(Water-based materials only)

Power flushing is a faster method of cleanup. It can only be used after spraying water-based coatings.


1. Perform **Pressure Relief Procedure**.
2. Engage Gun Trigger Lock. Remove Spray Tip Guard assembly from gun and place in waste pail.

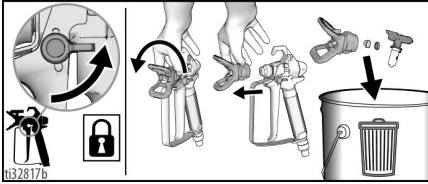

3. Place empty waste and paint pails side by side.
4. Lift Suction Tube and Drain Tube from paint pail. Let paint drain into the pail.
5. Place suction and Drain Tube in waste pail.

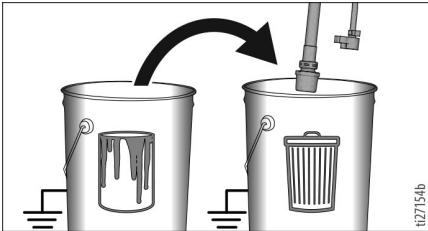


6. Turn Pressure Control Knob to the **START** position.

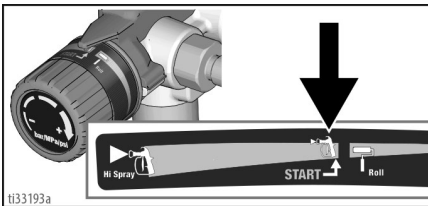


7. Screw Power Flush Valve (included with sprayer) to garden hose. Close Power Flush Valve.

8. Turn on water. Open Power Flush Valve. Rinse paint off Suction Tube, Drain Tube, and inlet screen. Close Power Flush Valve.

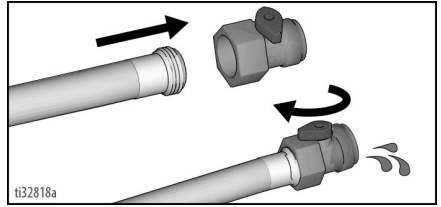

9. Unscrew inlet screen from Suction Tube. Place inlet screen in waste pail. Connect garden hose to Power Flush Valve on Suction Tube. Leave Drain Tube in waste pail.

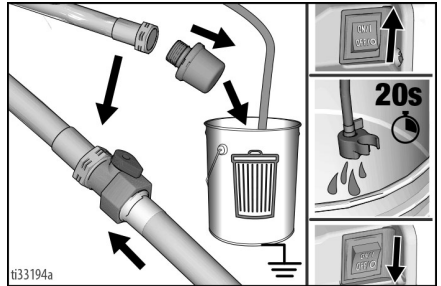


10. Turn ON/OFF switch to **ON** position.
11. Open Power Flush Valve.
12. Circulate water through sprayer, into waste pail, for 20 seconds.
13. Turn ON/OFF switch to **OFF** position.

NOTE:


Step 14 is for returning paint in hose to paint pail. One 50 ft (15.2 m) hose holds approximately 1 quart (1 liter) of paint.

14. To recover paint in hose, point gun into paint pail while holding gun firmly to the pail.
 - a. Disengage Gun Trigger Lock (A).
 - b. Pull and hold gun trigger (B).
 - c. Turn Prime/Spray Valve horizontal to **SPRAY** position (C).
 - d. Turn ON/OFF switch to **ON** position (D).


- e. Continue to hold gun trigger until you see paint diluted with flushing fluid starting to come out of gun.

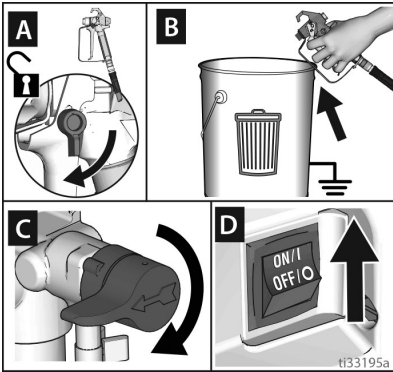

15. While continuing to trigger gun, quickly move gun to redirect spray into waste pail. Continue triggering gun into waste pail until flushing fluid dispensed from gun is relatively clear.

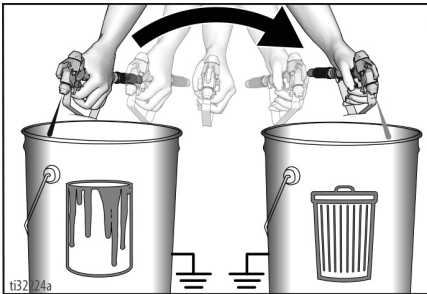

16. Turn Pressure Control Knob to the lowest setting.
17. Stop triggering gun. Engage the Gun Trigger Lock.

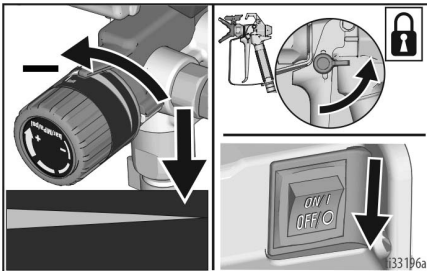


18. Turn Prime/Spray Valve down to PRIME position.
19. Turn ON/OFF switch to **OFF** position.

20. Follow **Short-Term Storage** or **Long-Term Storage**.


CLEAN INSTACLEAN FILTER

The InstaClean Filter prevents debris from entering paint hose. After each use, remove and clean it to ensure peak performance.

1. Perform **Pressure Relief Procedure**.
2. Unplug the Power Cord.
3. Disconnect airless spray hose (A) from sprayer.
4. Unscrew fluid outlet (B).
5. Remove InstaClean filter (C).

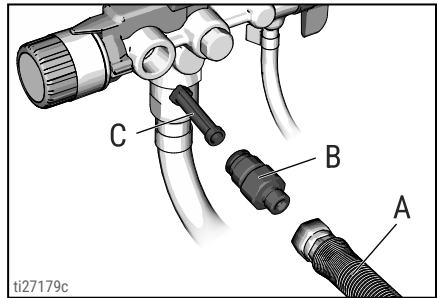


6. Check InstaClean Filter (C) for debris. If needed, clean filter with water or flushing fluid and a soft brush.
 - a. Install closed (square) end of InstaClean Filter (C) in sprayer.
 - b. Screw outlet valve (B) into sprayer.
7. Tighten outlet valve and reconnect hose (A) to sprayer. Use two wrenches to tighten securely.

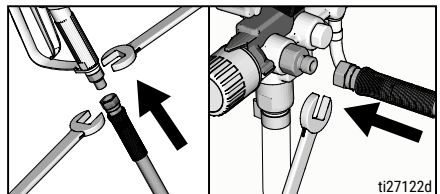


CLEAN THE GUN AND GUN FILTER

1. Perform **Pressure Relief Procedure**.
2. Unplug the Power Cord.
3. Remove the gun handle by unscrewing the handle from the gun head.

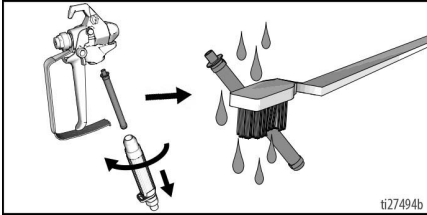

4. Clean gun filter with water or flushing fluid and a brush every time you flush the system. Replace gun filter if damaged.
5. Remove Spray Tip Guard assembly and clean with water or flushing fluid and a brush.

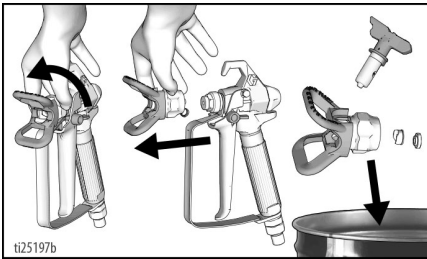

6. See **Spray Tip Installation** to properly reinstall Spray Tip Guard assembly.
7. Wipe paint off outside of gun using a soft cloth moistened with water or flushing fluid.

STORAGE

With proper storage, the sprayer will be ready to use the next time it is needed.




5. Leave gun attached to hose.
6. Remove Spray Tip and Spray Tip Guard and clean with water or flushing fluid and a brush.
7. Wipe paint off outside of gun using a soft cloth moistened with water or flushing fluid.


SHORT - TERM STORAGE

(up to 2 days)


1. Unplug the Power Cord. Perform **Pressure Relief Procedure**.
2. Leave Suction Tube and Drain Tube in paint pail.

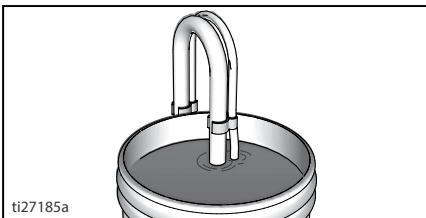

3. Cover paint and pail tightly with plastic wrap.

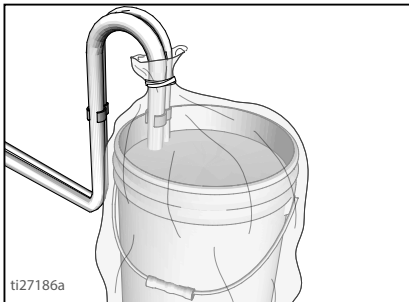

4. Engage Gun Trigger Lock.

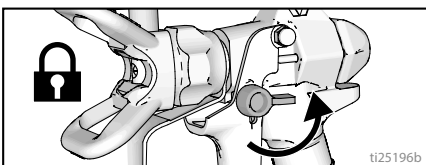


LONG - TERM STORAGE

(more than 2 days)


Pump Armor™ fluid protects the sprayer against freezing and corrosion.

- Do not store the sprayer full of water.
- Do not allow water to freeze in sprayer.
- Do not store sprayer under pressure.
- Store sprayer indoors.


1. Perform **Cleanup**.
2. Remove Pump Armor bottle cap and foil seal.

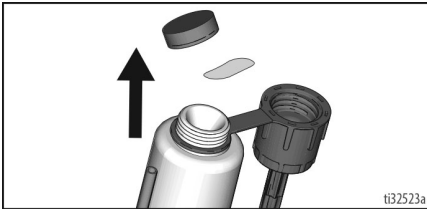


3. If needed, unscrew Inlet Screen from Suction Tube. Turn Prime/Spray Valve down to **PRIME** position.

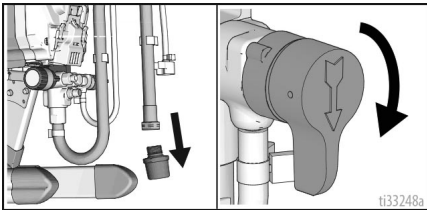


4. Place drain tube in waste pail. Turn the Pressure Control Knob to the **START** position.

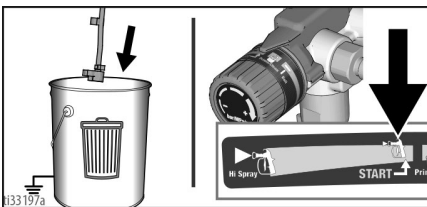


5. While holding the Suction Tube above the sprayer, pour approximately 2 ounces (1/4 cup) of Pump Armor into Suction Tube and turn Power Switch **ON**.

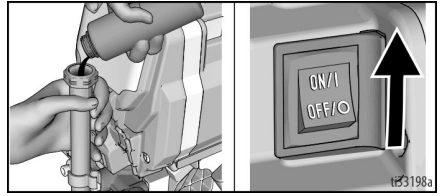


6. When Pump Armor is flushed through the sprayer and out the Drain Tube, turn Power Switch **OFF**. Replace and tighten child-proof cap for storage.

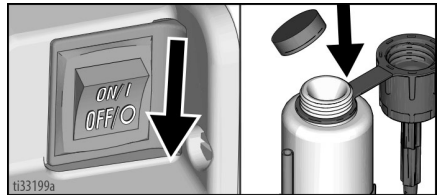

7. Screw Inlet Screen back to Suction Tube. Ensure that spray gun and hose stay attached to sprayer.

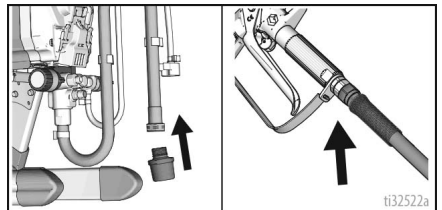


8. Turn Spray/Prime Valve horizontal to **SPRAY** position for storage.

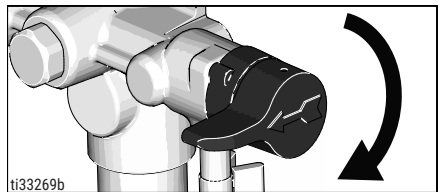

9. Turn ON/OFF switch to **OFF** position. Unplug the Power Cord.

STORAGE

10. Secure a plastic bag around Suction Tube and Drain Tube to catch any drips.

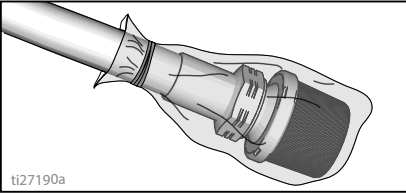







REFERENCE

LACQUER CONVERSION KIT

To spray lacquers and other solvent-based flammable materials you must purchase a lacquer conversion kit and follow **Grounding Instructions**. Refer to Parts List for kit part numbers.

CLEANING FLUID COMPATIBILITY

WARNING				
				
				

- When spraying **water-based** materials, flush the system thoroughly with water.
- When spraying **lacquers** or **oil-based** materials, flush the system thoroughly with mineral spirits or compatible oil-based flushing fluid and follow **Static Grounding Instructions (Oil or Solvent-Based Flammable Materials)**.
- To spray **water-based** materials **after spraying oil-based** materials, flush the system thoroughly with water first. The water flowing out of Drain Tube should be clear **before** you begin spraying the water-based material.
- To spray **lacquers** or **oil-based** materials **after spraying water-based** materials, flush the system thoroughly with mineral spirits or a compatible oil-based flushing fluid first. Follow **Static Grounding Instructions (Oil or Solvent-Based Flammable Materials)**. The fluid flowing out of the Drain Tube should not contain any water.
- To avoid fluid splashing back on your skin or into your eyes, always aim gun at inside wall of pail.

QUICK REFERENCE

	NAME	DESCRIPTION
A	Power - ON/OFF Switch	Turns sprayer ON and OFF.
B	Pressure Control Knob	Increases (clockwise) and decreases (counterclockwise) fluid pressure in pump, hose, and spray gun. To select function, align symbol on Pressure Control Knob with setting indicator.
C	Prime/Spray Valve	<ul style="list-style-type: none"> • In PRIME position directs fluid to Drain Tube. • In SPRAY position directs pressurized fluid to paint hose. • Automatically relieves system pressure in overpressure situations.
D	Spray Tip	<ul style="list-style-type: none"> • Atomizes fluid being sprayed, forms spray pattern, and controls fluid flow according to hole size. • Reverse position unclogs plugged Spray Tips without disassembly.
F	Suction Tube	Draws fluid from paint pail into pump.
G	Drain Tube	Drains fluid in system during priming and pressure relief.
H	Airless Spray Gun	Dispenses fluid.
J	Spray Tip Guard	Reduces risk of fluid injection injury.
K	Gun Trigger Lock	Prevents accidental triggering of spray gun.
L	Gun Fitting	Threaded connection for Airless Hose.
M	Gun Filter (inside handle)	Filters fluid entering spray gun to reduce Spray Tip clogs.
N	ProXChange™ Pump	Pumps and pressurizes fluid and delivers it to Airless Hose.
O	Inlet Valve	Allows paint to flow from paint bucket into the sprayer.
P	Airless Hose Connection	Threaded connection for airless hose.
Q	Airless Hose	Transports high-pressure fluid from pump to spray gun.
R	InstaClean Filter	<ul style="list-style-type: none"> • Filters fluid coming out of pump to reduce Spray Tip clogs and improve finish. • Self cleans only during pressure relief.
S	Pail Hanger	For transporting pail by its handle.

REFERENCE

	NAME	DESCRIPTION
T	Inlet Screen	Prevents debris from entering pump.
U	Power Cord	Plugs into power source.
V	Easy Access Door	Permits quick access to the pump. Open pump door by pulling out on the tabs while sliding door up.
W	Suction Tube Drip Cup	Holds the Suction Tube during transport to catch drips.
X	Pump Removal Tool	Cut out in the frame provides the tools to quickly remove the pump packing without additional tools.
Y	Outlet Valve	Allows paint to flow from the sprayer to the gun.
Z	Inlet Valve Removal Tool	Cut out in the frame provides the tools to quickly remove the inlet valve without additional tools.
	Power Flush Valve	Connects garden hose to Suction Tube for power flushing water-based fluids.

MAINTENANCE

Routine maintenance is important to ensure proper operation of the Magnum® TRUEAIRLESS® Electric Airless Sprayer.



MAINTENANCE ACTIVITY

1. Inspect motor shroud openings for blockage every time you spray.
2. Clean/inspect inlet screen, InstaClean filter, and gun filter every time you spray. Replace if the filter cannot be cleaned or is damaged.

NOTICE

Protect the internal drive parts of this sprayer from water. Openings in shroud allow cooling of mechanical parts and electronics inside. If water gets into these openings, the sprayer could malfunction or be permanently damaged.

AIRLESS HOSES

Check hose for damage every time you spray. Do not attempt to repair hose if hose jacket or fittings are damaged. Do not use hoses shorter than 25 ft. (7.6 m). Wrench-tighten, using two wrenches.

SPRAY TIPS

- Always clean Spray Tips with compatible cleaning fluid and brush after spraying.
- Tips may require replacement after 15 gallons (57 liters) or they may last through 60 gallons (227 liters) depending on abrasiveness of paint. See **Spray Pattern Quality**.

STORAGE / PRIMING TOOL


Perform these steps if you are experiencing difficulty priming the Magnum TRUEAIRLESS Sprayer.

1. Perform **Pressure Relief Procedure**.


2. Remove Pump Armor™ bottle cap. Insert small fluid tube into bottom of Storage/Prime Tool, and thread tool onto the bottle.

NOTE:


For best results, make sure the bottle is full of Pump Armor.

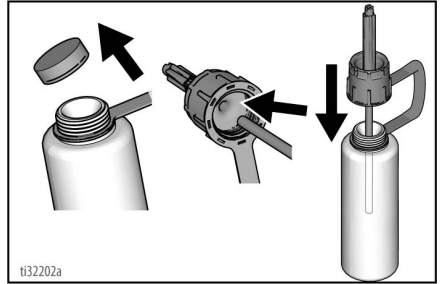


3. Remove sprayer Suction Tube. Insert tool into the inlet and push up firmly until it stops.

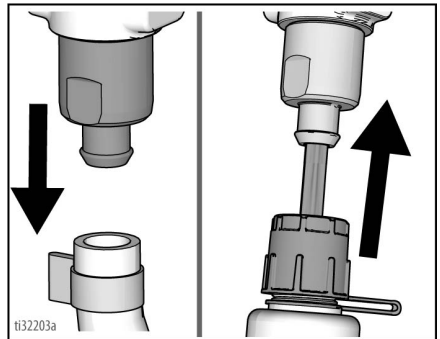


4. Squeeze Pump Armor bottle until Pump Armor flows into the Drain Tube.

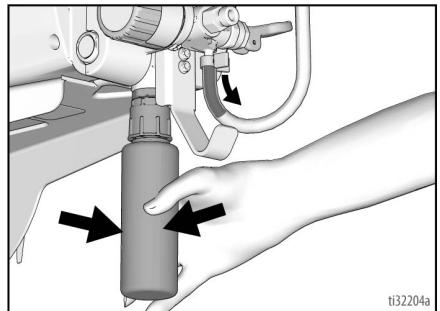

- Remove tool. Replace and tighten child-proof cap for storage.

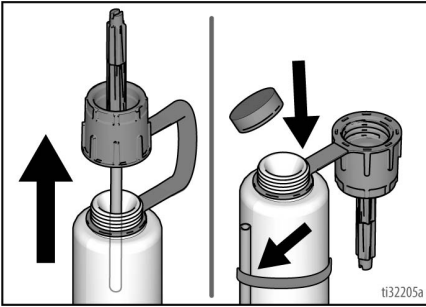

- Reinstall the sprayer Suction Tube. Ensure that the tube is snug on the inlet and the clamp is engaged.

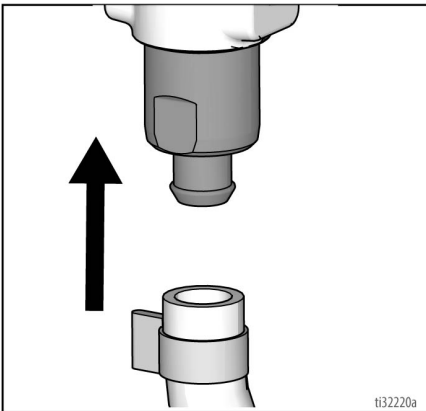

PUMP REPAIR

⚠ WARNING			


When pump packings wear, paint will begin to leak down outside of pump. Purchase a pump repair kit and install according to instructions provided with kit, before your next job. See **ProXChange Pump Parts List**, or consult a Graco/Magnum authorized retailer, distributor, or service center.

Each time the pump kit is replaced, check pump inlet and outlet valves for wear or damage. Replace if worn or damaged. Always replace inlet and outlet valves every second time the pump kit is replaced.


PUMP REMOVAL

Remove airless hose, suction tube, and drain tube. Always perform **Pressure Relief Procedure** before starting any pump repairs, and unplug the sprayer.

- Unplug the sprayer from the power source.
- Pull tabs on sides of the easy access door towards you while pushing the entire door up.
- Now lift the door so that it swings out of the way.

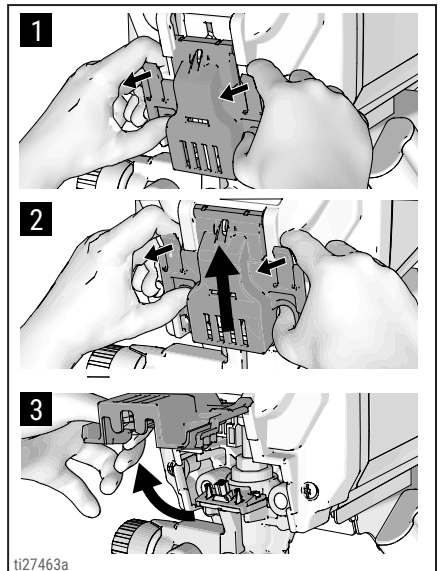


- Slide pump assembly off the mounting pins.

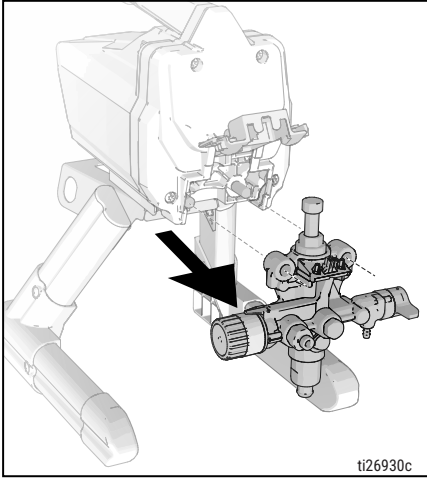

INLET VALVE REMOVAL

An integrated tool is included in the frame to remove the inlet valve assembly from the pump. If you suspect that the inlet valve is clogged or stuck, remove the valve assembly and clean or replace.


1. Insert pump inlet into frame and loosen the inlet valve. Remove inlet valve.

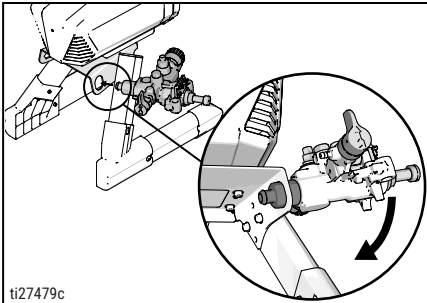

2. Remove inlet valve.

NOTICE

Do not lose the ball and spring inside the inlet valve assembly. It may fall out when the inlet valve is removed. Pump will not prime without the ball and spring.

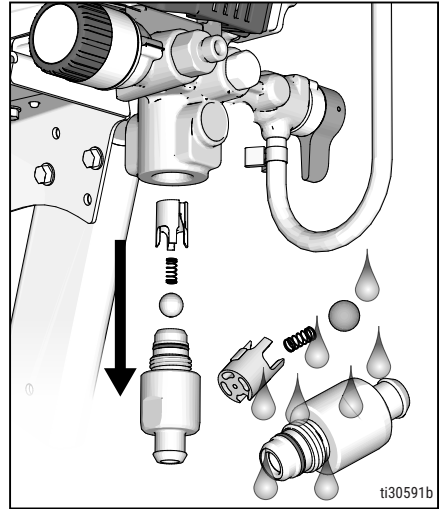

3. Perform a power flush. See **Cleanup with Power Flush Valve**.

WARNING



High-pressure spray is able to inject toxins into the body and cause serious bodily injury. Do not stop leaks with hand or rag.



4. Inspect for leaks. If leaks occur, perform **Pressure Relief Procedure**, then tighten all fittings and repeat step 3.

PROXCHANGE™ REMOVAL TOOL


See ProXChange Pump manual for complete repair instructions.

PUMP INSTALLATION

1. Slide pump assembly onto the mounting pins.

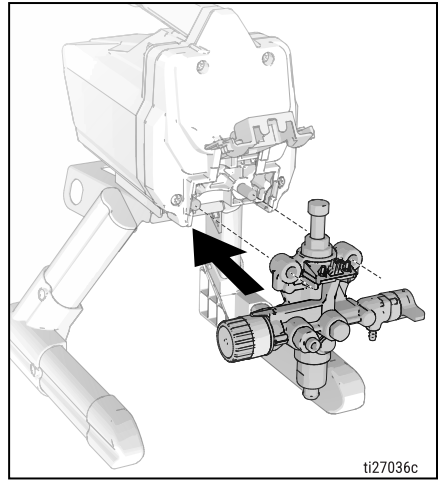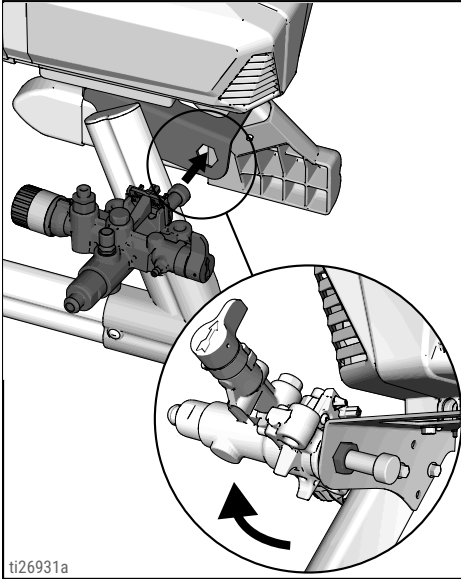


- a. Move pump rod up or down until cap is level with the opening in the yoke.

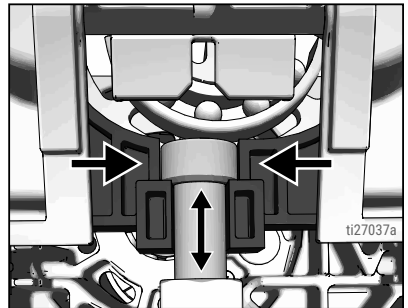

- b. Push on pump rod to slide pump assembly back on to mounting pins.

2. Swing Easy Access Door closed while pushing the entire door down.

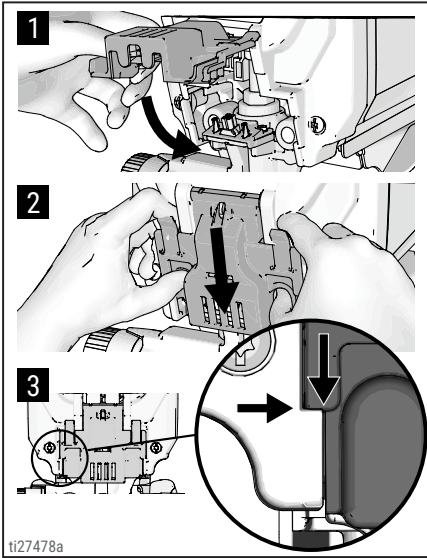

3. Install hose, suction tube, and drain tube.
4. Plug sprayer into power source.

NOTE:

Door must be fully closed and latched before sprayer will operate.

TROUBLESHOOTING

When problems occur, use the table to identify potential causes and solutions to repair the Magnum® TRUEAIRLESS® Electric Airless Sprayer.



1. Follow **Pressure Relief Procedure** before checking or repairing your sprayer.


2. Solutions at the beginning of each problem listed are the most common.
3. Check everything in this Troubleshooting Table before you bring the sprayer to an authorized service center.

PROBLEM	CAUSE	SOLUTION
Motor does not run (verify sprayer is plugged in, and ON/OFF switch is on).	Easy Access Door not fully closed	Verify that Easy Access Door is closed and latched. See step 2 of Pump Installation .
	Pressure control is set at zero pressure.	Turn Pressure Control Knob clockwise to increase pressure setting.
	Electric outlet is not providing power.	Test outlet with known working device. Reset circuit breaker or replace fuse. Find working outlet. Reset building circuit breaker or replace fuse.
	Extension cord is damaged.	Replace extension cord.
	Sprayer electric cord is damaged.	Check for broken insulation or wires. Replace electric cord if damaged.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
	Pump is seized (paint has hardened in pump or water is frozen in pump).	<p>Turn ON/OFF switch off and unplug sprayer from outlet.</p> <p>If frozen do NOT try to start sprayer until it is completely thawed or it may damage the motor, control board, and/or drive train.</p> <p>Place sprayer in warm area for several hours. Check for free moving pump by removing shroud and spinning fan.</p> <p>If not frozen, check for hardened paint in pump. If paint has hardened in pump, see Pump Repair.</p> <p>If motor does not turn with pump removed, consult a Graco/Magnum authorized retailer, distributor, or service center.</p>
	Motor or control is damaged.	Consult a Graco/Magnum authorized retailer, distributor, or service center.
Sprayer runs, but pump does not prime or loses prime while in use.	Prime/Spray Valve is in SPRAY position.	Turn Prime/Spray Valve down to PRIME position until paint exits Drain Tube.
(Pump cycles but does not pull paint into Suction Tube or build pressure.)	Inlet screen is clogged or Suction Tube is not completely immersed in paint.	Clean debris off inlet screen and make sure Suction Tube is completely immersed in paint.

TROUBLESHOOTING

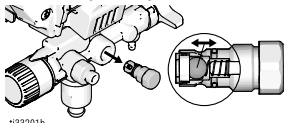PROBLEM	CAUSE	SOLUTION
	Inlet or outlet valve ball is stuck or dirty.	<p>See Storage/Priming Tool. Then reprime pump.</p> <p>Remove inlet and/or outlet valves and clean, replace and reprime. See Fill Pump (Prime Pump).</p> <ul style="list-style-type: none"> • Do not lose the ball and spring of the inlet valve assembly or the sprayer will not function. See Inlet Valve Removal. • Make certain the outlet ball moves free in the housing before replacing.  <p style="text-align: center; font-size: small;">1833201b</p>
	Suction Tube is leaking.	Inspect Suction Tube connection for cracks or vacuum leaks.
	Debris in paint causing obstruction.	Strain the paint. See Strain the Paint .
	Prime/Spray Valve is worn or clogged with debris.	Take sprayer to Graco/Magnum authorized service center.
Pump is primed, but can not achieve good spray pattern.	Spray Tip may be partially clogged.	See Clear Spray Tip Clog .
	Reversible Spray Tip is in UNCLOG position.	Rotate arrow-shaped handle on Spray Tip so it points forward to SPRAY position.
	Debris in paint causing obstruction.	Strain the paint. See Clear Spray Tip Clog .
	Pressure is set too low.	Align Pressure Control Knob setting indicator to desired spray setting. See Clear Spray Tip Clog .
	InstaClean Filter is clogged.	Clean or replace InstaClean filter. See Clean InstaClean Filter .
	Spray gun filter is clogged.	Clean or replace gun filter. See Clear Spray Tip Clog .

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
	Spray Tip selected is too large for capability of sprayer.	Replace Spray Tip. See Spray Techniques .
	Spray Tip is worn beyond the capability of sprayer.	Replace Spray Tip. See Spray Techniques .
	Spray Tip gasket and seal worn or missing.	Replace gasket and seal. See Spray Techniques .
	Inlet screen is clogged or Suction Tube is not immersed in paint.	Clean debris off inlet screen and make sure Suction Tube is immersed in paint.
	Extension cord is too long or not heavy enough gauge.	Replace extension cord. See Grounding Instructions .
	Inlet valve or outlet valve is worn or clogged with debris.	<p>Check for worn or contaminated inlet valve or outlet valve.</p> <ul style="list-style-type: none"> • Prime sprayer with paint. • Trigger gun momentarily. • When trigger is released, pump should cycle momentarily and stop. • If pump continues to cycle, pump valves may be worn or contaminated with debris. • See Storage/Priming Tool. • Clean and reinstall valves. • Replace valves with appropriate kits. For kit part numbers, see ProXChange Pump Parts List.
	Material is too thick.	Thin material. Follow manufacturer's recommendations.
	Airless hose is too long (if extra section was added).	Remove section of airless hose.
Spray gun stopped spraying while trigger is pulled.	Spray Tip is clogged.	See Clear Spray Tip Clog .
	Sprayer lost prime.	Reprime sprayer. See Fill Pump (Prime Pump) .
		See Troubleshooting .


TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
When paint is sprayed, it runs down the wall or sags.	Material is going on too thick.	Move gun faster.
		Choose a Spray Tip with smaller hole size.
		Choose Spray Tip with wider fan.
		Make sure gun is far enough from surface.
When paint is sprayed, coverage is inadequate.	Material is going on too thin.	Move gun slower.
		Choose Spray Tip with larger hole size.
		Choose Spray Tip with narrower fan.
		Make sure gun is close enough to surface.
Fan pattern varies dramatically while spraying.	Pressure control switch is worn and causing excessive pressure variation.	Take sprayer to Graco/Magnum authorized service center.
Cannot trigger spray gun.	Spray gun Gun Trigger Lock is engaged.	Rotate Gun Trigger Lock to disengage Gun Trigger Lock.
Paint is coming out of pressure control switch.	Pressure control switch is worn.	Take sprayer to Graco/Magnum authorized service center.
Paint is leaking through Drain Tube.	Sprayer is over pressurizing.	Take sprayer to Graco/Magnum authorized service center.
Paint leaks down outside of pump.	Pump packings are worn.	Replace pump. See Pump Repair .
Motor is hot and runs intermittently. Motor automatically shuts off due to excessive heat. Damage can occur if cause is not corrected.	Vent holes in enclosure are plugged or sprayer is covered.	Keep vent holes clear of obstructions and overspray and keep sprayer open to air.
	Extension cord is too long or not a heavy enough gauge.	Replace extension cord.
	Unregulated electrical generator being used has excessive voltage.	Use electrical generator with a proper voltage regulator.
	Motor needs to be replaced.	Take sprayer to Graco/Magnum authorized retailer, distributor, or service center.

MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER PARTS

The parts illustrations and lists show the components of the Magnum® TRUEAIRLESS® Sprayers and their connections that are required for assembly, repair, and maintenance.

PROX17, PROX19 STAND SPRAYER PARTS

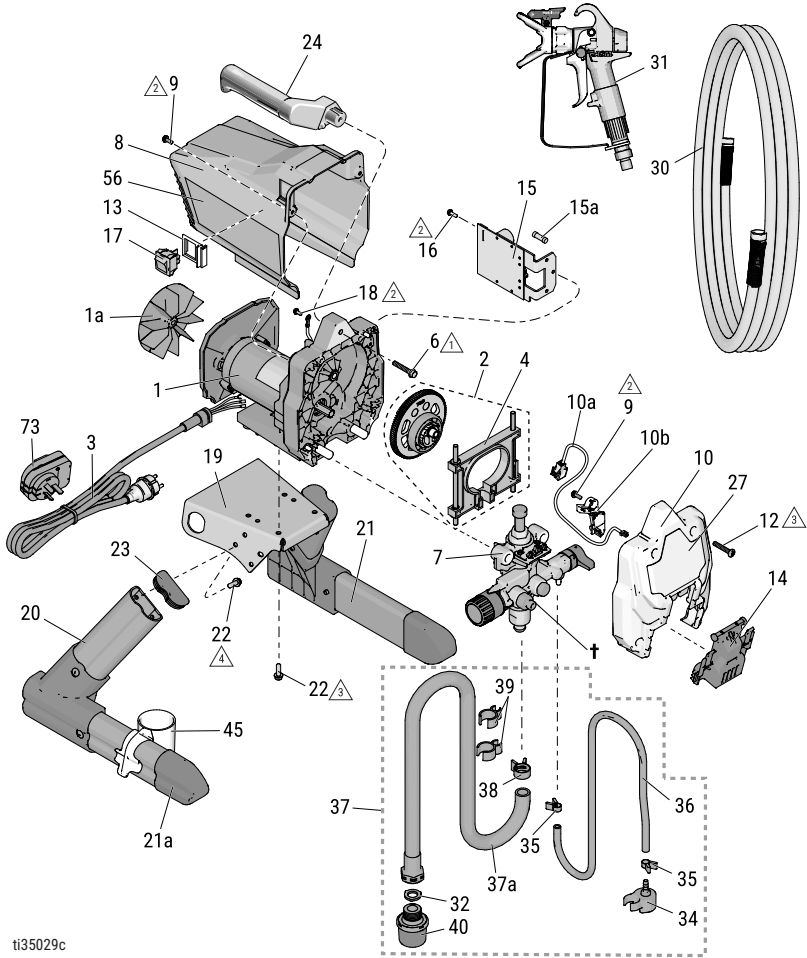

ti35029c

† see ProXChange Pump Parts

Figure 18-1: ProX17, ProX19 Stand Sprayer Parts Diagram

1 140–160 in-lb (16–18 N·m)

3 110–120 in-lb (12–14 N·m)

2 30–35 in-lb (3.5–4.0 N·m)

4 45–55 in-lb (5–6 N·m)

MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER
PARTS

REF.	PART	DESCRIPTION	QTY.
1	17F756	KIT, repair, motor, 120V <i>includes 1a, 22</i>	1
1a	287770	FAN	1
2	17J863	KIT, gear and yoke	1
3	17J173	CORD, power	1
4	17J864	KIT, yoke	1
6	117493	SCREW, mach, hex, washer head	1
7	17J874	KIT, pump complete	1
8	17J865	SHIELD, motor, blue <i>includes 9 and labels</i>	1
9	118444	SCREW, mach, hwhd 10-24 x 0.5 in.	3
10	17J866	COVER, front <i>includes 9, 10a, 10b, 12, 14</i>	1
10a	128551	CABLE, jumper, PC	1
10b	17F262	COVER, wire	1
12	115478	SCREW, mach, Torx, pan hd	4
13	15X737	SWITCH, bracket	1
14	17F233	COVER, pump, locking	1
15	17J867	KIT, control board 120V <i>includes 15a, 16</i>	1
15a	119276	FUSE, 12.5A slow blow	1
16	117501	SCREW, plastite	1
17	24Y329	KIT, switch, repair <i>includes 13</i>	1
18	115498	SCREW, mach, slot, hex whd	1
19	17G328	PLATE, motor mount	1
20	16E836	KIT, right leg <i>includes 21a, 22, 23</i>	1


REF.	PART	DESCRIPTION	QTY.
21	16E837	KIT, left leg <i>includes 21a, 22, 23</i>	1
21a	15J695	CAP, tube	2
22	260212	SCREW, hwh, thread forming	12
23	15J699	CAP, tube	2
24	276864	HANDLE, sprayer	1
25	116139	GRIP, handle	1
27		LABEL, front	
	17J031	ProX17	1
	17J033	ProX19	1
30	247340	HOSE, cpld, 1/4 in. x 50 ft	1
31		GUN, spray, SG3	
	243012	Models 17G177, 17G179	1
	246506	Model 17K438	1
32	115099	WASHER, hose	1
34	244035	DEFLECTOR, barbed	1
35	115489	CLAMP, drain tube	2
36	195084	TUBE, drain	1
37	24V074	KIT, tube, suction <i>includes 32, 34, 35, 36, 37a, 38, 39, 40</i>	1
37a	197607	TUBE, suction <i>includes 32</i>	1
38	116295	CLAMP, tube	1
39	195400	CLIP, spring	2
40		KIT, inlet screen	1
	288716	ProX17 and ProX19	
45	17H422	CUP, suction/drain	1

MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER
PARTS

REF.	PART	DESCRIPTION	QTY.
56▲	17J027	LABEL, warning	1
57▲	179960	CARD, medical alert (not shown)	1
60	17Y786	GUIDE, Magnum quick guide, (not shown)	1
61	115648	VALVE, power flush (not shown)	1
62	17S980	FLUID, pump armor, 8 oz (not shown)	1
64	17Y794	TAG, hang, tip (not shown)	1
65▲	15G026	TAG, warning, hose, (not shown)	1
	17L305	KIT, conversion, lacquer, stand (sold separate)	

▲ Replacement safety labels, tags, and cards are available at no cost.

MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER
PARTS
PROX17, PROX19 CART SPRAYER PARTS

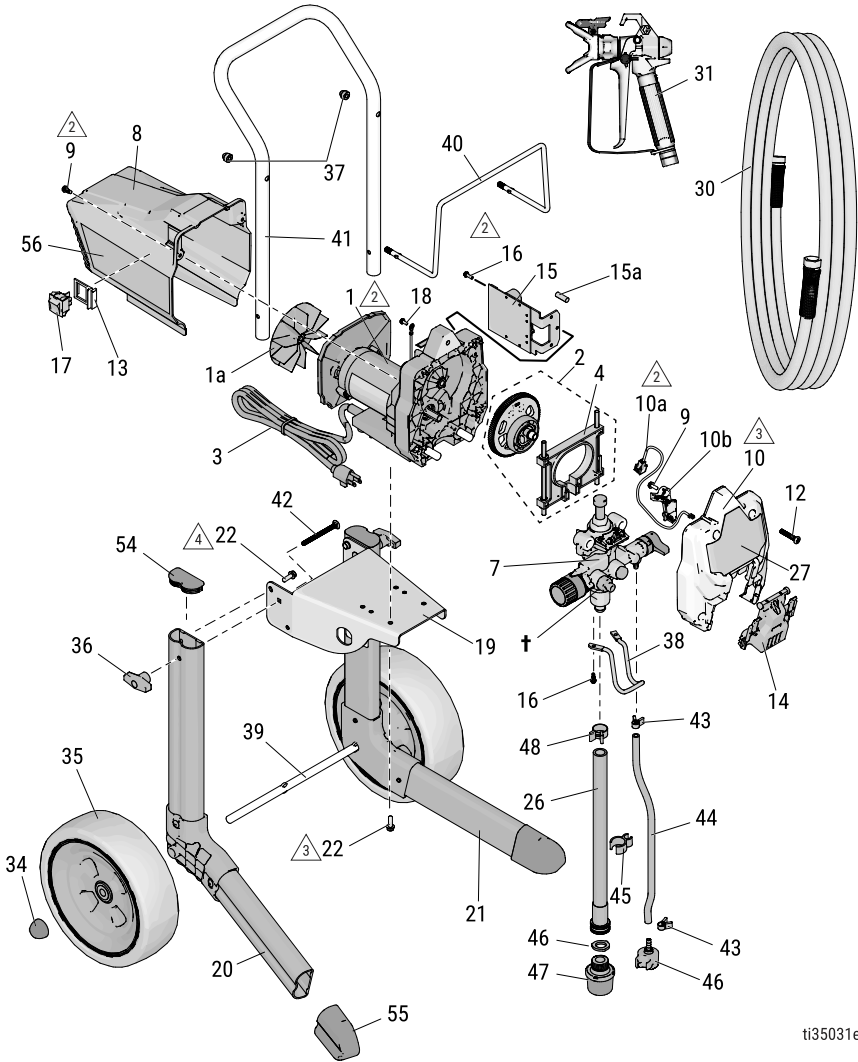

ti35031e

† see ProXChange Pump Parts

Figure 18-2: ProX17, ProX19 Cart Sprayer Parts Diagram

△ 2 30–35 in-lb (3.5–4.0 N·m)

△ 4 45–55 in-lb (5–6 N·m)

△ 3 110–120 in-lb (12–14 N·m)

MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER
PARTS

REF.	PART	DESCRIPTION	QTY.
1	17F756	MOTOR, 120V <i>includes 1a, 22</i>	1
1a	287770	FAN	1
2	17J863	KIT, gear and yoke	1
3	17J173	CORD, power	1
4	17J864	KIT, yoke	1
7	17J874	KIT, pump complete	1
8	17J865	SHIELD, motor, blue <i>includes 9 and labels</i>	1
9	118444	SCREW, mach, hwhd 10-24 x 0.5 in.	3
10	17J866	COVER, front <i>includes 9, 10a, 10b, 12, 14</i>	1
10a	128551	CABLE, jumper, PC	1
10b	17F262	COVER, wire	1
12	115478	SCREW, mach, Torx, pan hd	4
13	15X737	SWITCH, bracket	1
14	17F233	COVER, pump, locking	1
15	17J867	KIT, control board 120V <i>includes 15a, 16</i>	1
15a	119276	FUSE, 12.5A slow blow	1
16	117501	SCREW, plastite	3
17	24Y329	KIT, switch, repair <i>includes 13</i>	1
18	115498	SCREW, mach, slot, hex whd	1
19	17G541	PLATE, motor, mount	1
20	262014	LEG, right <i>includes 22, 54, 55</i>	1
21	262012	LEG, left <i>includes 22, 54, 55</i>	1

REF.	PART	DESCRIPTION	QTY.
22	260212	SCREW, hwh, thread forming	8
26	24V073	TUBE, suction, <i>assembly includes 26a, 43, 44, 45, 46, 47, 48, 49, 61</i>	1
26a	16H348	TUBE, suction <i>includes 49</i>	1
27		LABEL, front	
	17J031	ProX17	1
	17J033	ProX19	1
30	247340	HOSE, cpld, 1/4 in. x 50 ft	1
31		GUN, spray, SG3	
	243012	Models 17G178, 17G180	1
	246506	Model 17K439	1
34	112612	CAP, hub	2
35	24Y324	WHEEL <i>includes 34</i>	2
36	115480	KNOB, T-handle	2
37	120689	NUT, hex, acorn, 5/16-18	2
38	17J430	HOOK, pail	1
39	15R602	AXLE, cart	1
40	16H350	RACK, hose	1
41	16H354	HANDLE, cart	1
42	120788	SCREW, carriage	2
43	115489	CLAMP, drain tube	1
44	195108	TUBE, drain	1
45	195400	CLIP, spring	1
46	244035	DEFLECTOR, barbed	1


MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER
PARTS

REF.	PART	DESCRIPTION	QTY.
47	288716	STRAINER, inlet	1
48	116295	CLAMP, tube	1
49	115099	WASHER, hose	1
54	15J699	CAP, tube	2
55	15J695	CAP, tube	2
56▲	17J027	LABEL, warning	1
57▲	179960	CARD, medical alert (not shown)	1
60	17Y786	GUIDE, Magnum quick guide, (not shown)	1
61	115648	VALVE, power flush (not shown)	1
62	17S980	FLUID, pump armor, 8 oz (not shown)	1
64	17Y794	TAG, hang, tip (not shown)	1
65▲	15G026	TAG, warning, hose, (not shown)	1
	17J873	KIT, conversion, lacquer, cart (sold separate)	

▲ Replacement safety labels, tags, and cards are available at no cost.

MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER
PARTS

PROXCHANGE PUMP PARTS

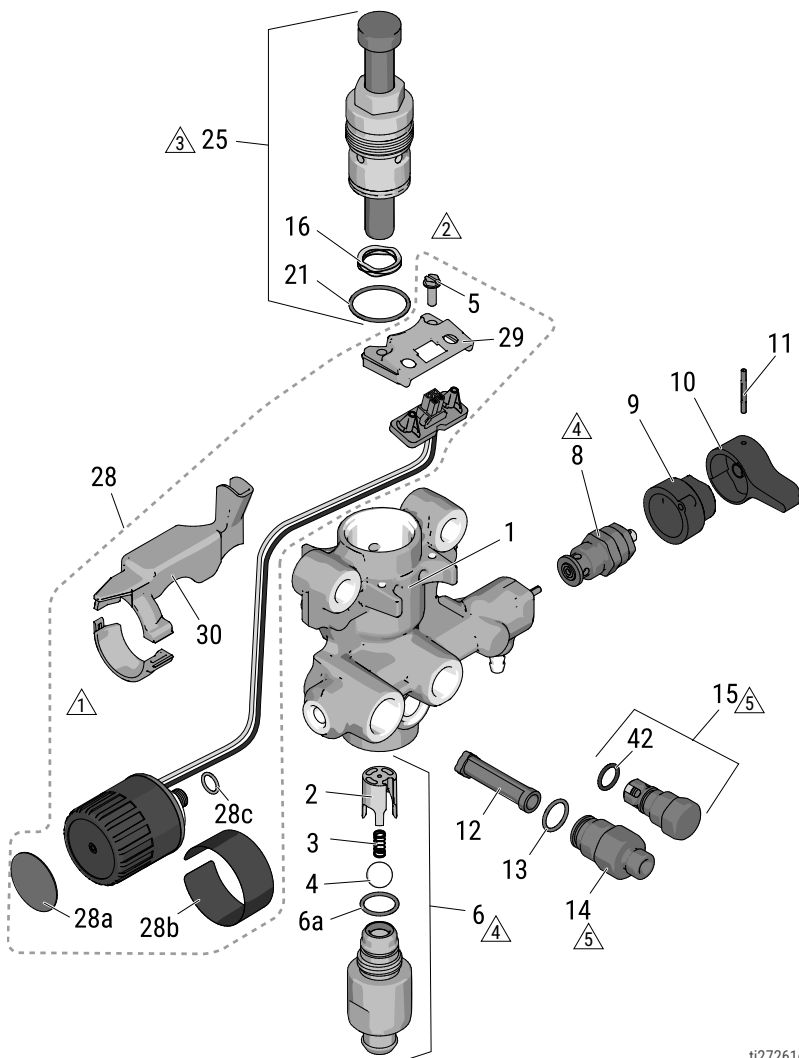

ti27261c

Figure 18-3: ProXChange Pump Parts Diagram

1 140–160 in-lb (16–18 N·m)

4 220–250 in-lb (25–28 N·m)

2 30–35 in-lb (3.4–4.0 N·m)

5 320–380 in-lb (36–43 N·m)

3 30–35 ft-lb (40–48 N·m)

MAGNUM® TRUEAIRLESS® ELECTRIC AIRLESS SPRAYER
PARTS

REF.	PART	DESCRIPTION	QTY.
1	17G447	HOUSING, pump	1
2	17D364	GUIDE, ball	1
3	128336	SPRING, compression	1
4	105445	BALL, 0.5 in.	1
5	117501	SCREW, mach, slot HWH	2
6		KIT, inlet housing	
	17J876	ProX17, ProX19	1
	17J877	ProX21	1
6a	124582	O-ring	1
8	235014	VALVE, drain, assy	1
9	224807	BASE, valve	1
10	187625	HANDLE, valve, drain	1
11	111600	PIN, grooved	1
12	288747	KIT, filter	1
13	120776	PACKING, O-ring	1
14	24Y327	KIT, repair outlet <i>includes 12,13</i>	1
15	17J880	KIT, outlet valve repair <i>includes 42</i>	1
16	128323	SPRING, valve	1
21	16D531	PACKING, O-ring	1
25	24Y472	KIT, repair, piston pump	1
28	17J881	KIT, pressure control <i>includes 5, 28a, 28b, 28c, 29, 30</i>	1
28a	15A464	LABEL, control	1
28b	17V191	LABEL, control	1
28c	106555	O-ring	1
29	17F227	BRACKET, electrical connector	1

REF.	PART	DESCRIPTION	QTY.
30	17F229	KIT, shield, wire	1
42	122486	PACKING, O-ring	1

ELECTRICAL SCHEMATIC

The wiring diagram illustrates the electronic connections that are useful for troubleshooting and repairing the electrical components of the Magnum® TRUEAIRLESS® Electric Airless Sprayer.

110 - 120 V

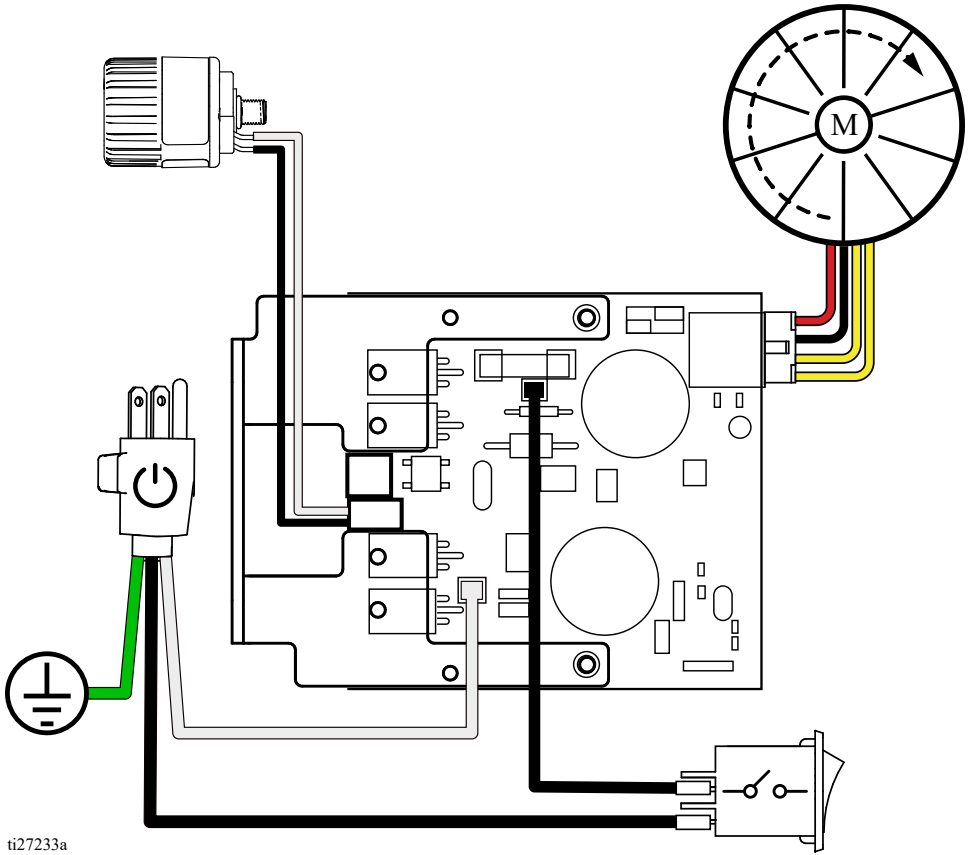


Figure 19-1: Wiring Diagram for Magnum TRUEAIRLESS Electric Airless Sprayer

CALIFORNIA PROPOSITION 65

CALIFORNIA RESIDENTS



WARNING Cancer and reproductive harm – www.P65warnings.ca.gov.

GRACO STANDARD WARRANTY

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

GRACO INC. AND SUBSIDIARIES | P.O. BOX 1441 | MINNEAPOLIS MN 55440-1441 | USA

Graco Headquarters: Minneapolis, MN USA | International Offices: Australia, Belgium, China, Japan, Korea | Toll Free Phone Number: 1-800-690-2894 (Contractor Division) and 1-800-328-0211 (Industrial Division) | For patent information, see graco.com/patents

©2026 Graco Inc. All written and visual data in this document are based on the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice. All Graco manufacturing locations maintain ISO 9001:2015 certifications, each certified by accredited certification bodies. Original Instructions. This manual contains English. Revision A, February 2026