

#### INSTRUCTION MANUAL

## LASER SENSOR

#### **LS-B10**

Thank you for purchasing the TOPCON LS-B10.

For the best performance of the instruments, please read these instructions carefully and keep them in a convenient location for future reference.

#### **DISPLAY FOR SAFE USE**

In order to encourage the safe use of products and prevent any danger to the operator and others or damage to properties, important warnings are put on the products and inserted in the instruction manuals.

We suggest that everyone understand the meaning of the following displays and icons before reading the "Safety Cautions" and text.

Display	Display Meaning	
<b>⚠ WARNING</b>	Ignoring or disregard of this display may lead to death or serious injury.	
<b>⚠</b> CAUTION	Ignoring or disregard of this display may lead to pe sonal injury or physical damage to the instrument.	

- Injury refers to hurt, burn, electric shock, etc.
- Physical damage refers to extensive damage to buildings or equipment and furniture.

#### HANDLING PRECAUTIONS

Guarding the instrument against shock

When transporting the instrument, provide some protection to minimize risk of shock. Heavy shock may affect beam accuracy.

## **SAFETY CAUTIONS**

# **!** WARNING

- There is a risk of fire, electric shock or physical harm if you attempt to disassemble or repair the instrument yourself.
- This is only to be carried out by TOPCON or an authorized dealer, only!
- · Risk of fire or electric shock.
- Do not use damaged power cable, plug and socket
- Risk of fire or electric shock.
- Do not use a wet battery.
- May ignite explosively.

  Never use an instrument near flammable gas, liquid matter, and do not use in a coal mine.
- Do not hold the LS-B10 magnetic clamp near anyone who uses a pace maker or other electoronic medical devices.

The strong magnetic field can disrupt the normal operation of such devices.

- Battery can cause explosion or injury.
- Do not dispose in fire or heat.
- The short circuit of a battery can cause a fire.

Do not short circuit battery when storing it.

# / CAUTION

Risk of injury to fingers.

Do not place fingers on magnet while mounting to equipment.

Strong magnetic field.

Do not place LS-B10 magnetic clamp near any sensitive electronic devices or magnetic storage media such as computer disk.

Do not allow skin or clothing to come into contact with acid from the batteries, if this does occur then wash off with copious amounts of water and seek medical advice.


#### **EXCEPTIONS FROM RESPONSIBILITY**


- The user of this product is expected to follow all operating instructions and make periodic checks of the product's performance.
- 2)The manufacturer, or its representatives, assumes no responsibility for results of a faulty or intentional usage or misuse including any direct, indirect, consequential damage, and loss of profits.
- 3)The manufacturer, or its representatives, assumes no responsibility for consequential damage, and loss of profits by any disaster, (an earthquake, storms, floods etc.).
- A fire, accident, or an act of a third party and/or a usage any other usual conditions
- 4)The manufacturer, or its representatives, assumes no responsibility for any damage, and loss of profits due to a change of data, loss of data, an interruption of business etc., caused by using the product or an unusable product.
- 5)The manufacturer, or its representatives, assumes no responsibility for any damage, and loss of profits caused by usage except for explained in the user manual.
- 6)The manufacturer, or its representatives, assumes no responsibility for damage caused by wrong movement, or action due to connecting with other products.

#### **Standard Set Composition**

1	LS-B10 Instrument	1pc.
2	AA-size dry cells	3pcs.
3	Instruction manual	1nc

#### Nomenclature and Functions

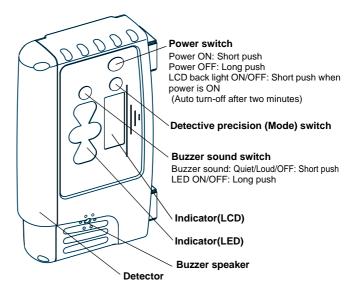

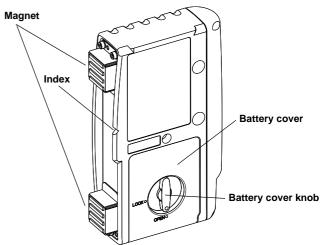

Please refer to the back of the instruction manual for the indicator display patterns.


#### Operation

- 1 Mount the LS-B10 on the equipment and position a rotating laser.
- **2** Raise or lower the machine blade or arm to position the cutting edge or bucket at the desired grade elevation.
- 3 Turn on the LS-B10.
- 4 Keep the machine blade or arm motionless and raise or lower the LS-B10 and adjust until ON-GRADE position are flashing. This is the ON GRADE position. The reference position has been set.
- **5** While operating, use the LED display to continually check grade, moving the blade or cutting / filling according to the direction of the LS-B10 display.

## Height alert warning of rotating laser

A flash and a buzzer sound signifies that the height alert function of rotating laser is operating.


(This function is not usable to the rotating laser which does not have the height alert and the function to output alarm signal.)

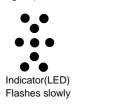

## Rotating laser battery warning

A flash shows that the rotating laser power is low.

(This function is not usable to the rotating laser which does not have the function to output alarm signal.)

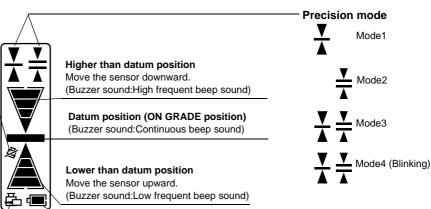

**Battery remaining display** 

Indicates the battery remaining of laser sensor as follows.

Battery is sufficient. ļ The power is low, but sensor is still usable. Dead battery.

#### Replace the dry battery with new one. Power-save function

The instrument turns the power-save mode after detecting no laser beam for more than approx. five minutes.

In the power-save mode, the indicator LCD turns off and one indicator LED blinks green.

(The mode is canceled automatically when the instrument detects a laser beam again.

The mode can also be canceled by pressing the power switch again.)

#### Auto-cut off function

The power will be turned off automatically after detecting no laser beam for more than approx. 30 minutes. (To turn on the laser sensor, press the power switch again.)

# Laser beam positions and display patterns

-		
Indicator(LCD)	Indicator(LED)	Detective precision
	000	Mode1:±2mm Mode2:±6mm Mode3:±12mm Mode4:±30mm
No display when in Mode 4		±15mm/±0.05ft (30mm/0.1ft width)
No display when in Mode 4		±25mm/±0.08ft (50mm/0.16ft width)
	Flashes quickly	±35mm/±0.11ft (70mm/0.23ft width)
	O O O O O O O O O O O O O O O O O O O	±60mm/±0.2ft (120mm/0.39ft width)
<b>*</b>	O O O O O O O O O O O O O O O O O O O	When the laser beam is off to the top or to the bottom

## **Specifications**

Detective range 120mm(4.724inches)

Detective angle 270°

Detective precision Mode1: ±2mm(0.0066ft)

> Mode2: ±6mm(0.020ft) Mode3:±12mm(0.039ft) Mode4: ±30mm(0.098ft)

633~780nm Detectable laser wave length: Laser detecting range 700m(2300ft) (Using RL-H1Sa) (diameter) AA-size dry cells 3pcs. Power source

Continuous operating time : Approximately 100 hours (+20°C/+68°F)

(Using alkaline manganese dry cells) Operating temperature -20°C~+50°C(-4°F~+122°F)

Water proof IPX6

Dimensions (W/D/H) 110x36x176(mm) (4.3"x1.4"x6.9")

Weight (Without cells) 0.53kg (1.2lbs)

Detective angle, Detective precision and Laser detecting range may vary depending on rotating laser being used or atmospheric conditions.





TOPCON POSITIONING SYSTEMS, INC.

Phone: 925-245-8300 Fax: 925-245-859
TOPCON CALIFORNIA
3380 Industrial Blvd, Suite 105, West Sac

TOPCON EUROPE POSITIONING B.V. Prione: 010-458-5077 Fax: 010-284-4949 ww IRELAND OFFICE Unit 69 Western Parkway Business Center Lower Ballymount Road, Dublin 12, Lreland Phone: 01460-0021 Fax: 01460-0129

TOPCON DEUTSCHLAND G.m.b.H.

TOPCON S.A.R.L.

TOPCON SCANDINAVIA A. B.

TOPCON (GREAT BRITAIN)LTD.

TOPCON SOUTH ASIA PTE. LTD.
Bik 192 Pandan Loop, #07-01 Pantech Industrial Complex, S

Phone: 62780222 Fax: 62733540 www.topcon.com.ag

TOPCON AUSTRALIA PTY. LTD.

Heit 18, 4 Avenue of Americas Newington NSW 2127, Avenue of Americas New Institute National Na TOPCON INSTRUMENTS (THAILAND) CO., LTD.

Phone: 02-440-1152-7 Fax: 02-440-1158

TOPCON INSTRUMENTS (MALAYSIA) SDN. BHD.

TOPCON KOREA CORPORATION Phone: 82-2-2055-0321 Fax: 82-2-2050-0-319 \*\*www.uppun.co.ma

TOPCON OPTICAL (H.K.) LIMITED

2-4/E Means Industrial Bilda.. No. 53-55 Au Pui Wan Street, Fo Tan Road

TOPCON CORPORATION BEIJING OFFICE

TOPCON CORPORATION BEIRUT OFFICE TOPCON CORPORATION DUBAI OFFICE