



ITEM #5971307/5979047


MODEL #43322/43385

EDENMORE FANDELIER

Español p. 16

ATTACH YOUR RECEIPT HERE

HARBOR BREEZE and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

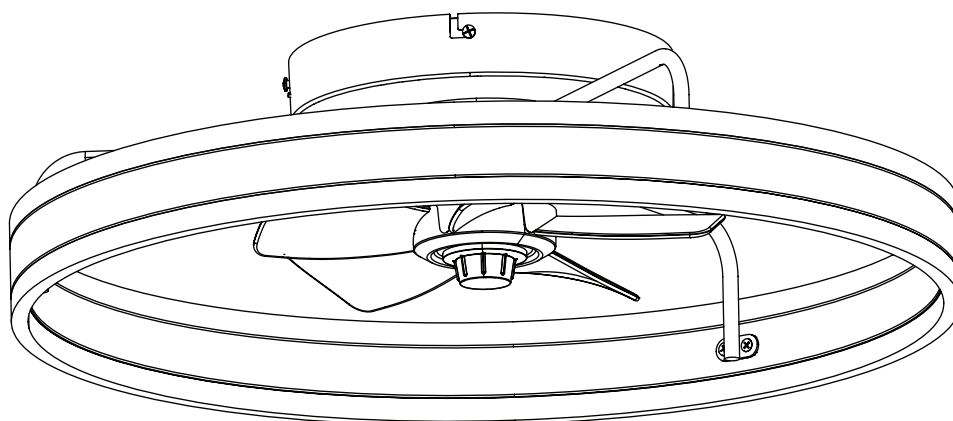

Intertek

Purchase Date _____

Thank you for purchasing this HARBOR BREEZE product.

Questions, problems, or missing parts?

Before returning, contact us at:

888-251-1003, 8 a.m. - 8 p.m., EST, Monday - Sunday or at **ascs@lowes.com**.

TABLE OF CONTENTS

Package Contents. 3

Preparation 3

Safety Information. 4

Assembly Instructions. 6

Wiring. 8

Final Installation. 9

Operating Instructions. 10


Care and Maintenance. 11

Troubleshooting. 11

Warranty. 12

Replacement Parts List 13

PACKAGE CONTENTS

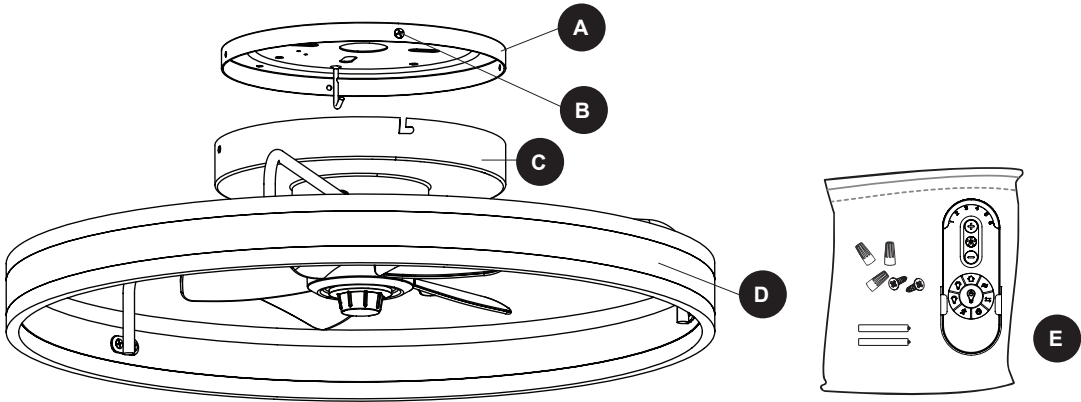


PART	DESCRIPTION	QUANTITY
A	Mounting Bracket (preassembled to Canopy [C])	1
B	Mounting Bracket Screw (preassembled to Mounting Bracket [A])	4
C	Canopy	1
D	Fan Assembly	1
E	Remote Pack	1

PREPARATION

Estimated Assembly Time: 30 minutes

Tools Required for Assembly (not included): Step ladder, Phillips screwdriver, Wire stripper/cutter, safety glasses, and electrical tape.

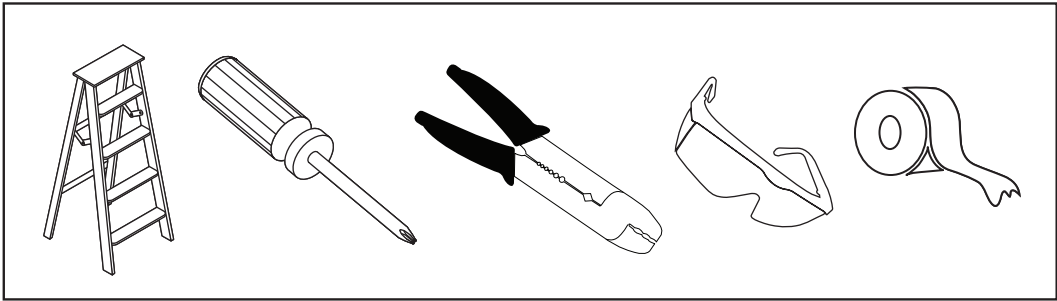

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to do so could lead to electrical shock, fire or other injuries that could be hazardous or even fatal.

- Before you begin installing the fixture, disconnect the power by removing fuses or turning off the circuit breakers.
- Make sure that all electrical connections comply with local codes, ordinances, the National Electrical Code, and ANSI/NFPA 70-199. Hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- The net weight of the fixture is 7.26 lb.
- **RATED FOR INDOOR USE.** This fan is not suitable for damp or outdoor locations.



DANGER:

- **DO NOT** connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. Installing a fixture into an electrical system not having a proper grounding means could cause metal parts of the fixture to carry electrical currents if any of the fixture wires, wire connections or splices were to become broken, cut or loose during the mounting or normal operation of the fixture. Under this condition, anyone coming in contact with the fixture would be subject to electrical shock, which could cause serious injury or death.
- **DO NOT** connect the bare or green insulation fixture ground wire to the black (hot) current-carrying wire or the white neutral house wire. Connection of the bare or green fixture ground wire to the black or white house wires may cause metal parts of the fixture to carry electrical currents. Under this condition anyone coming in contact with the fixture will receive electrical shock, which could cause serious injury or death.
- **DO NOT** damage or cut the wire insulation (covering) during installation of the fixture. **DO NOT** permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electrical shock.



WARNING:

- All electrical connections must be in agreement with local codes and ordinances, the National Electric Code (NEC) and ANSI/NFPA 70-1999. Contact your municipal building department to learn about your local codes, permits and/or inspections. Risk of fire - most dwellings built before 1985 have supply wire rated for 140°F. Consult a qualified electrician before installation.
- To avoid personal injury, the use of gloves may be necessary while handling fixture parts with sharp edges.
- **DO NOT** suspend any fixture by the house wires. A fixture must always be mounted directly to a an outlet box. Wire connectors will not support the weight of a fixture. Suspending a fixture by the house wires and wire connectors will result in the fixture falling, with the possibility of personal injury and the danger of electrical shock or fire.

SAFETY INFORMATION

WARNING:

- To reduce the risk of fire, electrical shock, or personal injury, each wire connector used with this fixture should accept only one 18-gauge wire from the fixture and one 18-gauge wire from the outlet box. If there are three or more wires to connect or any of the wires is larger than 18 gauges, consult an electrician for the proper size wire connectors to use.

CAUTION:

- To reduce the risk of personal injury, do not bend the blades. Do not insert any objects in the path of the blades.
- This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: 1) This device may cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.


Please note changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

HKC-US, 3350 Players Club Parkway, Suite 225, Memphis, TN 38125, 1-888-251-1003


ASSEMBLY INSTRUCTIONS

1. Turn off the circuit breakers and the wall switch to the supply line leads.


⚠ DANGER: Failure to disconnect the power supply prior to installation may result in serious injury or death.

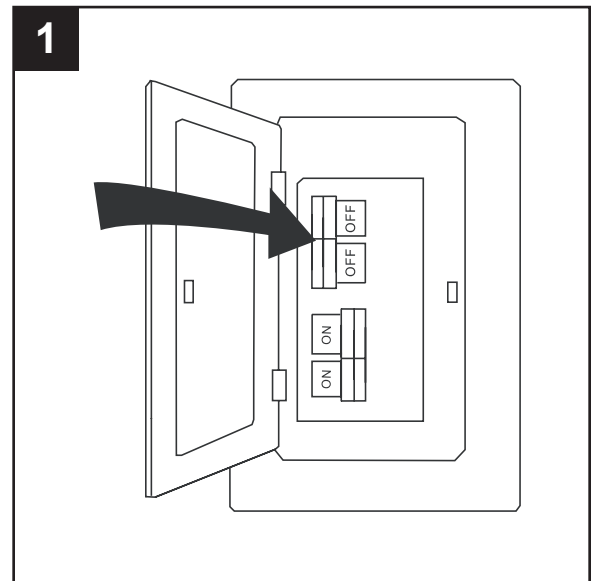

2. This fan is intended for Flushmount Installation. Standard Mounting, Angle Mounting, and Closemount installations are not available.

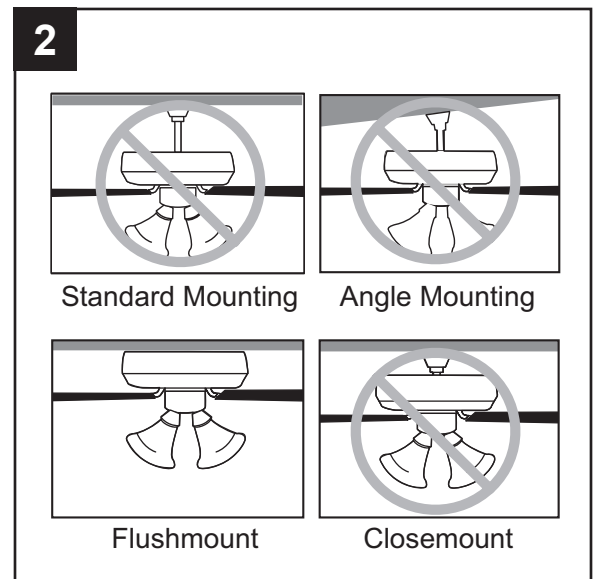


3. Loosen all four mounting bracket screws (B) and completely remove the two screws from the round holes in the canopy (C). Save the screws for later. Remove the canopy (C) from the mounting bracket (A).

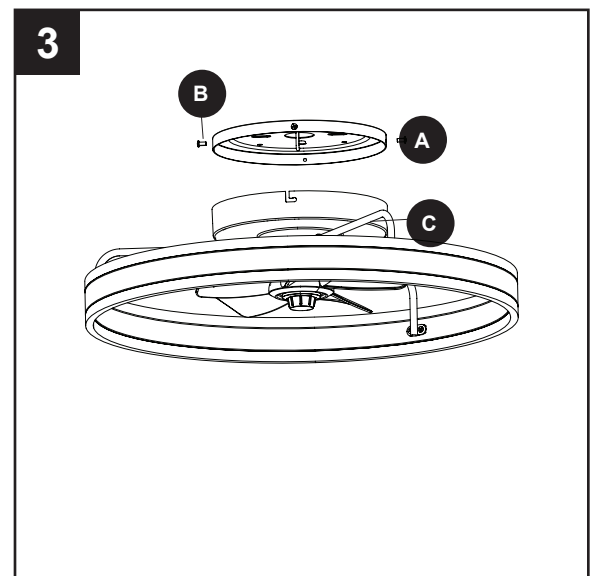


ASSEMBLY INSTRUCTIONS

4. Feed the supply wires from the outlet box through the center hole in the mounting bracket (A). Then, secure the mounting bracket (A) to the outlet box (not included) using screws and washers provided with the outlet box.

WARNING: To reduce the risk of fire, electric shock, or personal injury, mount to the outlet box marked “acceptable for fan support” and use the mounting screws and washers provided with the outlet box.

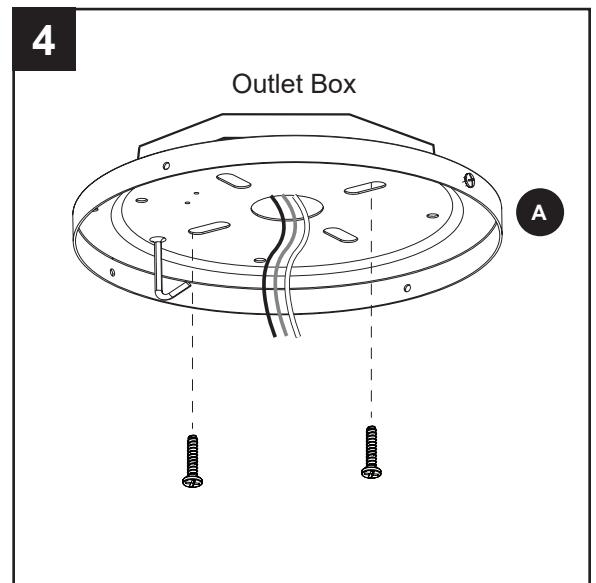

5. Raise the fan assembly (D) and place canopy (C) on the hook on the mounting bracket (A), temporarily leaving hands free for the wiring process.

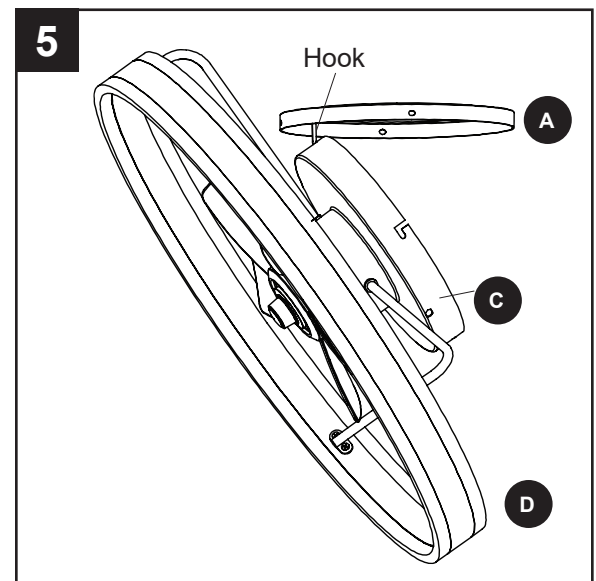

WIRING

⚠ WARNING: To reduce the risk of fire, electrical shock or personal injury, wire connectors provided with this fan are designed to accept only one 12-gauge house wire and two lead wires from the fan. If your house wire is larger than 12-gauge and there is more than one house wire to connect to the two fan lead wires, consult an electrician for the proper size wire connectors to use.




CAUTION: Be sure the outlet box is properly grounded or that a ground (green or bare) wire is present.

1. Secure all wiring connections together with wire connectors from remote pack (E) according to the diagram and these steps:
 - Connect the green wires from the downrod and mounting bracket to the bare/green (ground) supply wire.
 - Connect the Blue wire (FOR LIGHT) from the receiver to the Blue fan wire.
 - Connect the Black wire (TO MOTOR L) from the receiver to the Black fan wire.
 - Connect the White wire (TO MOTOR N) from the receiver to the White fan wire.
 - Connect the Red wire (AC IN L) from the receiver to the Black (hot/power) supply wire.
 - Connect the White (AC IN N) from the receiver to the White (neutral) supply wire.

Note: If household supply wires are different colors than referred to above, it is recommended a professional electrician determines the proper wiring.


2. Wrap electrical tape (not included) around each individual wire connector down to the wire.
3. Turn the spliced/taped wires upward and gently push the wires and wire connectors into the outlet box.

⚠ WARNING: Ensure no bare wire or wire strands are visible after making connections. Place the Green and White wire connections on the opposite side of the outlet box from the Black and Blue wire connections.

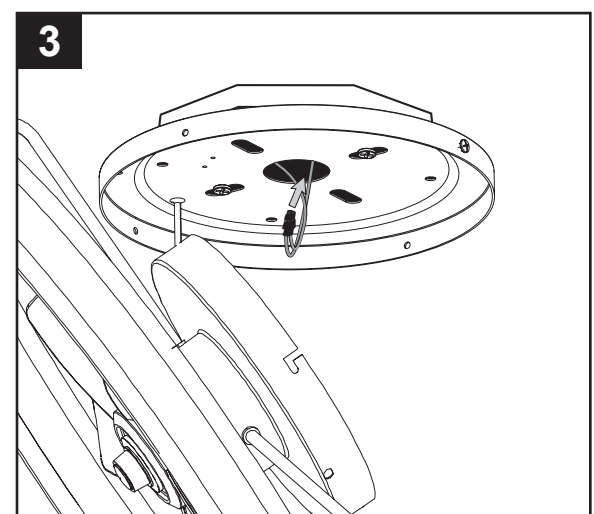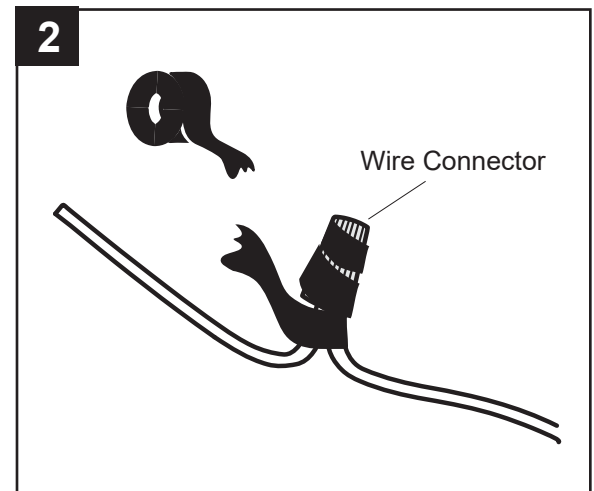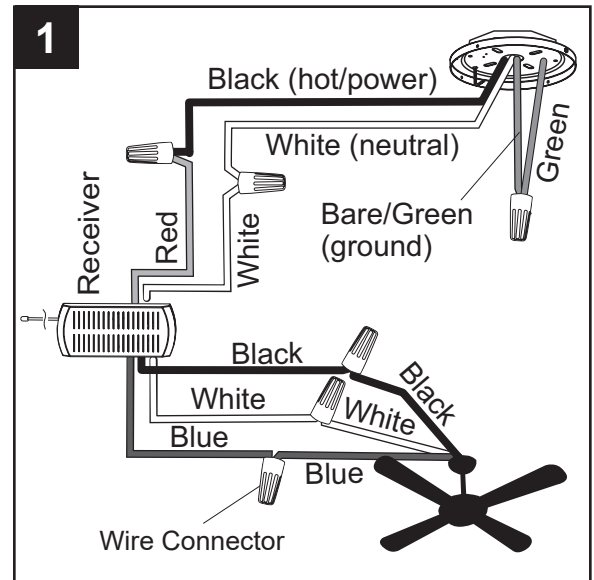


FINAL INSTALLATION

1. Slide the canopy (C) over the mounting bracket (A), aligning the slotted holes in the canopy (C) with the previously loosened mounting bracket screws (B) in the mounting bracket (A). Twist the canopy (C) counterclockwise to lock. Then re-insert the mounting bracket screws (B) (Step 3, page 6) and securely tighten all screws.

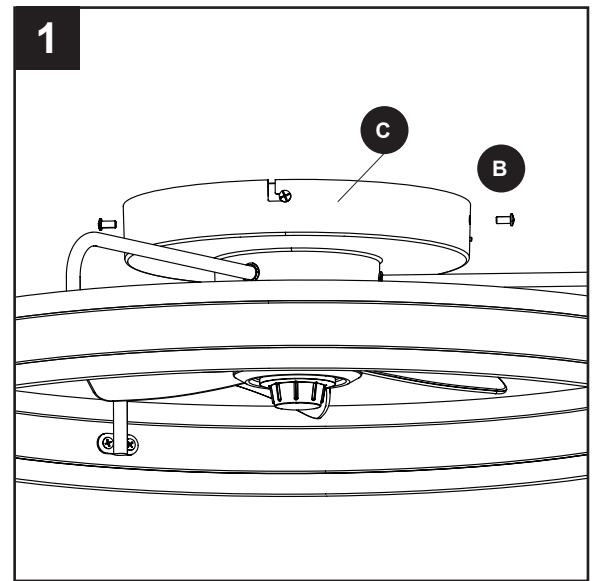

2. Use a flat-head screwdriver, if necessary, to remove the battery cover from the back of the remote found in remote pack (E). Insert two batteries into the remote; ensure polarity of batteries match the polarity indicated in the battery compartment -- positive (+) to positive (+) and negative (-) to negative (-). Replace the back cover and press the fan on/off button on the remote to ensure the LED indicator illuminates and the remote turns on the fan.


Note: If remote does not turn on fan, see TROUBLESHOOTING (page 11).

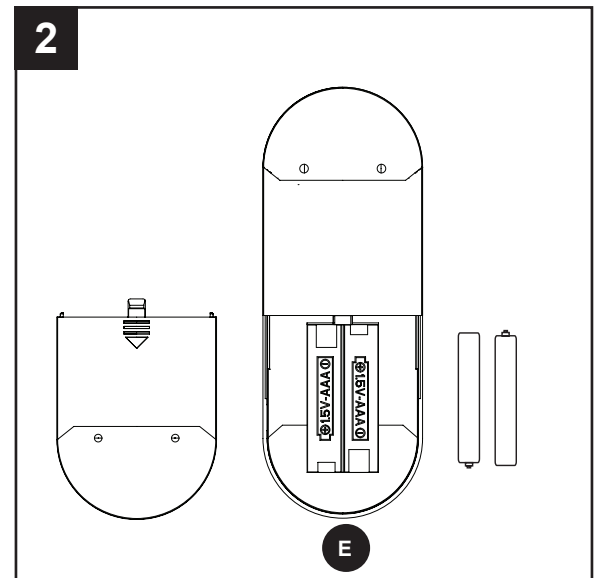

3. If desired, the wall bracket in remote pack (E) can be installed to a wall using the provided mounting screws. The remote can be stored in the wall bracket for easy access.

Turn on the circuit breakers and the wall switch to the fan supply line leads.

Assembly is complete.

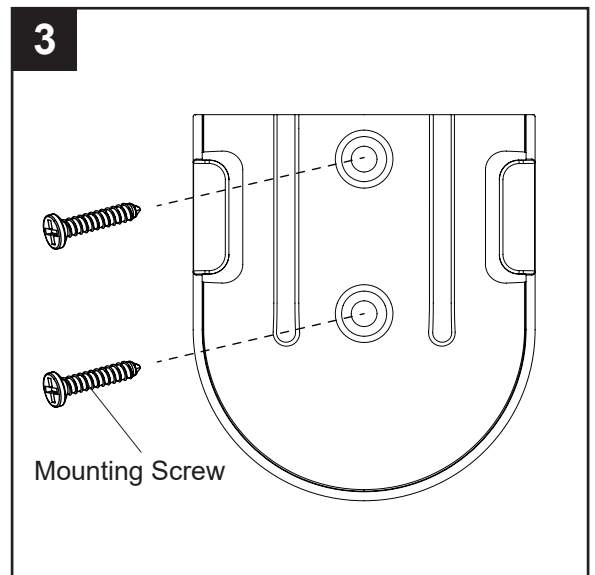


OPERATING INSTRUCTIONS


1. To operate the fan using the remote, press and release the following buttons:

 **Increase fan speed**


 **Turns the fan off or turns the fan on** at previously selected speed.


 **Lower fan speed**


 **Home Shield™** - Simulates occupancy while away from home. Fan remains off and the light randomly turns on for a minimum of five minutes and a maximum of 20 minutes. The light remains off for 60 minutes between events. Press and hold button to activate. Light will blink to confirm Home Shield is active. Press any button to cancel.


 **Variable Breeze** - Simulates a breeze in nature. Press to activate. Press any fan speed button to cancel.

 **Reverse Switch** - Changes direction of blade rotation.


 **Sleep Timer** - Turn off fan after 1, 2, or 4 hours. Press Fan Power button to deactivate.

 **Light Delay** - Delays turning off light for one minute which allows safe exit from room. Light blinks to confirm function is active. Press Light Control button to deactivate and turn the light off.

 **Light Color** - Press and hold button to cycle through the color temperatures from 2700K (warm white) to 6500K (daylight).

 **Light Control** - Press and hold button to dim or brighten the lights.

 **Light Power** - Tap button to turn the light off/on.

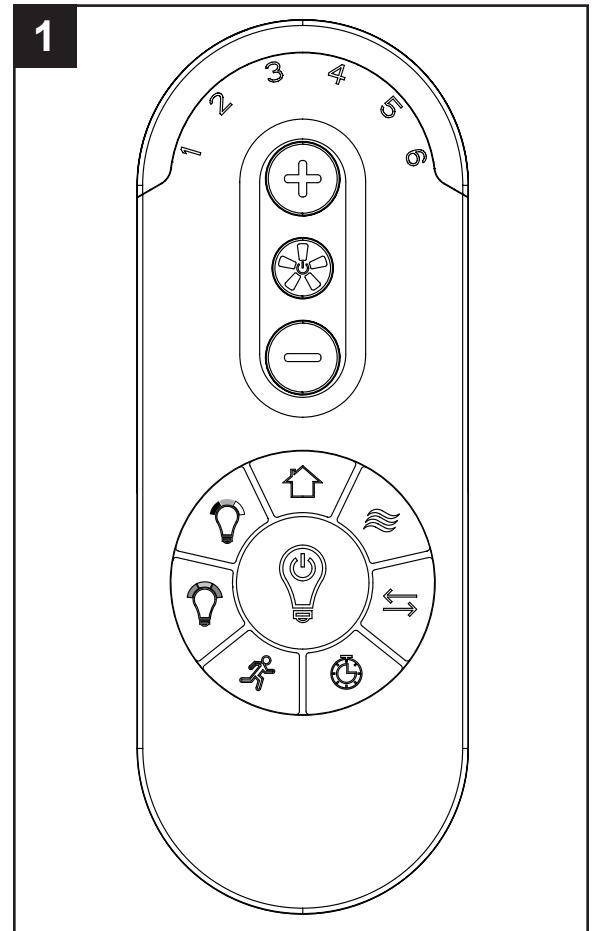

CARE AND MAINTENANCE

Clean the blades with a lint-free cloth.

Battery Replacement: Use 1.5 V (AAA) alkaline batteries. **WARNING:** Keep batteries out of reach of children. May be fatal if swallowed. In the event that a battery is swallowed, immediately consult a doctor. Non-rechargeable batteries are not to be recharged. Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries. Do not mix old and new batteries. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. Do not dispose of batteries in fire, as they may explode or leak.

Important: Shut off the main power supply before you begin any maintenance tasks. Do not use water or a damp cloth to clean the ceiling fan.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The fan does not move.	<ol style="list-style-type: none">1. The power is off or the fuse is blown.2. There is a faulty wire connection.	<ol style="list-style-type: none">1. Turn the power on or check the fuse.2. Turn the power off. Loosen the canopy and check all connections.
The fan operates correctly, but the lights are not working.	There is a faulty wire connection.	Turn the power off and check all connections at the ceiling outlet box.
Remote control does not work.	<ol style="list-style-type: none">1. Power surge may have cleared memory and remote needs to be re-synced to the receiver.2. Battery in remote control needs to be replaced.3. Interference from another remote.	<ol style="list-style-type: none">1. After installation is complete, switch the power off and back on again. Within 30 seconds, press and hold the "Light Power" button, located on the remote for 5 seconds. Remote beeps and light blinks to confirm syncing.2. Insert new AAA batteries in battery compartment of the remote control (see page 9).3. If there are several fans in proximity, turn power off to other fans and re-sync the remote (see Corrective Action 1 above).

LIMITED LIFETIME WARRANTY

Set forth below, the manufacturer warrants the fan motor for this ceiling fan to be free from defects in workmanship and material for the life of the product. Also, subject to the limitations below, the manufacturer warrants all ceiling fan parts ("ceiling fan parts" excludes the motor and parts made in whole or in part with glass) to be free from defects in workmanship and material for a period of one year after the date of purchase by the original purchaser at retail.

All claims must be made by the original purchaser from an authorized dealer, whether such purchaser purchased the product through a store or contractor. Ceiling fan part defects must be reported within the first year from the date of purchase. Parts made in whole or in part with glass and the finishes of metal and other surfaces are not warranted.

Purchasers are responsible for all costs of removing and reinstalling the product. Any damage to any part caused by ordinary wear and tear, accident, misuse, or improper installation, is not covered by this warranty. The manufacturer assumes no responsibility whatsoever for fan installation. Any service performed by a non-licensed electrician will render the warranty invalid.

The manufacturer's sole responsibility shall be to repair or replace the motor, parts, or product within the terms stated above. The manufacturer shall not be liable for any loss or damage of any kind, including any incidental or consequential damages resulting directly or indirectly, from any breach of warranty, express or implied, or any other failure of this product. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation may not apply to you.

If the original purchaser ceases to own the fan, this warranty is voided.


Should the purchaser encounter a problem with your fan related to defects in workmanship or materials within the warranty period associated with the defective part, the manufacturer agrees to replace the defective part without charge, or at its option, to replace the ceiling fan with a comparable or superior model.

The manufacturer's warranties are limited to the written warranties set out in this ceiling fan limited lifetime warranty. All other express and implied warranties, including, without limitation, the implied warranty of fitness for a particular purpose and the implied warranty of merchantability is disclaimed. Some states do not allow the disclaimer of implied warranties, so this disclaimer may not apply to you.


REPLACEMENT PARTS LIST

For replacement parts, call the customer service department at **888-251-1003**, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at **ascs@lowes.com**.

PART	DESCRIPTION	#5971307	#5979047
A	Mounting Bracket	4L000018660	4L000018670
E	Remote Pack	4L000018680	4L000018680



A

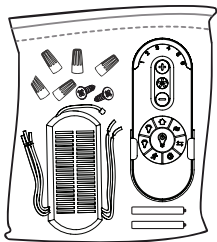

E