

Refrigerator user manual



This manual is made with 100 % recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.



Free Standing Appliance



Contents

SAFETY INFORMATION	. 2
SETTING UP YOUR SIDE-BY-SIDE REFRIGERATOR	.11
OPERATING THE SAMSUNG SIDE-BY-SIDE REFRIGERATOR	. 22
TROUBLESHOOTING	41

Safety information

SAFETY INFORMATION

Before using your new Samsung Side-By-Side Refrigerator, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers safely and efficiently.

This appliance is not intended for use by persons (including children) with reduced physical,

sensory, or mental capabilities, or those who lack experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Because the following instructions cover various models, the characteristics of your refrigerator may differ slightly from the refrigerator described in this manual.

If you have any question, contact us at 1-800-SAMSUNG or find help and information online at www.samsung.com.

Important safety symbols and precautions:

Hazards or unsafe practices that may result in severe personal injury or death.

Hazards or unsafe practices that may result in minor personal injury or property damage.

	Do NOT attempt.
X	Do NOT disassemble.
R	Do NOT touch.
	Follow directions carefully.
*	Unplug the power plug from the wall socket.
Ē	Make sure the refrigerator is grounded to prevent electric shock.
	Call the contact center for help.
	Note.

These warning symbols are here to prevent injury to you and others. Please follow them carefully. After reading this section, keep it in a safe place for future reference.

CRITICAL INSTALLATION WARNINGS

- Do not install the refrigerator in a damp location or place where it may come in contact with water.
- Deteriorated insulation on electrical parts may cause an electric shock or fire.
- Do not place this refrigerator in direct sunlight or expose it to the heat from stoves, room heaters, or other appliances.
- Do not plug several appliances into the same multiple power strip.
 The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the voltage listed
- on the refrigerator's rating plate.
 This provides the best performance and also prevents overloading of house wiring circuits, which could cause a fire hazard from overheated wires.
- If the wall socket is loose, do not insert the power plug.
- There is a risk of electric shock of fire.
- Do not use a power cord that has cracks or abrasion damage along its length or at either end.
- Do not bend the power cord excessively or place heavy objects on it.
- Do not twist or tie the power cord.
- Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
- When moving the refrigerator, be careful not to roll over or damage the power cord.
- This may result in an electric shock or fire.
- Never unplug your refrigerator by pulling on the power cord.
 Always grip the plug firmly and pull straight out
 - from the outlet.
- Damage to the cord may cause a short-circuit, fire, and/or electric shock.
- Do not use aerosols near the refrigerator.
- Using aerosols near the refrigerator may cause an explosion or fire.
- Do not install this appliance near a heater or inflammable material.

- Do not install this appliance in a humid, oily, or dusty location, or in a location exposed to direct sunlight or water (rain, etc.).
- Do not install this appliance in a location where gas may leak.

This may result in an electric shock or fire.

- This refrigerator must be properly located and installed in accordance with the instructions in this manual before you use it.
- Connect the power plug in the proper position with the cord hanging down.
- If you connect the power plug upside down, the wire can get cut off and cause a fire or electric shock.
- When moving the refrigerator, be careful not to roll over or damage the power cord.
- This constitutes a fire hazard.
- Make sure that the power plug is not crushed or damaged by the back of the refrigerator.
- Keep the packing materials out of reach of children.
- There is a risk of death from suffocation if a child puts the packing materials on his or her head.
- The appliance must be positioned so that the plug is accessible after installation.
- Failing to do so may result in an electric shock or fire due to electric leakage.
- You need to remove all the protective plastic film before you initially plug the product in.

Ē

• The refrigerator must be safely grounded.

- Always make sure that you have grounded the refrigerator before attempting to investigate or repair any part of the appliance. Power leakages can cause severe electric shock.
- Never use gas pipes, telephone lines, or other potential lightning attractors as an electrical ground.
- Improper use of the grounding plug can result in a risk of electric shock.

If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance.

The marked rating of the extension cord should be AC 115-120 V, 10 A, or more.

If a grounding adapter is used, make sure the


receptacle box is fully grounded.

- Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord, or loose wall socket.
- This may result in an electric shock or fire.

 If the power cord is damaged, have it replaced immediately by the manufacturer or one of its service agents.

INSTALLATION CAUTIONS

- Allow sufficient space around the refrigerator and install it on a flat surface.
- If your refrigerator is not level, the internal cooling system may not work correctly.
- Keep the ventilation space in the appliance enclosure or mounting structure clear of obstructions.
- Allow the appliance to stand for 2 hours after installation.
- We strongly recommend you have a qualified technician or service company install the refrigerator.
- Failing to do so may result in an electric shock, fire, explosion, problems with the product, or injury.

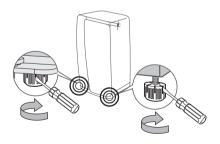

 When installing the refrigerator, make sure both legs contact the floor for secure installation.
 Legs are located at the bottom back of each door.

Insert a flathead screwdriver and turn it in the direction of the arrow until it is level.

- Always balance the load on each door.
- Overload on any one door may fell the refrigerator, causing physical injury.

CRITICAL USAGE WARNINGS

- \square
- Do not insert the power plug into a wall socket with wet hands.
- Do not store articles on the top of the appliance.
- When you open or close the door, the articles may fall and cause personal injury and/or material damage.
- Do not insert hands, feet or metal objects (such as knives, etc.) into the bottom or the back of the refrigerator.
- This may result in an electric shock or injury.
- Any sharp edges may cause a personal injury
- Do not put a container filled with water on the refrigerator.
- If spilled, there is a risk of fire or electric shock.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep fingers out of "pinch point" areas.
 Clearances between the doors and cabinet are necessarily small. Be careful when you open the doors if children are in the area.
- Do not let children hang on the door. A serious injury may occur.
- Do not let children go inside the refrigerator. They could become trapped.
- Do not insert your hands into the bottom area under the appliance.
- Any sharp edges may cause personal injury.
- Do not let children step on a drawer cover.
- The drawer may break and cause them to slip.
- Do not overfill the refrigerator with food.
- When you open the door, an item may fall out and cause personal injury or material damage.
- Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
- This may cause frostbite.
- Never put fingers or other objects into the water dispenser hole, ice chute, or ice maker bucket.
- It may cause personal injury or material damage.
- Do not use or place any substances sensitive

English - 4

to temperature such as inflammable sprays, inflammable objects, dry ice, medicine, or chemicals near or inside the refrigerator.

- Do not keep volatile or inflammable objects or substances (benzene, thinner, propane gas, alcohol, ether, LP gas, and other such products) in the refrigerator.
- This refrigerator is for storing food only.
- This may result in fire or explosion.
- Do not store pharmaceutical products, scientific materials, or temperature sensitive products in the refrigerator.
- Products that require strict temperature controls must not be stored in the refrigerator.
- Do not place or use an electrical appliance inside the refrigerator, unless it is of a type recommended by the manufacturer.
- Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
 This may result in an electric shock, fire, problems with the product, or injury.
- Do not put a container filled with water on the appliance.
- If spilled, there is a risk of fire or electric shock.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in an electric shock, fire, or problems with the product.
- Never stare directly at the UV LED lamp for long periods of time.
- This may result in eye strain due to the ultraviolet rays.



Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than a standard fuse.
- If your appliance needs to be repaired or reinstalled, contact your nearest service center.
- Failing to do so may result in an electric shock, fire, problems with the product, or injury.
- If the interior or exterior LED lamp has gone out, please contact your nearest service center.



 Children should be supervised to ensure that they do not play with the appliance.

Keep fingers out of "pinch point" areas. : Clearances between the doors and cabinet are necessarily small.

Be careful when you open the doors if children are in the area.

- Do not let children hang on the door. A serious injury may occur.
- Do not let children go inside the refrigerator. They could become trapped.
- Bottles should be stored tightly together so that they do not fall out.
- This product is intended only for the storage of food in a domestic environment.
- If a gas leak is detected, avoid any naked flames or potential sources of ignition, and air the room in which the appliance is standing for several minutes.
- Do not touch the appliance or power cord.
- Do not use a ventilating fan.
- A spark may result in explosion or fire.
- Use only the LED Lamps provided by the manufacturer or its service agents.

 If the refrigerator emits a burning smell or smoke, unplug the refrigerator immediately and contact your Samsung Electronics service center.

- If you experience difficulty changing a non-LED light, contact a Samsung service center.
- If the product is equipped with LED Lamps, do not disassemble the Lamp Covers and LED Lamps yourself.
- Please contact your service agents.
- If dust or water enters the refrigerator, unplug the refrigerator and contact your Samsung Electronics service center.
 - There is a risk of fire.

USAGE CAUTIONS



Do not re-freeze frozen foods that have thawed completely.

Do not place carbonated or fizzy drinks in the freezer compartment.

Do not put bottles or glass containers in the freezer.

- When the contents freeze, the glass may break and cause personal injury.
- Use only the ice maker provided with the refrigerator.
- Have the refrigerator's water supply installed by a suitably qualified person and connected only to a potable water supply.

To operate the ice maker properly, water pressure of 20 ~ 125 psi (138 ~ 862 kPa) is required.

If you will be away from home for a long period of time (on vacation, for example) and won't be using the water or ice dispensers, close the water valve.

- Otherwise, water leakage may occur.
- If you won't be using the refrigerator for a very long period of time, (3 weeks or more) empty the refrigerator, unplug it, close the water valve, wipe excess moisture from the inside walls, and leave the doors open to prevent odors and mold.
- *

Service Warranty and Modification.

- Any changes or modifications performed by a 3rd party on this finished appliance are not covered under Samsung warranty service, nor is Samsung responsible for safety issues that result from 3rd party modifications.
- Do not block the air vents inside the refrigerator.
- If the air vents are blocked, especially with a plastic bag, the refrigerator can be over cooled.
 If this cooling period lasts too long, the water filter may break and cause water leakage.
- If the refrigerator is disconnected from the power supply, you should wait for at least five minutes before plugging it back in.
- If you have a long vacation planned or do not intend to use the refrigerator for a long period of time, (3 weeks or more) empty the refrigerator, pull out the power plug, close the water valve, wipe excess moisture from the inside walls,

and leave the doors open to prevent odors and mold.

- Letting the refrigerator run long periods of time without using it can cause the insulation to deteriorate and may cause a fire.
- To get the best performance from the product:
- Do not place food too close to the vents at the rear of the appliance as it can obstruct free air circulation in the refrigerator compartment.
- Wrap food up properly or place it in airtight containers before putting it into the refrigerator.
 Do not place glass bottles or carbonated
- beverages into the freezer. They can freeze and break.
- Broken beverage containers can cause injury. Please observe maximum storage times and expiration dates of frozen goods.
- There is no need to disconnect the refrigerator from the power supply if you will be away for less than three weeks.

However, if you will be away for more than three weeks, remove all the food, unplug the refrigerator, close the water valve, wipe excess moisture from the inside walls, and leave the doors open to prevent odors and mold.

- Fill the water tank and ice cube trays with potable water only (tap water, mineral water, or purified water).
- Do not fill the tank with tea or a Sports drink. This may damage the refrigerator.
- Do not strike or apply excessive force to any glass surface.
- Broken glass may result in a personal injury and/or property damage.

 If the product is flooded, make sure to contact your nearest service center.
 There is a risk of electric shock or fire.

SAFETY INFORMATION

CLEANING CAUTIONS

- Do not spray water directly on the inside or outside the refrigerator.
- There is a risk of fire or electric shock.
- Do not use a hair dryer to dry the inside of the refrigerator.
- Do not place a lighted candle in the refrigerator to remove bad odors.
- This may result in an electric shock or fire.
 - Use a clean, dry cloth to remove any foreign matter or dust from the power plug blades.

Do not use a wet or damp cloth when cleaning the plug.

- Otherwise, there is a risk of fire or electric shock.



*

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failing to do so may result in an electric shock or fire.

• This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

CRITICAL DISPOSAL WARNINGS



 DANGER : Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors and door latch.
- Leave the shelves in place so that children cannot easily climb inside.
- Children trapped inside a refrigerator can hurt themselves or suffocate to death.
- Please dispose of the packaging material from this product in an environmentally friendly manner.
- Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.
- R-600a or R-134a is used as a refrigerant. Check the compressor label on the rear of the appliance or the rating label inside the fridge to see which refrigerant is used for your refrigerator.

If this product contains flammable gas (Refrigerant R-600a), contact your local authority in regard to safe disposal of this product.

 When disposing of this refrigerator, remove the door/door seals and door latch so that small children or animals cannot become trapped inside.

Children should be supervised to ensure that they do not play with the appliance. If trapped inside, the child may get hurt or suffocate to death.

- Cyclopentane is used in the insulation. The gases in the insulation material require a special disposal procedure.
 Please contact your local authorities in regard to the environmentally safe disposal of this product.
- Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
- If a child places a bag over his or her head, the child could suffocate.

ADDITIONAL TIPS FOR PROPER USAGE

- In the event of a power failure, call the local office of your Electricity Company and ask how long it is going to last.
- Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off.
- Should the power failure last more than 24 hours, remove and discard all frozen food.
- If a key is provided with refrigerator, the keys should be kept out of the reach of children and not be kept in the vicinity of the appliance.
- The appliance might not operate consistently (frozen contents can thaw or temperatures can become too warm in the frozen food compartment) when sited for an extended period of time in a location where ambient air temperatures are constantly below the temperatures for which the appliance is designed.
- Do not store food which goes bad easily at low temperature, such as bananas and melons.
- Your appliance is frost free, which means there is no need to manually defrost your appliance. This will be carried out automatically.
- Temperature rise during defrosting complies with ISO requirements.

But If you want to prevent an undue rise in the temperature of frozen food while the appliance defrosts, wrap the frozen food in several layers of newspaper.

- Any increase in the temperature of frozen food during defrosting can shorten its storage life.
- Do not re-freeze frozen foods that have thawed completely.

Saving Energy Tips

- Install the appliance in a cool, dry room with adequate ventilation.
- Ensure that it is not exposed to direct sunlight and never put it near a direct source of heat (a radiator, for example).
- Never block any vents or grilles on the appliance.
- Allow warm food to cool down before placing it in the appliance.
- Put frozen food in the refrigerator to thaw.
 You can then use the low temperatures of the frozen products to cool food in the refrigerator.
- Do not keep the door of the appliance open for too long when putting food in or taking food out.

The shorter the time the door is open, the less frost build-up you'll have in the freezer.

 Provide sufficient clearance to the right, left, back, and top for air circulation when installing the refrigerator. This will help reduce power consumption and keep your energy bills lower.

1. Regulatory Notice

1.1 FCC Notice

FCC CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contains Transmitter Module FCC ID: A3LSWL-B70F

This device complies with Part 15 of FCC Rules. Operation is Subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received including interference that cause undesired operation.

For products available in the US and Canadian markets, only channels 1~11 are available. You cannot select other channels.

FCC STATEMENT:

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- · Increase the separation between the equipment and receiver
- Connect the equipment to an outlet that is on a different circuit than the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated so there is at least 8 inches (20 cm) between the radiator and your body. This device and it's antennas must not be co-located or operated in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

SAVE THESE INSTRUCTIONS

1. Regulatory Notice

1.2 IC Notice

Contains Transmitter Module IC: 649E - SWLB70F

The term "IC" before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions : (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme á la norme NMB-003 du Canada.

For products available in the US and Canadian markets, only channels 1~11 are available. You cannot select other channels.

IC RADIATION EXPOSURE STATEMENT:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated so there is at least 8 inches (20 cm) between the radiator and your body. This device and it's antennas must not be co-located or operated in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

SAVE THESE INSTRUCTIONS

Setting up your side-by-side refrigerator


GETTING READY TO INSTALL THE REFRIGERATOR

Congratulations on the purchase of your Samsung Side-By-Side Refrigerator.

We hope you will enjoy the many state-of-the-art features and efficiencies that this new appliance has to offer.


Selecting the best location for the refrigerator

- Select a location with easy access to a water supply.
- Select a location without direct exposure to sunlight.
- Select a location with level (or nearly level) flooring.
- Select a location with enough space for the refrigerator doors to open easily.
- Select a location that allows sufficient space to the right, left, back, and top for air circulation.
- Select a location that allows you to move the refrigerator easily if it needs maintenance or service.
- Do not install the refrigerator in locations where the temperature is over 109 °F (43 °C) or below 41 °F (5 °C).

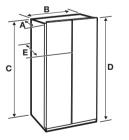


Model	RH29*	RH22*	
Depth "A"	35 1/8" (893 mm)	28 2/8" (718 mm)	
Width "B" 35 7/8" (912 mm)		35 7/8" (912 mm)	
Height "C"	68 1/2" (1742 mm)	68 1/2" (1742 mm)	
Overall Height "D"	69 6/8" (1774 mm)	69 6/8" (1774 mm)	
Depth "E"	35 2/8" (896 mm)	28 1/4" (721 mm)	

< RH29* >

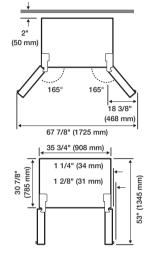





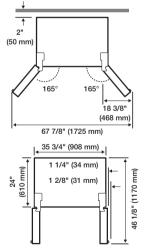


Each measurement based on the design dimension, so it may differ depending on the measuring method.

Ø

English - 11

When moving your refrigerator

To prevent floor damage, be sure the front levelling legs are in the up position (above the floor). Refer to 'Levelling the refrigerator' in this manual (page 16).

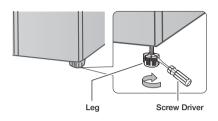

Flooring


For proper installation, you must place this refrigerator on a level, hard surface that is the same height as the rest of the floor.

This surface should be strong enough to support a fully loaded refrigerator.

To protect the finish of the flooring, cut a large section of the cardboard carton and place it under the refrigerator where you are working.

When moving the refrigerator, you need to pull and push it straight forwards or back.

Do not wiggle it from side to side.

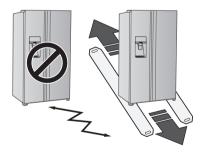

Required Tools (Not provided)

		9
Philips screwdriver (+)	Flat-blade screw driver (-)	Socket wrench (13/32") (10 mm)
Allen wrench (3/16") (5 mm)		


REMOVING THE REFRIGERATOR DOORS

If your entrance won't allow the refrigerator to pass easily through it, you can remove the doors.


To remove the doors, follow the steps below. If you do not need to remove the doors, go to "Leveling the Refrigerator" on page 16.

1. SEPARATE THE WATER SUPPLY LINES FROM THE FRIDGE

1. Pull the two water lines (which are in the Fixer) out to the front.

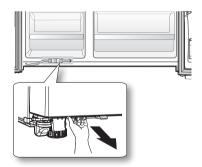

 Remove the two water lines (White for water and the other for ice) by pressing the coupler (1) and pulling the water line (2) away.

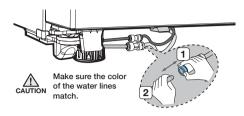


When reconnecting the supply hoses, make sure the same colored hoses are inserted with each other.

2. DETACH THE HINGE COVER

- Disconnect the power cord, and remove 3 cover screws using a Phillips screwdriver (1). Then open the refrigerator door and pull the hooks on the sides to loosen the cover (2). Lift up the cover towards you to detach it (3).
- Detach the hinge cover with the door open and then close the door once the hinge cover has been detached.



(2)

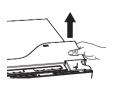

(3)




3. DISASSEMBLE THE FREEZER DOORS

1. Remove the hinge cover and then disconnect the electrical wire connector.



2. Flip the clamp (**A**) up in direction 1 and then pull it off in direction 2.

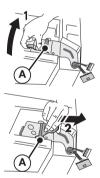

3. Remove the hinge (**B**).

English - 13




4. Lift up the door and detach it from the refrigerator.

SETTING UP

- Be careful not to damage the electrical wires when assembling or disassembling the doors.
- Make sure the doors do not fall over and become damaged while they are detached from the refrigerator.

4. DISASSEMBLE THE COLD COMPARTMENT SHOW CASE DOOR


1. Disassemble the housing connector.

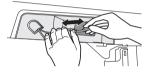

2. Disassemble the three fastening screws on the top hinge of the show case.



3. Remove the show case door.

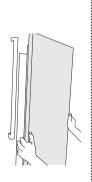

5. DISASSEMBLE THE REFRIGERATOR DOORS


1. Push the fixer hinge up, and pull it forward to remove it.




2. Disassemble the top hinge from the front of the door.



3. Remove the entire door.

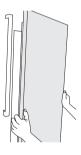

Fix the wire on the Hinge Hook to prevent the damage on the wire when reassembling.

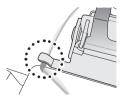

English - 14

RE-ATTACHING THE DOORS

To re-attach the doors, follow the steps below.

1. RE-ATTACH THE FREEZER DOOR


- Be sure to re-attach the Freezer Door before reattaching the Fridge Door.
- Before re-attaching, make sure that all the wire connectors at the bottom of the Freezer Door are connected.

How to Re-Attach the Freezer Door


1. Attach the doors to the hinges at the bottom of the refrigerator.



2. Insert the hinge (**B**) into the hinge slot on the refrigerator, and then press down over the hinge hole on the door.

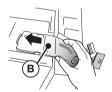

- 3. Insert the clamp (**A**) in the direction of arrow (**1**) and then lower it in the direction of arrow
 - (2) to lock it in place.

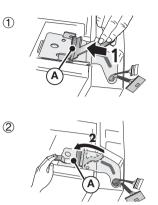

4. Hook up the electrical wire connector.



The display may not function properly if you neglect to connect the electrical wires while assembling the door.

2. RE-ATTACH THE REFRIGERATOR DOOR

To re-attach the REFRIGERATOR door, assemble the parts in reverse order.

SETTING UP

3. RE-ATTACH THE COLD COMPARTMENT SHOW CASE DOOR

To re-attach the COLD COMPARTMENT SHOW CASE DOOR, assemble the parts in reverse order.

4. RE-ATTACH THE HINGE COVER


- 1. Open the refrigerator doors.
- 2. Attach the hinge cover to the top of the refrigerator.

Secure the cover in place with the three screws you removed earlier using a Phillips screwdriver.



5. RE-ATTACH THE WATER SUPPLY LINER

- 1. The Water Line must be fully Inserted to the center of the transparent coupler to prevent water leakage from the dispenser.
- 2. Insert the 2 clips in the install pack and check that each clip holds the line firmly.

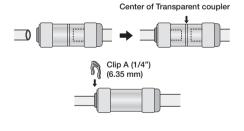

Keep the clips out of the reach of children and make sure that children do not play with them or put them into their mouths.

LEVELING THE REFRIGERATOR AND ADJUSTING THE HEIGHT AND GAP OF THE DOORS

How to level the refrigerator

If the front of the appliance is slightly higher than the rear, the door can be opened and closed more easily.

Setting up the refrigerator on an uneven surface will cause the refrigerator to lean.

If the freezer side is lower:

 Insert a flathead screwdriver into the height leveler located at the bottom back of the freezer door and turn it in the direction of the arrow until it is level.



If the refrigerator side is lower:

 Insert a flathead screwdriver into the height leveler located at the bottom back of the refrigerator door and turn in the direction of the arrow until it is level.






 Raise the front of the refrigerator so that the doors close by themselves.
 Adjusting the levelers so that the back of the refrigerator is much higher than the front of the refrigerator can make it difficult to open the doors.

- If the back of the refrigerator is not level, put an appropriately sized thin piece of wood or tile where the refrigerator leg you want to raise will be set, and then secure it in place using tape. Slide the refrigerator into its spot, with the back leg you want to raise on the tile or wood. Then, adjust the level of the front legs.
- When pushing the refrigerator in, be careful not to damage the floor.


HOW TO ADJUST THE DOOR HEIGHT

If one door is lower than the other:

- The refrigerator door height can be adjusted using the adjustment nuts located at the bottom of each door.
- Raising the door too high can cause the door to interfere with the hinge cover when it is opened or closed.

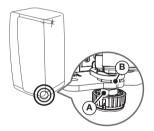

 Open the door that needs to be adjusted and loosen the clamping nut (A) at the bottom of the door by turning it clockwise () using the spanner included in the product package. (Raise the lower of the two doors first.)

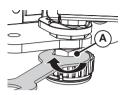


- SETTING UP

(Turn it counterclockwise (\checkmark) to increase the height of the door and clockwise (\checkmark) to decrease it.)

Open the door and adjust it from the inside.



Once the doors are level, turn the clamping nut
 (A) counterclockwise () to tighten it.

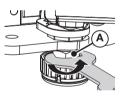

_	
// A	
W / I	
2	

Adjusting the level when the refrigerator is empty can result in the refrigerator becoming uneven again once items have been placed inside. If this occurs, adjust the level again.

HOW TO ADJUST THE GAP BETWEEN THE DOORS

If the gap between the refrigerator door and the freezer door is uneven:

- Use the gap adjustor located at the top of the refrigerator door (right side).
- Excessive force can cause the adjustor bolt to break.
- 1. Remove the refrigerator door's hinge cover.
- Detach the hinge cover with the door open and then close the door once the hinge cover has been detached.



2. Adjust the gap using a 4 mm Allen wrench (not included).



 Rotate the bolt clockwise () to widen the gap. Rotate it counterclockwise () to narrow the gap.

Adjust until the gap between the refrigerator door and the freezer door appears even.





When arranging the cables, take caution not to tear or peel off the cable coating.

HOW TO ADJUST THE GAP BETWEEN THE REFRIGERATOR DOOR AND THE REFRIGERATOR BODY

If the gap between the refrigerator door and the refrigerator is uneven :

• Use the adjustors located at the top edge of the refrigerator, inside each door.

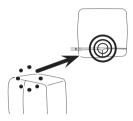

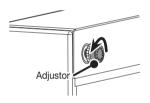



English - 18

INSTALLING THE WATER DISPENSER LINE

A water dispenser is one of the helpful features on your new Samsung Refrigerator.

To help promote better health, the Samsung water filter removes unwanted particles from your water. However, it does not sterilize or destroy microorganisms.

You may need to purchase a water purifying system to do that.

The water line also connects to the ice maker. For the ice maker to operate properly, water pressure of 20 ~ 125 psi (138 ~ 862 kPa) is required.

If the refrigerator is installed in an area with low water pressure (below 20 psi), you can install a booster pump to compensate for the low pressure. After you have connected the water line, make sure the water storage tank inside the refrigerator is properly filled.

To do this, press the water dispenser lever until water runs from the water dispenser.



Water line installation kits are available at extra cost from your dealer.

We recommend using a water supply kit that contains copper tubing.

The Samsung refrigerator warranty does not cover water line installation.

We strongly recommend you have a plumber or authorized installer install the water line.

Connecting to the water supply line


1. First, shut off the main water supply line and turn the ice-maker off.



The refrigerator should NOT be plugged in at this point.

SETTING UP


- 2. Locate the nearest cold water drinking water line.
- 3. Install the pipe clamp and shut off valve.
- 4. Connect the water line installation kit to the shut off valve.

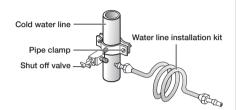

Connecting the water supply line to the refrigerator

There are several items that you need to purchase to complete this connection.

You may find these items sold as a kit at your local hardware store.

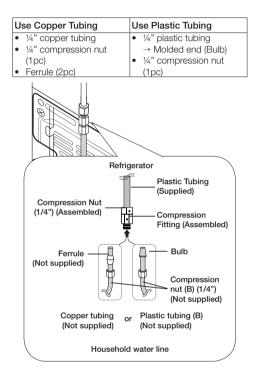

- 1. Connect the household water line to the assembled compression fitting.
- If you are using copper tubing, slip the compression nut (**B**) (not supplied) and ferrule (not supplied) on the copper tubing (not supplied) as shown.
- If you are using plastic tubing (B), insert the molded end (Bulb) of the plastic tubing (B) into the compression fitting.

Do not use plastic tubing (${\bf B}$) without the molded end (Bulb).

- 2. Tighten the compression nut (${\mbox{\bf B}}$) onto the compression fitting.
 - Do not over-tighten the compression nut (${\bf B}$).
- 3. Turn the water on and check for any leaks inside the refrigerator, around the water filter, and in any connection areas.

If you find water drops or leaks, turn off the main water supply.

If the leaks are in the connection areas, check the connections and, if necessary, tighten. If there are leaks in the refrigerator, check the water filter and confirm it is in the locked position.

Turn on the water supply and check for leaks again.

- 4. Plug in the refrigerator.
- Flush 3 gallons of water through the filter before drinking or using the water from the refrigerator. (Flush approximately 6 minutes.) This will clean the water supply system and remove air from the lines.

To flush, press the Water button, and then press a large glass or cup against the water dispenser lever. Fill the glass, empty it into the kitchen sink after it is filled, and then repeat.



Additional flushing may be required in some households.

6. Open the refrigerator door and make sure there are no water leaks coming from the water filter.

- After you turn on the refrigerator, let the ice maker make ice for 1 to 2 days. Over that period of time, throw out the first 1 or 2 buckets of ice the ice maker makes to ensure all impurities have been removed from the water line.
- Only connect the water line to a drinkable water source.
- If you have to repair or disassemble the water line, cut off 1/4" of the plastic tubing to make sure you get a snug, leak-free connection.
- You can test the water line quickly using a paper cup.

Under normal conditions, the water dispenser can fill a 5.75 oz. (170 cc) cup in about 10 seconds.

English - 20

Ø

COMPLETING THE SET UP

Now that you have your new refrigerator installed in place, you are ready to set up and enjoy the features and functions of the appliance. By completing the following steps, your refrigerator should be fully operational.

- Make sure your refrigerator is in an appropriate location with reasonable clearance between it and the wall. Refer to installation instructions in this manual.
- 2. Once the refrigerator is plugged in, make sure the interior light comes on when you open the doors.
- Set the Temperature control to the coldest temperature and wait for an hour. The freezer will get slightly chilled and the motor will run smoothly. Reset the refrigerator and freezer to the temperatures you want.
- 4. After you plug the refrigerator in, it will take a few hours to reach the appropriate temperature.
 You can store food and drinks in the refrigerator after the temperature is sufficiently cool.
- 5. Once installation is complete, press the dispenser lever to check if the water or the ice is properly dispensed.
- 6. Make sure the front side of the refrigerator is 0.6 degree higher than its rear side.

If condensation or water drops appear on both sides of the fridge door's central part, turn the Energy Saver mode off after removing the condensation. (See the explanation of the Energy Saver button in "Using the Control Panel" on page 22.) SETTING UP

Operating the SAMSUNG sideby-side refrigerator

USING THE CONTROL PANEL



(1) Freezer / Power Freeze (3sec)

The Freezer button serves two purposes:

- To set the Freezer to your desired temperature.
- To turn the Power Freeze function on and off.
- To set the Freezer temperature, touch the Freezer button. You can set the temperature between 5 °F (-15 °C) and -8 °F (-23 °C).
- 2. Power Freeze function

Touch and hold this button for 3 seconds to decrease the time needed to freeze products in the Freezer.



It can be helpful if you need to quickly freeze easily spoiled items or if the temperature in the freezer has warmed dramatically.

(For example, if the door was left open.) When you use this function, the energy consumption of the refrigerator will increase.

Remember to turn it off when you don't need it and return the freezer to your original temperature setting.

If you need to freeze a large amount of food, activate the Power Freeze function at least 20 hours before you put the food into the freezer.

(2) Lighting / Filter Reset (3sec)

- The Lighting button serves two purposes:
- To turn the dispenser light on and off
- To reset the water filter life indicator.

1. Light Function

Touching the Lighting button turns on the Dispenser LED lamp in continuous mode so that it stays on continuously. The button also lights up. If you want the Dispenser lamp to come on only when some one uses the dispenser, press the Lighting button to turn the continuous mode off.



2. Filter Reset (3sec) Function After you replace the water filter, touch and hold this button for 3 seconds to reset the

water filter life indicator. When you reset the water filter life indicator, the Filter icon on the panel turns Off.

The Filter icon turns red to let you know it is time to change the filter. See page 25 for more information.

English - 22

(3)	Energy Saver / Overnue (5 sec)	(3)	
Ð	Touching this button turns Energy Saver mode on and off. When you turn Energy Saver on, the Energy Saver icon lights. Turn Energy Saver off and the icon goes off. The Energy Saver function automatically turns on when power is supplied to the refrigerator. If condensation or water drops appear on the doors, turn the Energy Saver mode off. Override: Press the Energy Saver / Override (3 sec) button for 3 seconds to turn on the Override function. When the Override function. When the Override function is on, the refrigerator ignores the SMART GRID (Demand Response) signal. See page 27 for details.		 The Alarm button serves two purposes: To turn the door open alarm on and off To switch the temperature units between °C and °F. 1. Door Alarm Function If the door alarm is set to On, an alarm beeps if a refrigerator door is left open for more than two minutes. The beeping stops when you close the door. The door alarm function is pre-set to On in the factory. You can turn it off by pressing and then releasing the Alarm button. You can turn it back on in the same fashion. The icon lights up when the function is on and the alarm sound is triggered, the Door
			Alarm Icon will blink while the alarm sounds.
(4)	Fridge / Power Cool (3sec)		2. To switch the temperature units
	 The Fridge button serves two purposes: To set the Fridge to your desired temperature. To turn the Power Cool function on and off. 1. To set the Fridge temperature, press the Fridge button. You can set the temperature between 		between °C and °F. Touch and hold this button for 3 seconds to select the temperature display you want. Each time you press and hold the button, the °C and °F temperature modes alternate and the °C or °F icon lights up, indicating your selection.
*	 34 °F (1 °C) and 44 °F (7 °C). 2. Power Cool function Touch and hold this button for 3 seconds to decrease the time needed to cool products in the Refrigerator. It can be helpful if you need to quickly cool easily spoiled items or if the temperature in the fridge has warmed dramatically. (for example, if the door was left open) 		

i

(5) Alarm / °C↔°F (3sec)

(3) Energy Saver / Override (3 sec)

(6)	Ice Maker Off	(7)	Control Lock Icon
OFF	 The Ice Maker Off button serves two purposes: To turn the Ice maker on and off To turn the Control Lock Function on and off. 1. Ice Maker Off Function If you don't want to make more ice, press the Ice Maker Off button. 	f	This icon lights when you activate function. When the Control Lock icon is lit, panel buttons, including the lce b and the dispensers, are locked a activated. Press and hold the lce Maker Off Lock button for 3 seconds to turn Lock off and re-activate the pane
	2. Control Lock Function Touch and hold this button for 3 seconds to lock the display and the dispenser buttons so the buttons cannot be used. When Control Lock is on, the refrigerator does not dispense ice or water, even if the Dispenser Lever is pressed. The Control Lock icon lights up to indicate you've activated the Control Lock function. Press 3 seconds to unlock. If the ice maker function is ON, and the water Line is not connected, there will be a		Water
		\ \ Water	The indicator is supposed to turn times as it indicates that the wate dispensed properly.
		(8)	Cubed Ice
	water valve noise from the back of the unit.	(9)	Crushed Ice
	Press the Ice Maker Off (Control Lock (3sec)) button for less than 3 seconds until the Ice Off Indicator (🖉) illuminates.	R	Press the Cubed Ice or Crushed button to select the type of ice yo dispensed. Each time you press the button, t

Display Off

To conserve energy, the Panel Display turns off automatically under the following conditions: When no button has been pressed, when no doors are open, or when no Dispenser Lever has been pushed for a period of time.

However, the icon indicating your cubed or crushed ice selection, will stay on.

When you press a button, open a door, or push a Dispenser Lever, the Panel Display turns on again. Except for the Water, and Cubed / Crushed Ice buttons, all function buttons become operational after you remove your finger from the button you are currently pressing.

te the Lock

t. all the button and de-

ff/Control rn Control el buttons.

n on at all ter can be

> d Ice /ou want

Each time you press the button, the cubed Cubed and crushed ice modes alternate and



the Cubed or Crushed ice icon lights up, indicating your selection. If you don't need ice, turn the function off

to save on water and energy consumption (See Ice Maker Off below).

(10) Filter Icon

Water filter usage

This icon lights when you need to change the filter, usually after the refrigerator has dispensed about 300 gallons of water (after about 6 months).

After you install the new water filter, reset the filter indicator by touching and holding the Hold 3sec for Filter Reset button for 3 seconds.



If water is not dispensing or dispensing slowly, you need to replace the water filter because the water filter is clogged.

Some areas have large amounts of lime in their water, which causes the water filter to clog more quickly.

If this is the case in your area, you will need to change the water filter more frequently than every six months.

Cooling Off Mode

- North American (US and Canadian) Models Only:

Cooling Off mode (also called Shop mode), is designed for use by retailers when they are displaying refrigerators on the shop floor.



In Cooling Off mode, the refrigerator's fan motor and lights work normally, but the compressors do not run, and the refrigerator and freezer do not get cold. To start Cooling Off mode, touch and hold the Lighting button and the Freezer button for 5 seconds during normal operation. The refrigerator chime sounds and the temperature display flashes OFF. To cancel Cooling Off mode, touch and hold the Lighting and the Freezer buttons again for 5 seconds.

If your refrigerator appears to be working, but it is not cooling, and the Freezer and Fridge Temperature Indicators are moving, the Fridge is in Cooling Off mode.

To cancel Cooling Off mode, follow the directions above.

E-Smart

The E-Smart icon lets you can check the status of the refrigerator AP connection (network connection).

- When connected to the AP : The E-Smart icon is on.
- When not connected to the AP : The E-Smart icon is off.

OPERATING

E-SMART Refrigerator Features

How to get the most out of your E-Smart refrigerator.

Getting Connected

To use the Smart Grid (Demand Response) and E-Smart function on your Refrigerator, you need the following devices and apps:

- Devices: 1) Wireless Router, 2) Samsung E-Smart Refrigerator, 3) Smartphone (Recommended: Galaxy S4,Galaxy Note3/ Android OS Jelly bean).
- Applications: 1) "Samsung E-Smart App" from the Google Play Store or Samsung Apps.

In addition, you need to:

- Connect the Refrigerator and the Smartphone to the same Wi-Fi network in your home.
- Install and run Samsung E-Smart App on your Smartphone.

In addition, to use the Smart Grid (Demand Response) function, you must register for the service with your electric company. The company must have an EMS (Energy Management System) that supports SEP (Smart Energy profile).

Downloading the E-Smart App and Connecting the Refrigerator to your Network

- 1. On your Smartphone, connect to the app store (e.g. Google Play, etc.).
- 2. Search for the app using "Samsung E-Smart Ref." as the keyword.
- 3. Download the app and install it on your phone.
- 4. Launch the app. The network configuration screen appears.
- 5. Configure the AP information (SSID, Password, etc.) on the app screen.
- 6. Configure the network settings according to the instructions in the app.
- On the refrigerator, press and hold the Fridge and Energy Saver buttons at the same time for 3 seconds.

The refrigerator enters the AP mode.



- 8. If you have completed the network settings properly, the app shows the home screen.
- Please confirm your Internet devices (AP, Smartphone) are working properly before configuring the network settings.
- This refrigerator supports the IEEE 802.11 a/b/g/n protocols.
 Samsung Electronics recommends IEEE 802.11n.
- To connect the refrigerator to a wireless network, you have to connect the refrigerator to an AP (router or modem).
 If the AP supports DHCP, you can connect the refrigerator to the Internet using DHCP or a fixed IP address.
- Set the channel of the AP to one not currently being used.
 If the channel set for the AP is being used by another device nearby, it may result in interference.

- Most wireless networks allow you to configure network security settings.
 If your network has a security password, you must enter the password to connect to the network.
- The refrigerator supports the following wireless security modes and encryption types:
- Security Mode: WEP, WPAPSK, WPA2PSK
- Encryption Type: WEP, TKIP, AES (WPA2PSK and AES are recommended.)
- The app supports indoor control only.
- The Samsung E-Smart Ref. app is optimized for Samsung Electronics Smartphones (Galaxy S4, Galaxy Note 3).

For other Smartphones, some functions may work differently.

• Supported Wireless Channel is 1 to 11.

OPERATING



highest.

SMART GRID Function

When the refrigerator operates in SMART GRID (Demand Response) mode, the E-Smart Refrigerator function can control energy usage

or delay the operation of some functions to save

money when energy prices or demand are the

(Demand Response)

function)

To use the SMART GRID (Demand Response) function, you need a separate contract with your electric Utility company.

You can deactivate the SMART GRID (Demand Response) function at any time. (Using the Override On/Off

Using the SMART GRID (Demand Response) Function

This feature monitors energy prices and demand information from your utility company and sends notifications to the refrigerator to run high energyconsuming tasks during off-peak times when electricity costs and demand are lower. If the refrigerator receives a control signal from the Utility Company, the refrigerator will display the DAL(L3) ~ TALR(L4) levels on the refrigerator display and control the power consumption according to the level.

[Exception condition] The DAL and TALR control signals from an Utility Company work as long as product performance is maintained. If the refrigerator receives the SMART GRID (Demand Response) signal (DAL or TALR), the refrigerator will operate in Delay Appliance Load (Display:L3) or Temporary Appliance Load Reduction (Display:L4) mode.

MAC Address Display Mode

This function displays the MAC address of the Wi-Fi module on the refrigerator for one minute.

1. Press and hold Freezer and Energy Saver at the same time for 3 seconds.



- A Buzzer sounds. Four of the twelve Mac address of the Wi-Fi module are displayed in turns in the freezer and fridge temperature displays for 1 minute.
 For example, if the Wi-Fi module's MAC address is "11-22-33-44-55-66", the MAC address is displayed as follows: "11 22" → "33 44" → "55 66" → ---- → "11 22" for 1 minute.
- 3. After 1 minute, the Buzzer sounds again and the display returns to its normal state.
 - If the Mac addresses are not available or there is no Wi-Fi module, '----' is displayed on the freezer and fridge temperature displays.

 Delay Appliance Load (L3): The refrigerator responds to a DAL signal by providing a moderate load reduction for the duration of the delay period.

This function controls functions that consume a large amount of energy such as adjusting the Cooling system, performing the defrost cycle, and making ice.

- When the refrigerator operates in DAL (L3) mode, "L3" is displayed on the refrigerator display.
- DAL mode is automatically deactivated after it lasts for the received duration (max. 4.5 hours), or when the Override key is pressed.
- Temporary Appliance Load Reduction (L4): The refrigerator responds to a TALR signal by aggressively reducing the load for a short time period.

This function reduces energy consumption by stopping the compressor and controlling the functions that consume a large amount of energy such as the defrost cycle and making ice.

- When the refrigerator operates in TALR (L4) mode, "L4" is displayed on the refrigerator display.
- TALR (L4) mode is automatically deactivated after it lasts for the received duration (max. 15 minutes), or when the Override key is pressed. The mode is immediately deactivated and the refrigerator returns to the normal state when the door is opened or closed, or the dispenser is used.

Override Mode

When you want the refrigerator to ignore the SMART GRID (Demand Response) signal from the Utility Company, you can activate OVERRIDE mode.

When you activate OVERRIDE mode, the refrigerator ignores the SMART GRID (Demand Response) signal and is not controlled by the Utility Company.

Activating and deactivating Override mode

1. Press and hold the [Energy Saver] button for 3 seconds.



- 2. A buzzer sounds and `Or' and `on' is displayed on the freezer and fridge temperature displays for 5 seconds.
- 3. If the refrigerator receives a SMART GRID (Demand Response) signal from the Utility Company, 'Or' is displayed in the freezer temperature display.
- 4. To deactivate OVERRIDE mode, press and hold the [Energy Saver] button for 3 seconds.



5. A buzzer sounds and 'Or' and 'oF' is displayed on the freezer and fridge temperature displays for 5 seconds.



Alternatively, you can activate or deactivate OVERRIDE mode using the Samsung E-Smart App.

OPERATING

Using the E-SMART Function

The E-SMART function enables you to control and monitor your E-Smart refrigerator remotely for your convenience.

• To use the E-SMART refrigerator functions, you have to install the Samsung E-Smart App first.

• The app supports indoor control only.

E-Smart Features

- 1. Operational Status, User Settings & Messages.
- You can view the freezer and fridge temperature settings.
- You can receive an alarm when the freezer or fridge door is open for 2 minutes.
 The door-open alarm indicator appears on the status bar of the top area of your mobile phone.
- You can check the DR and Override status.
- You can check the operational condition of the ice maker in the freezer.
- 2. Remote Management
- Power Freeze Setting: You can remotely activate the Power Freeze function.
- Power Cool Setting: You can remotely activate the Power Cool function.
- Ice On/Off Setting: You can remotely set up the Ice On/Off Setting function.
- 3. Energy Consumption Reporting
- Shows the accumulated power consumption. Power consumption data is updated every10 minutes.



The energy consumption report may differ from the power consumption specifications of the product depending on the operating environment and the stored food.

- 4. Delay Defrost Capability
- The Delay Defrost Capability function saves energy by delaying the defrost operation to a time specified by the user.

You can configure the time, and this function will save energy during the specified period in a 24 hour cycle.

If the time is not set, the function works with the

default time settings.

The default time settings are below:

- 6 am to 10 am: 1st. November ~ 30th. April
- 3 pm to 7 pm: 1st. May ~ 31th. October

To change the time setting for the Delay Defrost Capability


You can change the time setting for the Delay Defrost Capability in the app.

Provision for Open Access to the Connected Product Requirements


- 1. SGIP Open Standards (Smart Energy Profile 2.0 http://www.csep.org/)
- Energy Consumption Reporting
- Demand Response
- 2. Samsung OPEN API
- Operational Status, User Settings & Messages
 ICE Maker Status: GET /external/
 - icestatus?icegetstatus=opt (relevant to the energy consumption of the product 1)
- Door Open Alarm: GET /devices/0/ Door?type=opt (relevant to the energy consumption of the product 2)
- DR Status: GET /external/drlc?drgetstatus=opt
- Delay Defrost Capability
 Set Schedule of the Defrost Delay:
- POST /devices/0/defrost/addSchedule - Get Schedule of the Defrost Delay :
- GET /devices/0/defrost/getSchedule
- Delete Schedule of the Defrost Delay: POST /devices/0/defrost/delSchedule
- Defrost Delay On/OFF: PUT /devices/0/defrost/ delayevent

PARTS AND FEATURES

Use this page to become more familiar with the parts and features of the Refrigerator. (This image may different depends on the model.)

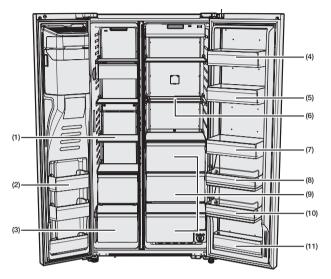



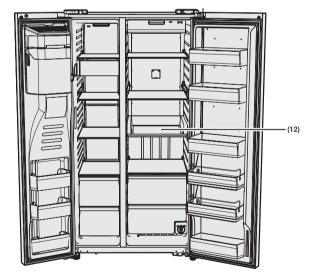

RH29*



For the greatest energy efficiency, leave all selves, drawers, and baskets in their original positions, as shown in the illustrations above.

(1) Freezer Shelves

Use for storing meat, fish, frozen dumplings, ice cream and other types of frozen food.

(2) Multipurpose Freezer Compartments

Features tall freezer compartments for more efficient food storage.

Do not use these compartments for ice cream or items you intend to store for a long time.

(3) Dried Food and Meat Storage Bin

Use for long-term storage of dried food and meat.

Wrap the items in aluminum foil or kitchen wrap before storing them.

(4) Cheese Case

Use for storing eggs, cheese, butter, and other types of dairy products.

(5) Sauce Case

Use for storing different types of sauces.

(6) Refrigerator Shelves

Use for storing general types of food that require refrigeration.

(7) Drink Case

Use for storing water, milk, juice, and other types of beverage.

(8) Snack Case (Optional)

Use for storing salads and side dishes.

(9) Well-Being Vegetable Bin

Use to keep fruit and vegetables fresh.

(10) Kids' Case (Optional)

Located at a height within easy reach of children. Use for storing yogurt, snacks, and other items for kids.

(11) Multi Case

It is used for storing the dehydrated food such as dried noodle (spaghetti), beef jerky etc.

(12) EZ slide shelves (Optional)

Makes it easier to take out food.

- If you plan to go away for a significant amount of time, empty the refrigerator and turn it off.
 Wipe the excess moisture from the inside of the appliance and leave the doors open.
 This helps keep odor and mold from developing.
- If you do not intend to use the refrigerator for a long period of time, pull out the power plug.
- Deterioration in the power cord insulation may cause a fire.
- Do not change the arrangement of shelves. (only RH22**model)
- If you try to change the arrangement of shelves, you can damage to door.

CONTROLLING THE TEMPERATURE

Basic temperature of Freezer and **Refrigerator Compartments**

The basic and recommended temperatures of the Freezer and Fridge compartments are 0 °F and 37 °F (or -18 °C and 3 °C) respectively. If the temperature of the Freezer or Refrigerator Compartments are too high or low, adjust the temperature manually.

Controlling the Freezer temperature



Recommend Temp (Freezer) : 0 °F (or -18 °C)

The Freezer temperature can be set between -8 °F and 5 °F (or between -23 °C and -15 °C) to suit your particular needs.

Press the Freezer button repeatedly until the desired temperature is shown in the temperature display.

The temperature will change by 1 °F (or 1 °C) with each press. See below.

Fahrenheit : 0 °F \rightarrow -1 °F \rightarrow -2 °F \rightarrow -3 °F \rightarrow -4 °F \rightarrow -5 °F \rightarrow -6 °F \rightarrow -7 °F \rightarrow -8 °F \rightarrow 5 °F \rightarrow 4 °F \rightarrow $3 \circ F \rightarrow 2 \circ F \rightarrow 1 \circ F \rightarrow 0 \circ F$.

Centigrade : -18 °C \rightarrow -19 °C \rightarrow -20 °C \rightarrow -21 °C \rightarrow -22 °C \rightarrow -23 °C \rightarrow -15 °C \rightarrow -16 °C \rightarrow -17 °C → -18 °C.

Keep in mind that foods such as ice cream may/ melt at 4 °F (or -15.5 °C).

The temperature display will move sequentially from -8 °F to 5 °F (or from -23 °C to -15 °C).

Controlling the Fridge temperature



Recommend Temp (Fridge) : 37 °F (or 3 °C)

The fridge temperature can be set between 34 °F and 44 °F (or between 1 °C and 7 °C) to suit your particular needs.

Press the Fridge button repeatedly until the desired temperature is shown in the temperature display. The temperature will change by 1 °F (or 1 °C) with each press. See below.

Fahrenheit : 37 °F \rightarrow 36 °F \rightarrow 35 °F \rightarrow 34 °F \rightarrow 44 °F \rightarrow 43 °F \rightarrow 42 °F \rightarrow 41 °F \rightarrow 40 °F \rightarrow 39 °F \rightarrow 38 °F \rightarrow 37 °F.

Centigrade : $3 \circ C \rightarrow 2 \circ C \rightarrow 1 \circ C \rightarrow 7 \circ C \rightarrow 6 \circ C \rightarrow$ $5 \circ C \rightarrow 4 \circ C \rightarrow 3 \circ C$.

The temperature control process for the Fridge works just like the Freezer process. Press the Fridge button to set your desired temperature.

After a few seconds, the Fridge will begin adjusting towards the newly set temperature. This will be reflected in the digital display.


The temperature of the Freezer or Fridge may rise when you open the doors too frequently, or if a large amount of warm or hot food is placed inside.

- This may cause the digital display to blink. Once the Freezer and Fridge temperatures return to their normal set temperatures, the blinking will stop.
- If the blinking continues, you may need to ٠ "reset" the Refrigerator. Try unplugging the appliance, waiting for around 10 minutes, and then plugging the power cord back in.

English - 33

USING THE ICE AND COLD WATER DISPENSERS

Push the appropriate button to select what you want dispensed.

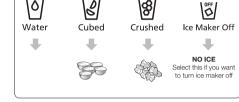

Using the ice lever (1)

Push the Ice lever dispenser (1) gently with your glass. Ice will be released from the dispenser.

You can choose the type of ice by pushing the cubed or crushed button first.

Make sure the glass is in line with the dispenser to prevent the ice from bouncing out.

If you select Cubed Ice after using the Crushed Ice feature, a small amount of residual crushed ice might be produced.

Using the Water lever (2)

Push the Water lever dispenser (2) gently with your glass.

Water will be released from the dispenser.



Even if you push the water and Ice lever at about the same time, the dispenser glass only the option you actually selected or pushed first.



Please wait 1 second before removing the cup after dispensing water to prevent spills.

Do not pull out the lever dispenser after dispensing ice or water. It comes back automatically.

Using the Ice & Water Dispenser together

To get Ice and water, push the Ice lever (1) first for ice, then move your glass down and press the water dispenser lever (2) for water.

Please wait 2 seconds before removing the glass under the dispenser to prevent spills. If the Refrigerator door is open, the Dispenser does not work.

OPERATING


- Do not pull the lever out. You could damage or break the lever's spring.
- To clean the ice bin/bucket, wash with a mild detergent, rinse well, and dry thoroughly it.
 Do not use harsh or abrasive cleaners or solvents.
- In case ice doesn't come out, pull out the ice bucket and press the test button located on the right side of ice maker.
- Do not press the test button continuously when the tray is filled with ice or water. Water may overflow or ice may jam the bucket.
 - Ø•
- When you press the Test button, you will hear the refrigerator chime (ding-dong). When the chime sounds, release the Test button.
- The chime sounds automatically again to let you know the ice maker is working well.



If a power failure occurs, ice cubes may melt then freeze together when the power comes back on, causing the dispenser to be out of order.

To prevent this problem, after a power failure, pull out the ice bucket and discard the residual ice or water.

After you dump the ice from the ice bucket, you should press the dispenser lever once with the 'ICE CUBED' or 'CRUSHED' function ON.

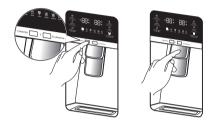

The ice maker will make new ice faster after you return the ice bucket to the refrigerator.

- Do not put your fingers, hands, or any unsuitable objects in the chute or ice-maker bucket.
- This can cause personal injury or material damage.
- Use only the ice maker provided with the refrigerator.
- The water line to this refrigerator must be installed / connected by a suitably qualified person and must be connected to a potable water supply.
- The ice maker requires water pressure of 20 125 psi (138~862 kPa) to operate properly.

- If you are going on a long vacation or business trip and won't be using the water or ice dispensers for that period of time, close the water valve to prevent leaks.
- If you have not used the Ice maker for a while, or you have opened the Freezer door frequently, the Ice may stick together.

If this occurs, empty the ice bucket or break up the ice with a wood kitchen tool.

- Do not use sharp items such as knives or forks.
- When you remove the ice bucket, there may still be some residual ice in the ice maker. The ice maker may eject this ice into the freezer.

USING THE ICE MAKER

- To Remove the Ice Bucket.
- Hold the handle as shown in figure1.
- Lift up and pull the Bucket out slowly.
- Take out Ice Bucket out slowly to prevent damage.
- When you reinstall the ice bucket, press and hold the ICE button for 6 seconds.



- Normal Operation
- Any sounds you hear when the ice maker dumps ice into the bucket are part of normal operation.
- Ice may clump in the bucket if you do not dispense ice for long periods of time.
 If this occurs, remove all the ice and empty the bucket.
- If ice does not come out, check for any ice stuck in the chute and remove it.
- The first batch of ice cubes after installation may be small because air has entered the water line.


Any air will be purged during normal use.



A CAUTION

- When Ice Maker Off blinks on the display panel. reinsert the ice bucket and/or make sure it's installed properly.
- When the door is open, the Ice and water dispenser do not work.
- If you close the door hard, it may cause water to spill over the ice maker.
- To prevent the ice bucket from dropping, use both hands when removing it.
- To prevent injury, be sure to clean up any ice or water that may have dropped on the floor.
- Do not let the children hang on the ice dispenser or on the bucket. They may get hurt.
- Be sure not to put your hand or any object into the ice chute. It may cause personal injury or damage mechanical parts.
- Use care when storing food in plastic bags in the freezer.


Incorrectly stored bags can get caught in the ice bucket's Auger Motor and prevent the refrigerator from dispensing ice or cause the freezer door to open unexpectedly.

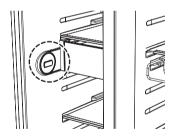



SMART ECO FEATURES

Smart Eco System

Keeps food at its freshest by using four sensors to monitor the external environment, usage patterns, and the refrigerator's operating status while conserving energy and saving on electricity costs.

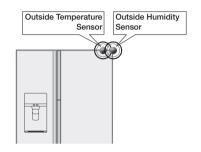

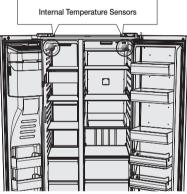

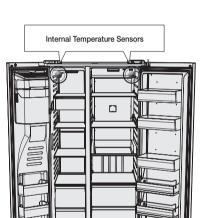


FRIDGE MULTI-PURPOSE DOOR BIN

A detachable divider makes it easy to store food in convenient, temporary compartments.

Food products can be stored by type or size.

 Put the divider in place when storing slim-size condiment bottles and canned drinks together.

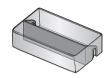


• Take out the divider when storing cartonsize milks or drinks.

How to Use the DIVIDER

- Insert the divider as shown in the diagram to compartmentalize the case.
- 2. When not in use, simply flip it around and move it out of the way as shown in the diagram.



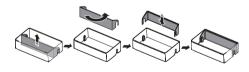

How to Use the MULTI SUPPORTER

- 1. When not in use, leave the Multi Supporter flipped over as shown in the diagram.
- Flip the Multi Supporter to position

 to prevent items from falling out and over.
- Flip the Multi Supporter to position (2) to use it as a divider.








REMOVING THE REFRIGERATOR ACCESSORIES

1. Shelves (Freezer/Fridge)

• Open the door completely and then lift up the shelf as you pull it out to remove it.

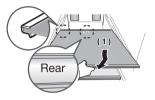

 If you are unable to open the door completely, pull out the shelf, lift it up, and turn it to remove it.



Be careful not to insert the shelf upside down.



Glass containers can scratch the surface of the glass shelves.

2. Door Bins

• To remove a Door Bin, hold the bin with both hands, and then gently lift it up.



3. Drawers


• To remove a Drawer, pull the drawer out, and then lift it up slightly.



OPERATING

4. Vegetable Bin/Dry Bin Cover


- Take out the bin above the Vegetable Bin (refrigerator)/Dry Bin (freezer).
- Press down on the clips on either side of the Vegetable Bin (refrigerator)/Dry Bin (freezer) and pull it out towards you.

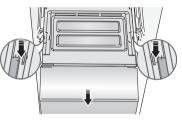



5. Vegetable Bin/Dry Bin

- Before taking out the Vegetable Bin/Dry Bin, you need to remove the multipurpose compartments from the door.
- Lift the bin up slightly as you pull it out.

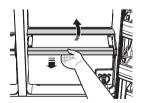

6. Ice Bucket (Freezer)

- Remove the Icemaker Bucket by lifting it up and pulling it out slowly.
- Grip the handle as shown in the figure.
- Remove the Ice Bucket slowly to prevent damage.






Do not use excessive force when removing the drawer cover.

You can break the cover and cause injury.

Before removing any accessories, make sure that no food is in the way. When possible, remove the food altogether to reduce the risk of accidents.

7. Removing the Deodorizer

• Pull out the shelf slightly and then pull out the unit while pushing the deodorizer cover clip up using a flathead screwdriver.

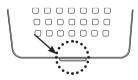

8. Cleaning the Deodorizer

• The Deodorizer helps remove odors from the refrigerator. The deodorizing function may diminish over

time. However, you can prolong its lifespan, if you wash and dry the Deodorizer as below.

- Wash the Deodorizer with clean water once every two years or whenever you feel its performance has diminished.
- Dry the deodorizer under the sun for 24 hours and then replace it in the reverse order of its removal.

CLEANING THE REFRIGERATOR

Do not use benzene, thinner, Clorox, or car detergent to clean the refrigerator.

They can damage the surface of the appliance and may cause a fire.

Do not spray the refrigerator with water while it is plugged in.

This can cause an electric shock. To clean the refrigerator, follow these steps:

To Clean the Refrigerator

- 1. Unplug the power cord of the refrigerator.
- 2. Slightly dampen a soft, lint-free-free cloth or paper towel with water.



Do not use any kind of detergent to clean the refrigerator. Detergent can discolor or damage the refrigerator.

- 3. Wipe the inside and outside of the refrigerator until it is clean and dry.
- 4. Plug the power cord of the refrigerator back in.

CHANGING THE INTERIOR LIGHTS

Freezer / Fridge LED Lamp

 If the LED Lamp Cover is stained with foreign substances, the LED lamp may not look bright. Wipe the surface cover with a clean, dry cloth to return the light to full brightness.

Do not disassemble or replace the LED type lighting yourself.


To replace the LED lights, contact a Samsung service center or your authorized Samsung dealer.



If you attempt to replace the LED lamps yourself, you risk subjecting yourself to an electric shock or serious personal injury.

TO IMPROVE THE COOLING PERFORMANCE

Do not block the cold air outlets with food. If the cold air outlets are blocked, cold air cannot penetrate the entire compartment and will be unable to freeze the food efficiently, resulting in a degraded cooling performance.

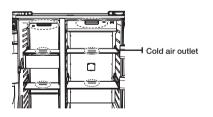

CHANGING THE WATER FILTER

To reduce risk of water damage to your property DO NOT use generic brands of water filers in your SAMSUNG Refrigerator.

USE ONLY SAMSUNG BRAND WATER FILTERS.

SAMSUNG is not legally responsible for any damage, including, but not limited to property damage caused by water leakage from the use of a generic water filter.

SAMSUNG Refrigerators are designed to work ONLY WITH SAMSUNG Water Filters.

How to Change the Water Filter

The "Filter Indicator" light lets you know when it is time to change your water filter cartridge. To give you preparation time to get a new filter, the red light will come on just before the capacity of the current filter runs out.

Changing the filter on time provides you with the freshest, cleanest water from your fridge. To change the water filter, follow these steps:


1. Turn the water filter 90° counterclockwise.



2. Pull the water filter from the filter housing.



3. Insert the new water filter inside the filter housing.

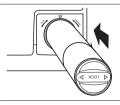

4. Turn the new water filter 90° clockwise.



English - 39

- Press the "Lighting/hold 3 sec" button (A) for about 3 seconds to reset the water filter. The color of indicator changes from red to light off.
- Ø

A newly installed water filter cartridge may cause water to briefly spurt from the water dispenser.

This is due to air getting into the line. It should pose no problem to operation.

When you replace the water filter, water can drip from the bottom front of the refrigerator. Make sure to clean up any drips or spills after you have changed the filter.

Removing residual matter inside the water supply line after installing a new filter

- 1. Press the Water button, and then push the Dispenser Lever with a cup or glass.
- 2. Flush 1 gallon of water through the filter, one cup or glass at a time. (Flush approximately 6 minutes.)

This will clean the water supply system and remove air from the lines.

- Additional flushing may be required in some households.
- Open the refrigerator door and make sure there are no water leaks coming from the water filter.

Reverse Osmosis Water Supply IMPORTANT :

The pressure of the water supply coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 35 and 120 psi (241 and 827 kPa).

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa.)

If the water pressure to the reverse osmosis system is less than 40 to 60 psi (276 to 414 kPa):

- Check to see whether the sediment filter in the reverse osmosis system is blocked.
 Replace the filter if necessary.
- Allow the storage tank on the reverse osmosis system to refill after heavy usage.
- If your refrigerator has a water filter, it may further reduce the water pressure when used in conjunction with a reverse osmosis system. Remove the water filter.

If you have questions about your water pressure, call a licensed, qualified plumber.

Ordering replacement filters

To order more water filter cartridges, contact your authorized Samsung dealer.

Troubleshooting

PROBLEM	SOLUTION				
The refrigerator does not work at all or it does not chill sufficiently.	 Check if the power plug is properly connected. Is the temperature control on the display panel set to the correct temperature? Try setting it to a lower temperature. Is the refrigerator in direct sunlight or located too near a heat source? Is the back of the refrigerator too close to the wall and therefore keeping air from circulating? 	TRO			
The food in the fridge is frozen.	 Is the temperature control on the display panel set to the correct temperature? Try setting it to a warmer temperature. Is the temperature in the room very low? Did you store the food with a high water content in the coldest part of the fridge? 				
You hear unusual noise or sounds.	 Check if the refrigerator is level and stable. Is the back of the refrigerator too close to the wall and therefore keeping air from circulating? Was anything dropped behind or under the refrigerator? If you hear a "ticking" sound from inside the refrigerator, this is normal. It occurs because various parts contract or expand in response to temperature changes in the refrigerator interior. 				
The front corners of the appliance are hot and condensation is occurring.	 Some heat is normal as anti-condensators are installed in the front corners of the refrigerator to prevent condensation. Is the refrigerator door ajar? Condensation can occur when you leave the door open for a long time. Water condensation in a drawer may occur if the drawer contains vegetables. The condensation will dissipate naturally as time passes. 				
Ice is not dispensing.	 Did you wait for 12 hours after installation of the water supply line before making ice? Is the water line connected and the shut-off valve open? Did you manually stop the ice making function? Make sure Ice is set to Cubed or Crushed. Are there any ice clumps in the ice maker bucket? Remove them. Is the freezer temperature too warm? Try setting the freezer temperature lower. 	-			
You can hear water bubbling in the refrigerator.	This is normal. The bubbling comes from the refrigerant coolant liquid circulating through the refrigerator.	-			
There is a bad smell in the refrigerator.	 Has a food item spoiled? Make sure that strong smelling food (for example, fish) is wrapped so that it is airtight. Clean out your freezer periodically and throw away any spoiled or suspect food. 				
Frost forms on the walls of the freezer.	 Is the air vent blocked? Remove any obstructions so air can circulate freely. Allow sufficient space between the foods stored for efficient air circulation. Is the freezer door closed properly? 	Sirculation.			
The water dispenser is not functioning.	 Is the water line connected and the shut-off valve open? Has the water supply line tubing been crushed or kinked? Make sure the tubing is free and clear of any obstruction. Is the water tank frozen because the refrigerator temperature is too low? Try selecting a warmer setting on the main display panel. 	-			

PROBLEM	SOLUTION
What Do I Need to Use the E-Smart and Smart Grid functions?	 To use the Smart Grid (Demand Response) and E-Smart function on your Refrigerator, you need the following devices and apps: Devices: 1) Wireless Router, 2) Samsung E-Smart Refrigerator, 3) Smartphone (Recommended: Galaxy S4, Galaxy Note3/ Android OS Jelly bean) Applications: 1) "Samsung E-Smart App" from the Google Play Store or Samsung Apps.
	 You also need to: Connect the Refrigerator and the Smartphone to the same Wi-Fi network in your home. Install and run Samsung E-Smart App on your Smartphone. In addition, to use the Smart Grid (Demand Response) function, you must Register for the service with your electric company. The company must have an EMS (Energy Management System) that supports SEP (Smart Energy profile).
Why isn't the E-Smart function working normally?	 Confirm that the router in your home and the Internet are working properly. Connect a Smartphone to the router (AP, Access Point), and then confirm that you can browse the Internet on the phone. Confirm that refrigerator is connected to the AP. Check the E-Smart icon on the PANEL of the refrigerator. If the refrigerator is connected, the icon will be on. Confirm that the refrigerator and Smart Phone are connected to the same router.
Why isn't the Delay Defrost Capability working normally?	 Confirm that the router in your home and the Internet are working properly. Connect a Smartphone to the router (AP, Access Point), and then confirm that you can browse the Internet on the phone. Confirm that the area where you live is properly entered into the Smart phone App. Confirm that the Smart Grid function works correctly. (Check the PANEL. L3 and L4 should not be displayed on the PANEL.)
What can be done when freezer door is not closed well.	 Push lever dispenser and check water supply. Push lever dispenser (Ice mode) and check operation of auger motor. Remove objects on shelves that might obstruct drive auger.
	Precautions : If you have not dispensed the water or ice for an extended time, the ice bucket may accumulate ice chunk that interferes with the drive auger, causing the inability to dispense. Remove the remaining ice of bucket and object that might obstruct drive Auger. Please operate dispenser (water & ice) and it will improve auto-closing of freezer door.


OPEN SOURCE ANNOUNCEMENT

The software included in this product contains open source software. You may obtain the complete corresponding source code for a period of three years after the last shipment of this product by sending an email to **mailto:oss.request@samsung.com**.

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/ConnectedProduct/seq/0 leads to the download page of the source code made available and open source license information as related to this product.

This offer is valid to anyone in receipt of this information.

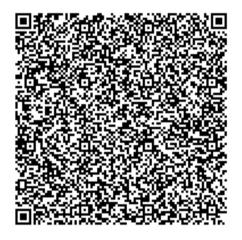

Warranty (USA)

WARRANTY ON SAMSUNG REFRIGERATOR

LIMITED WARRANTY TO ORIGINAL PURCHASER

This Samsung brand product, as supplied and distributed by Samsung Electronics America, Inc. (Samsung) and delivered new, in the original carton to the original consumer purchaser, is warranted by Samsung against manufacturing defects in materials and workmanship for a limited warranty period of:

One (1) year Parts and Labor on Refrigerator

Five (5) years Parts and Labor on sealed Refrigeration system only*

Ten (10) years Parts and Five (5) years Labor on Digital Inverter Compressor

(*Compressor, evaporator, condenser, drier, connecting tubing)

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact Samsung for problem determination and service procedures. Warranty service can only be performed by a Samsung authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to Samsung or Samsung authorized service center.

Samsung will repair or replace any part found to be defective, at our option and at no charge as stipulated herein, with new or reconditioned parts during the limited warranty period specified above. All replaced parts and products become the property of Samsung and must be returned to Samsung. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

In-home service will be provided during the warranty labor period subject to availability within the contiguous United States. In-home service is not available in all areas. To receive in-home service, the product must be unobstructed and accessible from floor level to service personnel. If during in-home service repair cannot be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, Samsung may elect, at our option, to provide for transportation of our choice to and from a Samsung authorized service center. Otherwise, transportation to and from the Samsung authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external plumbing and leaks, external wiring, circuit breakers, fuses or connectors not supplied and authorized by Samsung, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; loss of food due to spoilage; consumable items including filters and light.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE. AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON. FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

To obtain warranty service, please contact Samsung at:

SAMSUNG CUSTOMER CARE CENTER

Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 07660 1-800-SAMSUNG (1-800-726-7864) and www.samsung.com

If your refrigerator needs service

Do not hesitate to call any Samsung Authorized Service Center nearby giving them your name, address and telephone number when your product is not functioning properly.

Warranty Information (CANADA)

Limited Warranty for Original Purchaser

This Samsung product is warranted by Samsung Electronics Canada Inc. (hereafter referred to as SECA) against manufacturing defects in material or workmanship for the following periods:

Labor : 1 years (in-home) Parts : 1 years Inverter Compressor : 10 years

SECA further warrants that if this product fails to operate properly within the specified warranty period and the failure is due to improper workmanship or defective material, SECA will repair or replace the product at its option. In-home service is not available in all areas. Contact us to find out if in-home service is currently available in your area by using the contact information at the back of this warranty.

All warranty repairs or part replacements must be performed by a SECA Authorized Service Center. (To find the nearest SECA Service Center, call 1-800-SAMSUNG (7267864) or visit our web site at www.samsung.com/ca)

Obligation to the Original Owner

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to a SECA Authorized Service Center at the time service is requested before warranty services are rendered. On all carry-in models, transportation to and from the Authorized Service Center is the responsibility of the customer.

Exclusions of the Warranty

This warranty does not cover damage due to accident, fire, flood, and/or other Acts of God, misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use, or damage that occurs during shipping. Customer adjustments which are explained in this owners manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in the Canada.

Samsung Electronics Canada Inc. 2050 Derry Road West, Mississauga, Ontario L5N 0B9 Canada

Customer	Care Center 1-800-SAMSUNG (726-78	64)
	Care Center Fax. 1-866-436-4617	

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center. Samsung Electronics Canada Inc. 2050 Derry Road West, Mississauga, Ontario L5N 0B9 Canada TEL : 905-542-3535 FAX : 905-542-3835 1-800-SAMSUNG (726-7864) www.samsung.com/us/support

Memo

Memo





Scan the QR code* or visit www.samsung.com/spsn to view our helpful How-to Videos and Live Shows

* Requires reader to be installed on your smartphone

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Country	Contact Center	Web Site	Subsidiaries office address
U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us/support	Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 07660
CANADA	1-800-SAMSUNG (726-7864)	www.samsung.com/ca/support (English) www.samsung.com/ca_fr/support (French)	Samsung Electronics Canada Inc. 2050 Derry Road West, Mississauga, Ontario L5N 0B9 Canada