

VENTILATION FAN

MODEL 80F/80-120DS/100F/100HS

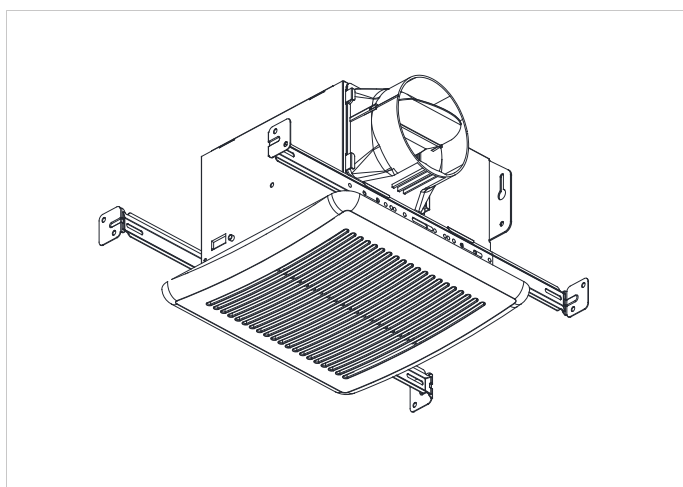


TABLE OF CONTENTS

Package Contents	2
General Safety Information	3
Preparation	4
Assembly Instructions	5
New Construction	5
Existing Construction	6
Connect Wiring	7
Grille Installation	8
Operation	8
Care and Maintenance	9
Troubleshooting	10
Dimensions	11
Product Specifications	11
Warranty	12

READ AND SAVE THESE INSTRUCTIONS

Address: 46101 Fremont Boulevard, Fremont, CA 94538

US Toll Free Number: 1-888-979-9889







www.deltabreez.com

MFG Model :


VFB080C4A2/VFB120C4X1/VFB100C4A1/VFB100H1

PACKAGE CONTENTS


For all Models

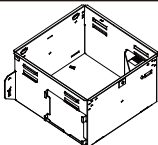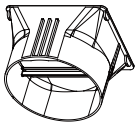Part name	Appearance	Quantity
Housing		1
Duct Connector (4")		1
Grille		1
Tapping Screw (Ø4×25)		8
Machine Screw (#8-32x5/16")		4
Hanger Bar		4


For Model of 80F/100F

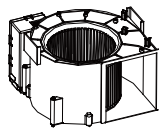Part name	Appearance	Quantity
Fan Body		1

For Model of 80-120DS

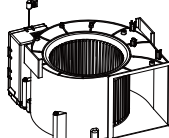Part name	Appearance	Quantity
Fan Body		1

For Model of 100HS

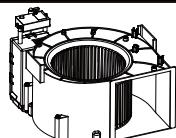Part name	Appearance	Quantity
Fan Body		1

(All images are not shown in actual scale)

GENERAL SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS

1. Make sure that the electric service supply voltage is AC 120V, 60Hz.
2. Follow all local electrical and safety codes, as well as the National Electrical Code (NEC) and the Occupational Safety and Health Act (OSH Act).
3. Always disconnect the power source before working on or near the ventilating fan, motor or junction box.
4. Protect the power cord from sharp edges, oil, grease, hot surfaces, chemicals or other objects.
5. Do not kink the power cord.
6. Do not install the unit where ducts are configured. (Fig.A)
7. Provide suction parts with proper ventilation.
8. This unit is UL Listed for use over a bathtub or shower when installed in a GFCI protected branch circuit.
7. If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI (Ground Fault Circuit Interrupter) – protected branch circuit.
8. Do not use this unit with any other solid-state control device. Solid-state control device may cause harmonic distortion, which can cause a motor humming noise.
9. NEVER place a switch where it can be reached from a tub or shower.
10. Not to be installed in a ceiling thermally insulated to a value greater than R50. (This is required for installation in Canada only).

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
2. Before servicing or cleaning unit, switch power off at the service panel and lock the service disconnecting means to prevent the power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
3. Installation work and electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society of Heating, Refrigerating and Air-Conditioning Engineers (ASHRAE) and local code authorities.
5. When cutting or drilling into the wall or ceiling, do not damage electrical wiring and other hidden utilities.
6. Ducted fans must always be vented to the outdoors.

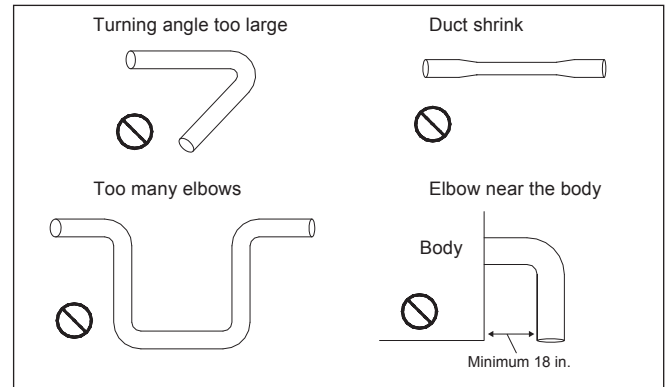


Fig. A

CAUTION

1. For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
2. Not for use in cooking areas. (Fig.B)
3. This product must properly connect to the grounding conductor of the supply circuit.
4. To reduce the risk of injury to persons, install the fan at least 8.2 feet (2.5m) above the floor.

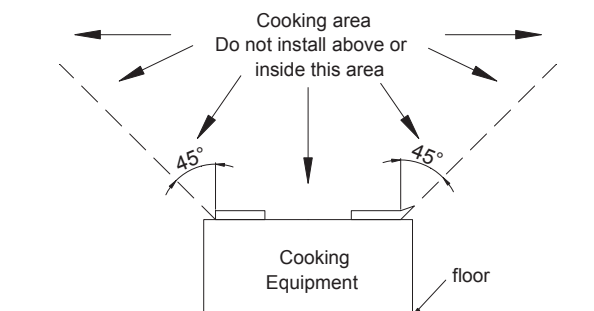


Fig. B

PREPARATION


Tools Required for Assembly (not included): Hammer, Flathead Screwdriver, Wire Nuts, Nails, Duct Tape, Phillips Head Screwdriver, Utility Knife.

Helpful Tools (not included): Electric Drill, Drill Bits.

WARNING: Turn off electricity at breaker box before beginning installation.

- Carefully remove unit from carton.
- Check area above installation location to be sure that wiring can run to the planned location and that duct work can be run. Make sure the area is sufficient for proper ventilation.
- Inspect duct work and wiring before proceeding with installation.
- Before installation, provide inspection and future maintenance access at a location that will not interfere with installation work.
- You may need the help of a second person to install this fan: one person on the attic side and one on the room side.

Note: Installations may vary depending on how the previous bath fan was installed. Supplies necessary for the installation of your bath fan are not all included. However, most are available at your local home improvement or hardware store.

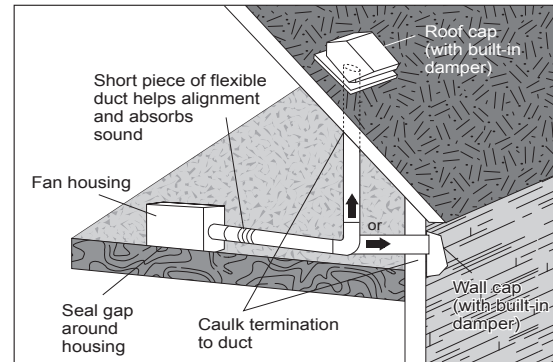

- Proper insulation around the fan to minimize building heat loss and gain. The ducting from this fan to the outside of the building has a strong effect on the air flow, noise and energy use of the fan. Use the shortest, straightest duct routing possible for best performance, and avoid installing the fan with smaller ducts than recommended. Insulation around the ducts can reduce energy loss and inhibit mold growth. Fans installed with existing ducts may not achieve their rated air flow.
- Locate unit above (GFCI-protected circuit required) or within 5 feet of the shower head.
- Locate unit away from heating or cooling sources which can affect humidity levels.
- Do not locate near window. Unit may respond to the outdoor humidity level.
- Unit must be installed in ceiling to properly sense moisture.
- Locate unit only on flat ceilings up to 12 feet high for proper sensing.
- Use a roof cap or wall cap that has a built-in damper to reduce backdrafts.
- External timer switch can be used, please contact Delta Breez customer service and consult with a licensed electrician for compability.

ASSEMBLY INSTRUCTIONS


NEW CONSTRUCTION

BEFORE INSTALLATION


Turn off power source. Review all safety precautions.

MOUNT HOUSING WITH FLANGE:

1. To bend the housing tabs out to 90 degrees and make housing tabs contact the bottom of the joist.

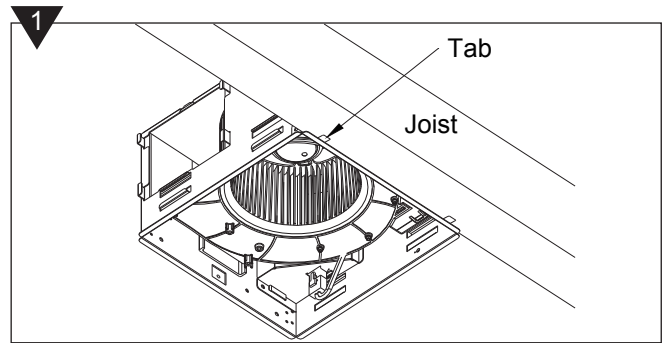


2. The housing mounts with 4 tapping screws (\varnothing 4x25). Screw housing to joist through lowest holes in each mounting flange, then through the other holes.

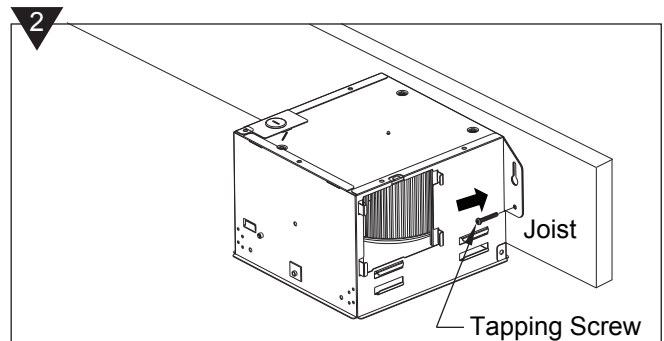


USING HANGER BARS

3. Insert hanger bars into the channels on housing. Sliding hanger bars to allow for your specific positioning of housing anywhere between joists and span up to 24".

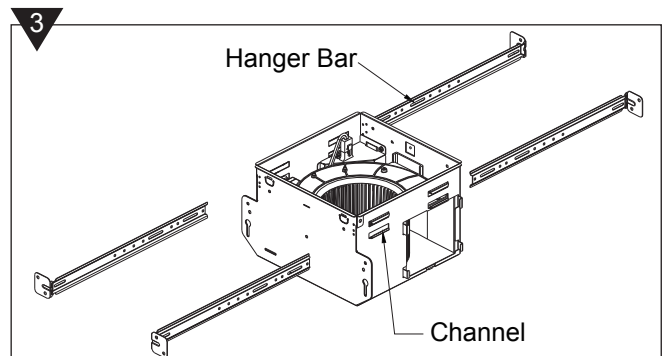


4. Extend hanger bars to the width of the joists. Make sure the fan body is level and perpendicular with the joist, and flush with ceiling surface. Fasten hanger bars to joists with tapping screws (\varnothing 4x25). Secure hanger bars together with machine screws (#8-32 x 5/16").

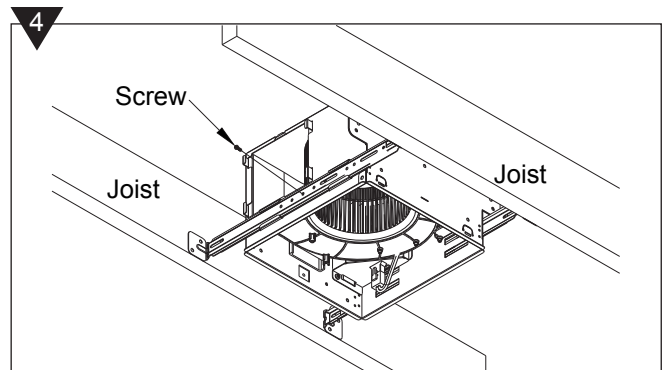


ASSEMBLY INSTRUCTIONS (Continued)

EXISTING CONSTRUCTION-ACCESSIBLE FROM ABOVE


1. Measure the existing ceiling opening or cut a new opening to ensure it is large enough to accommodate the new fan (8 in. x 8.25 in. suggested).

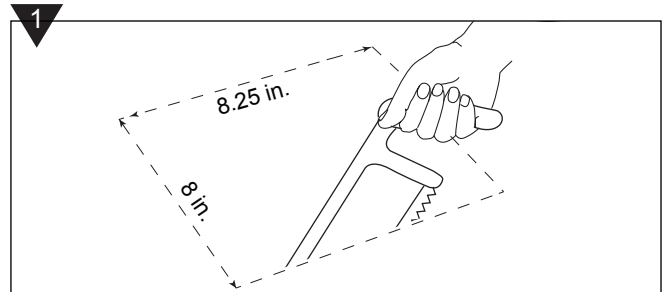

2. Place housing in opening so that its bottom edge is flush with finished ceiling. Screw housing to joist through lowest holes in each mounting flange.

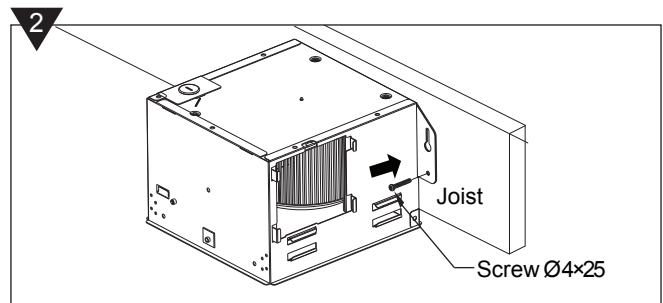


3. Insert the duct (not provided) into the duct connector and tape all ductworks connection to make them secure and air tight. Install the duct with a gradient 1°~2° to the outside.

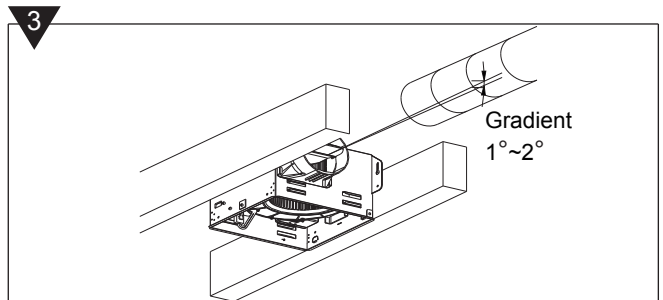

EXISTING CONSTRUCTION-ACCESSIBLE FROM BELOW (No Attic Access)


1. Measure the existing ceiling opening or cut a new opening to ensure it is large enough to accommodate the new fan (9 in. x 9 in. suggested).

A piece of wood (not provided) may be necessary that is screwed in from below through the ceiling board. Suggested size is H 4in. x L 14 in. Position the screws far enough from the edge of the ceiling board that it does not crumble and give way.

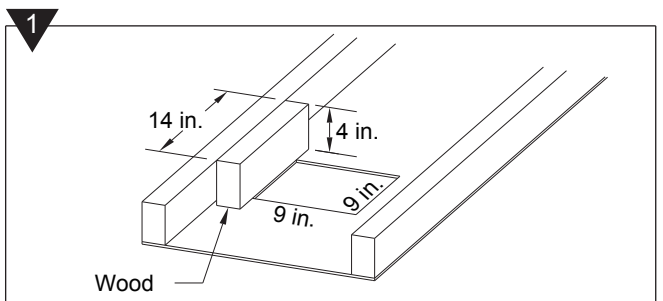


ASSEMBLY INSTRUCTIONS (Continued)


2. Unplug fan connector from junction box.
Remove fan body from housing.

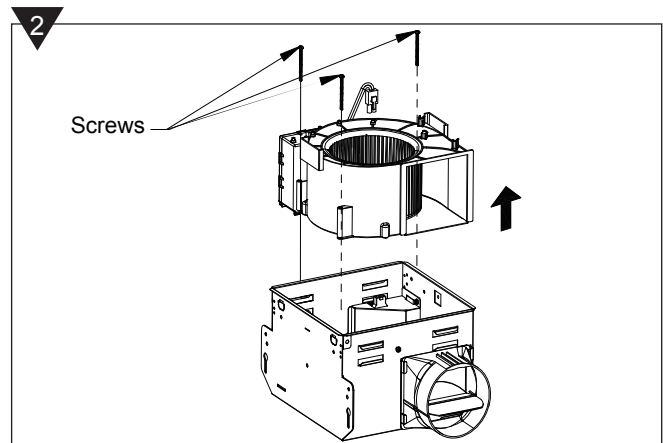

3. Insert the duct (not provided) into the duct connector and tape all ductworks connection to make them secure and airtight by through the ceiling opening. Using wire nuts (not provided) connect house wires to fan wires as shown in the connect wiring diagram on page 8.

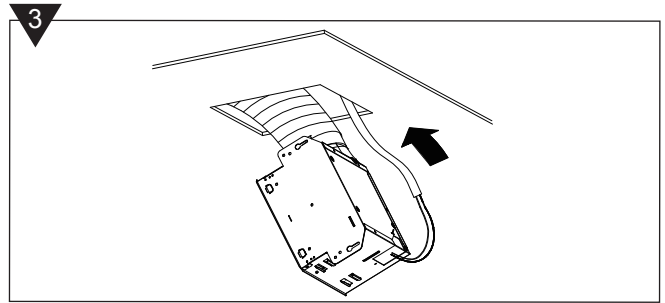

4. Insert housing into ceiling opening and secure housing by using tapping screws (ø 4×25mm). Insert fan body into housing by using three machine screws (M4 x 45) originally on the fan body and plug in fan connector.


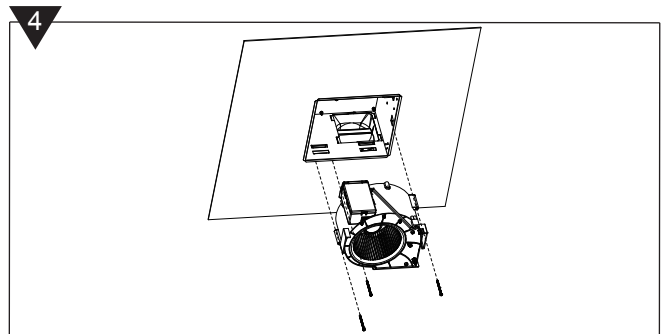


CONNECT WIRING

TURN OFF POWER SOURCE. REVIEW ALL SAFETY PRECAUTION.


1. Follow all local electrical and safety codes, ANSI/NFPA70.
2. NEVER place a switch where it can be reached from a tub or shower.
3. Using wire nuts (not provided), connect house power cable to ventilating fan.
Connect wires are shown in wiring diagrams.
4. 14 AWG (2.1 mm²) is the smallest conductor that shall be used for branch-circuit wiring.

ASSEMBLY INSTRUCTIONS (Continued)

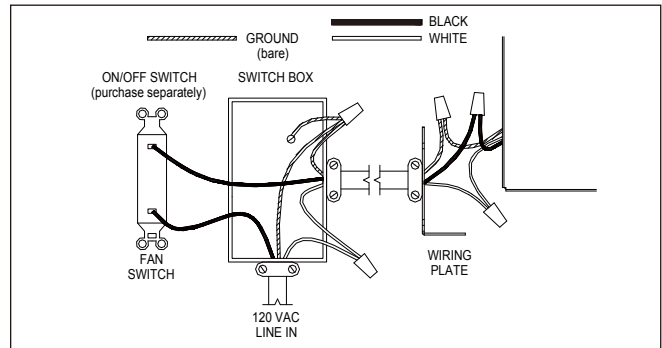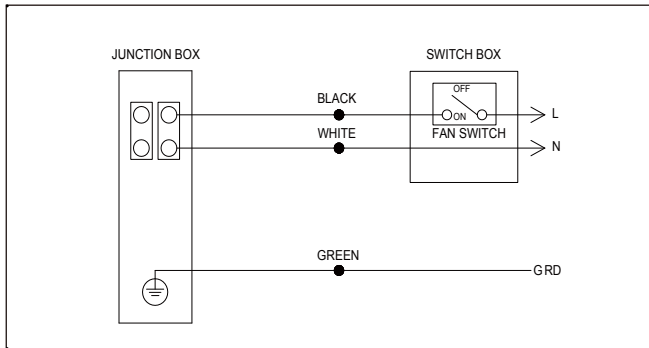


GRILLE INSTALLATION

Insert the mounting springs into the slots and mount the grille to the fan body.

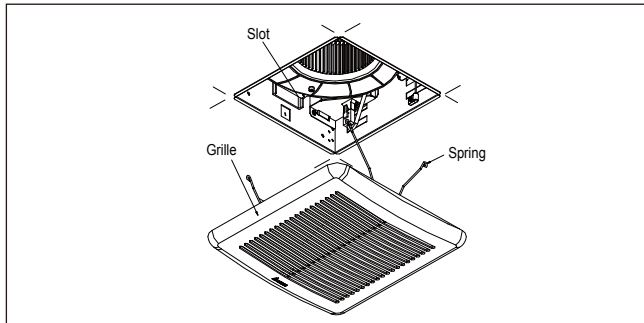

OPERATION

1. For Model of 80F/100F
Turn on the fan switch to operate ON.
2. For Model of 80-120DS
Full Speed Mode: Turn on the fan to operate ON. The LED indicator light will be AMBER.
Low Speed Mode: Cycle ON/OFF fan switch to operate LOW speed mode. The LED indicator light will be GREEN.
3. For Model of 100HS
Humidity Sensing Mode: Turn on the fan to operate ON. The LED indicator light will be BLUE. The fan will automatically start when the humidity level in the room is above 60%. If humidity level is below 60%, the fan will stop automatically.
Full Speed Mode: Cycle ON/OFF fan switch to operate at full speed mode. The LED indicator light will be AMBER.
Full Speed Mode Only (NO HUMIDITY SENSING MODE):
Locate humidity sensor inside housing (small black box with LED indicator). Loosen screws around sensor box and unplug the cable to disconnect.

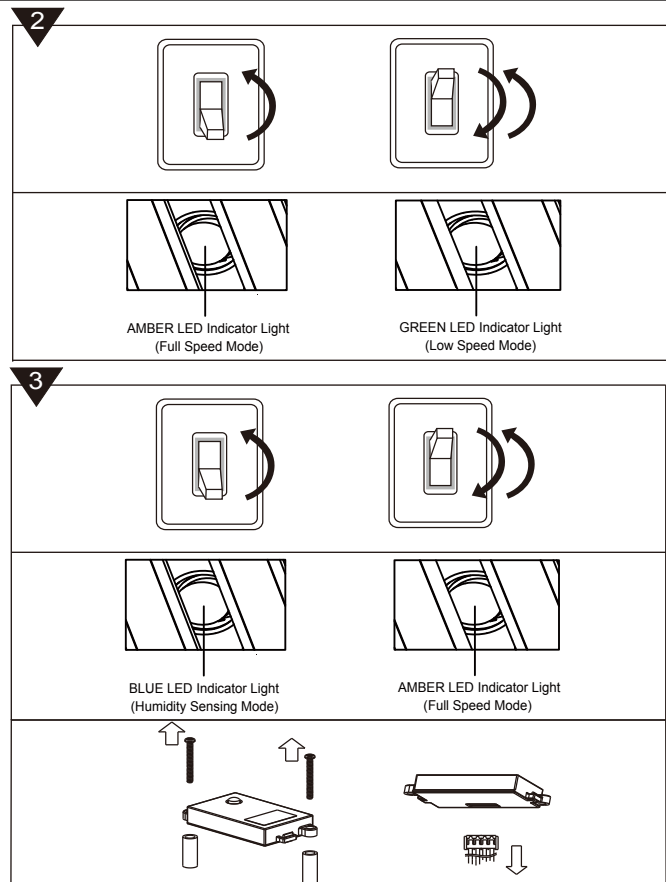


CARE AND MAINTENANCE

TURN OFF POWER SOURCE. REVIEW ALL SAFETY PRECAUTION.


See safety information before proceeding. Routine maintenance should be done at least once a year.

- Never use solvents, thinner or harsh chemicals when cleaning the fan.
- Do not allow water to enter the motor.
- Do not immerse metal parts in water.
- Do not immerse resin parts in water over 140° F.


1. To remove grille, squeeze springs and pull down. Wash and clean grille with non-abrasive kitchen detergent. Then wipe dry with a new cloth.

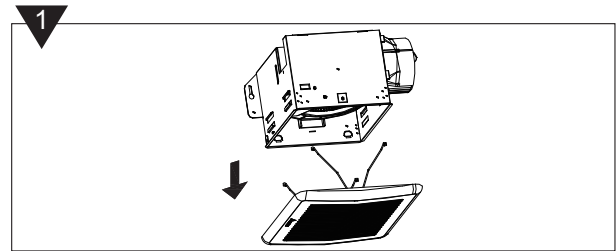


2. Remove dust and dirt from the fan body with a vacuum cleaner.

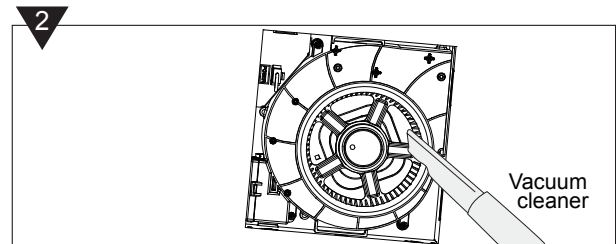

3. Using a cloth dampened with non-abrasive kitchen detergent, remove dust and dirt from the fan body. Then wipe dry with new cloth.

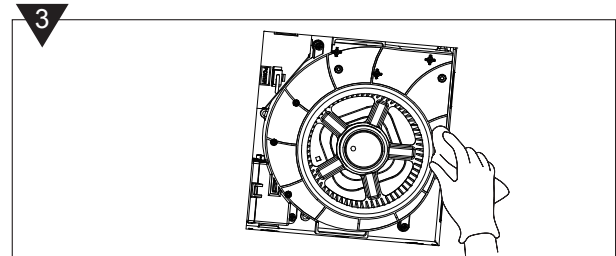



4. Replace the grille back onto the fan body. Turn on fan switch to operate fan again.

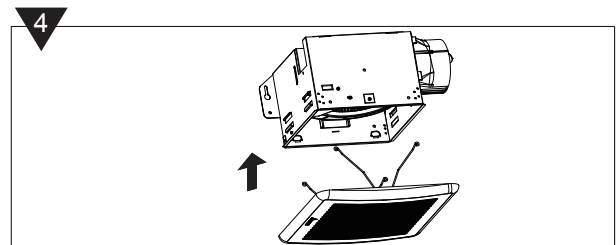

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The fan is not turning on	<ol style="list-style-type: none"> 1. Power off 2. Faulty switch 3. Faulty wire connection 	<ol style="list-style-type: none"> 1. Make sure power supply is on. 2. Test or replace switch. 3. Check wire in switch box.
The fan seems louder than it should	<ol style="list-style-type: none"> 1. CFM too great 2. Damper not working properly or damaged 3. Bend in duct too close to fan discharge 4. Fan discharge reduced to fit smaller duct 5. Fan body not securely attached 	<ol style="list-style-type: none"> 1. Be sure the CFM rating on the fan matches the size of your room. 2. Check damper to ensure it is opening and closing properly. If the damper has become damaged, please call Customer Service. 3. Be sure you do not have any sharp bends in duct closer than 18 in. to the fan discharge. 4. Use recommended size ducting to reduce fan noise. 5. Be sure the fan is securely attached to your ceiling joists.
The fan is not clearing the room	<ol style="list-style-type: none"> 1. Insufficient intake airflow within room 2. Insufficient CFM 	<ol style="list-style-type: none"> 1. Be sure a door or window is slightly ajar or opened to allow airflow. The fan is not able to draw air out of the room without enough airflow to draw in from. 2. Be sure the CFM rating on the fan matches the requirements for your room size.
The fan keeps running even though the house humidity level is lower than 60% RH	<ol style="list-style-type: none"> 1. Our sensor tolerance is +/-10% RH 2. Outdoor humidity is back drafting to the fan 3. Indoor temperature level 	<ol style="list-style-type: none"> 1. Continue to let the fan run since it is good to keep venting the house and the electric bill is minimal (approximately less than \$10 per year). 2. Turn the fan off when not in use.

DIMENSIONS

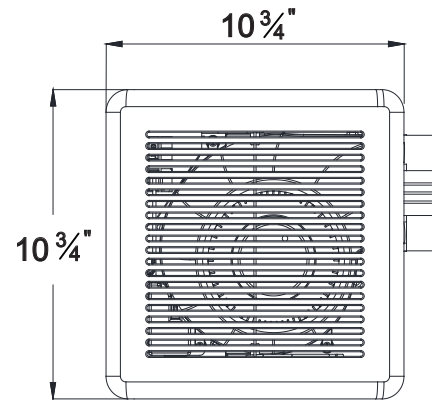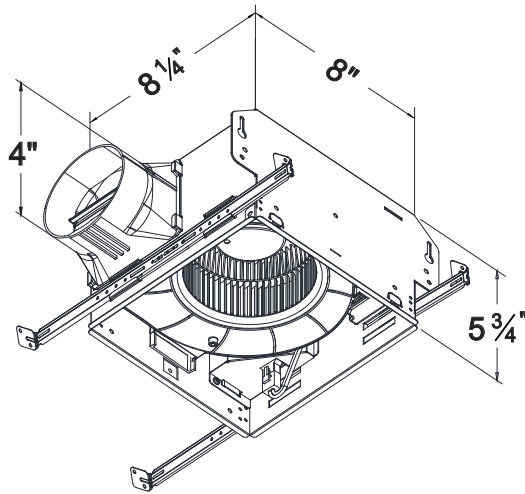

PRODUCT SPECIFICATIONS

Model No.	Voltage (V)	Frequency (Hz)	Air Flow @ 0.1"SP (CFM)	Power @ 0.1"SP (W)	Max Current (Amps)	Weight (lb.)	Note
80F / VFB080C4A2	120	60	80	10.5	0.22	5.6	Single Speed
100F / VFB100C4A1	120	60	100	12.6	0.22	5.6	Single Speed
100HS / VFB100C4H1	120	60	100	12.6	0.24	5.7	Humidity Sensing
80-120DS / VFB120C4X1	120	60	120	21.6	0.38	5.7	Full speed
			80	7.3			Low speed

Note: Design and specifications subject to change without notice.

WARRANTY

DELTA ELECTRONICS THREE YEAR LIMITED WARRANTY

Delta Electronics Inc. ("Delta Electronics") warrants to the original consumer purchaser in the USA and Canada that the Breez ventilation fan products will be free from defects in material or workmanship. This warranty is limited to three (3) years from the original date of purchase.

Limitations and Exclusions

1. During the warranty period, a replacement for any defective product will be supplied free of charge for installation by the consumer. The warranty provided herein does not cover charges for labor or other costs incurred in the troubleshooting, repair, removal, and installation service.
2. All returns of defective parts or products must include the product model number, and must be made through an authorized Delta Electronics distributor. Authorized returns must be shipped prepaid. Repaired or replacement products will be shipped by Delta Electronics F.O.B. shipping point.
3. Delta Electronics shall not be liable for any indirect, incidental, consequential, punitive, or special damages arising out of or in connection with products use or performance, regardless of the form of action whether in contract, tort (including negligence), strict product liability or otherwise.
4. This warranty does not extend to fluorescent lamp starters and tubes.
5. The warranty does not cover if user does not comply with manufacturer's installation manual.
6. To qualify for warranty service, you must notify Delta Electronics at the address or telephone number below.
7. Delta Electronics shall have no liability to the original owner-user with respect to any defect caused by abuse, misuse, neglect, improper transportation or storage, improper testing, improper installation, improper operation, improper use, improper maintenance, improper repair, improper alteration, improper modification, tampering or accident of products or parts thereof, or unusual deterioration or degradation of products or parts thereof due to a physical environment beyond the requirements of products' specifications.

Address: 46101 Fremont Boulevard, Fremont, CA 94538

US Toll Free Number: 1-888-979-9889

www.deltabreez.com