FISHER & PAYKEL

DOUBLE DISHDRAWER™ DISHWASHER

DD24DI, DD24DTI & DD24DHTI models

US CA

591386 A 08.17



A WARNING!

Electrical Shock Hazard

Before installing the dishwasher, remove the house fuse or open the circuit breaker. If permanently connecting the dishwasher, be sure the power is isolated and the dishwasher unplugged.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly grounded.

If the dishwasher is installed as a permanently connected appliance: GROUNDING INSTRUCTIONS - This appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

Do not modify the power supply plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an extension cord, adapter plug or multiple outlet box.

Failure to follow this advice may result in electrical shock or death.

▲ WARNING!

Fitting integrated front panels requires access to electrical service areas. This work must be performed and certified by a qualified electrical service technician.

Electrical Shock Hazard

WARNING: To reduce the risk of electrical shock, fire, or injury to persons, the installer must ensure that the dishwasher is completely enclosed at the time of installation.

Before fitting the front panels and connecting the 'knock to pause' module (if necessary), the installer must ensure that the dishwasher is disconnected from the power supply.

After installing the front panels, the installer must ensure that the following components are electrically grounded: the panel bracket and any custom metal component (e.g. handle) that extends past the rubber seal.

Failure to follow these warnings may result in electrical shock, injury or fire.

A WARNING!



Cut Hazard

Take care - panel edges are sharp.

Failure to use caution could result in injury or cuts.

IMPORTANT SAFETY INSTRUCTIONS

- Installation of this dishwasher requires basic mechanical and electrical skills.
- . Be sure to leave these Instructions with the Customer.
- Installation must comply with your local building, electricity, and plumbing regulations.
- At the completion of the dishwasher installation, the Installer must perform the Final Checklist.
- Remove all packaging materials supplied with the dishwasher.
- This dishwasher is manufactured for indoor use only.
- Ensure all water connections are turned OFF. It is the responsibility of the plumber and electrician to ensure that each installation complies with all Codes and Regulations.
- The dishwasher MUST be installed to allow for future removal from the enclosure if service is required.
- The switched power outlet must be outside the dishwasher cavity, so that it is accessible after installation.
- Care should be taken when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord and hoses.
- If the dishwasher is to be relocated from one installation to another it must be kept upright to avoid damage from water spillage.
- Make sure only new hoses are used for connection (supplied with the dishwasher). Old hoses should not be reused.
- Failure to install the dishwasher correctly could invalidate any warranty or liability claims.
- If the product is installed in a motor vehicle, boat or similar mobile facility, you must bring
 the vehicle, boat or mobile facility containing the product to the service shop at your
 expense or pay the service technician's travel to the location of the product.
- This dishdrawer is intended for connection to the hot-water supply.
- Failure to install the dishwasher correctly could invalidate any warranty or liability claims.
- Ensure the product is not plugged in when fitting custom panels.
- Installation of custom panels requires basic mechanical and electrical skills.
- Installation must comply with your local building and electricity regulations.
- Failure to install the custom panels correctly could invalidate any warranty or liability claims.

IMPORTANT!SAVE THESE INSTRUCTIONS

The models shown in this installation guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please go to our website www.fisherpaykel.com or contact your local Fisher & Paykel dealer.





Drain hose support (1)



Drain hose joiner (1)



Wire clip (2) (for securing Drain hose joiner)



Clamp (1) (for securing Drain hose joiner)



Side mounting bracket kit (A and B) (2) OPTIONAL



Top mounting brackets (2) OPTIONAL



Phillips 5/8" (16mm) screws (9)



Rubber washer for inlet hose (1) (comes already fitted)



Moisture protection tape (1) (to prevent moisture damage to cabinetry)




Hexagonal socket for feet adjustment (2) (long & short)



Prefinished toekick (1)



Edge Protector (1)
(If the services hole is through a metal partition, the hole must be protected with the Edge Protector supplied to prevent damage to the power cord or hoses.)

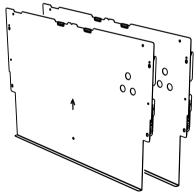

Panel bracket (2) & Knock-to-Pause Module (2) (shipped fixed to product)



Panel mounting screws (12)



Toekick mounting bracket cutting template (1)

(To enable a custom toekick panel to be cut to fit the product profile dependant on the depth of the toekick)



Toekick mounting bracket (1)

(A custom toekick panel of any material with thickness 3/8"- 3/4" (9 - 19mm) can be screwed to the Toekick mounting bracket)



Toekick mounting screws (5)


3


3-A REMO

REMOVE THE LOWER DRAWER


To prevent kinked hoses

Either sit the drawer down on the left hand side (recommended) or rotate the drawer clockwise, resting it on its side after removal.

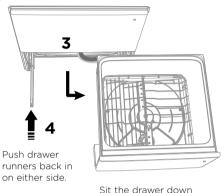

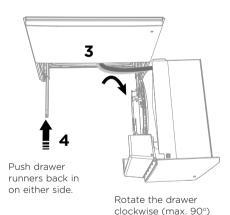



and rest on side.

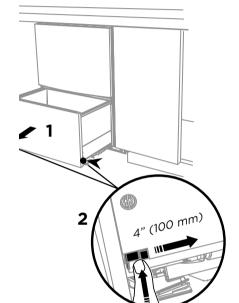

Press the release tabs in on either side and push back to release drawer from runners. Lift drawer off runners.

3-B REMOVE THE ACCESS COVER & REMOVE POWER

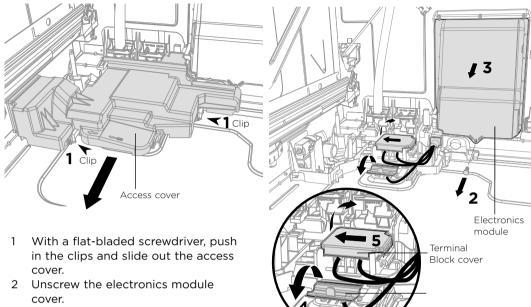


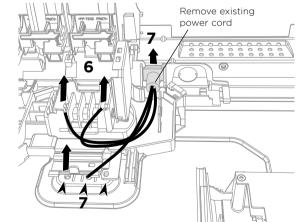

- 3 Carefully pull out the electronics module and rest on the chassis base out of the way.
- 4 With a screwdriver, unclip the plastic harness cover and hinge open.
- 5 Slide the terminal block cover sideways to unlock and hinge open to access the terminal block.
- 6 Unscrew the Live, Neutral and Earth wires as shown.
- 7 Unscrew the three screws on the base as shown and remove the cord from the product.


OPTIONALLY HARD WIRING PRIOR TO INSTALLATION


3-C TERMINATE MAINS WIRING AS SHOWN AND REPLACE MODULE AND COVERS

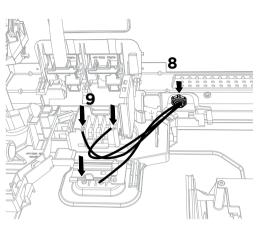

IMPORTANT!

Ensure the mains wires are routed UNDERNEATH all other harness wiring from the electronics module.

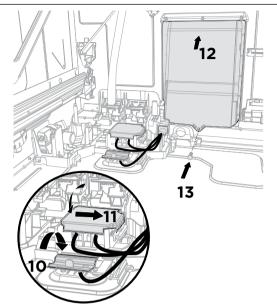


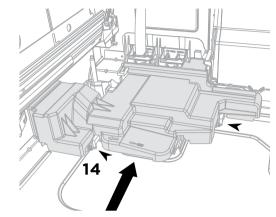


- 8 Fit a suitable cable clamp for the conduit through the metal knockout. Ensure wiring is routed through or under under housing ribs.
- 9 Screw down the Live, Neutral and Earth wires correctly.
- 10 Push the plastic harness cover back over. It should clip back into place
- 11 Fold down and slide back the terminal block cover.
- 12 Refit the electronics module back into position, being careful of wiring.
- 13 Replace the screw securing the electronics module.
- Slide the access cover back, ensuring the 2 clips shown are fully locked in place.NOTE: Use copper conductors


NOTE: Use copper conductors only.


3-D REFIT THE DRAWER ONTO THE RUNNERS & CLOSE

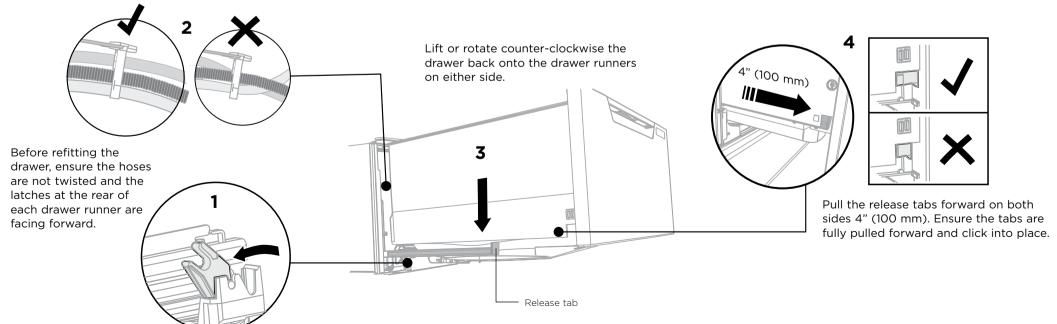

4 PRODUCT DIMENSIONS

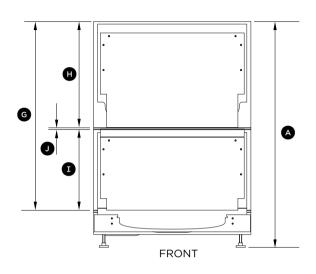

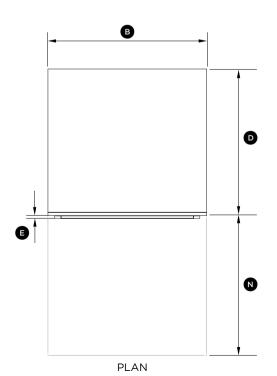

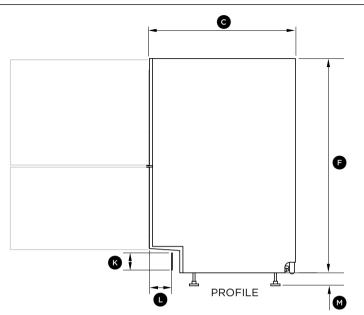

STANDARD HEIGHT MODELS

TALL HEIGHT MODELS

DD24DTI


	DD24DI	DD24DHTI
PRODUCT DIMENSIONS	INCHES (MM)	INCHES (MM)
Overall height of product 1, 2	32 5/16 - 34 5/8" (820-880)	34 - 36 3/8" (864-924)
B Overall width of product	23 9/16" (599)	23 9/16" (599)
© Overall depth of product ³	22 1/2" (571)	22 1/2" (571)
D Depth of chassis (to back of front drawer panel)	21 3/4" (553)	21 3/4" (553)
© Depth of drawer front panel	5/8" - 13/16" (16-20)	13/16" (20)
F Height of chassis ¹	31 15/16" (811)	33 11/16" (855)
Height of drawer front panels	min. 28 1/4" (717)	29 15/16" (761)
(H) Height of upper drawer front panel	min 15 11/16" (398)	min. 17 3/8" (442)
Height of lower drawer front panel	12 1/4" - 14 3/16" (311-360)	12 1/4" - 14 3/16" (311-360)
Ventilation gap between drawer front panels	5/16" (8)	5/16" (8)
Height of toekick (customisable)	2 1/4" - 4 5/8" (58-118)	2 1/4" - 4 5/8" (58-118)
(L) Depth from front of drawer panel to front of toekick (adjustable) 4.5	1 9/16" - 3 15/16" (40-100)	1 9/16" - 3 15/16" (40-100)
M Height of leveling feet (adjustable) ²	3/8 - 2 11/16" (9-69)	3/8 - 2 11/16" (9-69)
N Maximum extension of drawer ³	21 7/16" (545)	21 7/16" (545)

⁴ adjustable to match toekick recess on adjoining cabinetry

¹ includes 1/16" (2mm) high bracket slots ² depending on adjustment of leveling feet ³ assuming front panel thickness of 11/16" (18mm)


 $^{^{5}}$ assuming custom toekick panel thickness of 11/16" (18mm); if recess is between 1 15/16"-3 5/16" (50-84mm) deep, the panel will need to be cut out see step 'Custom panel calculations'



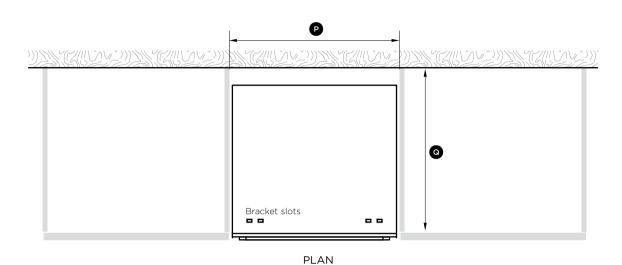


STANDARD	TALL
HEIGHT	HEIGHT
MODELS	MODELS

	DD24DI	DD24DTI DD24DHTI
CABINETRY DIMENSIONS	INCHES (MM)	INCHES (MM)
Inside height of cavity*	min. 32 5/16" (820)	min. 34" (864)
Inside width of cavity	23 5/8" (600)	23 5/8" (600)
Inside depth of cavity	min. 22 1/16" (560)	min. 22 1/16" (560)
R Recommended height of adjacent cabinet space	30" (762)	30" (762)
S Height of toekick space*	2 3/8 - 4 3/4" (60-120)	3 15/16" - 6 5/16" (100-160)
* depending on adjustment of leveling feet		

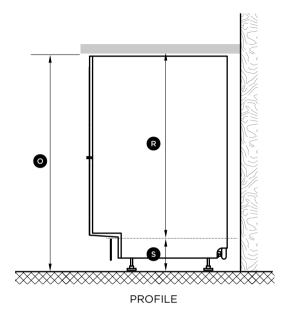

Minimum clearances from adjacent cabinetry

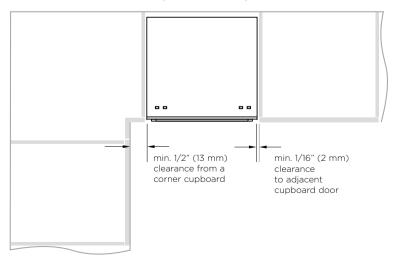

(6)

FRONT PANEL MATERIAL SPECIFICATIONS

- 5/8 13/16" (16 20mm) panel thickness.
- Adequately sealed to withstand moisture (122°F/50°C @ 80% RH)
 Because of it being a hot and wet environment generally, the back and sides of the
 panel should be completely sealed with a waterproof vapor barrier (ie polyurethane)
 to prevent damage to the panel.
- The back of the panel (including any integrated handle) should be completely flush so that the seal between the panel and the rubber trim is maintained.
- Installation outside these specs may result in condensation on cabinetry surfaces.
- Maximum weight of each panel: 20lb (9kg)

The following calculations assume the top of the upper panel is aligned with the top of the adjacent cabinetry.


The final panel/cabinetry alignment is achieved by adjusting the feet:

WIDTH OF ALL PANELS

Measure **A** (the width between adjacent door/drawer fronts) and write it in the first box below, then complete the equation.




HEIGHT OF THE UPPER PANEL

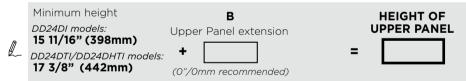


Note: The 'upper panel extension' **B** allows for the top of the upper panel to extend above the chassis where required, however a min. 1/16" (2mm) gap to the countertop must be maintained.

HEIGHT OF THE LOWER PANEL

Measure **C** (door/drawer height (or equivalent)) and write it in the first box below, then complete the equation.

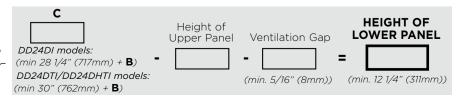

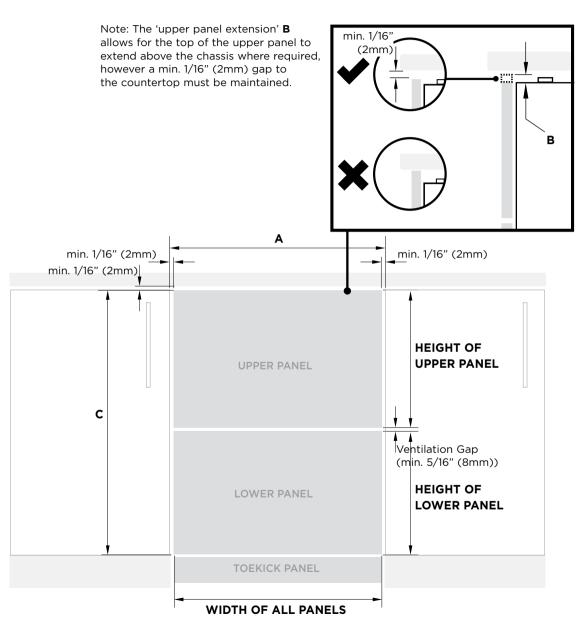


7


TOEKICK PANEL MATERIAL SPECIFICATIONS

- min. 3/8" (9mm) panel thickness if using supplied screws
- Adequately sealed to withstand moisture (122°F/50°C @ 80% RH)
- You may choose to affix your custom toekick panel either by screwing it or gluing it to the supplied mounting bracket.

HEIGHT OF THE TOEKICK PANEL


Measure **D** (height from the top of adjacent cabinet door fronts to the floor) and write it in the first box below, then complete the equation.

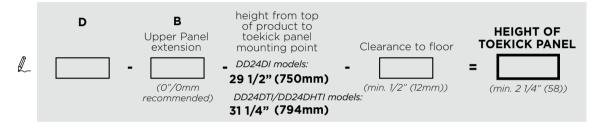


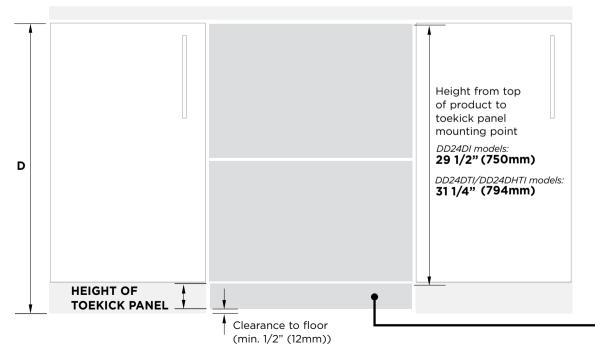


Depth is measured from FRONT of door panel (assuming thickness - 11/16" (18mm) to front

Toekick Depth face of custom toekick label

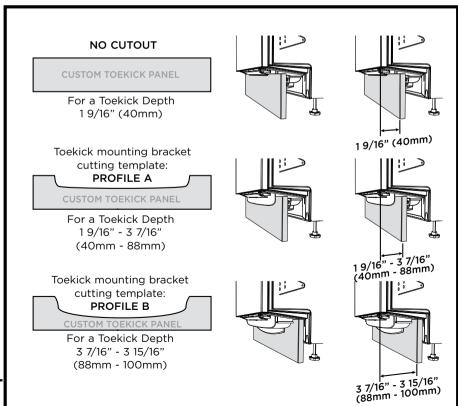

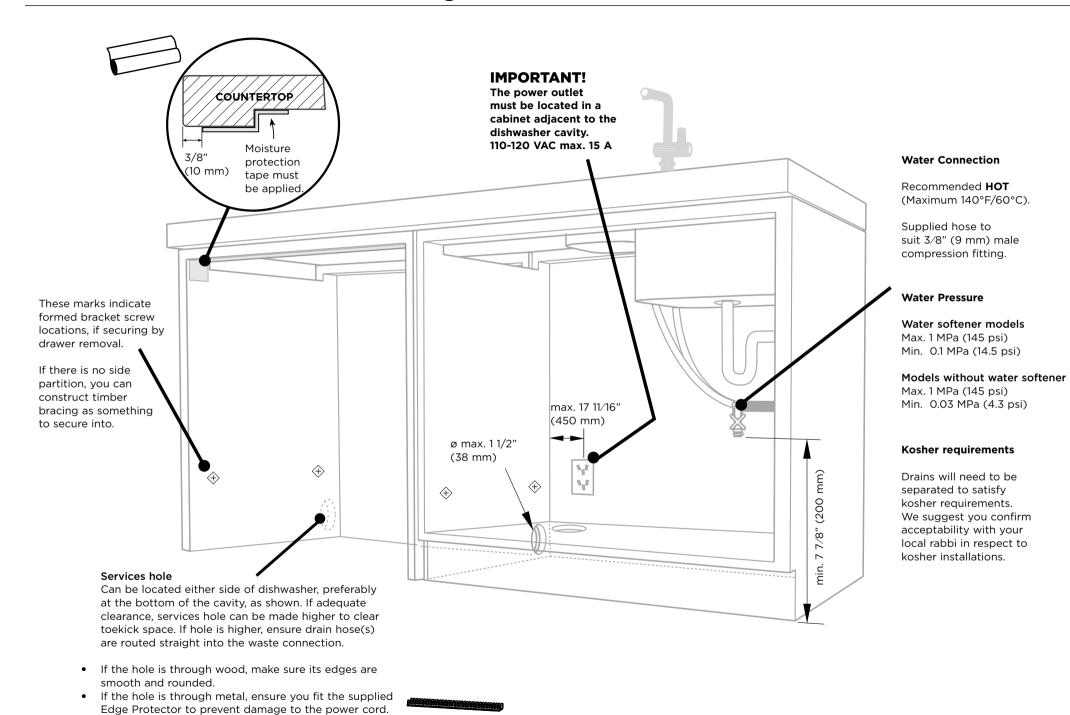


9 MAXIMUM DISTANCE OF HOSES & CORD FROM CHASSIS EDGE

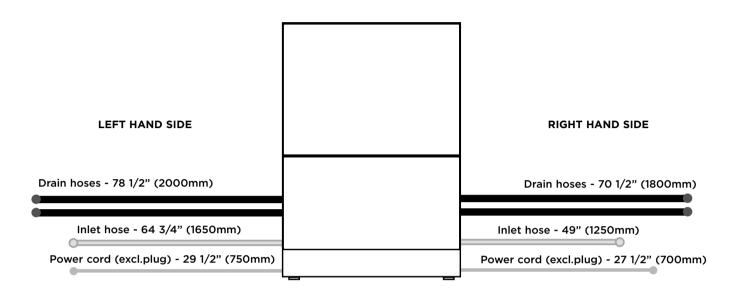

NOW CHOOSE WHICH INSTALLATION METHOD (A) OR (B) IS MORE SUITABLE FOR YOUR CABINETRY...


10 RECOMMENDED METHOD (A) - SECURE WITHOUT DRAWER REMOVAL (FRAMELESS CABINETRY ONLY)

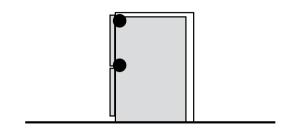

(10)-(A) ATTACH SIDE MOUNTING BRACKETS


Clip all four side mounting brackets into their slots using a flat-bladed screwdriver. Ensure they're securely fitted before sliding product into cavity. The mounting slots are in pairs, one on each side diagonally across the product. A bracket must match A slot and B bracket must match **B** slot. When fitting brackets, ensure the ends are not pushed down into the chassis.

(11)-(A) PULL THROUGH HOSES & PUSH INTO THE CAVITY

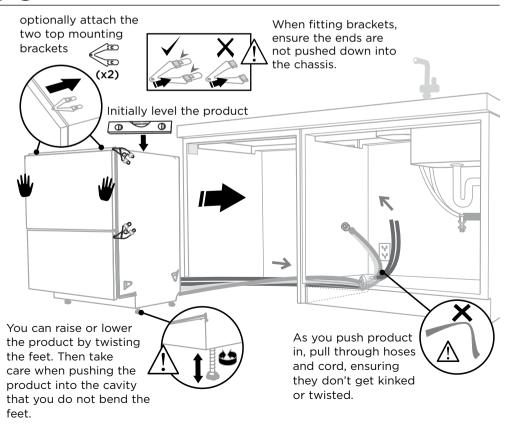


(12)-(A) SECURE TO THE CABINETRY ON THE SIDES



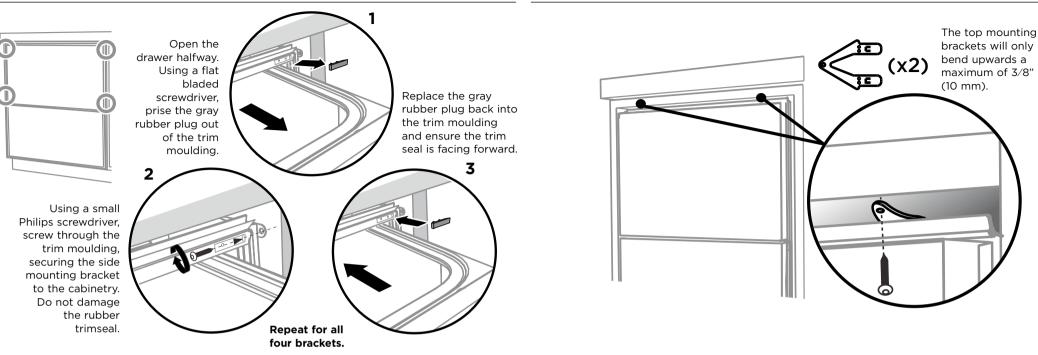


14-A AFTER SECURING, REFER TO 'FIT THE SUPPLIED TOEKICK PANEL' STEP




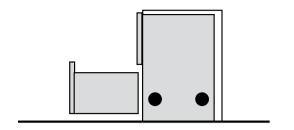

10-B PULL THROUGH HOSES & PUSH INTO THE CAVITY

(11)-(B) REMOVE THE LOWER DRAWER

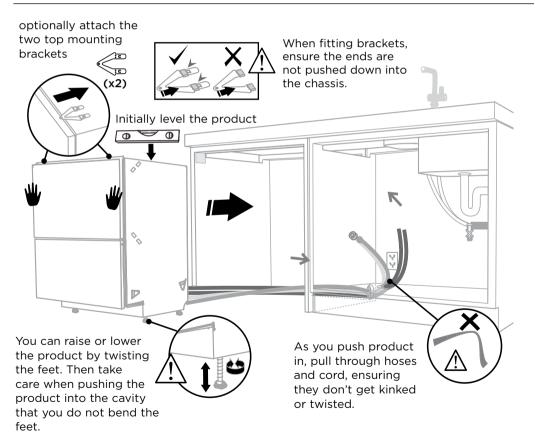


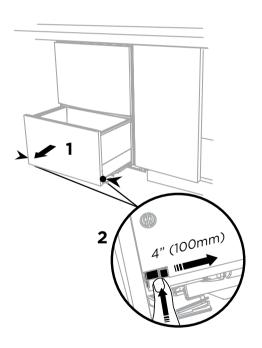


Press the release tabs in on either side and push back to release drawer from runners. Lift drawer off runners.

To prevent kinked hoses

Either sit the drawer down on the left hand side (recommended) or rotate the drawer clockwise, resting it on its side after removal.

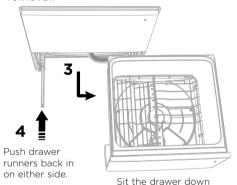


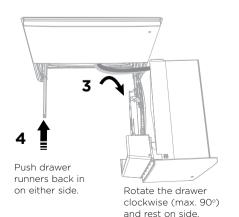


(12)-(B) SECURE TO THE CABINETRY ON THE SIDES

(13)**-**(B)

OPTIONALLY SECURE TO THE CABINETRY ABOVE

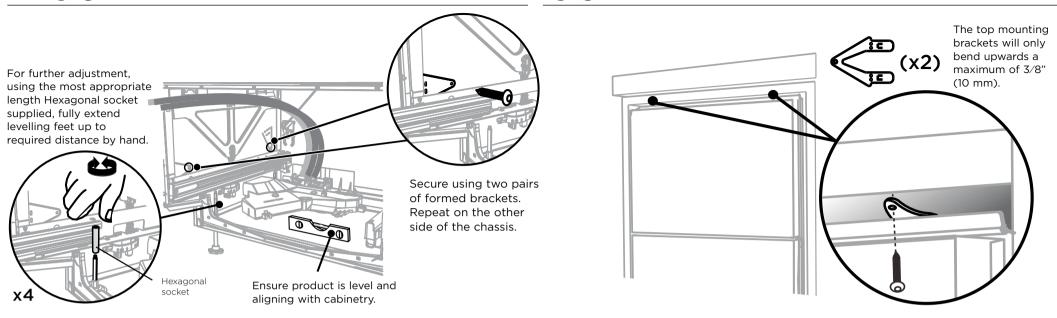


14)-(B) REFIT THE DRAWER ONTO THE RUNNERS

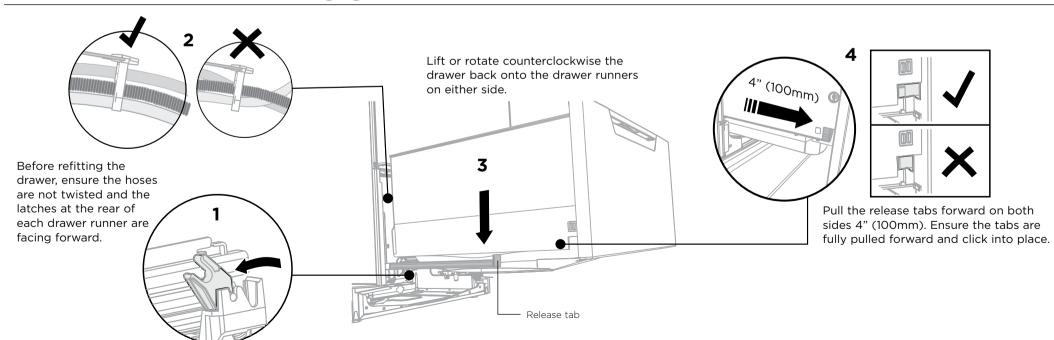


15)

(15)-(B) REMOVE BOTH PANEL BRACKETS FROM PRODUCT

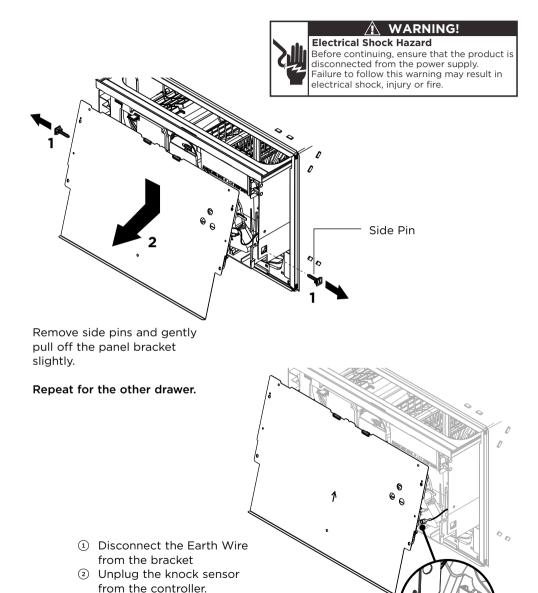

Repeat for the other drawer.

15-B REMOVE THE KNOCK-TO-PAUSE MODULE

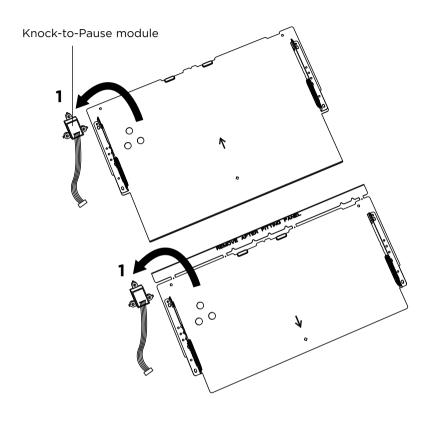


Remove the Knock-to-Pause module from the back of the bracket.


Repeat for the other bracket.

ATTACH CUSTOM PANELS TO PANEL BRACKETS



15-D ATTACH KNOCK-TO-PAUSE MODULES TO CUSTOM PANELS

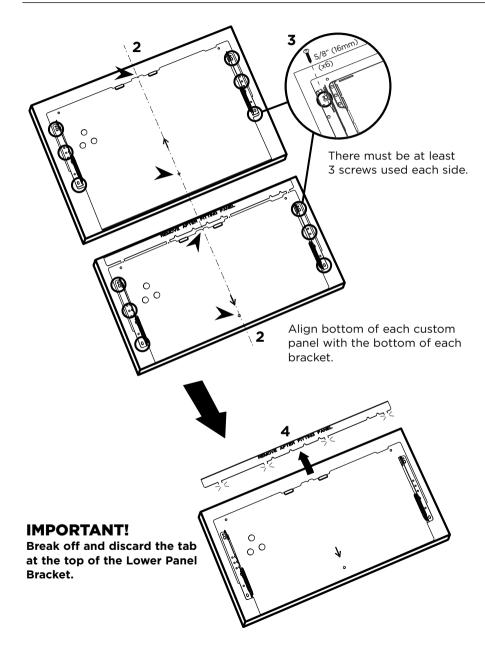


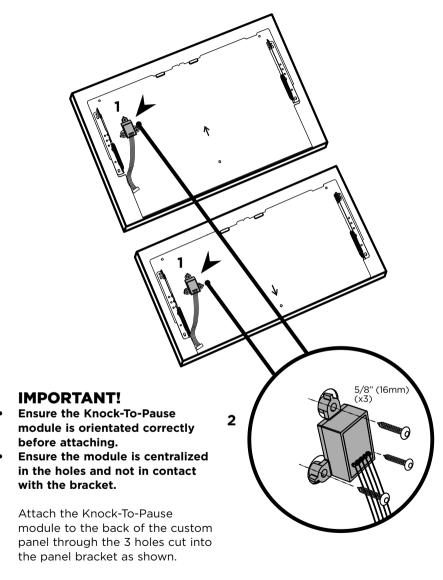

Use all 3 screws provided.


Repeat for the other module.

(15)-E CONNECT THE KNOCK-TO-PAUSE MODULE TO THE CONTROLLER

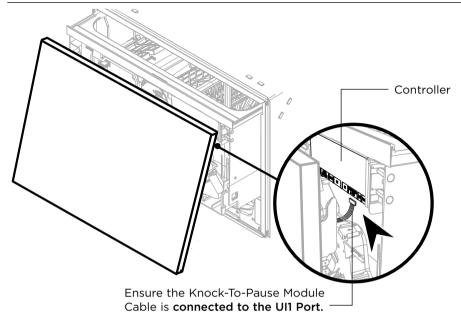


Repeat for the other drawer.

(15)-G ATTACH CUSTOM PANELS TO PRODUCT

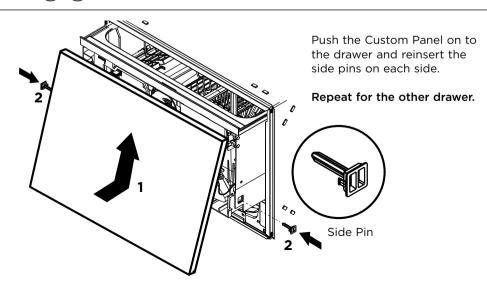

15-F RECONNECT THE EARTH WIRE TO THE PANEL BRACKET

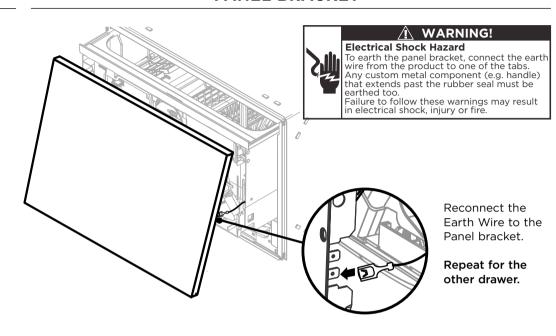

(15)-(H) ADJUST CUSTOM PANEL HEIGHT TO ALIGN CABINETRY GAPS


With the front panels fitted, insert an appropriately sized Philips screwdriver into the hole above the side pin and rotate the panels up or down to align the gaps in your cabinetry.

Repeat on the other side if necessary.


Each panel has a maximum travel of 1/16" (2mm) up or down.


IMPORTANT!

Ensure that you maintain a minimum of 5/16" (8mm) ventilation gap between the upper and lower panels.

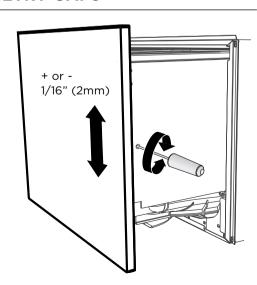


(16)

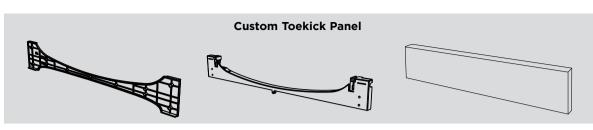

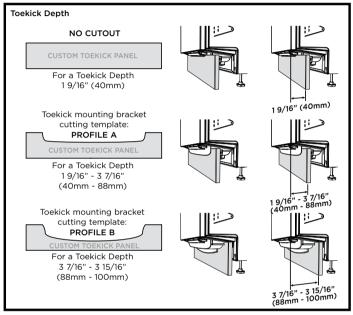

Depth is measured from FRONT of door panel (assuming thickness - 11/16" (18mm) to front face of custom toekick label

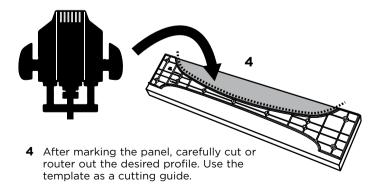



IMPORTANT!

Ensure all bare edges are sealed appropriately.

I If you require a cutout in your custom toekick panel, choose the most appropriate cutout profile (A or B) depending on the final depth of your toekick panel.


Toekick mounting bracket cutting template

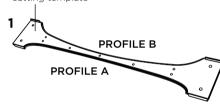


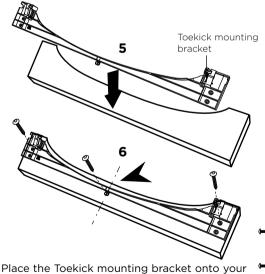

- **5** Place the Toekick mounting bracket onto your toekick panel. Ensure they are centered and the top of the template aligns with the top surface of the panel.
- **6** Secure template to panel using the supplied toekick mounting screws.

- 2 Place the Toekick mounting bracket cutting template onto your toekick panel. Ensure they are centered and the template rests on the top surface of the panel.
- **3** Secure template to panel either by clamping or using the supplied mounting screws.

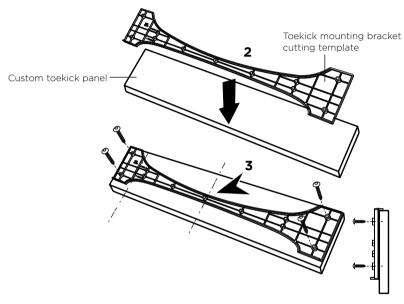


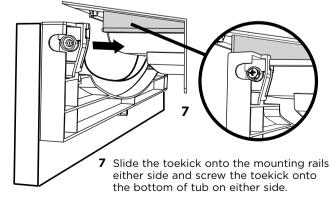


IMPORTANT!Do not overtighten screw.

FIT THE SUPPLIED PREFINISHED TOEKICK PANEL (IF PREFERRED)




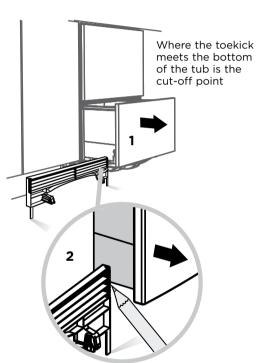


Mark this point on the toekick with a pencil

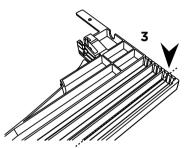


Lay the toekick face down on a chopping board or similiar

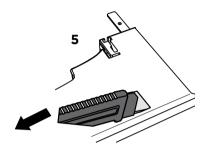


Turn the toekick over and score along the same line

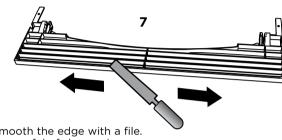


Smooth the edge with a file. Be careful of sharp edges.

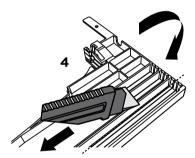

Score along with a knife

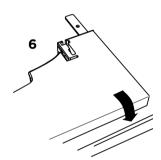


Gently snap off the excess

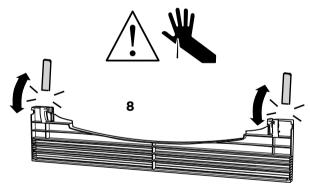


Snap off the two end tabs

Slide the toekick onto the mounting rails either side and screw the toekick onto the bottom of tub on either side.

IMPORTANT! Do not overtighten screw.

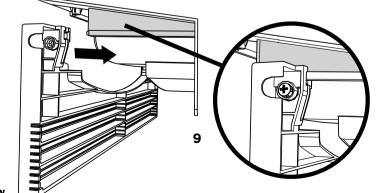


DRAINAGE OPTION 1 Dishwasher and Ø 1 1/2" (38 mm) Standpipe

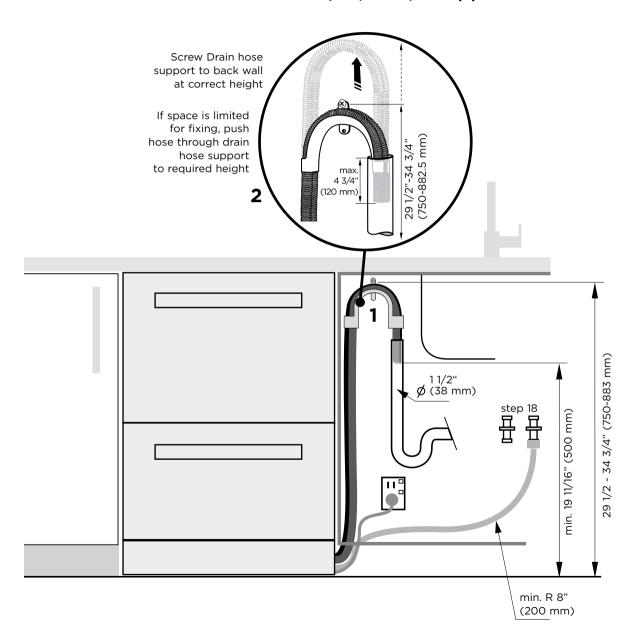

IMPORTANT!

Ensure that drain connection will comply with local plumbing regulations.


DRAINAGE OPTION 2 Dishwasher using Air Break with Drain Hose Joiner

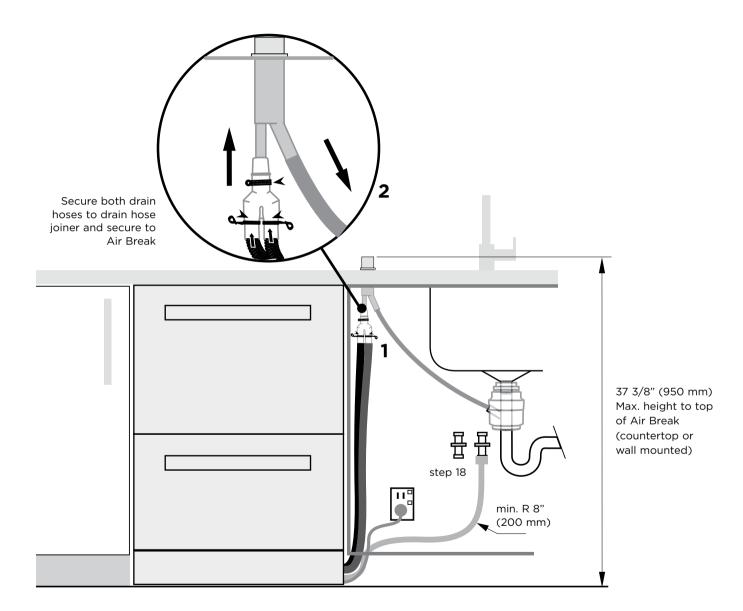

IMPORTANT!

Ensure that drain connection will comply with local plumbing regulations.


DRAINAGE OPTION 3 Dishwasher using drain hose joiner onto sink trap/waste tee

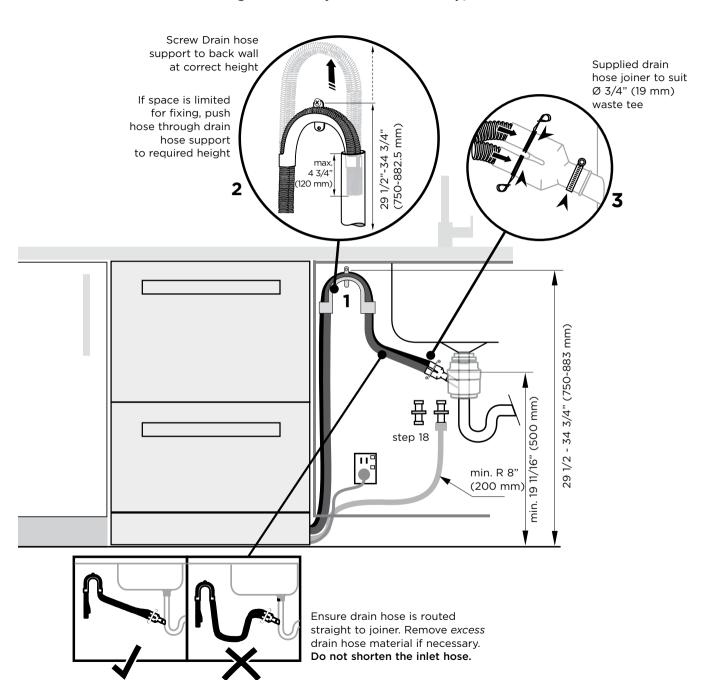

IMPORTANT!

Ensure that drain connection will comply with local plumbing regulations.



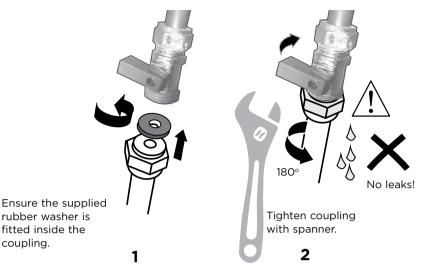



(20) TROUBLESHOOTING

- Excessive water remaining above the filter plate, after the rinse cycle. (This is displayed as an A3 fault. See user guide 'How to attend to a fault')

 Check for a kinked drain hose, blocked or incorrectly drilled out waste connection, highloop not properly installed, drain hose not routed correctly or spray arms not in place.
- No water supply. (This is displayed as an A1 fault. See user guide 'How to attend to a fault')
 Check water is connected and turned on.
- The dishwasher is beeping continuously

 There is a fault. See section 'How to attend to a fault' in the User guide for further information and instructions.
- No program indicator lights up when the drawer is opened
 Ensure power is connected and is switched on. If it is and still no indicator lights up, see the 'Preference options' section of the 'Quick start guide'.
 An option called 'Open drawer auto power-on' may need to be turned on.
- Water around water supply and drainage connections

 Check connections, existing plumbing and hoses for leaks. Check rubber washer and hose clamp are correctly fitted.
- If product is tipping
 Ensure the product is secured to the cabinetry.
- If front panels are misaligned

 Check and relevel product. Check the cabinetry is square. For Integrated models, check and adjust front panel alignment if necessary.
- Drawer doesn't close properly
 Ensure nothing is obstructing the drawer from closing properly eg hoses or drawer latches.
- If a problem occurs, consult the 'Troubleshooting' section of the User guide.
- If after checking these points you still need assistance, please refer to the Service & Warranty book for warranty details and your nearest Authorized Service Center, or contact us through our website, listed below.

\checkmark	TO BE COMPLETED BY THE INSTALLER	
	Check all parts are installed. Ensure that all panels and parts thereof are secure and final electrical tests have been conducted in accordance with local electrical regulations. Ensure product is level, securely fastened to the cabinetry and opens and closes freely. The drawers must be free to fully close with no resistance from the cabinetry. Ensure inlet hose to water supply has supplied rubber washer fitted, and that it's tightened a further half turn after seal contact. Ensure any knockouts or plugs in drain connection have been drilled out and drain connection has been made. The drain hose joiner must not support the weight of excess hose material. Keep drain hose as fully extended as possible to prevent sagging. Any excess length of drain hose	Turn on the power and water supplies, then open the drawers. You should hear a beep and see a program indicator light up on the internal control panel. Check the spray arms are in place, mounted correctly and free to rotate, by physically rotating by hand. Spray arm
	should be kept on the dishwasher side of the highloop. If connecting the drain hose to the sink trap, ensure the Highloop is a minimum 5 7/8" (150mm) higher than the drain hose joiner. Ensure any packaging or tape securing the racks is removed from the drawers. Water softener models only: adjust the water softener setting from the default setting to suit the water hardness of the area. See the Quick start guide and section 'Water softener' in the User guide.	Add three cups of water into the drawer. Press >> until the indicator of the 'Rinse' program lights up. Close the drawer and press >> II to start the program. Repeat for the other drawer. When the test cycle is in process check the knock sensor is working by knocking twice on the door to pause the wash program. After the Rinse program has finished, ensure the dishwasher has run and drained correctly. Check the water supply has correctly shut off and drainage connection for leakage.
Model Serial Purch Purch Deale Install	No. ase Date	FISHERPAYKEL.COM Copyright © Fisher & Paykel Appliances 2017. All rights reserved. The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly

Installation Date

describes the product currently available.

FISHER & PAYKEL

SINGLE DISHDRAWER™ DISHWASHER

DD24SI, DD24STI & DD24SHTI models

US CA

591386 A 08.17



A WARNING!

Electrical Shock Hazard

Before installing the dishwasher, remove the house fuse or open the circuit breaker. If permanently connecting the dishwasher, be sure the power is isolated and the dishwasher unplugged.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly grounded.

If the dishwasher is installed as a permanently connected appliance: GROUNDING INSTRUCTIONS - This appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

Do not modify the power supply plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an extension cord, adapter plug or multiple outlet box.

Failure to follow this advice may result in electrical shock or death.

▲ WARNING!

Fitting integrated front panels requires access to electrical service areas. This work must be performed and certified by a qualified electrical service technician.

Electrical Shock Hazard

WARNING: To reduce the risk of electrical shock, fire, or injury to persons, the installer must ensure that the dishwasher is completely enclosed at the time of installation.

Before fitting the front panels and connecting the 'knock to pause' module (if necessary), the installer must ensure that the dishwasher is disconnected from the power supply.

After installing the front panels, the installer must ensure that the following components are electrically grounded: the panel bracket and any custom metal component (e.g. handle) that extends past the rubber seal.

Failure to follow these warnings may result in electrical shock, injury or fire.

A WARNING!



Cut Hazard

Take care - panel edges are sharp.

Failure to use caution could result in injury or cuts.

IMPORTANT SAFETY INSTRUCTIONS

- Installation of this dishwasher requires basic mechanical and electrical skills.
- . Be sure to leave these Instructions with the Customer.
- Installation must comply with your local building, electricity, and plumbing regulations.
- At the completion of the dishwasher installation, the Installer must perform the Final Checklist.
- Remove all packaging materials supplied with the dishwasher.
- This dishwasher is manufactured for indoor use only.
- Ensure all water connections are turned OFF. It is the responsibility of the plumber and electrician to ensure that each installation complies with all Codes and Regulations.
- The dishwasher MUST be installed to allow for future removal from the enclosure if service is required.
- The switched power outlet must be outside the dishwasher cavity, so that it is accessible after installation.
- Care should be taken when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord and hoses.
- If the dishwasher is to be relocated from one installation to another it must be kept upright to avoid damage from water spillage.
- Make sure only new hoses are used for connection (supplied with the dishwasher). Old hoses should not be reused.
- Failure to install the dishwasher correctly could invalidate any warranty or liability claims.
- If the product is installed in a motor vehicle, boat or similar mobile facility, you must bring
 the vehicle, boat or mobile facility containing the product to the service shop at your
 expense or pay the service technician's travel to the location of the product.
- This dishdrawer is intended for connection to the hot-water supply.
- Failure to install the dishwasher correctly could invalidate any warranty or liability claims.
- Ensure the product is not plugged in when fitting custom panels.
- Installation of custom panels requires basic mechanical and electrical skills.
- Installation must comply with your local building and electricity regulations.
- Failure to install the custom panels correctly could invalidate any warranty or liability claims.

IMPORTANT!SAVE THESE INSTRUCTIONS

The models shown in this installation guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please go to our website www.fisherpaykel.com or contact your local Fisher & Paykel dealer.





Drain hose support (1)



Drain hose joiner (1)



Wire clip (1) (for securing Drain hose joiner)



Clamp (1) (for securing Drain hose joiner)



Side mounting bracket kit (A and B) (2) OPTIONAL



Top mounting brackets (2) OPTIONAL



Phillips

16 mm


screws (7)



38 mm bottom fixing screws & metal washers (2)



Rubber washer for inlet hose (1) (comes already fitted)

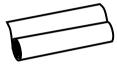


Moisture protection tape (1) (to prevent moisture damage to cabinetry)



Cavity Bracket Kit (1) (supplied with Tall Height Models only)


the cavity left after

installation.)

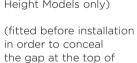




Edge Protector (1)
(If the services hole is through a metal partition, the hole must be protected with the Edge Protector supplied to prevent damage to the power cord or hoses.)

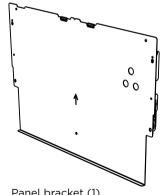

Panel bracket (1) & Knock-to-Pause Module (1) (shipped fixed to product)



Panel mounting screws (6)

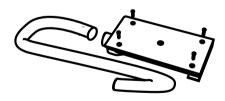

External Venting kit (1)

If the Drain hoses supplied are not long enough to reach your services, you must use a Drain Hose Extension Kit P/N 525798 which will extend the drain hoses by 11' 10" (3.6m). The kit is available from the nearest Fisher & Paykel Authorized Service Center, or Toll free 1.888.936.7872 or www.fisherpaykel.com

REMOVE THE DRAWER

4" (100mm)


Press the release tabs in


on either side and push

back to release drawer

Lift drawer off runners.

from runners.

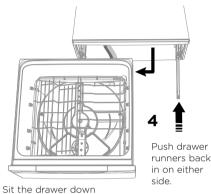


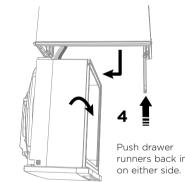


clockwise (max. 90°) and rest on side.


To prevent kinked hoses

Either sit the drawer down on the left hand side (recommended) or rotate the drawer clockwise, resting it on its side after removal.

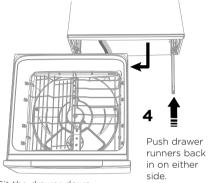

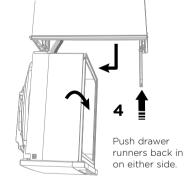

REMOVE THE ACCESS COVER & REMOVE POWER

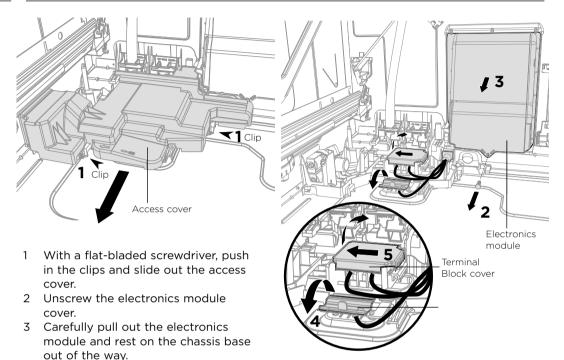

4 With a screwdriver, unclip the plastic harness cover and hinge open.


sideways to unlock and hinge open to access the terminal block.

5 Slide the terminal block cover


7 Unscrew the three screws on the

wires as shown.

from the product.

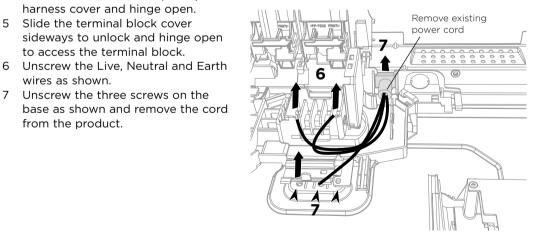



3-C TERMINATE MAINS WIRING AS SHOWN AND REPLACE MODULE AND COVERS

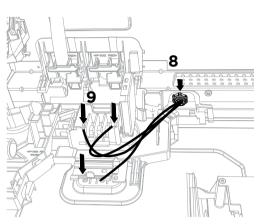

IMPORTANT!

Ensure the mains wires are routed UNDERNEATH all other harness wiring from the electronics module.

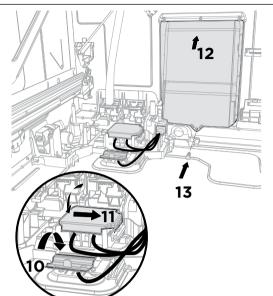


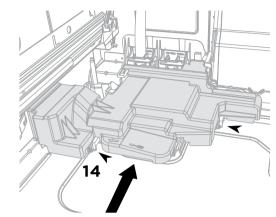


- 8 Fit a suitable cable clamp for the conduit through the metal knockout. Ensure wiring is routed through or under under housing ribs.
- 9 Screw down the Live, Neutral and Earth wires correctly.
- 10 Push the plastic harness cover back over. It should clip back into place
- 11 Fold down and slide back the terminal block cover.
- 12 Refit the electronics module back into position, being careful of wiring.
- 13 Replace the screw securing the electronics module.
- 14 Slide the access cover back, ensuring the 2 clips shown are fully locked in place.NOTE: Use copper conductors


NOTE: Use copper conductors only.


3-D REFIT THE DRAWER ONTO THE RUNNERS & CLOSE

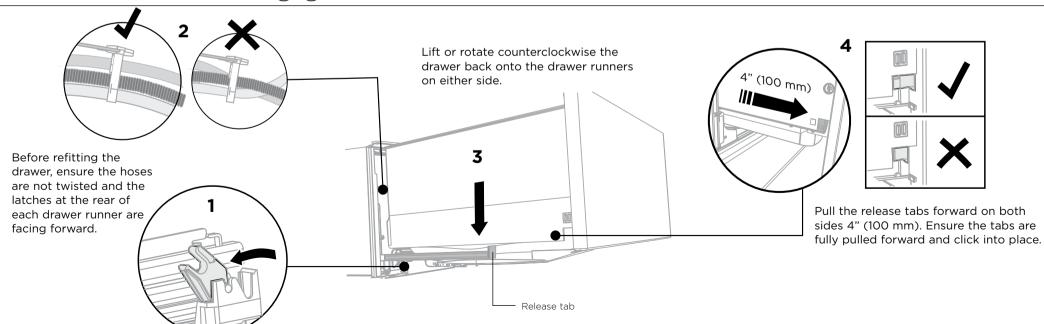

4 PRODUCT DIMENSIONS

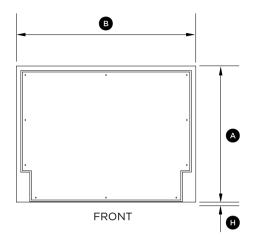

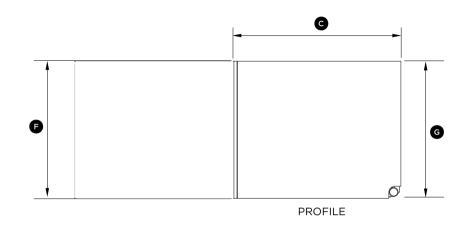

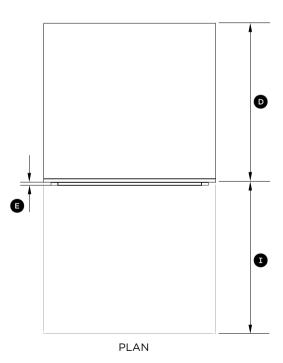

STANDARD TALL HEIGHT HEIGHT MODELS MODELS DD24STI

	DD24SI	DD24SHTI
PRODUCT DIMENSIONS	INCHES (MM)	INCHES (MM)
Overall height of product ¹	16 1/8" (410)	min. 17 7/8" (454)
Overall width of product	23 9/16" (599)	23 9/16" (599)
© Overall depth of product ²	22 1/2" (571)	22 1/2" (571)
Depth of chassis (to back of front drawer panel)	21 3/4" (553)	21 3/4" (553)
© Depth of drawer front panel	5/8" - 13/16" (16-20)	5/8" - 13/16" (16-20)
F Height of drawer front panel	min. 16 1/16" (408) ³	min. 17 13/16" (452) ⁴
© Height of chassis ¹	16 1/8" (410)	17 7/8" (454)
(H) Ventilation gap below drawer front panel	min. 1/6" (2)	min. 1/6" (2)
① Maximum extension of drawer ²	21 7/16" (545)	21 7/16" (545)
¹ includes 1/16" (2mm) high bracket slots ² assuming a front panel thickness of 11/1	16" (18mm)	


 $^{^3}$ recommended for a 1 $\rlap{1}/6$ " (2mm) ventilation gap below panel, if cavity height is 16 1 $\rlap/4$ " (412mm)

 $^{^4}$ recommended for a 1/16" (2mm) ventilation gap below panel

CABINETRY DIMENSIONS

the drawer:


installation.

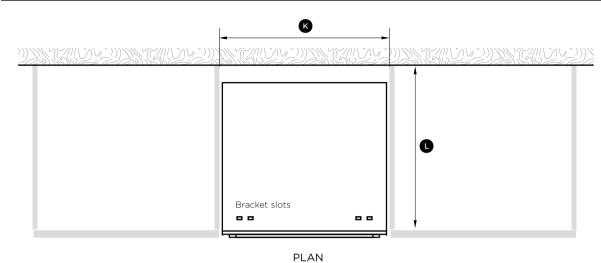



STANDARD	TALI
HEIGHT	HEIGH ⁻
MODELS	MODELS

	DD24SI	DD24STI DD24SHTI
CABINETRY DIMENSIONS	INCHES (MM)	INCHES (MM)
Inside height of cavity	min. 16 1/4" (412)	min. 18" (456)
(k) Inside width of cavity	23 5/8" (600)	23 5/8" (600)
L Inside depth of cavity	min. 22 1/16" (560)	min. 22 1/16" (560)

Minimum clearances from adjacent cabinetry

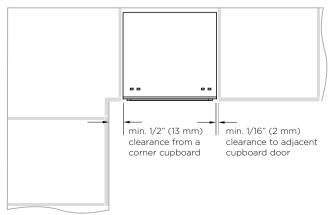

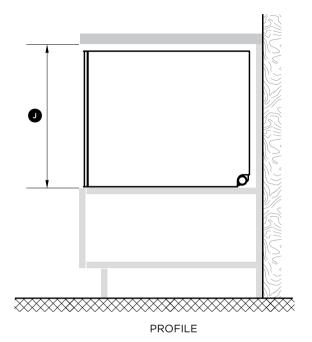

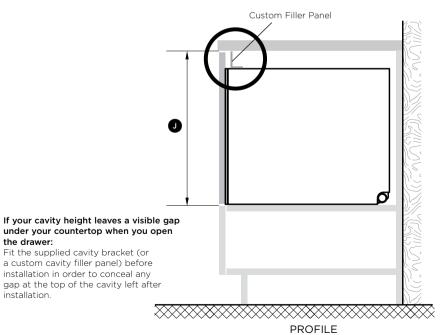

6

FRONT PANEL MATERIAL SPECIFICATIONS

- 5/8 13/16" (16 20mm) panel thickness
- Adequately sealed to withstand moisture (122°F/50°C @ 80% RH)
 Because of it being a hot and wet environment generally, the back and sides of the
 panel should be completely sealed with a waterproof vapour barrier (ie polyurethane)
 to prevent damage to the panel.
- The back of the panel (including any integrated handle) should be completely flush so that the seal between the panel and the rubber trim is maintained.
- · Installation outside these specs may result in condensation on cabinetry surfaces.
- Maximum weight of panel: 20lb (9kg)

The following calculations assume the top of the upper panel is aligned with the top of the adjacent cabinetry.


WIDTH OF THE PANEL


Measure **A** (the width between adjacent door/drawer fronts) and write it in the first box below, then complete the equation.




HEIGHT OF THE PANEL



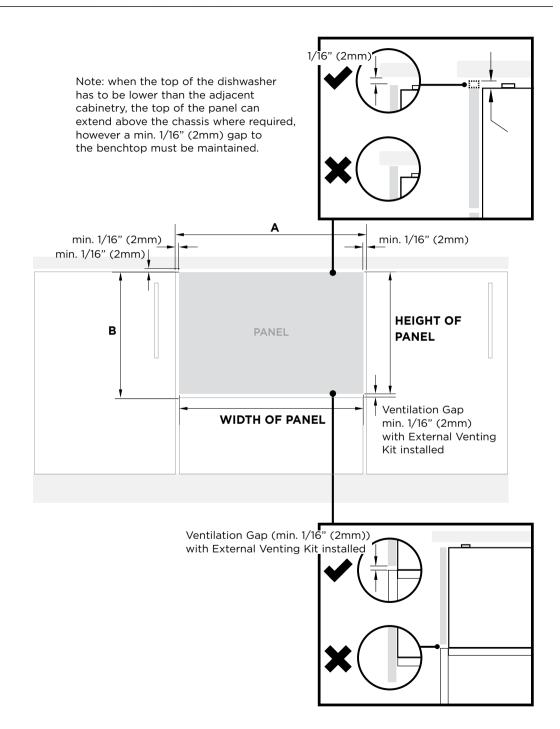


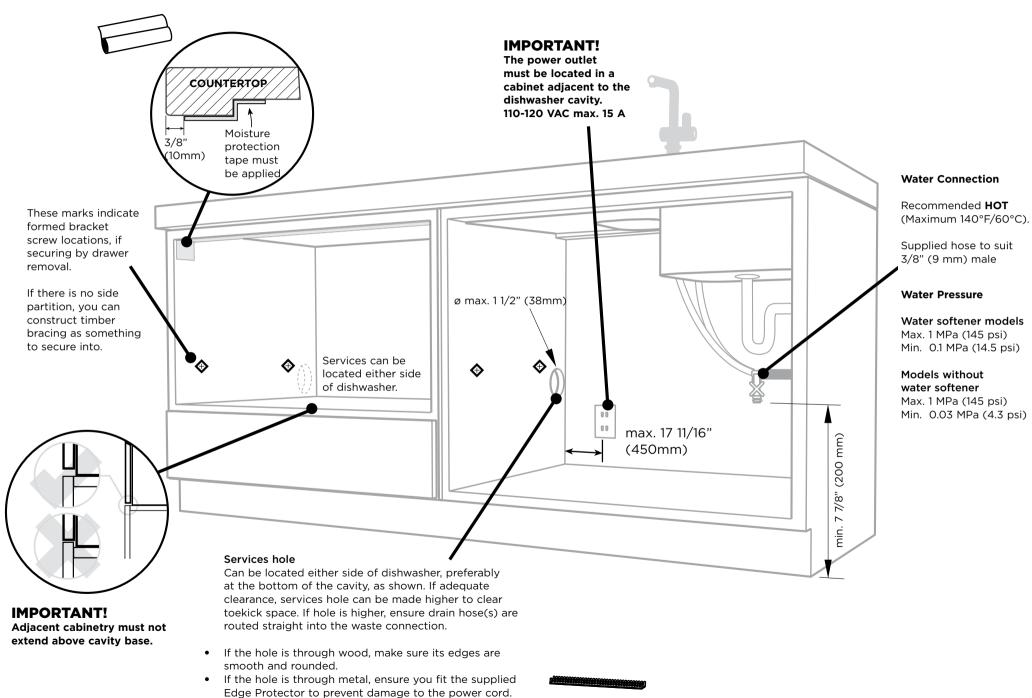


PREPARATION FOR EXTERNAL VENTING THROUGH SAME CABINET

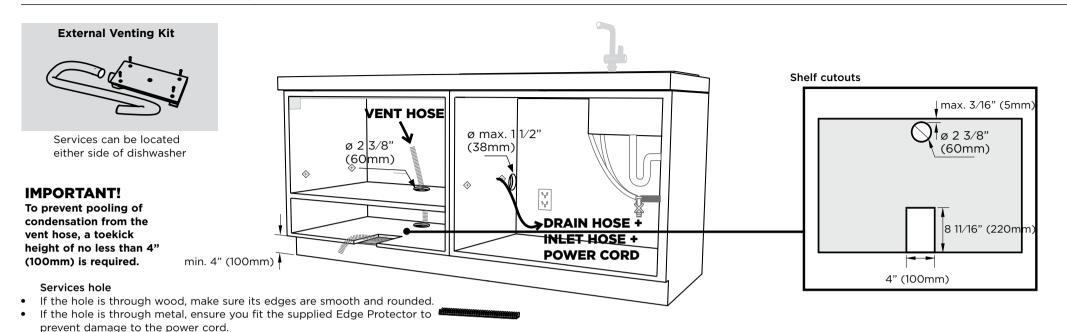

8 PREPARATION FOR EXTERNAL VENTING THROUGH ADJACENT CABINET

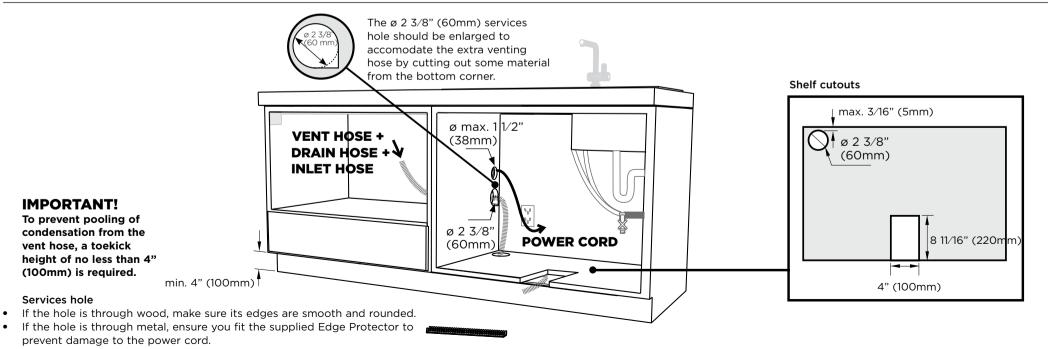


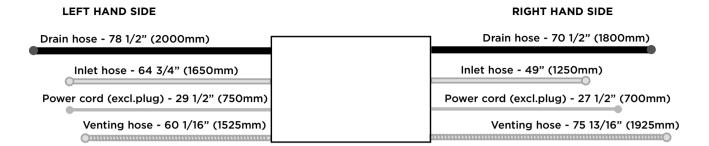


10 TALL HEIGHT INTEGRATED MODELS FOR 18 7/8" (480MM) CAVITY ONLY - ATTACH CAVITY BRACKET

IMPORTANT!


The enclosed cavity bracket is fitted before installation in order to conceal the gap at the top of the cavity left after installation.

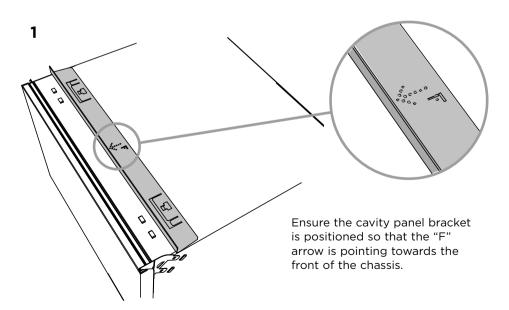

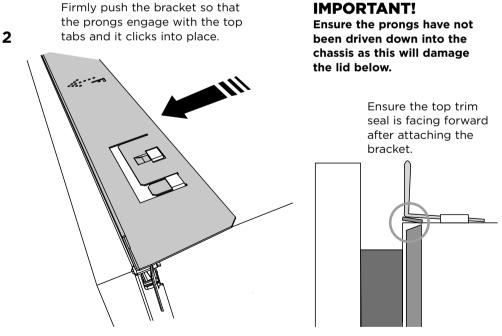

NOW CHOOSE WHICH INSTALLATION METHOD (A) OR (B) IS MORE SUITABLE FOR YOUR CABINETRY...

11 RECOMMENDED METHOD (A) - SECURE WITHOUT DRAWER REMOVAL (FRAMELESS CABINETRY ONLY)

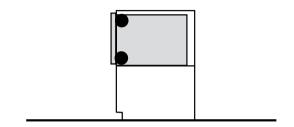


11)-(A) ATTACH SIDE MOUNTING BRACKETS

Clip all four side mounting brackets into their slots using a flat-bladed screwdriver. Ensure they're securely fitted before sliding product into cavity. The mounting slots are in pairs, one on each side diagonally across the product. A bracket must match A slot and B bracket must match B slot.


When fitting brackets, ensure the ends are not pushed down into

the chassis.

(12)-(A) ATTACH VENTING HOSE

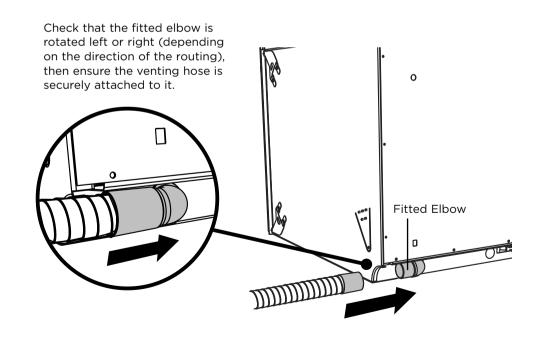



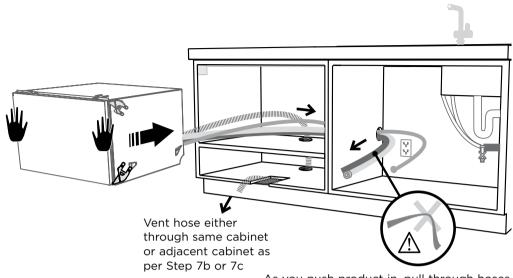



As you push product in, pull through hoses and cord, ensuring they don't get kinked or twisted.


IMPORTANT!

If product cannot be pushed in far enough, pull out again and rearrange hoses and cord. Do not use excessive force, as doing so may squash the hoses and lead to incorrect operation.

SECURE THE EXTERNAL VENT

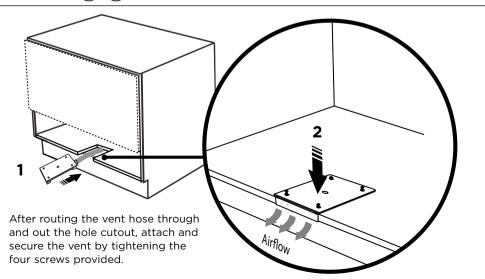


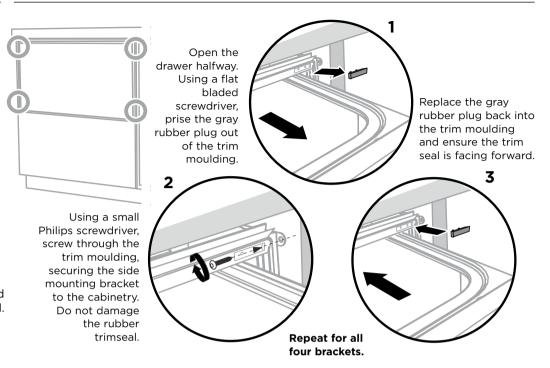


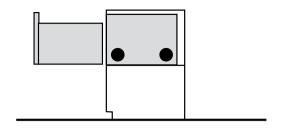

(1)-(A) ATTACH VENTING HOSE

(12)-(A) PULL THROUGH HOSES & MOVE INTO THE CAVITY

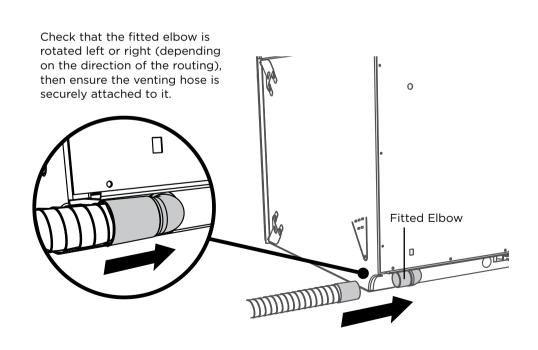

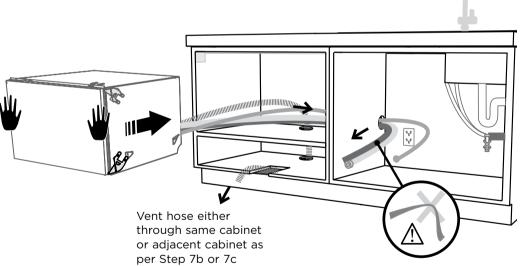

As you push product in, pull through hoses and cord, ensuring they don't get kinked or twisted.


IMPORTANT!


If product cannot be pushed in far enough, pull out again and rearrange hoses and cord. Do not use excessive force, as doing so may squash the hoses and lead to incorrect operation.

4" (100mm)


To prevent kinked hoses

Either sit the drawer down on the left hand side (recommended) or rotate the drawer clockwise, resting it on its side after removal.

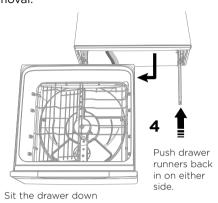

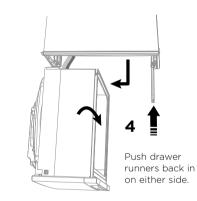

Rotate the drawer clockwise (max. 90°) and rest on side.

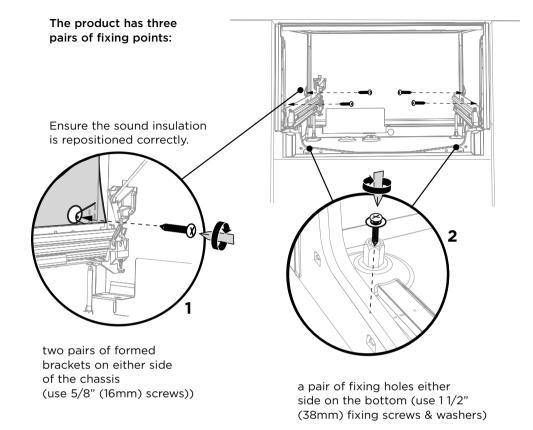


Lift drawer off runners.

Press the release tabs in on either side and push


back to release drawer

from runners.

(15)-(B) REFIT THE DRAWER ONTO THE RUNNERS

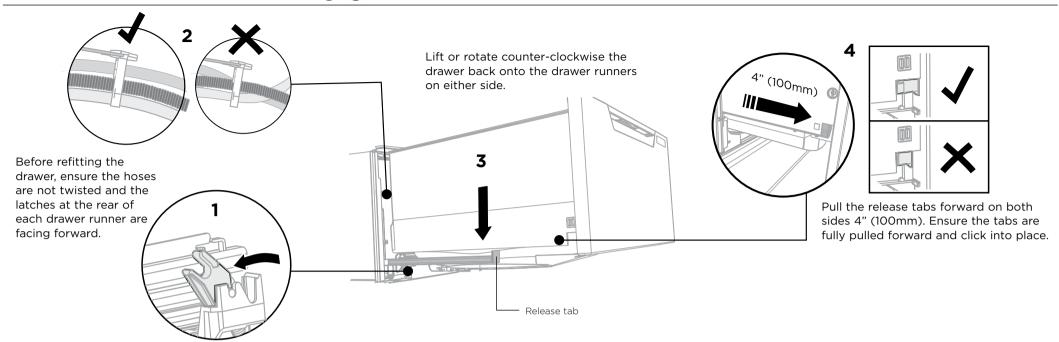

(16)-(B) SECURE THE EXTERNAL VENT

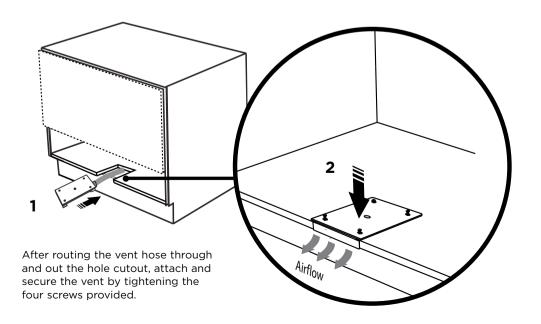


17)


(17)-(A) REMOVE PANEL BRACKET FROM PRODUCT

WARNING! Electrical Shock Hazard Before continuing, ensure that the product is disconnected from the power supply. Failure to follow this warning may result in electrical shock, injury or fire. Side Pin

Remove side pins and gently pull off the panel bracket slightly.

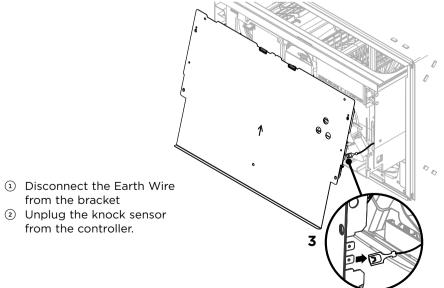

17-B REMOVE THE KNOCK-TO-PAUSE MODULE

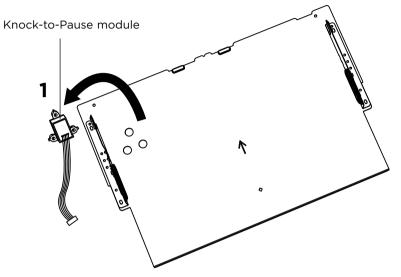



Remove the Knock-to-Pause module from the back of the bracket.

17)

17-C ATTACH CUSTOM PANELS TO PANEL BRACKETS



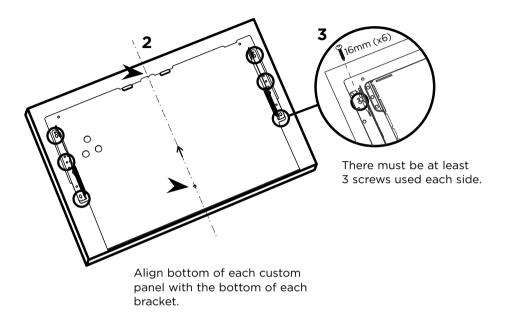


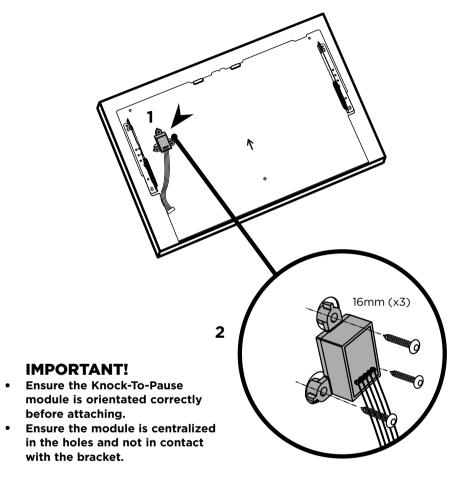


Attach the Knock-To-Pause module to the back of the custom panel through the 3 holes cut into the panel bracket as shown.

Use all 3 screws provided.

17-E CONNECT THE KNOCK-TO-PAUSE MODULE TO THE CONTROLLER

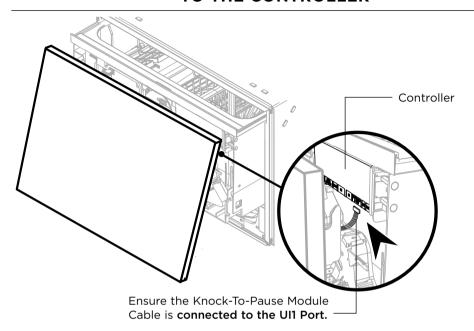

RECONNECT THE GROUND WIRE TO THE PANEL BRACKET

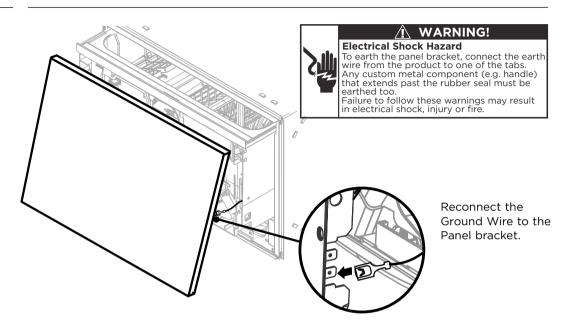

ATTACH CUSTOM PANEL TO PRODUCT

ADJUST CUSTOM PANEL HEIGHT TO ALIGN CABINETRY GAPS

IMPORTANT! Ensure the rubber seal between the drawer and panel is kept in place.

Side Pin

Push the Custom Panel on to the drawer and reinsert the side pins on each side.

> Each panel has a maximum travel of 1/16" (2mm) up or down.

Repeat on the other side if necessary.

With the front panels fitted, insert

side pin and rotate the panels up or


an appropriately sized Philips screwdriver into the hole above the

down to align the gaps


IMPORTANT!

in your cabinetry.

Ensure that you maintain a minimum of 1/16" (2mm) ventilation gap below the panel.

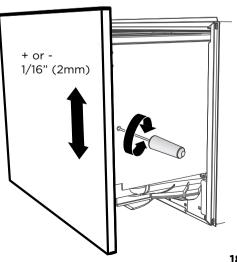


DRAINAGE OPTION 1 Dishwasher and Ø 1 1/2" (38 mm) Standpipe

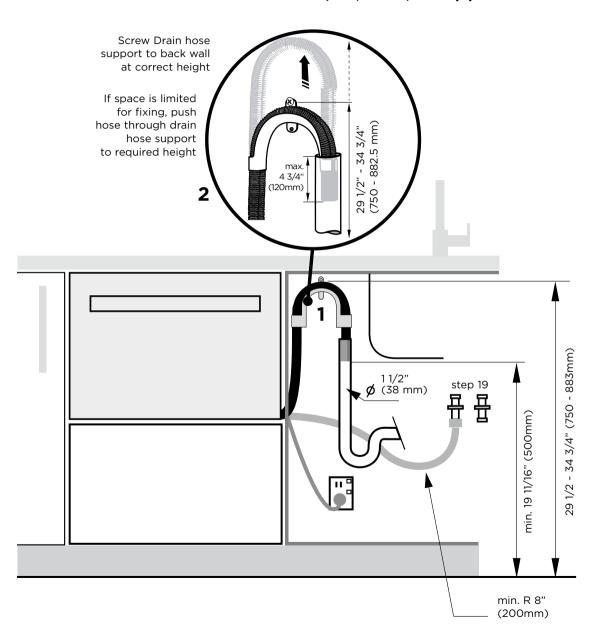

IMPORTANT!

Ensure that drain connection will comply with local plumbing regulations.


DRAINAGE OPTION 2 Dishwasher using Air Break with Drain Hose Joiner

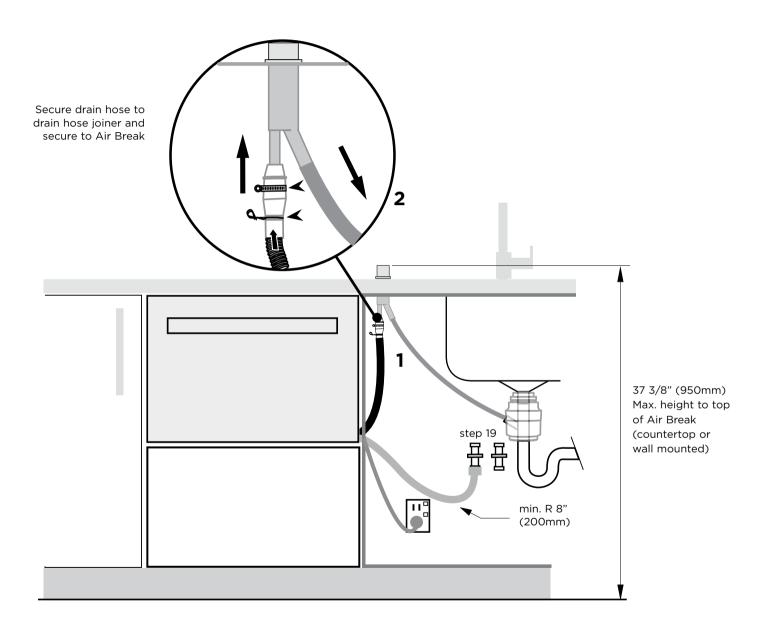

IMPORTANT!


Ensure that drain connection will comply with local plumbing regulations.

DRAINAGE OPTION 3 Dishwasher using drain hose joiner onto sink trap/waste tee

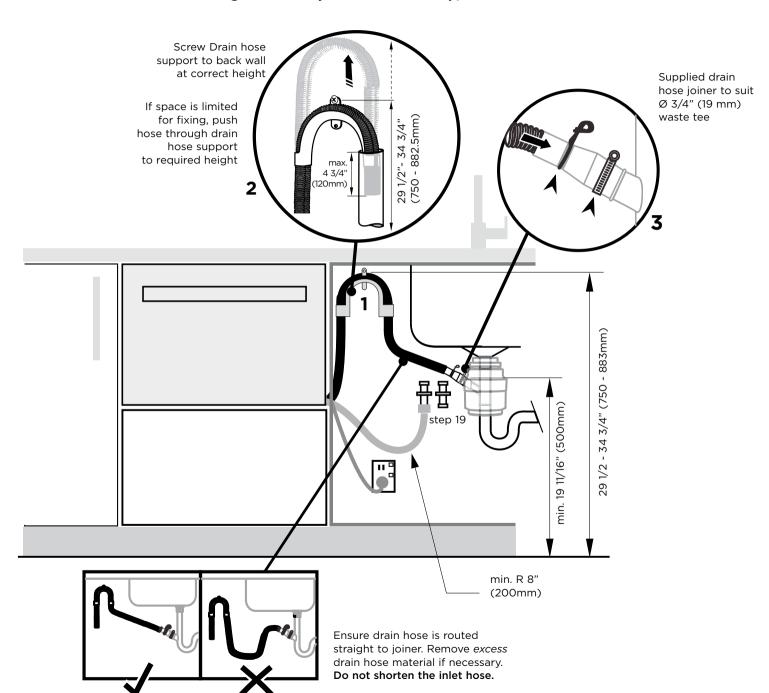

IMPORTANT!

Ensure that drain connection will comply with local plumbing regulations.

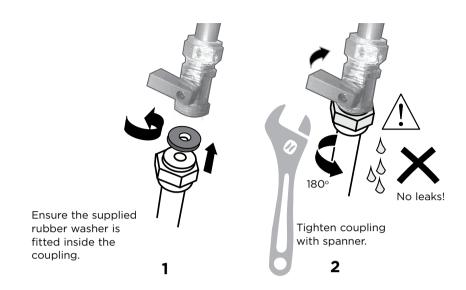



• Excessive water remaining above the filter plate, after the rinse cycle. (This is displayed as an A3 fault. See user guide 'How to attend to a fault')

Check for a kinked drain hose, blocked or incorrectly drilled out waste connection, highloop not properly installed, drain hose not routed correctly or spray arm not in place.

. No water supply. (This is displayed as an A1 fault. See user guide 'How to attend to a fault')

Check water is connected and turned on.

The dishwasher is beeping continuously

There is a fault. See section 'How to attend to a fault' in the User guide for further information and instructions.

No program indicator lights up when the drawer is opened

Ensure power is connected and is switched on. If it is and still no indicator ligths up, see the 'Preference options' section of the 'Quick start guide'. An option called 'Open drawer auto power-on' may need to be turned on.

Water around water supply and drainage connections

Check connections, existing plumbing and hoses for leaks. Check rubber washer and hose clamp are correctly fitted.

If product is tipping

Ensure the product is secured to the cabinetry.

Drawer doesn't close properly

Ensure nothing is obstructing the drawer from closing properly eg hoses or drawer latches.

- If a problem occurs, consult the 'Troubleshooting' section of the User guide.
- If after checking these points you still need assistance, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, or contact us through our website, listed below.

\checkmark	TO BE COMPLETED BY THE INSTALLER			
	Check all parts are installed.		Turn on the power and water supplies, then open the drawer. You should hear a beep and see a program indicator light up on the control panel.	
	Ensure that all panels and parts thereof are secure and final electrical tests have been conducted in accordance with local electrical regulations.		Check the spray arms are in place, mounted correctly and free to rotate, by physically rotating by hand.	
	Ensure product is level, securely fastened to the cabinetry and opens and closes freely. The drawers must be free to fully close with no resistance from the cabinetry.		Single Synamics	
	Ensure inlet hose to water supply has supplied rubber washer fitted, and that it's tightened a further half turn after seal contact.			
	Ensure any knockouts or plugs in drain connection have been drilled out and drain connection has been made.		Spray arm	
	The drain hose joiner must not support the weight of excess hose material. Keep drain hose as fully extended as possible to prevent sagging. Any excess length of drain hose should be kept on the dishwasher side of the highloop.			
	If connecting the drain hose to the sink trap, ensure the Highloop is a minimum 5 7/8" (150mm) higher than the drain hose joiner.		Add three cups of water into the drawer. Press \gg until the indicator of the 'Rinse program lights up. Close the drawer and press $\blacktriangleright II$ to start the program.	
	Ensure any packaging or tape securing the racks is removed from the drawers.		When the test cycle is in process check the knock sensor is working by knocking twice on the door to pause the wash program.	
	Water softener models only: adjust the water softener setting from the default setting to suit the water hardness of the area. See the Quick start guide and section 'Water softener' in the User guide.		After the Rinse program has finished, ensure the dishwasher has run and drained correctly.	
			Check the water supply has correctly shut off and drainage connection for leakag	
Complete and keep for safe reference:				
Model				
Serial	No			
Purch	ase Date			
Purchaser			FISHERPAYKEL.COM	
Dealer	r Address			
Installer's Name			Copyright © Fisher & Paykel Appliances 2017. All rights reserved.	
Installer's Signature			The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly	
Installation Company				

Installation Date

describes the product currently available.