



HEAT STORM

User manual

Models: HS-1500-SED-WI | A-1500-SED-WI

1500 W | Forced air

Quartz infrared element

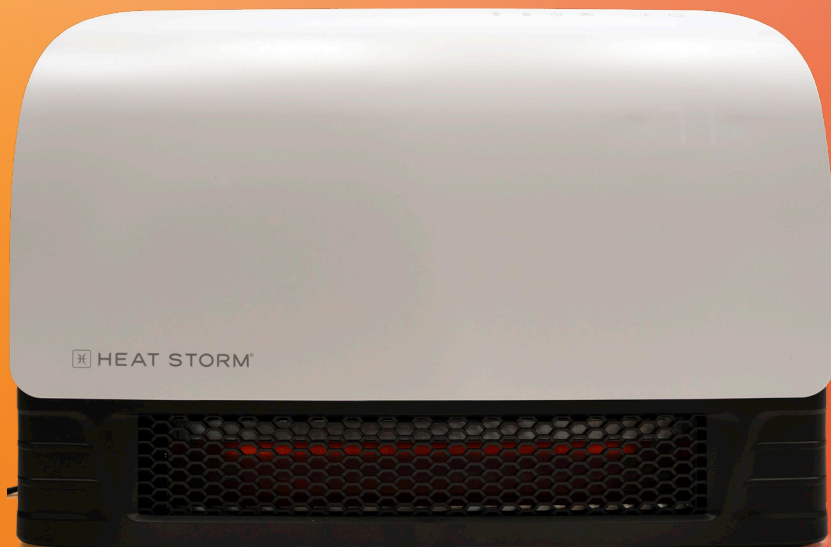


Table of contents:

English

Parts & specs	3
Important instructions	4
Installation instructions	5
Operations & controls	9
Connecting to Wi-Fi	12
Maintenance.....	14
Troubleshooting guide.....	16
Return policy.....	18
1-year limited warranty	18

Thank you and congratulations on your Heat Storm Infrared Heater!
Please read and keep all safety and use instructions. Should you have any questions or concerns, please don't hesitate to reach out to us at 435-752-6611 or cs@heatstorm.com.



Parts & specs

WHAT'S IN THE BOX



Sedona Wi-Fi heater




Remote



Mounting template



ST 4.0x25 screws
qty: 4



Wall anchors
qty: 4



M4x20 screws
qty: 2



Feet
qty: 2

SPECIFICATIONS	
Wattage: 1500	LxWxH: 19x4x13 inches
Amps: 12.5	Cord length: 73 inches
Voltage: 120	Heat settings: 2
Weight: 6.1 lbs	Heating: Forced air, Quartz infrared element

SAVE THESE INSTRUCTIONS

Important instructions

Please read and understand this entire manual before attempting to assemble, operate, or install the product. Use this heater only as described in the manual. If the directions are not followed, an electric shock or fire may result causing property damage, personal injury or death.

SAFETY GUIDELINES

- Adhere to basic precautions to minimize the risk of fire, electric shock, and injury when using electrical appliances.
- The heater becomes hot during operation; avoid direct contact with hot surfaces to prevent burns.
- Exercise extreme caution in the presence of children, individuals with reduced capabilities, or when the appliance is unattended. Children should not play with the appliance.
- Individuals with reduced capabilities should not operate the appliance without supervision or proper instruction.
- Unplug the heater when not in use. To disconnect, turn controls off, wait for the fan to stop, and then remove the plug.
- The heater includes a thermostat limiter. If the inner temperature overheats or abnormal heating occurs, power will be cut off to prevent the risk of fire or heater damage.

WARNING

- For any maintenance other than filter maintenance, please contact an authorized service representative.
- Risk of fire — keep electrical cords, drapery, furnishings, and other combustibles at least 3 feet (0.9 m) from the front of the heater and away from the side and rear. To reduce the risk of fire, do not store or use gasoline or other flammable vapors and liquids in the vicinity of the heater.
- Heat Storm Infrared Heaters are considered to be an appliance. Each heater and appliance should be on its own circuit.
- DO NOT operate if the following occurs:
 - » Heater has a damaged cord or plug.
 - » After the heater malfunctions.
 - » Heater has been dropped or damaged in any manner.Turn off the heater, disconnect the cord, and have heater inspected/serviced by an electrician before reusing or discard the heater.

CAUTION

- To prevent electric shock, match the wide blade of the plug to the wide slot and fully insert.
- Do not insert foreign objects into ventilation or exhaust openings to prevent electric shock, fire, or heater damage.
- Do not block air intakes or exhaust.
- Under no circumstances should this heater be modified. Modifications will void the warranty. Parts removed for servicing must be replaced prior to operation.
- Do not move the heater while it is operating. Turn off the heater, wait for the fan to stop completely, and then relocate.
- Plug the heater directly into a wall outlet; do not use extension cords, surge protectors, or relocatable power taps. This heater is designed for standard 120-volt, 2-prong polarized outlets.
- Ensure the cord is not under carpeting, covered with rugs, runners, or similar coverings. Avoid routing it under furniture or appliances and position it away from high-traffic areas to prevent tripping hazards.
- If the supply cord is damaged, it must be replaced by the manufacture, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not use in the following areas: outdoors, closets, or locations with gasoline, paint, or flammable liquids.

Installation instructions

HEATER LOCATION

Ensure proper installation before use. Choose a location following general instructions and avoid direct sunlight. It is not recommended to move a heater while it is operating. Turn off the heater, wait for the fan to stop completely, and then relocate.

Basement or garage use

The heater can be utilized in a finished basement with drywall and carpet. For other scenarios, consider Heat Storm Outdoor Infrared Heaters. Visit heatstorm.com for details.

Vaulted or cathedral ceilings

The heater can be used with vaulted or cathedral ceilings. However, initial room heating may take longer. Once the desired temperature is reached, the heater will cycle accordingly.

Poorly insulated areas

Note that rooms with poor insulation may not retain heat efficiently, potentially leading to longer or more frequent operation.

Cold climate installation note

Placing the unit under a window or on a poorly insulated wall may result in the heater reading a colder ambient temperature than the actual room temperature.

Heating multiple rooms

Effectiveness depends on floor plan openness and room sizes. Experiment to find the most suitable configuration.

NOTE: Designed for supplemental heating in spaces from 150 to 750 square feet.

DO NOT USE in the following areas:

- Outdoors - use Heat Storm Outdoor Infrared Heaters
- Locations with gasoline, paint, or flammable liquids
- Closets

MULTIPLE APPLIANCES

Heat Storm Infrared Heaters are considered to be an appliance. Each heater and appliance should be on its own circuit.

If debating between one or two heaters, we recommend the second for efficient operation, longer element lifespan, power savings, and faster room warming.

POWER CONNECTION GUIDELINES:

Plug the heater directly into a wall outlet; do not use extension cords, surge protectors, or relocatable power taps. This heater is designed for standard 120-volt outlets and should only be connected to a proper 2-prong polarized outlet.

Ensure the cord is not under carpeting, covered with rugs, runners, or similar coverings. Avoid routing it under furniture or appliances and position it away from high-traffic areas to prevent tripping hazards.



CAUTION — RISK OF FIRE!

Keep electrical cords, drapery, furnishings, and other combustibles at least 3 feet (0.9 m) from the front of the heater and away from the side and rear. To reduce the risk of fire, do not store or use gasoline or other flammable vapors and liquids in the vicinity of the heater.


TOOLS NEEDED FOR INSTALLATION

- 3/16" drill bit
- Philips screwdriver

Missing parts? Email us at cs@heatstorm.com



STEP 1: FEET INSTALLATION (REQUIRED)

Attach the two feet to the bottom of the heater using the provided M4x20 screws. Once the feet are securely attached, you can either use it as is or proceed with wall installation.

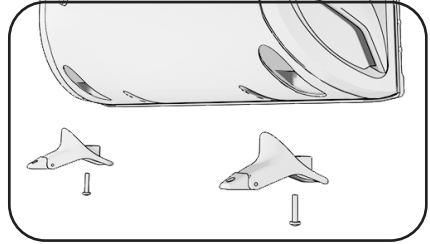



STEP 2: WALL INSTALLATION (OPTIONAL)

- 1 Select a suitable wall for your heater, ensuring there is at least a 4½-inch clearance between the heater and the nearby walls, ceiling, and floor. Additionally, place the heater in a location where the cord can reach an outlet for power.

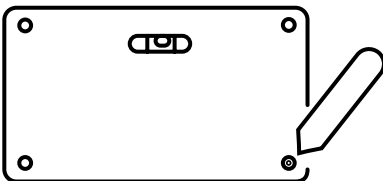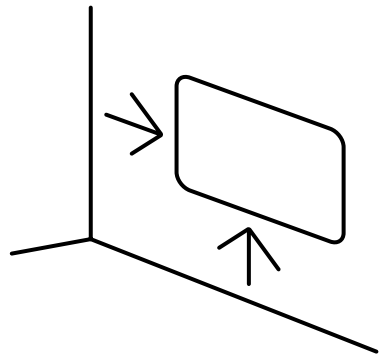



- 2 Use the drilling guide and a pencil to MARK the guide holes.

- 3** Drill holes using the 3/16" drill bit and insert the drywall anchors into the holes.

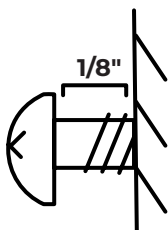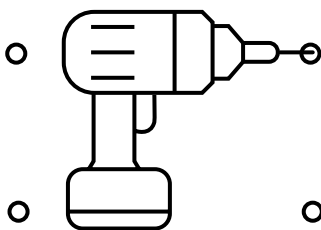

- 4** Begin by inserting the top two screws, leaving a 1/8" gap to the wall.

- 5** Hang the heater onto the top two screws.

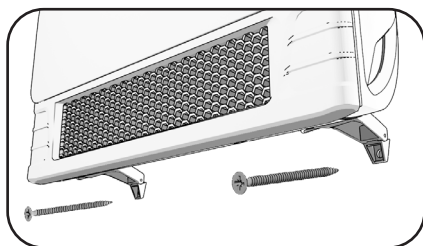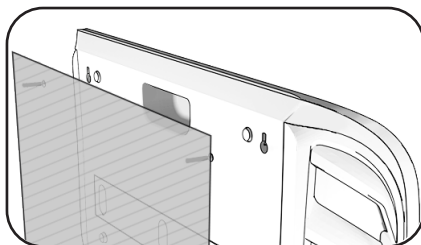

- 6** Finally, screw in the remaining two screws into the bottom base anchor holes to securely mount the heater onto the wall.

Operations & controls



Turn heater on/off

Tap the power icon to alternate between on and off.

Factory reset

Power off heater and allow time for elements to cool. Unplug and plug in heater. Within 1 minute of plugging in heater, press and hold on/off icon for 10 seconds to reset the heater to factory settings.



Timer

Set the heater run time by tapping on the timer icon and use the plus and minus icons to change the time (hour increments). The time will display on the front of the unit. After the set run time is over, the heater will automatically turn off.



Setting the temperature

The default temperature for the heater is 70 °F or 21 °C. Pressing the + or - icons enters temperature setting mode, where the thermostat can be adjusted by 1 °F or 1 °C. The display exits this mode after 5 seconds of inactivity, showing the current ambient temperature.

NOTE: After the heater function or power is turned off, the blower will continue for several minutes to cool internal components.

Selecting Celsius & Fahrenheit

Press the + and - icons at the same time to switch between Celsius and Fahrenheit.

NOTE: Switching between Celsius and Fahrenheit can only be performed using the control panel on the heater, and is not available using the remote control.



Child lock

Press and hold the lock icon for 3 seconds to engage/disengage child lock. While the child lock is activated (indicated by a red light), no changes can be made to the settings until the child lock is deactivated.

NOTE: The child lock feature can only be activated using the control panel on the heater; it is not accessible through the remote control.



Change working mode (low/med/high)

Tap the fan icon to switch between working modes. The indicator light above the icon will show the selected mode:

- **Low Mode (Green Light):** Runs at 50% power, reducing energy use. Ideal for small spaces or preventing breaker trips.
- **High Mode (Red Light):** Runs at 100% power for maximum output.
- **Auto (eco) Mode (White Light, Heat Mode Only):** Runs at full power until the room is within 2°F of the set temperature, then switches to 50% power to maintain warmth efficiently. *(Eco mode is not available in fan-only mode.)*

NOTE:

- *The fan may turn on and off periodically to sense changes in room temperature.*
- *In Low and High modes, the heater reaches the set temperature, allows a 2-degree cooling period, then reheats as needed.*
- *Eco mode adjusts power levels automatically for consistent temperature control.*



Fan only/heat mode

Press and hold the fan icon for three seconds to toggle between fan only and heat mode. The indicator light inside the fan icon will change color based off the selected mode.

- **Fan only mode (blue light):** Circulates air without heating. (Low and High working modes still apply.)
- **Heat mode (red light):** Activates heating functions. (All working modes available.)



Display

Tap on the sun/Wi-Fi icon to turn the display lights off.

Wi-Fi discovery mode

Press and hold the sun/Wi-Fi icon for 5 seconds to enable the Wi-Fi discovery mode (will blink blue). Refer to page 12 for guidance on connecting to Wi-Fi. The blinking blue light will turn to a solid blue once Wi-Fi is connected.



Sound


Tap on the volume/thermometer icon to alternate between sound on/off.

Pair external thermometer

Press and hold the volume/thermometer icon for 5 seconds to pair the Heatstorm External Thermometer. The light will start to blink red to show it is in discovery mode. Next, press and hold the button on the back of the external thermometer for 5 seconds until you hear a beep. The volume/thermometer indicator light will glow red once the thermostat has been successfully paired.

REMOTE CONTROL

The remote will function the same as the buttons on your unit. If you have any questions on how a function works, please refer to the previous control descriptions.

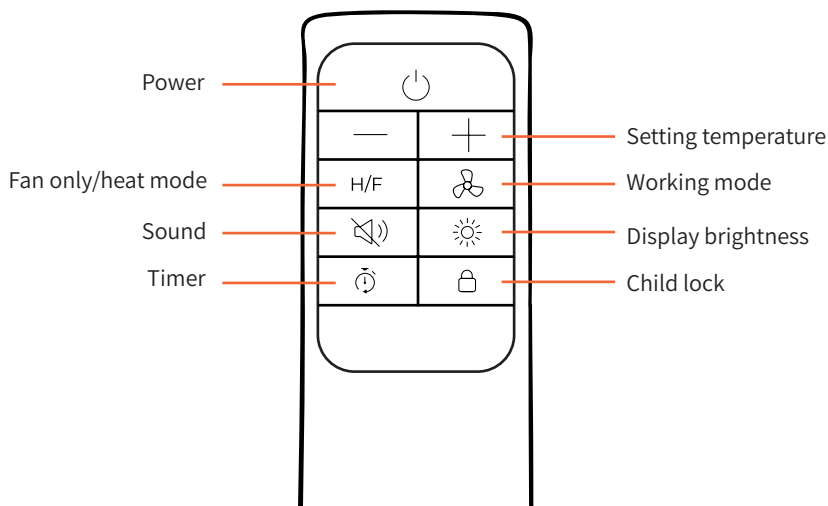

Wi-Fi® setup



SMART LIFE APP

Manage your Heat Storm Smart Heater conveniently anytime and anywhere you desire. With just a tap of your finger, you can adjust temperatures, create schedules, set a child lock, and ensure warmth according to your preferences.

Prepare your phone

Enable Wi-Fi and *Bluetooth*® on your phone. Connect to your phone to a 2.4 GHz Wi-Fi network. Your phone needs to be connected to the same Wi-Fi that you want to connect your heater to.

NOTE: for some dual band routers, you may need to manually create a network dedicated to 2.4 GHz.

Download the Smart Life App

Download the app by scanning the QR code or search for Smart Life in the App Store or on Google Play. Once the app is downloaded, sign up, and agree to the User Agreement and Privacy Policy.



Register with your email, set your password, and create a new home in the Smart Life app.

CONNECT YOUR HEATER TO WI-FI

The Smart Life app offers multiple methods for Wi-Fi setup. If one method fails, don't worry—simply move on to the next one.

It's essential to note that the app might undergo updates over time. As a result, the app prompts you encounter may differ slightly from the manual. For the most accurate and up-to-date guidance, follow the prompts within the app.

NEED HELP?

Visit heatstorm.com/wifi for video tutorials and helpful tips.

EASY CONNECT

**Ensure your phone's Wi-Fi, Bluetooth®, and location functions are all activated.*

1 Add device

When the machine is on, press and hold the Wi-Fi/sun button on the control panel for 5 seconds until the Wi-Fi indicator light begins flashing slowly. Add the appliance in the app:

- i. If a pop-up is displayed, tap "go to add". If you don't get a pop-up, tap the plus icon in the top right corner. Select "add device."
- ii. Choose "small home appliance," then find "heater (BLE) .

2 Choose Wi-Fi

Enter your case-sensitive Wi-Fi network name and password, then tap "confirm." Press "next" if prompted to reset the heater.

3 Configuration process

Wait for the connection to be completed. Please be patient, as this may take a few minutes. The app will notify you that the device was successfully added. Select "done" to enter the control interface.

MANUAL CONNECT

1 Add device

- i. When the machine is on, press and hold the Wi-Fi/sun button on the control panel for 5 seconds until the Wi-Fi indicator light begins flashing.
- ii. In the app, tap the plus icon in the top right corner.
- iii. Select "add device." Choose "small home appliance."
- iv. Tap "heater (Wi-Fi)."

2 Choose Wi-Fi

Enter your case-sensitive Wi-Fi network name and password, then tap "confirm." Press "next" if it is asking you to reset your heater.

3 Configuration mode

Confirm the Wi-Fi indicator light on control panel is flashing quickly and select "blinking quickly" within the app. Then click on "finish network configuration".

4 Configuration process

Wait for the connection to be completed. Please be patient, as this may take a few minutes. The app will notify you that the device was successfully added. Select "done" to enter the control interface.

Maintenance

WASHABLE LIFETIME FILTER SYSTEM

Heat Storm Infrared Heaters feature a user-friendly, washable lifetime filter. It is advised to clean the filter monthly or as necessary. You can clean the filters with tap water or a vacuum using the following instructions:

Vacuum method

Gently pass the vacuum wand over the filter cover. Do not remove the cover or the filter when cleaning your heater with the vacuum.

Water method

1. Locate the two filters on your unit (one on each side).
2. Press both tabs to remove the filter cover and remove the filter, noting which side of the filter receives air flow into the heater.
3. Once removed, run warm tap water over the filter, the opposite direction of air flow, until water runs clear. The filter might excrete some residue, so be cautious not to drip on any stainable surfaces such as carpeting. You can also soak the filter in water mixed with a small amount of mild dish soap (remember to rinse well with clean water after soaking filter).
4. Shake the filter over a sink until excess water is removed and allow it to drip dry completely before reinstalling.
 - DO NOT force or attempt to speed the filter drying process by using any alternative methods.
 - ENSURE that the filter is completely dry before reinstalling.
5. Reinstall the filter and replace cover.



WARNING

For any maintenance other than filter maintenance, please contact an authorized service representative.

HEATER MALFUNCTION OR DAMAGE

DO NOT operate if the following occurs:

- Heater has a damaged cord or plug.
- After the heater malfunctions.
- Heater has been dropped or damaged in any manner.

Turn off the heater, disconnect the cord, and have heater inspected by an electrician before reusing.

Discard heater, or return to an authorized service facility for examination and/or repair.

Damaged cord or plug

If the supply cord is damaged, it must be replaced by the manufacture, its service agent, or similarly qualified persons in order to avoid a hazard.

QUARTZ ELEMENT REPLACEMENT

The quartz elements are replaceable by an authorized service dealer.

REMOTE CONTROL BATTERY REPLACEMENT

WARNING: Improper use may cause battery leakage, rupture, or fire, resulting in injury or damage. Always follow safety guidelines and proper disposal methods. Keep batteries away from children.

- Only use AAA batteries.
- Ensure batteries are installed correctly, observing the correct polarity (+ and -).
- Replace all batteries in a device simultaneously, ensuring not to mix old and new batteries, or different types of batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid mixing different battery types, such as alkaline, carbon-zinc, lithium, or rechargeable (e.g., Nickel-Cadmium).
- Keep batteries out of reach of children and do not ingest. Batteries are small parts and pose a choking hazard.
- Remove batteries from the device if it will not be used for an extended period, or if they are depleted.
- Clean battery contacts before installing new batteries.
- Dispose of used batteries promptly and responsibly, following local regulations and recycling guidelines, which can be found online or in your local phone directory.
- Do not dispose of batteries in fire, as they may explode or leak.

Troubleshooting guide

FAN

Not blowing air

When powering the heater ON, it does not blow any air at first. The initial 15 seconds allow the infrared elements to heat up, ensuring that when the fan turns on, warm air is circulated into the room.

Not blowing warm air

- Ensure the air inlets are not blocked and the air filters are clean. If the filters are dirty, clean them (page 14).
- The room temperature is higher than the thermostat setting.
- There is something blocking the air flow. Move the object out of the way of the heater. This is common if the heater is in a closet or under a desk.

Continuing to blow air when heater is turned off

This is the cool down phase. The heater will run for several minutes (up to 12) to cool the internal components. This increases the lifespan of the infrared elements. If the heater did not finish the cooling procedure when it was unplugged, the fan will blow immediately when the heater is powered back on.

Fan runs for under a minute and then turns off

The fan may turn on periodically to circulate air and detect changes in the room temperature.

Heater fails to reach the set temperature and continues to run.

If your heater is running continuously but not reaching the set temperature, consider the following factors:

1. Ensure clean filters.
2. Address drafty or poorly insulated rooms.
3. Keep doors closed for efficient heating.
4. Place the heater on an interior wall, away from windows.
5. Placing the heater near objects can impede air circulation in the room, resulting in uneven temperatures within the same space.
6. If issues persist, consider the heater's size suitability for the room. Optimal for spaces between 150-750 sq. ft., with primary heating around 150 sq. ft. *(Square footage may vary based on home insulation.)*

Once you have accessed your situation, unplug the heater from the outlet for 2 hours then reconnect. If the issue persists, contact Heat Storm customer service at 435-752-6611 for further assistance.

THERMOSTAT

Ambient temperature reading of the heater different then the reading on my central heating thermostat.

All thermostats vary in their temperature setting. In most cases, the central heating thermostat is not as accurate as your Heat Storm thermostat. The location of the temperature censor can also alter the thermostat reading.

You can calibrate your heater's thermostat to better match your central heating thermostat in the Smart Life app.

BURNING PLASTIC SMELL

A light plastic odor is normal for new, unused heaters. If the smell persists for more than a couple of hours, call customer service at 435-752-6611.

ERROR CODES

EE : Temperature sensor (probe) error, when this code shows, the heating element and fan are turned off. Unplug heater and check if the temperature sensor is loose, disconnected, or damaged.

EO : Program setup failure. Unplug and plug in again. If error persists, the PCBA needs to be replaced.

EL: Tip-over error. The heater and fan are turned off. Reactivate by pressing the on/off icon after repositioning the heater upright.

UH: Incorrect high voltage power supply error. Unplug heater immediately. Attempt plugging the heater into a different outlet and ensure it is the sole major appliance on the circuit.

LO: The temperature is less than 16° F (-9 °C)

HI: The temperature is greater than 99° F (37°C)

- Unplug the heater for 2 hours, then plug the heater back in.
- Perform a factory reset (refer to page 9). If the issue persists, contact customer service at 435-752-6611.

Returns & exchanges

30 DAY RETURN POLICY

Heaters purchased directly from EnergyWise Solutions can receive a refund of the total sales amount if the following conditions are met within 30 days:

1. Product is in new condition.
2. Product is packed in the original manufacturers box and packing material.
3. Original manuals and accessories are included in package.

EXCHANGES & WARRANTY

After 30 days from the purchase date, the buyer is responsible for all freight/shipping charges associated with exchanges, refunds, or warranty claims for the purchased product.

SHIPPING & FEES

- Return shipping is the customer's responsibility.
- Original shipping charges and handling fees will be deducted from the refund.
- A 20% restocking fee applies for returns beyond 30 days.

1-year limited warranty

The manufacturer warrants this product and included accessories against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser.

EXCLUSIONS AND LIMITATIONS

1. Install and operate the electric heater strictly in accordance with the provided instructions at all times. Unauthorized repairs, alterations, willful abuse, accidents, or misuse of the product will void this warranty.
2. This warranty is exclusive to the original owner, valid only if the purchase was made through an authorized supplier of the product, and is non-transferable.
3. The warranty is limited to repairing or replacing defective parts in material or workmanship. This applies only if the said part(s) have been exposed to normal conditions of use and service, confirmed by the manufacturer's inspection.

4. The manufacturer may, at its discretion, fulfill warranty obligations by refunding the wholesale price of the defective part(s).
5. Costs related to installation, labor, construction, transportation, or any other associated expenses arising from defective part(s), repair, replacement, or otherwise, are not covered by this warranty. The manufacturer disclaims responsibility for such costs.
6. The owner/user assumes all risks, including any direct, indirect, or consequential loss or damage resulting from product use, except as mandated by law.
7. All other warranties, whether expressed or implied, pertaining to the product, its components, accessories, or any manufacturer obligations/liabilities, are expressly excluded. The manufacturer neither assumes nor authorizes any third party to assume additional liabilities related to the product sale.
8. The manufacturer neither assumes nor authorizes any third party to assume on its behalf, any other liabilities with respect to the sale of the product.
9. The warranties as outlined in this document do not apply to non-accessories used in conjunction with the installation of this product.
10. Specific legal rights provided; additional rights may vary by state. Warranty void if prolonged exposure to dampness, unauthorized alteration, willful abuse, accident, misuse, or lack of original purchase receipt.

WARRANTY REDEMPTION

Reach out to Heat Storm customer service at 435-752-6611 during the warranty period. Please have your sales receipt, purchase location, and product model information ready. Troubleshooting support will be offered over the phone. If the issue persists, you may be requested to email proof of purchase and a photo of the manufacturer sticker to cs@heatstorm.com.

Replacement parts:

In some cases, we may send you a replacement part along with repair instructions. This is classified as an authorized repair and does not void your warranty.

Unit repairs:

If the situation warrants, we will have you send the defective product to us for inspection. Our technicians will repair the product or provide a new unit if your heater is deemed irreparable. For units beyond the 30-day return policy, shipping costs are the consumers responsibility. If interested in our discounted shipping rates, kindly inform your customer service representative.



Need help?

435-752-6611

cs@heatstorm.com

heatstorm.com