


CRAFTSMAN®

INSTRUCTION MANUAL

Storage Shed

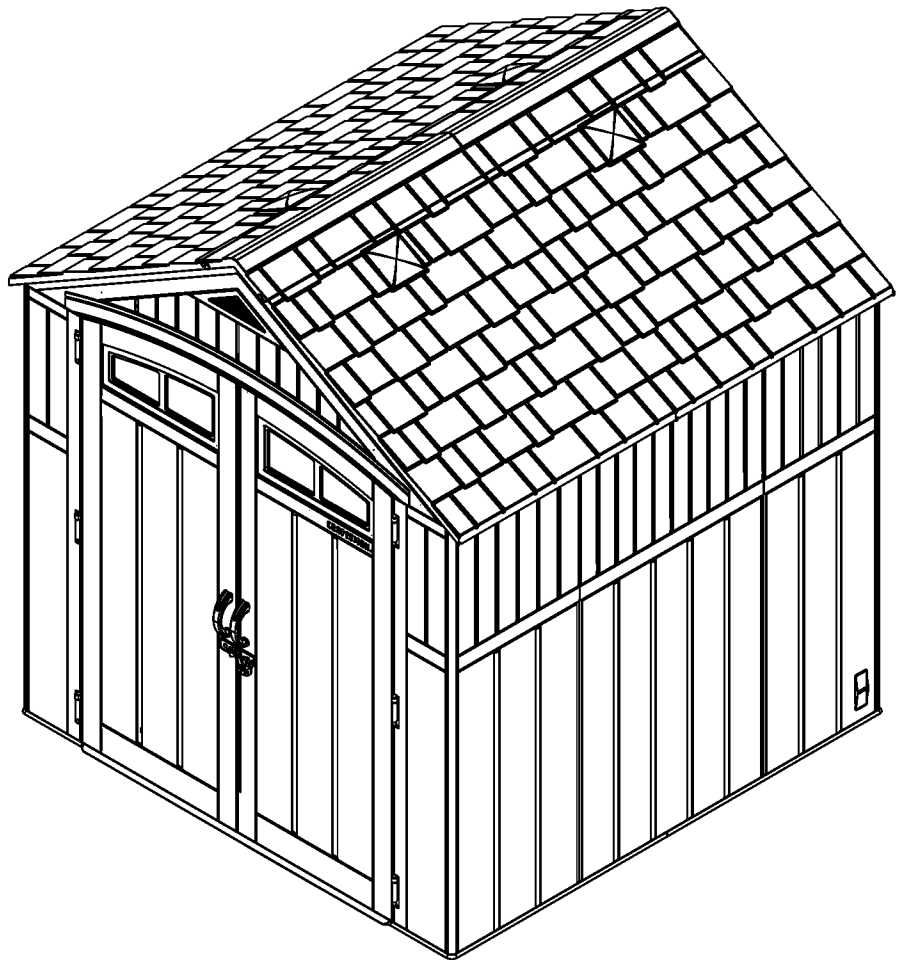

Model CMXRSSC7750



IF YOU HAVE QUESTIONS OR COMMENTS, CONTACT US.

1-888-331-4569

WWW.CRAFTSMAN.COM

0361533E

English	1
Français	31
Español	62

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.



DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.



WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.



NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.



(Used without word): Indicates a safety related message.

Power Door Installation



WARNING:


- Consult your local authorities for building code requirements.
- Power should only be supplied to shed temporarily by an extension cord. This product is NOT intended for permanent electrical installation.
- The extension cord must be connected **INSIDE** the shed.
- It is recommended that the extension cord be rated at 20A @ 120V with ground, using 14AWG minimum wire size, and be rated for outdoor use.
- The extension cord must be connected to a grounded outlet.
- Adhere to manufacturer's requirements for ventilation, flame retardancy and other safety concerns when using these or similar products in or near your shed: paint, glue, chemicals, flammables, electrical appliances, heat sources, etc.
- Electrical equipment should NOT be left unattended.



WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

SAVE THESE INSTRUCTIONS

Before You Begin

- Consult your local authorities for any permits required to construct shed. Prior to the construction of your shed, check with the local building code official to review any required permits or building limitations.
- A level and sturdy foundation is required before shed construction can begin. Site preparation information is available on pages 10-11. A foundation that differs from the suggestions within this manual could prevent proper assembly and may damage parts.
- Read instructions thoroughly prior to assembly. This kit contains parts that can be damaged if assembled incorrectly or in the wrong sequence.
- Please follow instructions. Manufacturer is not responsible for replacing parts lost or damaged due to incorrect assembly.
- Assistance is required during entire assembly. 
- **IMPORTANT - OPEN ALL BOXES FIRST AND NEATLY LAY OUT PARTS. SMALL PARTS MAY BE CONTAINED IN EACH BOX. PLEASE REFERENCE PARTS LIST WITHIN THIS MANUAL TO VERIFY ALL PARTS ARE PRESENT.**
- **COMPLETE SITE PREPARATION AND FOUNDATION CONSTRUCTION BEFORE UNPACKING ALL PARTS.**



CAUTION:

- Proper site preparation required.
- Shed not intended for use in extreme weather conditions.
- Shed not intended for storage of flammable or caustic chemicals.
- Store heavy items near the bottom of shed.
- Shed not intended for use by children.
- **DO NOT** stand, sit, or store items on storage shed roof.
- Treat shed carefully in extreme temperatures.
- Repair or replace broken parts immediately.
- Manufacturer not responsible for damage caused by weather or misuse.
- At regular intervals, inspect your shed to make sure that assembly integrity has been maintained.
- Periodically check that the location you have chosen to set your shed is still level.
- This kit contains parts with metal edges. Please be careful when handling.
- If shed is empty and outdoors, place weight inside on floor to prevent tipping in high winds.

Replacement Parts

- To purchase replacement parts, call 888-331-4569.

Shed Safety and Care


- Hot items, such as recently used grills, blowtorches, etc., must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause panel distortion and permanent damage.
- Keep roof clean of snow and leaves.
- The shed walls and roof sections have a textured exterior, much like vinyl home siding. Over time, dust may accumulate in the texture. When combined with moisture, this could encourage the growth of moss or mold on the shed. To maintain the look of your shed, we recommend cleaning it each year with mild soap and water. **DO NOT** use bleach, ammonia, or other caustic cleaners, and **DO NOT** use stiff bristle brushes. Failure to perform annual cleaning could result in permanent staining of the plastic. This is not a manufacturing defect and is not covered under warranty.

Assembly Day Tips


- Complete site preparation and foundation construction before unpacking parts and beginning assembly.
- **DO NOT** attempt to assemble on a day with strong winds.
- **DO NOT** attempt to assemble on days when temperature is below 32 degrees Fahrenheit.
- Set aside appropriate amount of time to completely assemble shed.
- Make sure you have assistance nearby to lift and secure parts in place.
- Wear light duty work gloves while assembling shed.
- Once roof is assembled, a flashlight may be of use when assembling smaller components inside shed.
- Manufacturer provides extra hardware for small fasteners for customer convenience. In some cases, there will be extra small fasteners once the assembly is complete.

Note: This product contains parts that are used in different orientations to construct the shed. Please take note of the orientation of the parts shown throughout this instruction manual. Failure to follow instructions could result in damage to parts. Craftsman is not responsible for replacing parts lost or damaged due to incorrect assembly.

Tools Needed for Installation

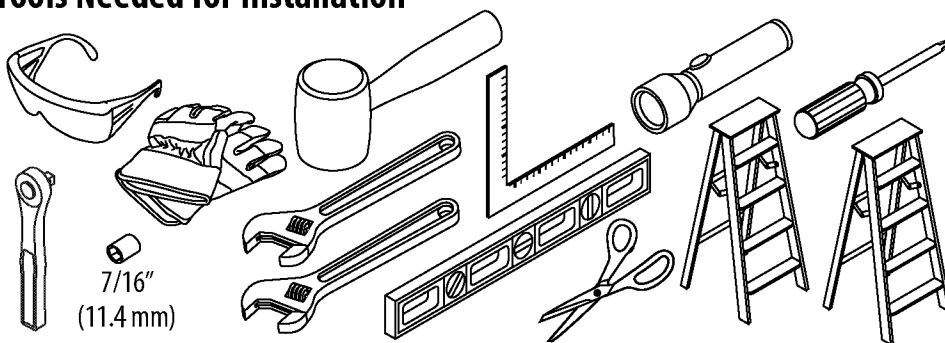

INCLUDED IN KIT

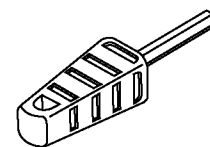


Easy Bolt Easy Driver
010210410

Parts CMXRSSC7750 – Wall and Floor


IMPORTANT

OPEN ALL BOXES FIRST AND NEATLY LAY OUT PARTS. SMALL PARTS MAY BE CONTAINED IN EACH BOX. PLEASE REFERENCE PARTS LIST WITHIN THIS MANUAL TO VERIFY ALL PARTS ARE PRESENT.


COMPLETE SITE PREPARATION AND FOUNDATION CONSTRUCTION BEFORE UNPACKING ALL PARTS.

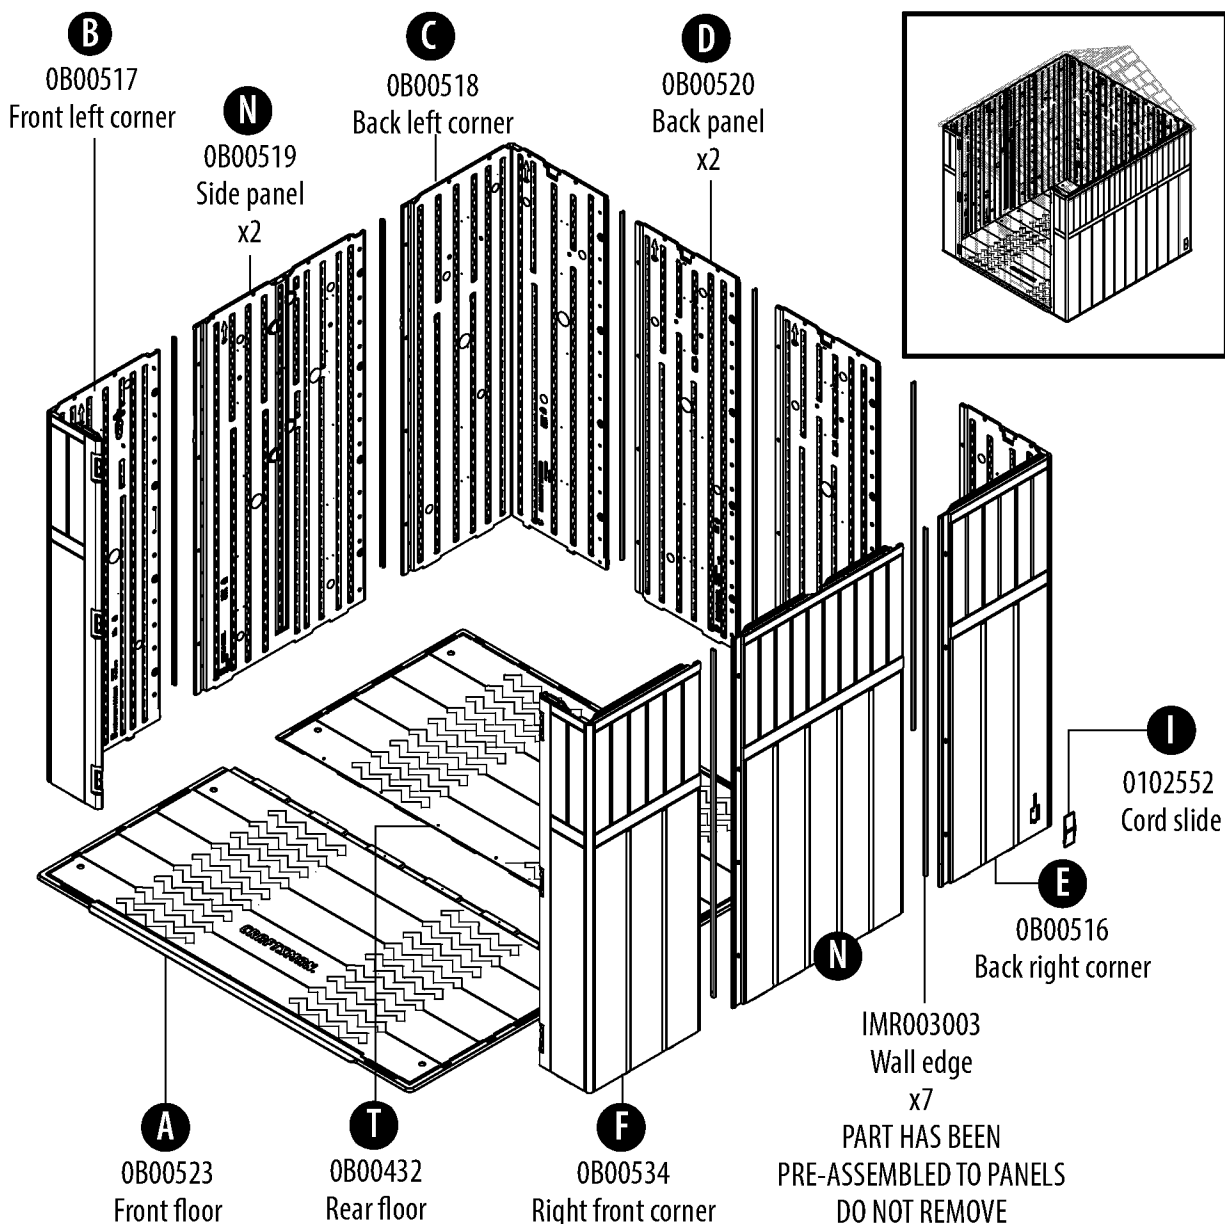


Parts CMXRSSC7750 – Doors

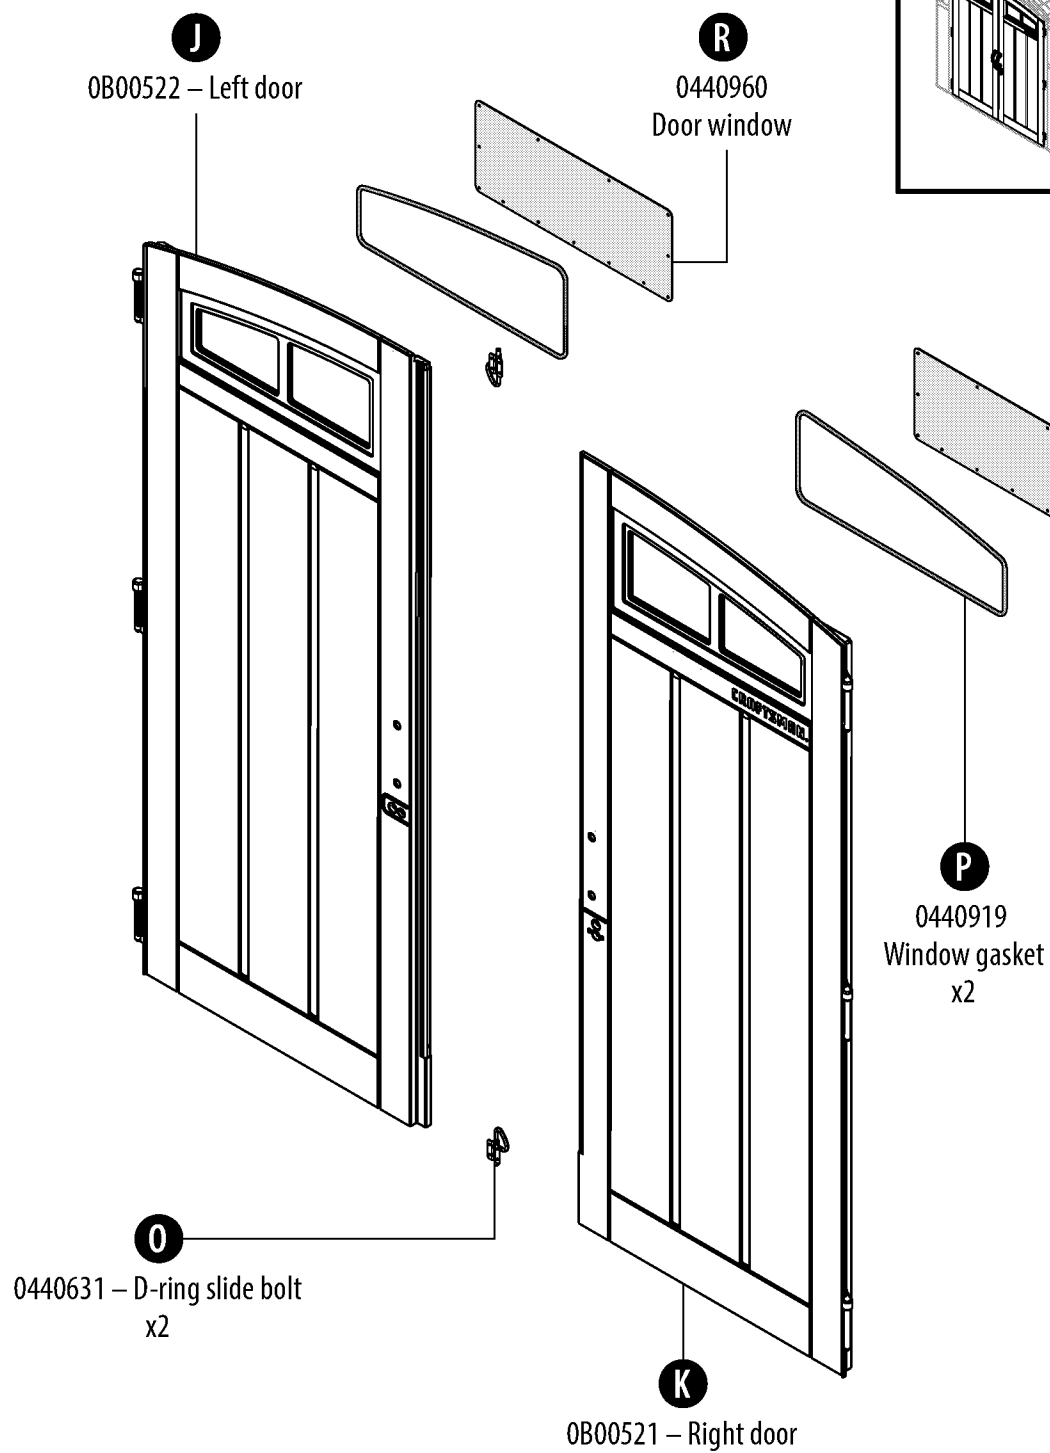



Parts CMXRSSC7750 – Headers

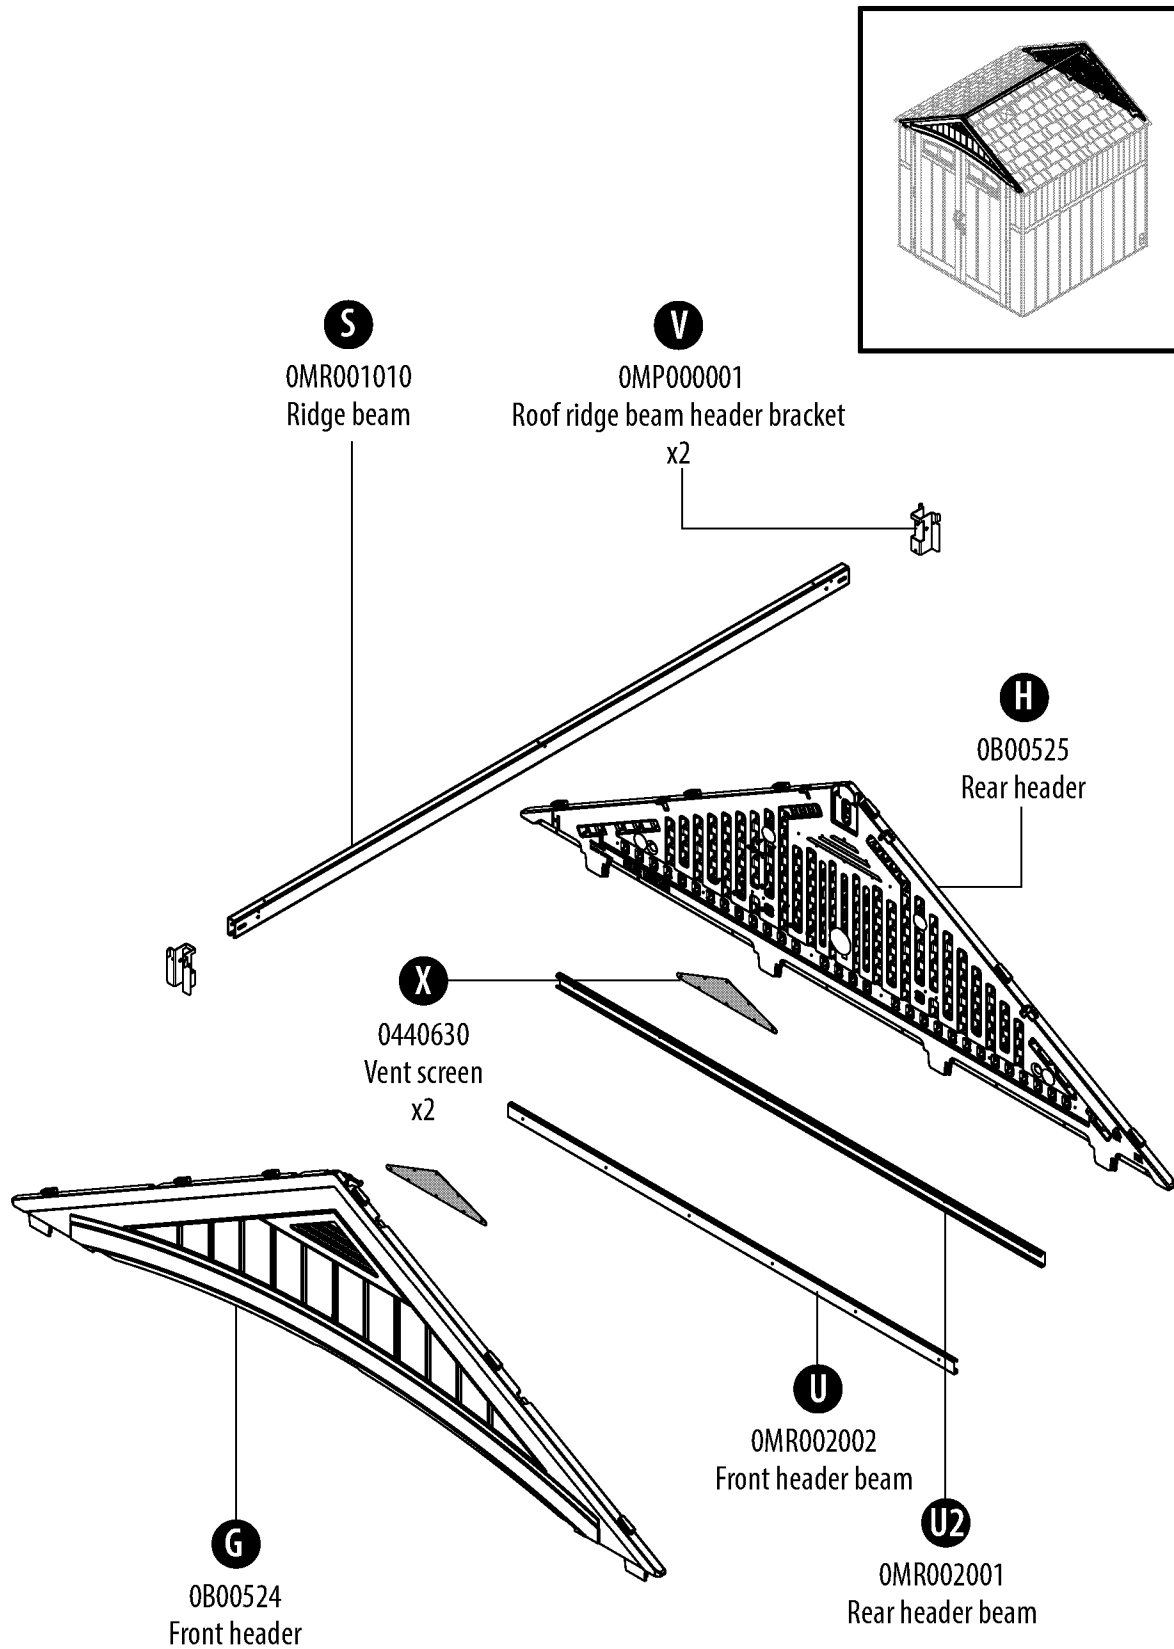


Parts CMXRSSC7750 – Roof Truss

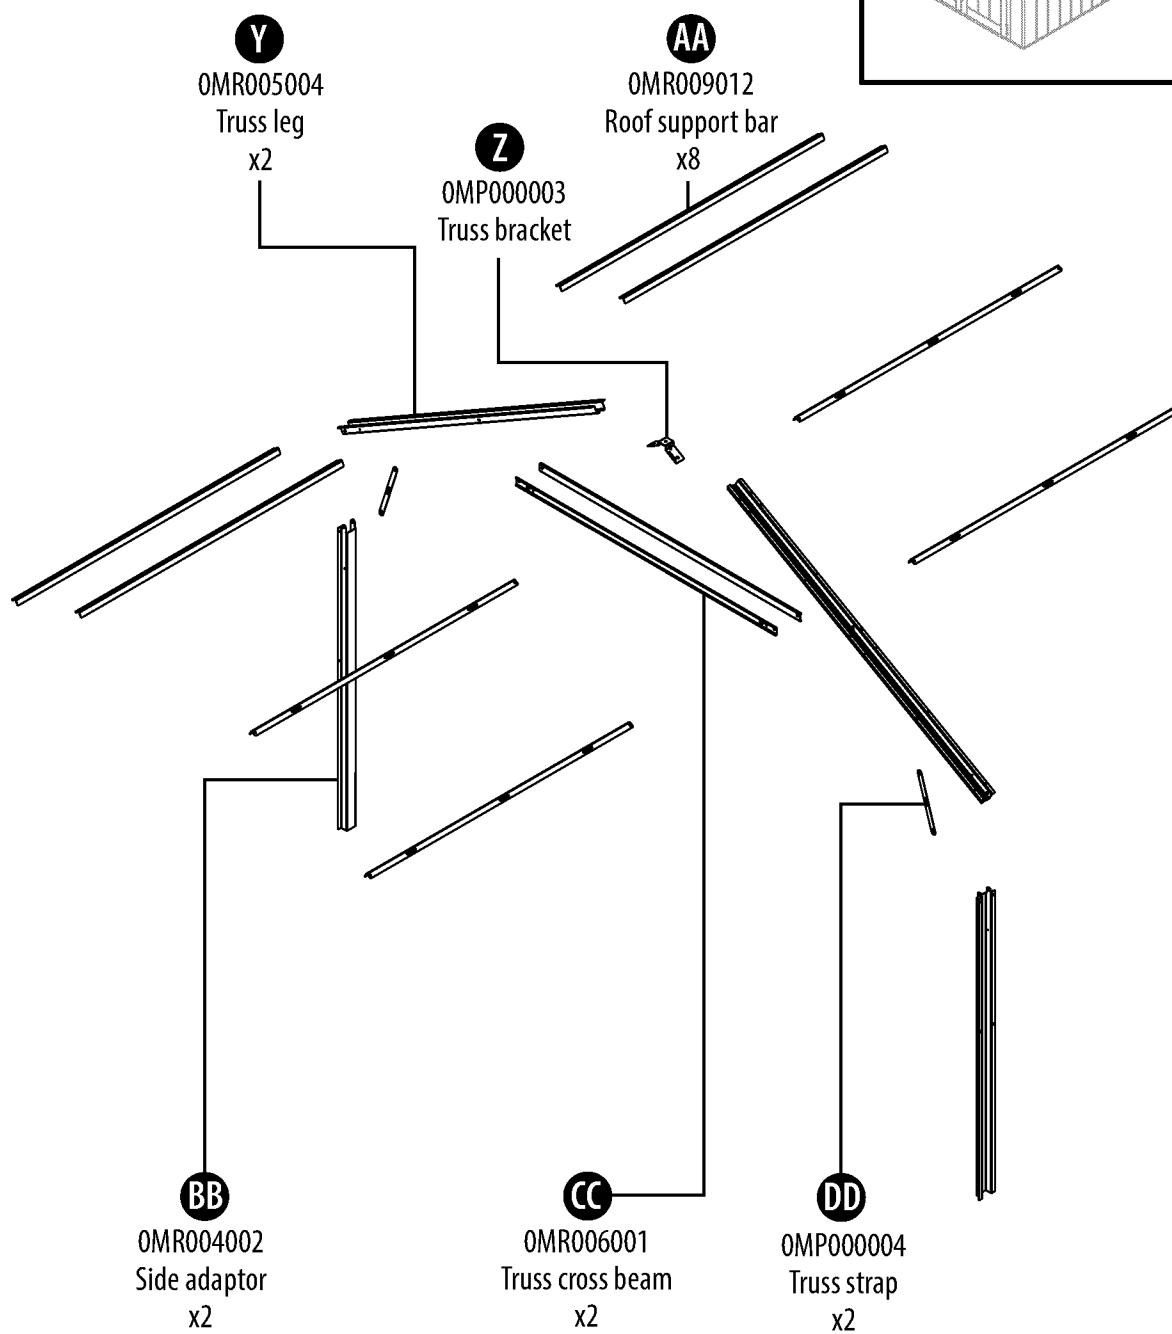

Parts CMXRSSC7750 – Roof

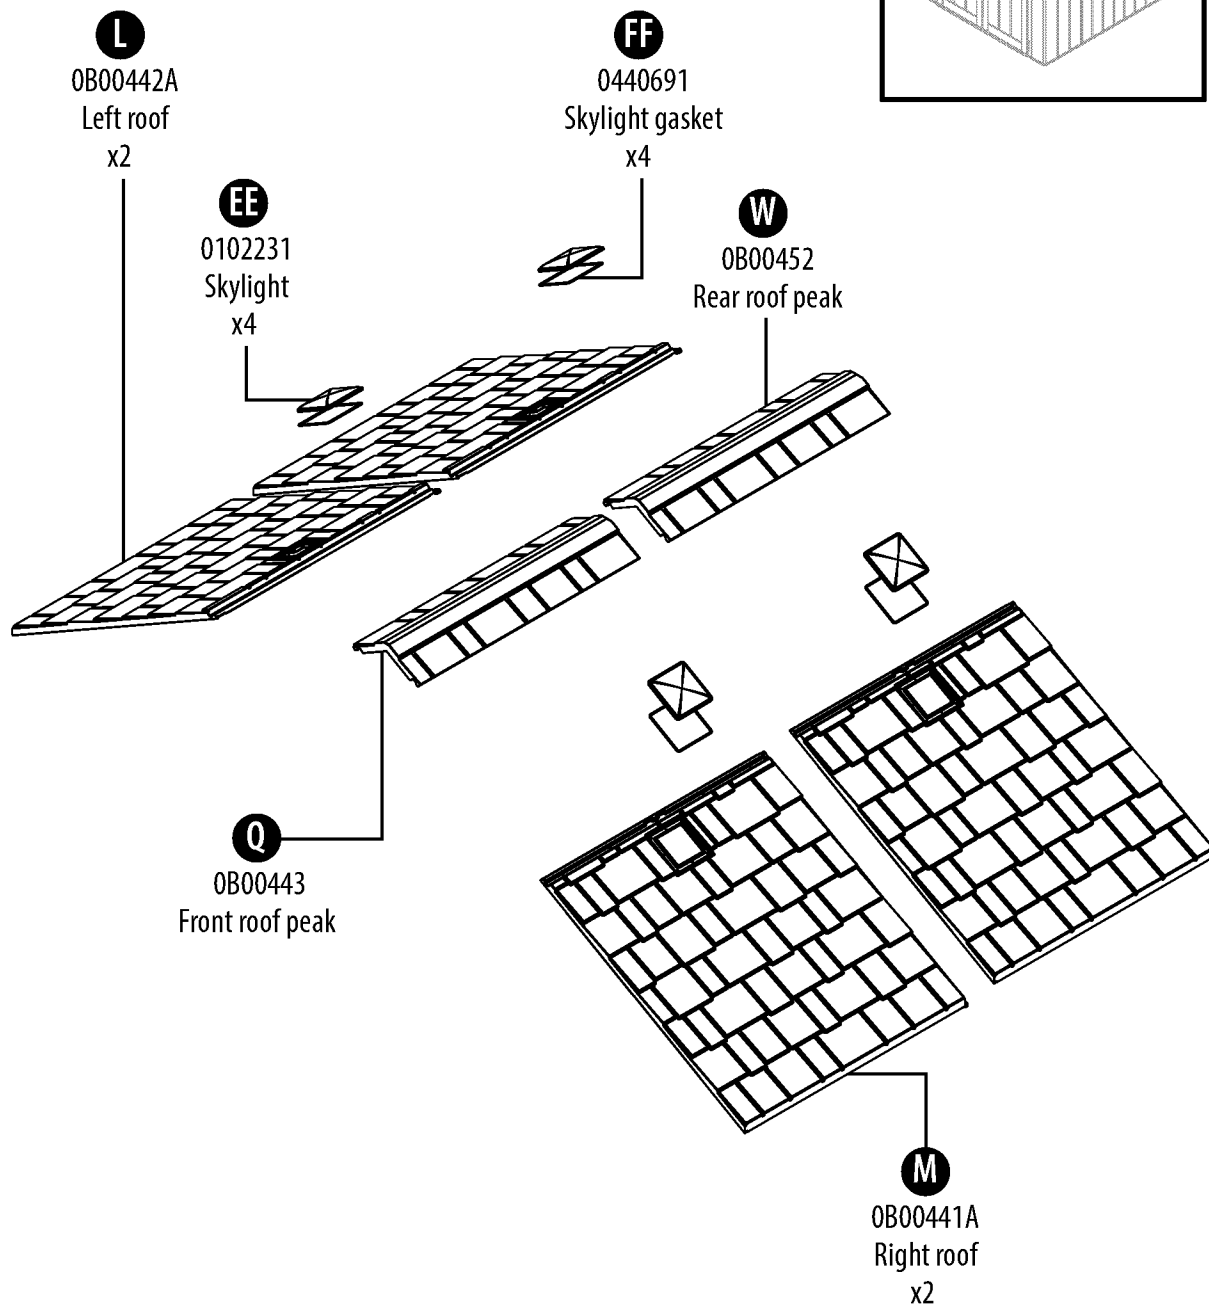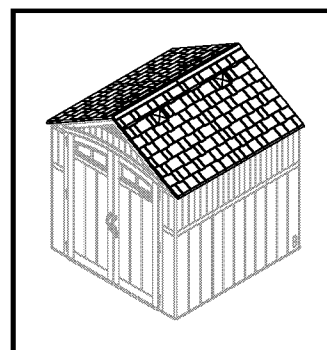


Parts CMXRSSC7750 – Hardware

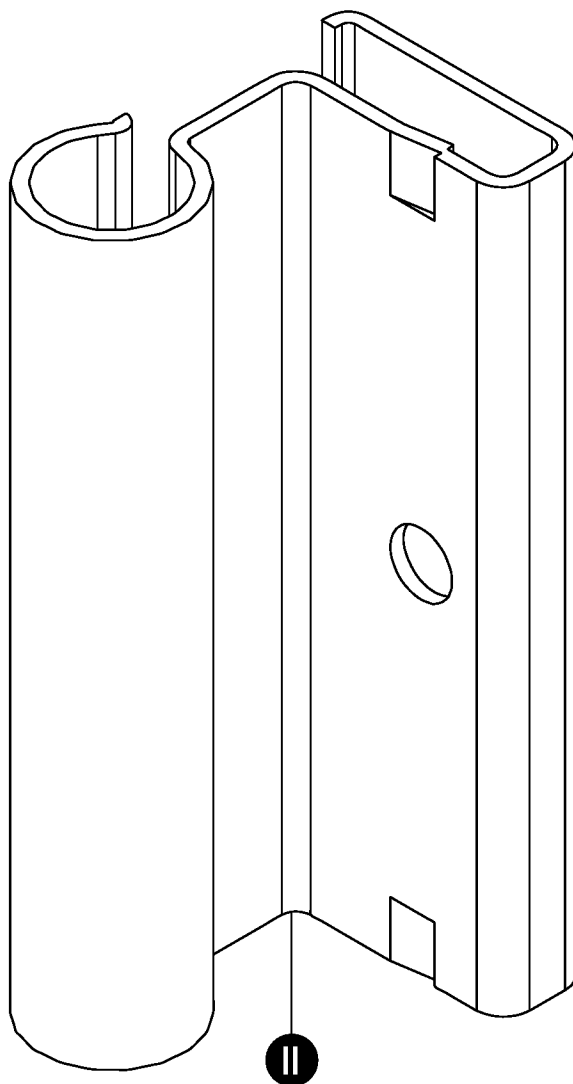


OMP000002 – Metal hinge plate
x6


0480340 – Hardware bag

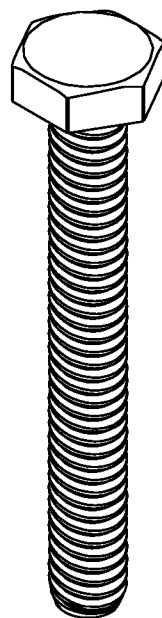

JJ
.25" x 2" Hex bolt
x4

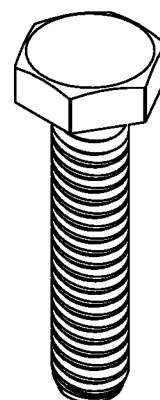


KK
.25 - 20 x 1" Hex bolt
x2

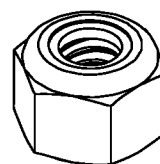


LL
.25" Locking nut
x6

0480375 – Hardware bag

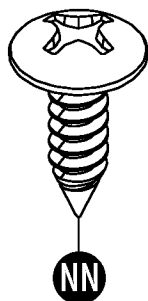


NN
.625" Screw
x210

0480337 – Hardware bag

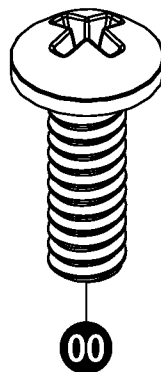


OO
.25" x .75" Screw
x6

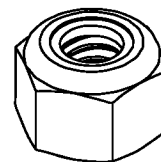

PP
.25" Locking nut
x6


Parts CMXRSSC7750 – Hardware

0480471 – Hardware bag

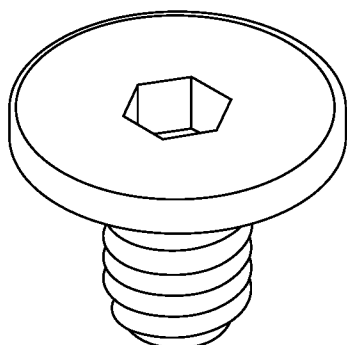

RR


Easy bolt 7/8"
x28

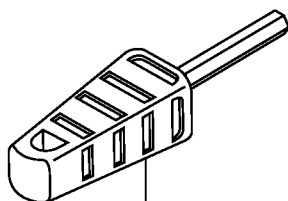

SS

*Easy bolt easy driver


0480452 – Hardware bag



DDD


.625" Pan head
screw
x8

0480438 – Hardware bag

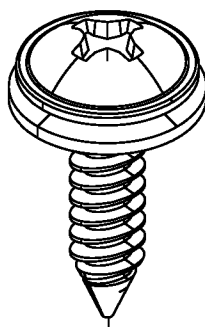

TT


#10 x .75" Screw w/ washer
x22

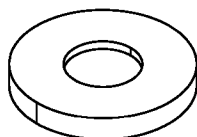

UU


#10 Rubber sealing washer
x22

0480472 – Hardware bag

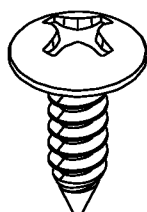

NN


.625" Screw
x1

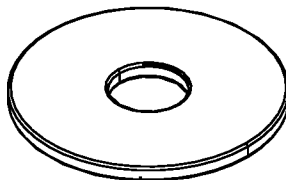

QQ

.25" Washer
x1

0480374 – Hardware bag

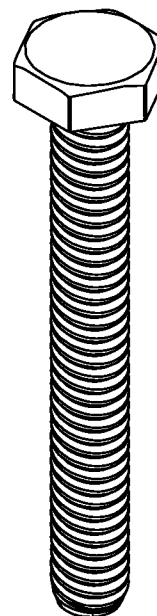

JJ

.25" x 2" Hex bolt
x2





LL


.25" Locking nut
x2

Parts CMXRSSC7750 – Door Handle Kit Parts


0463795 – Door handle kit

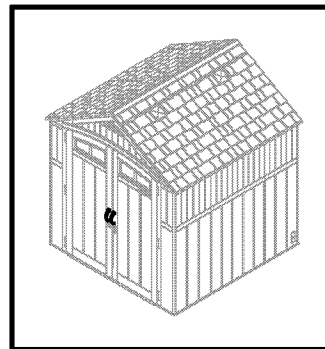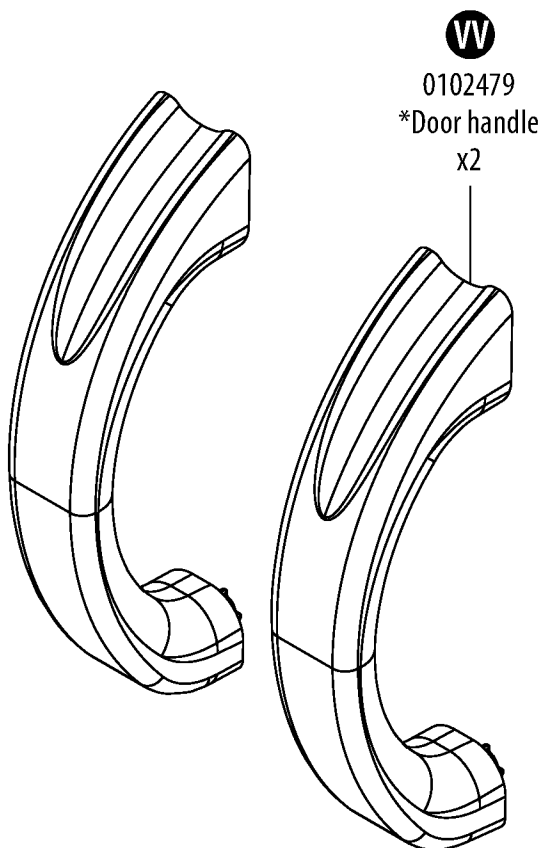


0463797 – Door latch kit

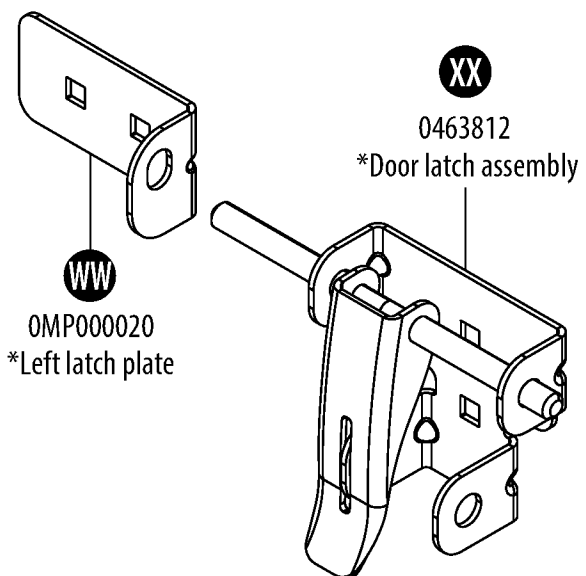

0480370 – Door handle hardware

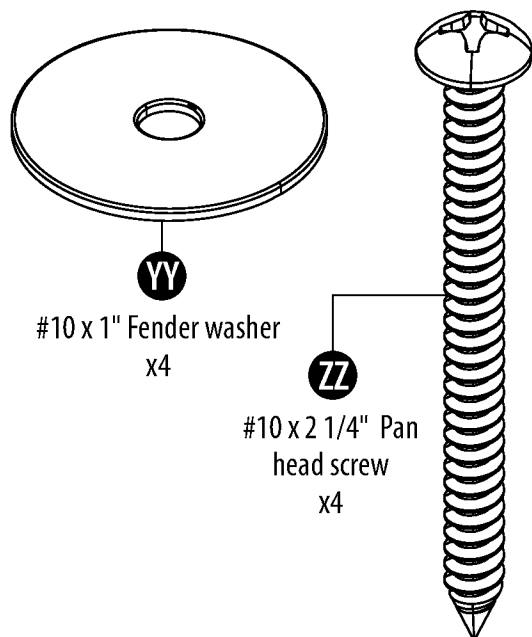

0480439 – Door latch hardware

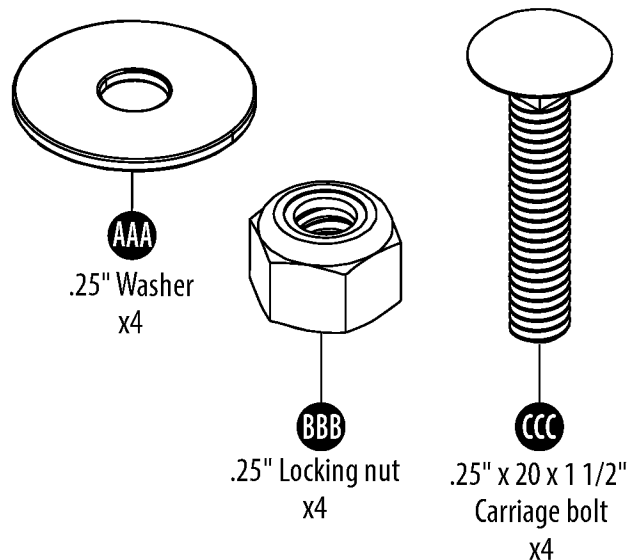

Site Preparation and Platform Construction

Materials NOT supplied with CMXRSSC7750 Shed Kit.

Note: Site preparation is required for this shed. Placing the shed on a constructed foundation is required. Without a constructed foundation, settling will probably occur, causing distortion and damage to the shed. Manufacturer is not responsible for replacing parts damaged or property lost due to incorrect assembly. Warranty requires foundation.

Note: Complete the site preparation and foundation construction before unpacking parts and beginning assembly.

To prepare your shed site, follow the steps below:


- 1 Consult your local authorities for building codes and covenants before beginning foundation or erecting shed.
- 2 Before any digging, check with local utilities to determine location of buried cables, pipes, etc.
- 3 Decide which type of foundation you want:
 - Concrete slab, 4" thick

OR

 - Wood platform


Use exterior grade wood. Consult your local retailer for help to determine the best anchoring method for your particular installation. The provided plans are sized for the minimum number of cuts to lumber and plywood.
- 4 Prepare the building site:
 - The ground should slope away from the foundation area to provide drainage.
 - The foundation surface must be flat and level.
 - A vapor barrier should be provided to prevent excessive condensation in the shed.
 - Follow local building codes for a proper vapor barrier.
- 5 Anchoring the shed to the foundation:
 - Consult your local retailer for help to determine the best anchoring method for your particular installation.
 - To secure the shed to a concrete slab, use four (4) 3/8" x 3" anchor bolts and four (4) 3/8" x 1" flat washers
 - To secure the shed to a wood platform, use 3/8" x 3" lag bolts and 3/8" x 1" flat washers.

Anchoring floor panel to concrete slab

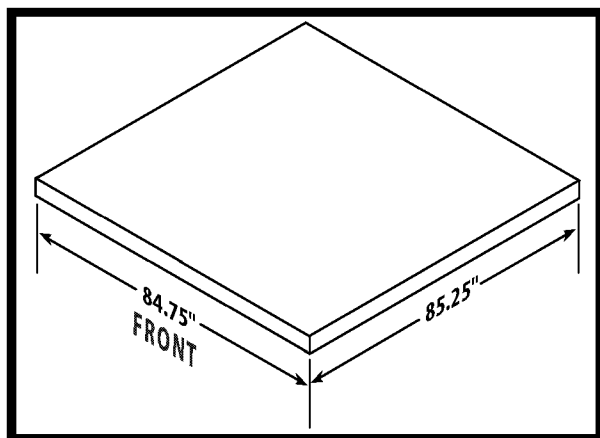

- Secure shed to concrete slab using masonry fasteners.
- Dimensions allow for shed to fit within the nearest 1" on each side.

Anchoring floor panel to wood platform

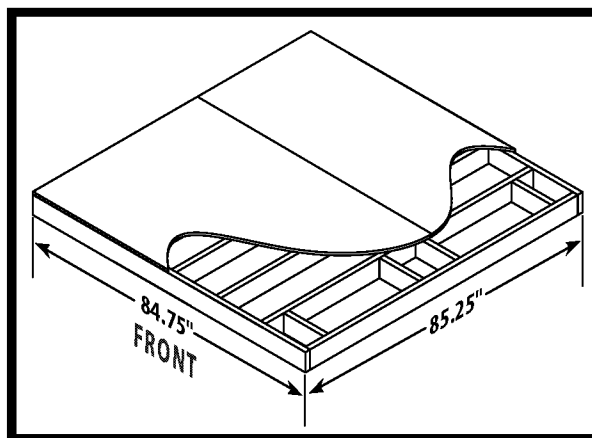


- Secure shed to wood platform using 3/8" x 3" lag screws.


Site Preparation and Platform Construction

Materials NOT supplied with CMXRSSC7750 Shed Kit.

Wood platform critical spacing

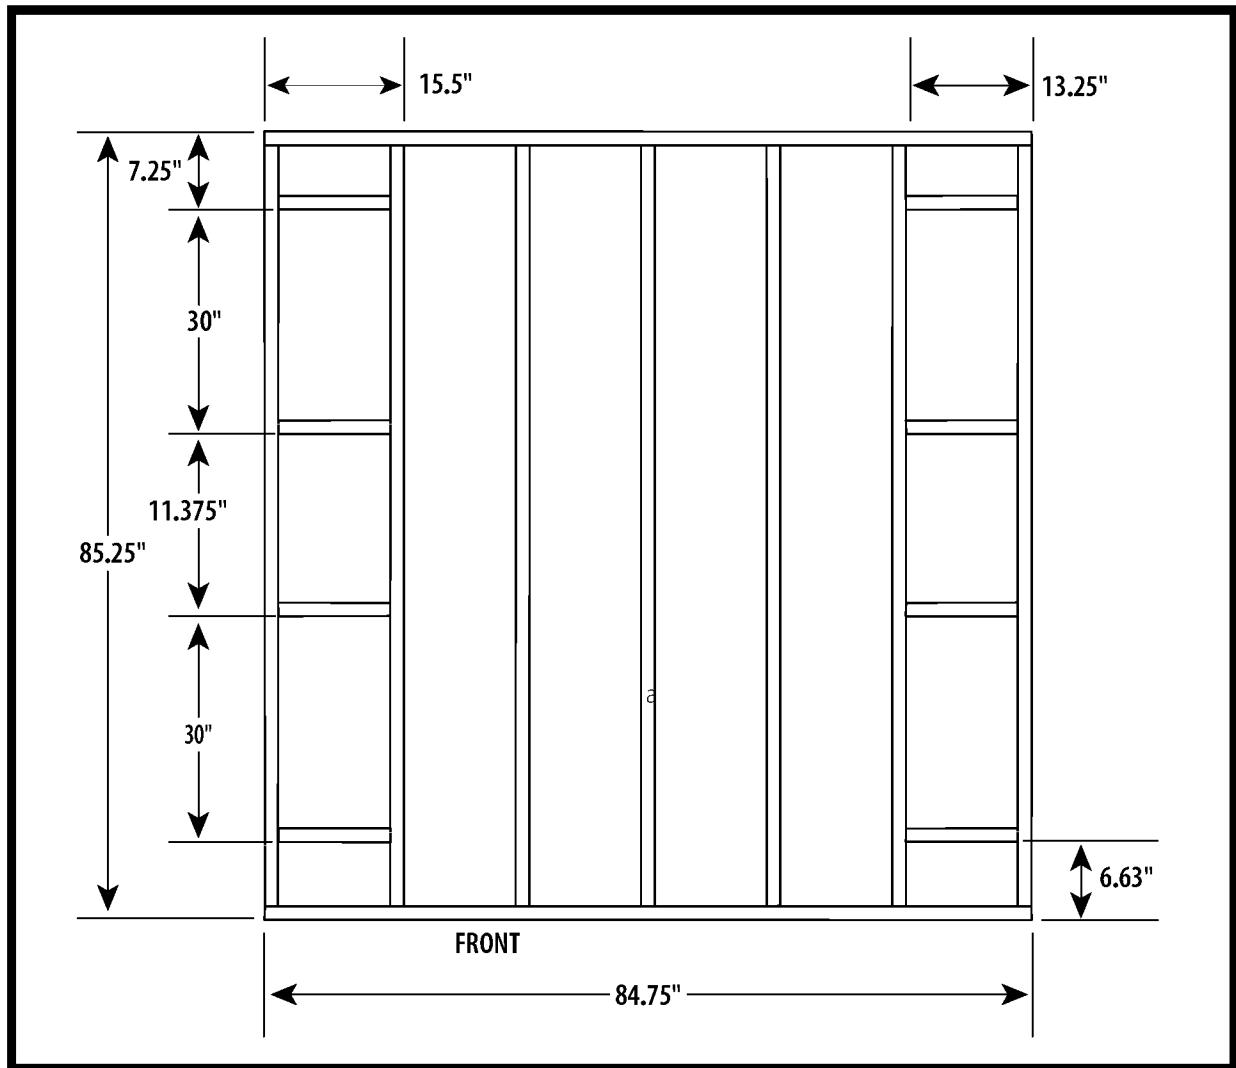

Check all critical spacing measurements.

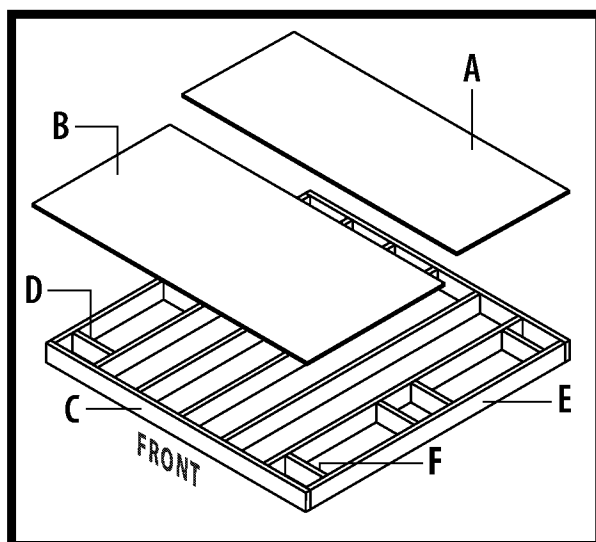

Wood platform materials list


Item	Qty	Size
A	1	37 1/4" x 84 3/4" x 3/4"
B	1	48" x 84 3/4" x 3/4"
C	2	2" x 6" x 84 3/4"
D	4	2" x 6" x 12 1/2"
E	7	2" x 6" x 82 1/4"
F	4	2" x 6" x 11 3/4"

Note: dimensional lumber is actually 1/2" smaller than noted sizes.

Door-Pre-Assembly




At least two people are needed during assembly.

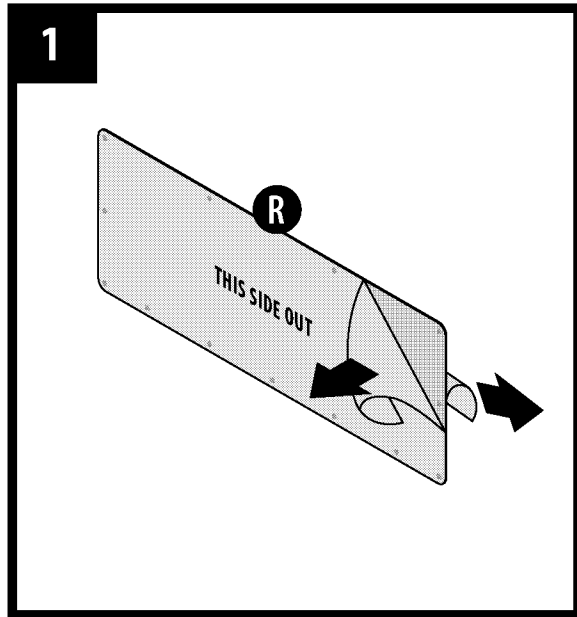

Peel film from both sides of left door window (R).


Note: One side of film will say "THIS SIDE OUT." Make sure this side faces out when installing window.

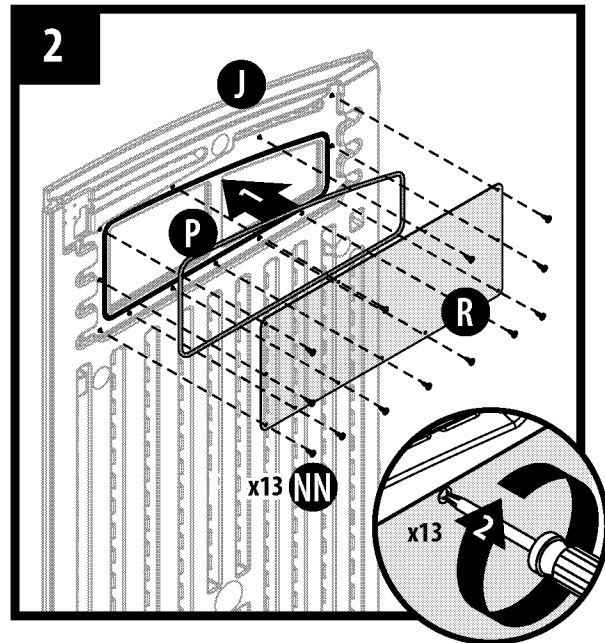


Place gasket (P) and door window (R) into left door (J) channel. Secure with thirteen screws (NN), starting at corners. **DO NOT** over tighten screws.

Note: The cut portion of gasket (P) **MUST** be assembled on top of door channel.

Repeat for right door (K).

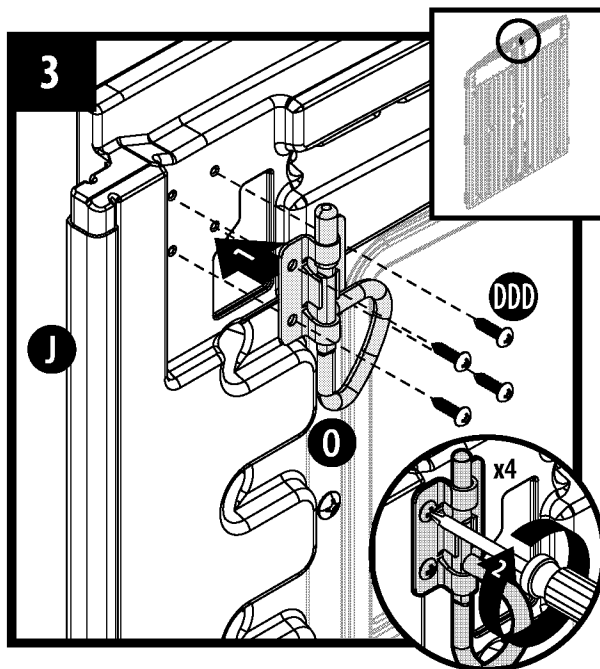

At top interior side of left door (J), attach D-ring slide bolt (O) with four screws (DDD) through provided holes.

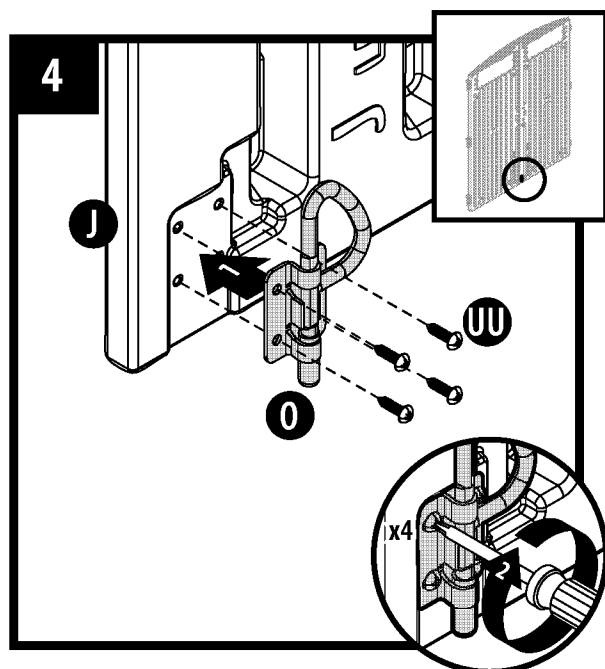


At bottom interior side of left door (J), attach D-ring slide bolt (O) with four screws (DDD) through provided holes.


Header-Pre-Assembly



At least two people are needed during assembly.

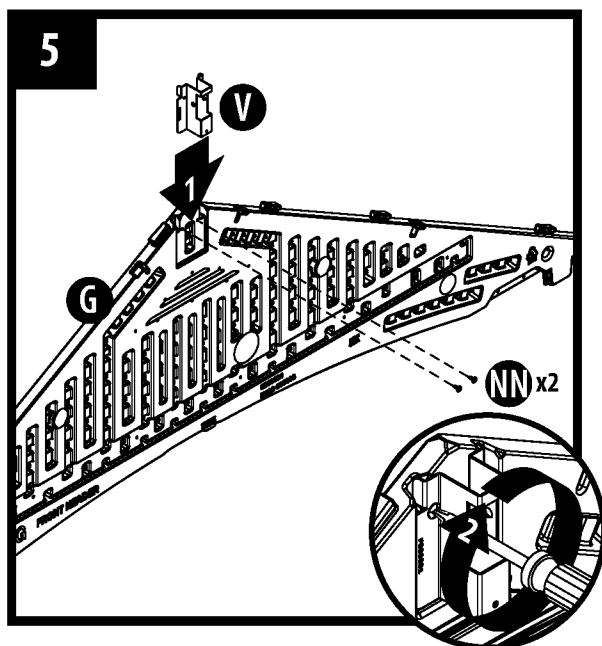


Slide roof ridge beam bracket (V) under tabs on inside peak of front header (G) and secure with two screws (NN). **DO NOT** over tighten screws. Repeat for rear header (H).

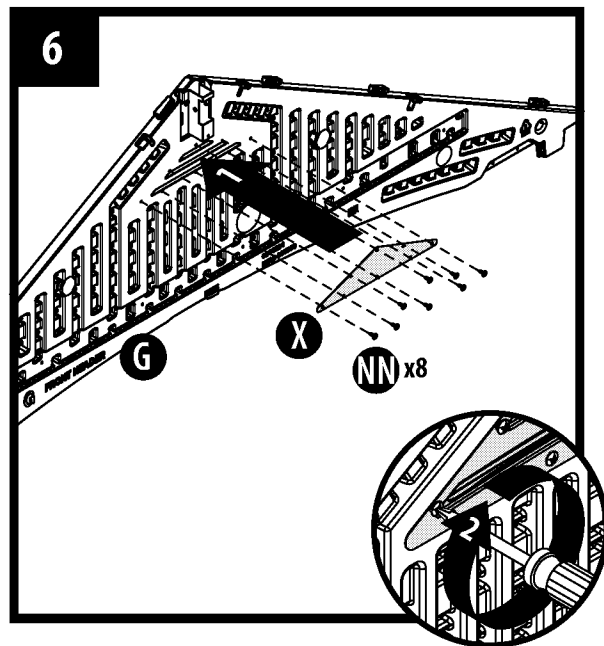

Place vent screen (X) in front header (G). Secure through back of header with eight screws (NN).

DO NOT over tighten screws.

Repeat for rear header (H).

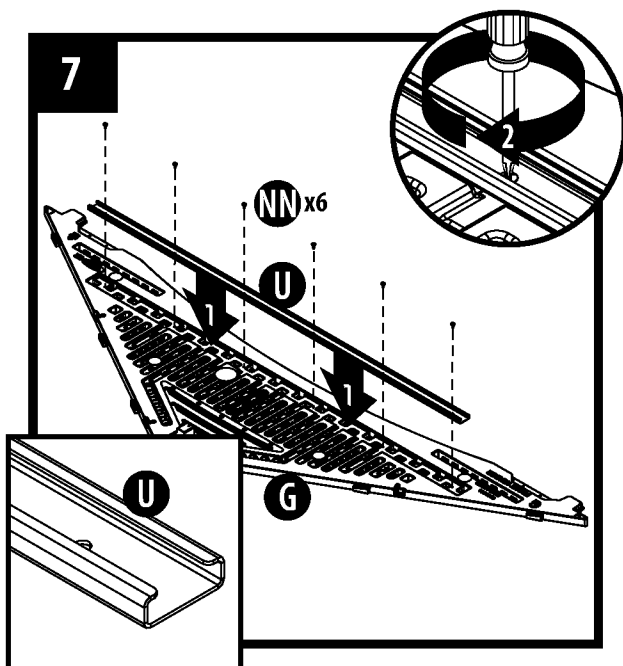

Lay front header (G) on ground with lettering side facing up. Place front header beam (U, 57") into pocket on inside of front header (G). Attach with six screws (NN).


DO NOT over tighten screws.

Repeat for rear header (H) and rear header beam (U2, 62").


Truss-Pre-Assembly




At least two people are needed during assembly.

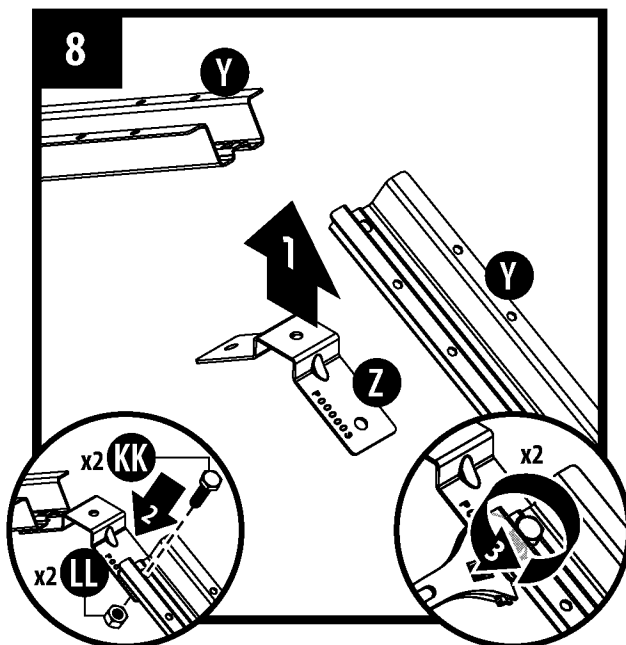

Attach truss bracket (Z) to end of one truss leg (Y) with 1" hex head cap screw (KK) and nut (LL). Repeat for second truss leg (Y).

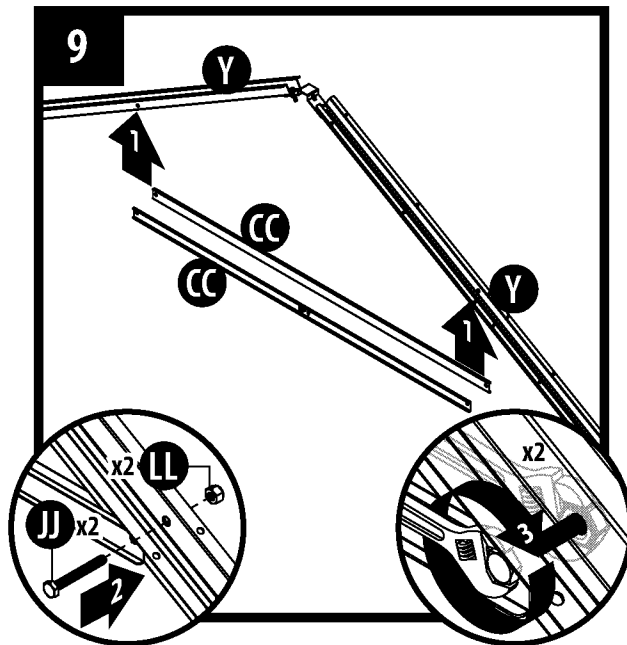

Attach truss cross beam (CC) to two truss legs (Y) using two hex head cap screws (JJ) and two nuts (LL). Stand truss and check cross beam is level. Repeat with second cross beam assembly.

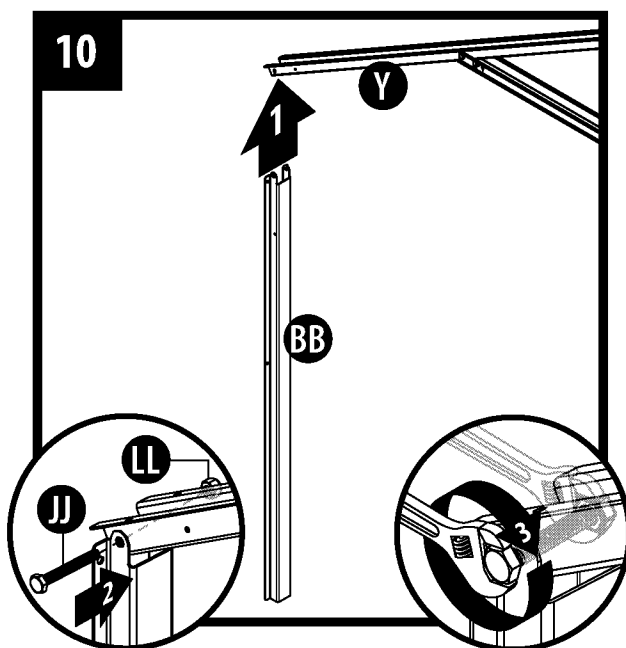


Place side adaptor bracket (BB) at end of left truss leg (Y). Secure adaptor bracket with one 2" hex head cap screw (JJ) and one nut (LL). Repeat for other truss leg.

Note: DO NOT over tighten side adaptor bracket (BB) onto end of truss legs (Y). This makes roof assembly difficult.


Skylight and Wall Pre-Assembly



At least two people are needed during assembly.

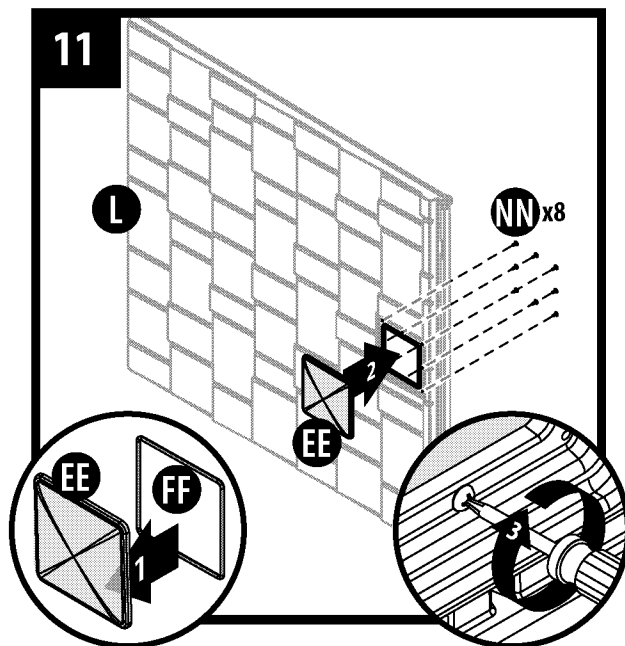

Place skylight gasket (**FF**) into skylight (**EE**). Place skylight (**EE**) onto a left roof panel (**L**). Secure from underside with eight screws (**NN**). Make sure rib on plastic parts is seated fully against gasket on skylight. Repeat for remaining left and both right roof panels (**L**, **M**).

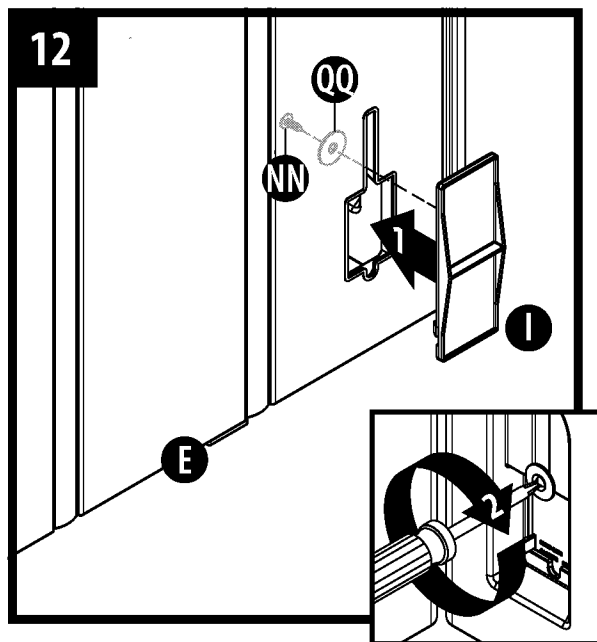


Attach cord slide (**I**) to back right corner (**E**) with one washer (**QQ**) and one screw (**NN**). See inside front cover of document for power cord information.

Shed Assembly—Walls




At least two people are needed during assembly.

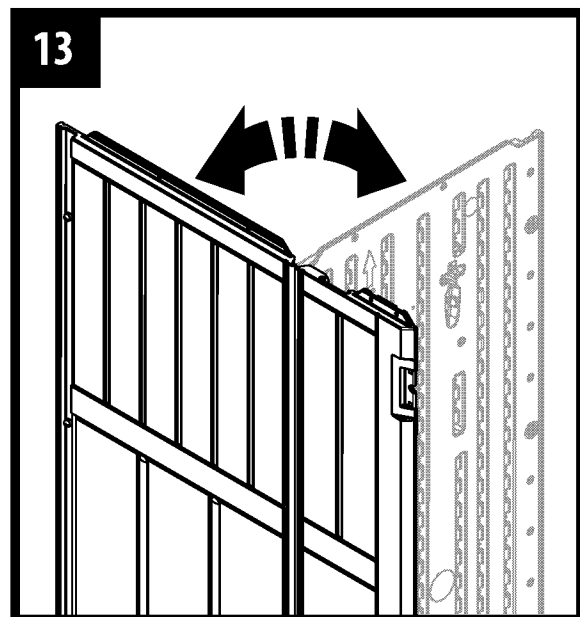


Critical: When installing corners, flex corner hinges back and forth several times. This will help provide a square corner and ensure proper fit of remaining panels.

Important: DO NOT flex in reverse position, as this can crack the panel.

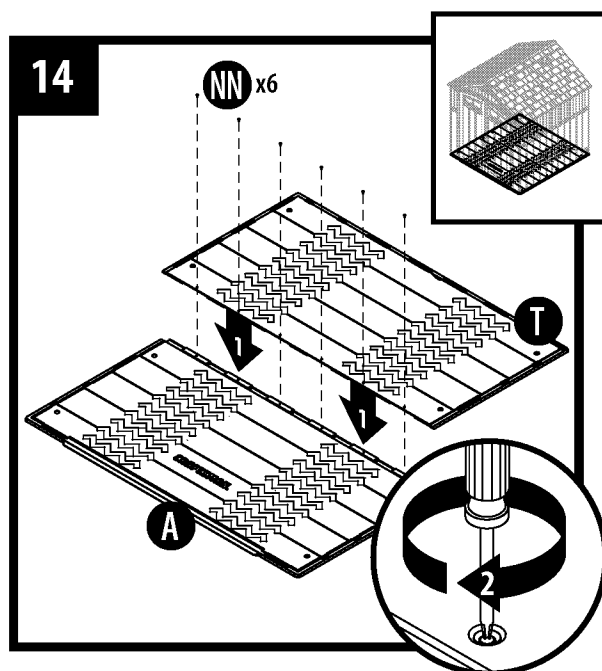

Push front floor (A) and rear floor (T) panels together and secure with six screws (NN).

Note: Refer to pages 10 and 11 to secure floors to foundation.

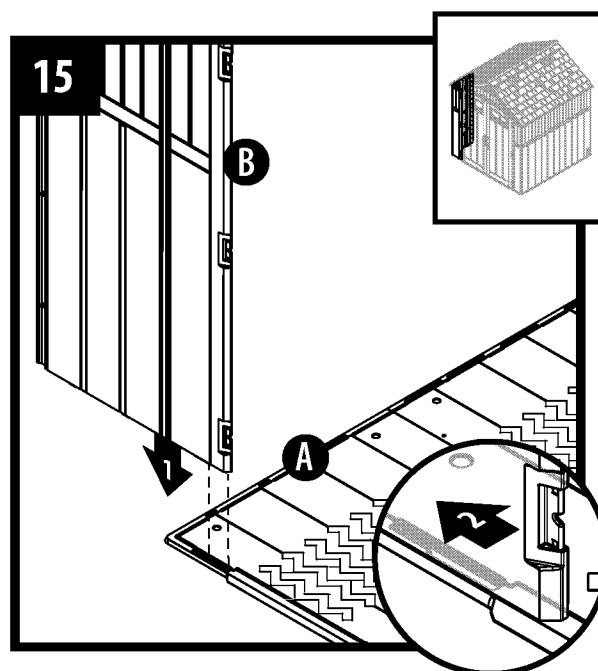


Align tab on bottom right side of front left corner (B) with slot on floor (A). Lower panel into slot and lock in place by sliding panel toward outside of floor.

Note: Use a rubber mallet to 'push' left front corner (B) into locked position.


Shed Assembly—Walls



At least two people are needed during assembly.

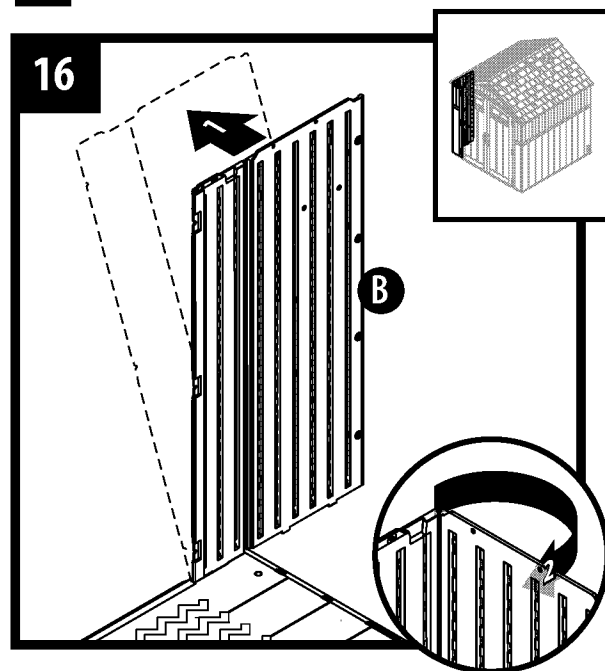


Tip front left corner (**B**) outward slightly and bend corner hinge.

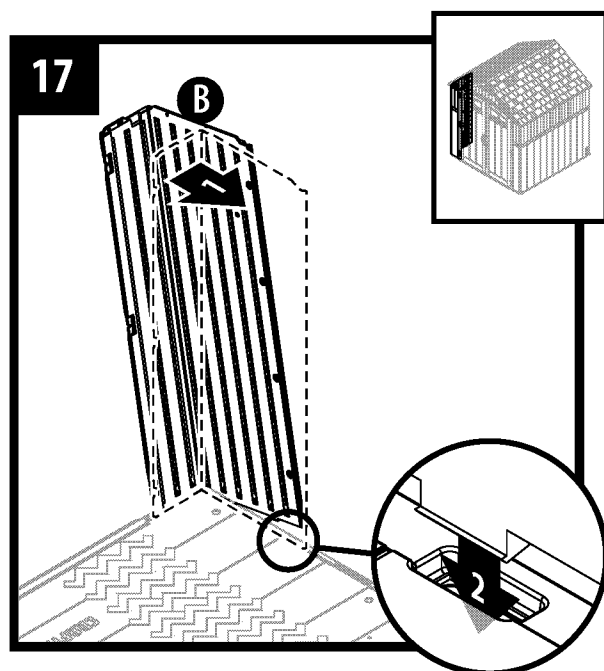

Tip front left corner (**B**) back to vertical position and align lower tabs on right side with slots in floor.


Note: You will hear a 'snap' when tab is fully engaged.

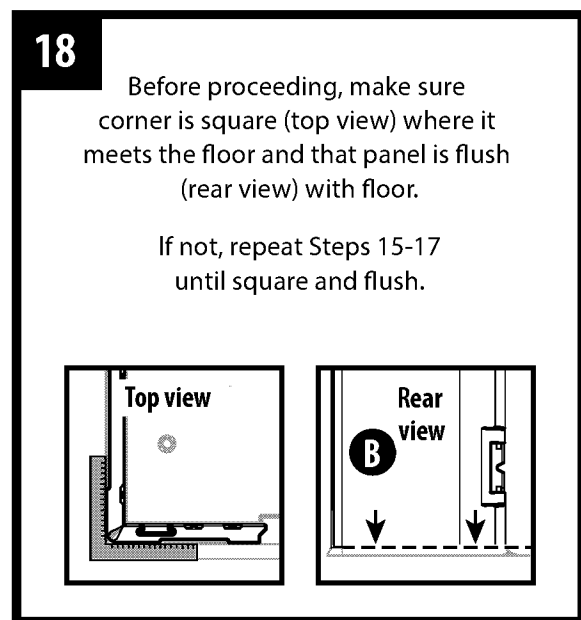

Shed Assembly—Walls




At least two people are needed during assembly.

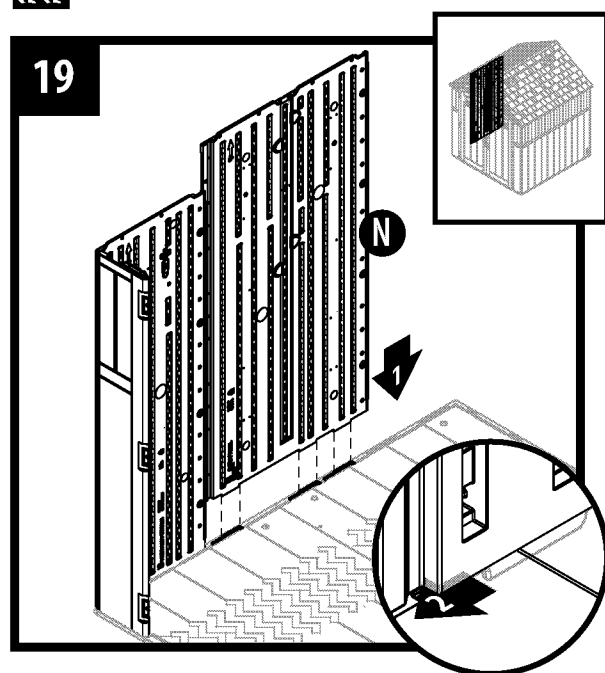

Align tabs on bottom of side panel (**N**) with slots along front and rear floors. Lower panel into slots and lock in place by sliding panel toward front corner.



Note: Use a rubber mallet to 'push' side panel (**N**) into locked position.

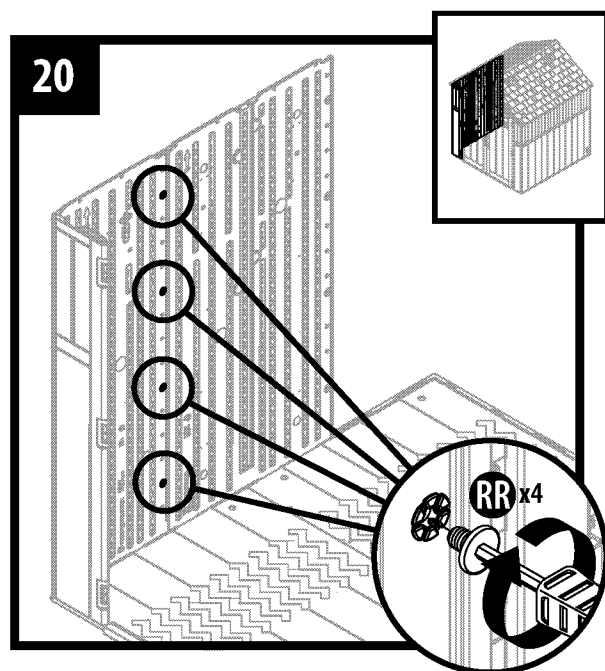


Secure side panel with four easy bolts (**RR**), working from floor to roof. **DO NOT** use torque wrench. Use easy bolt easy driver (**SS**) and hand tighten. Easy bolt head will be flush when fully seated. **DO NOT** over tighten easy bolts.

Note: You may hear a 'click' when easy bolt has been tightened completely.

Shed Assembly—Walls



At least two people are needed during assembly.

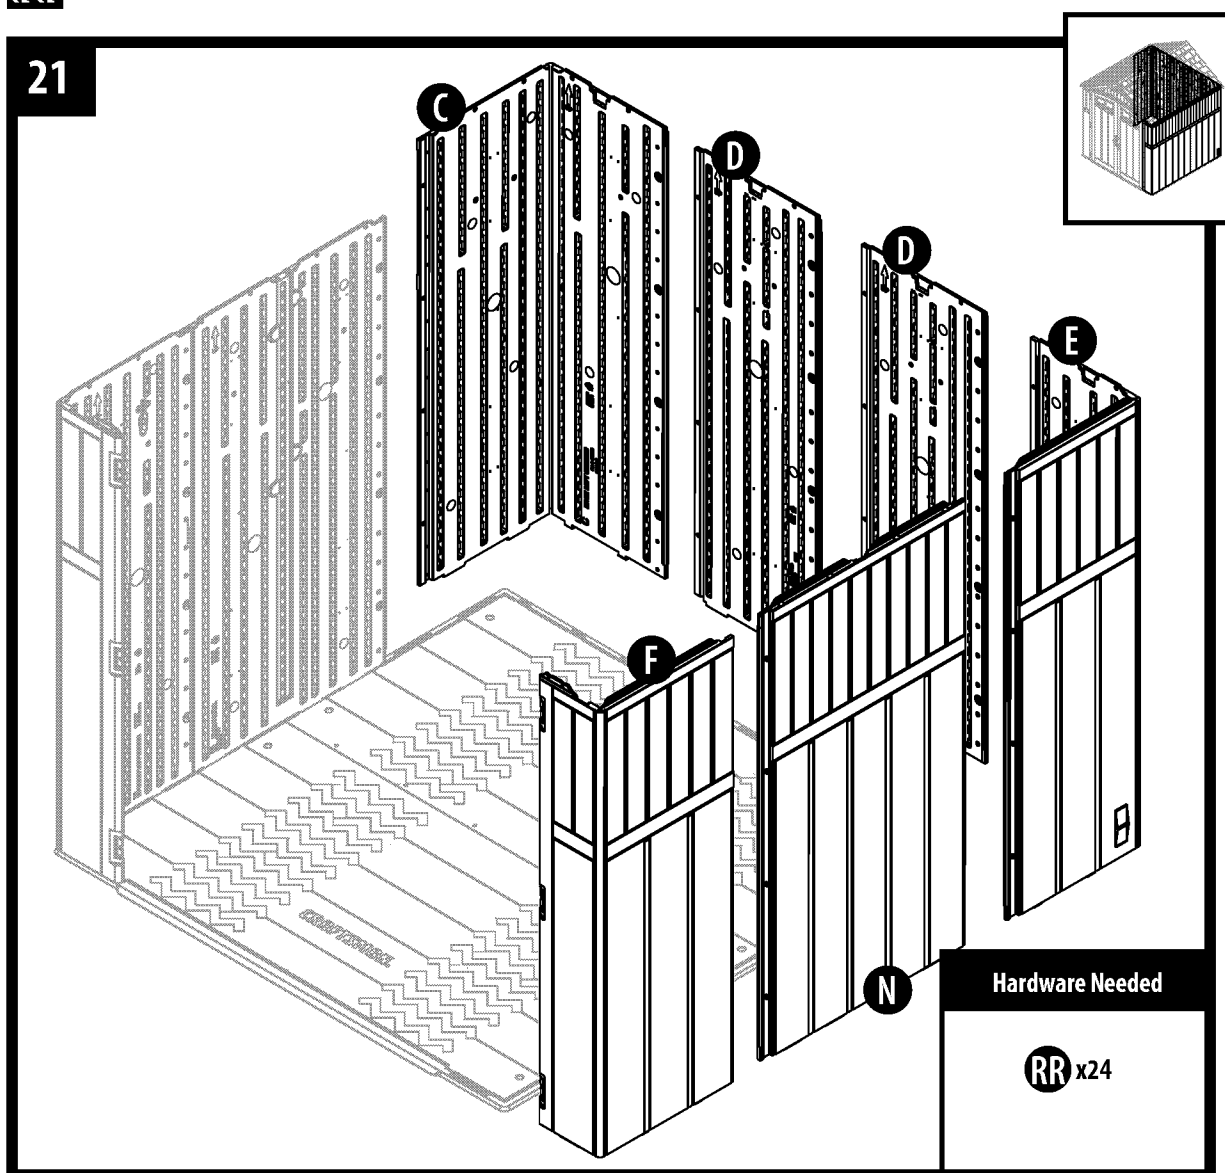


Repeat Steps 15-20 for remaining panels.


Shed Assembly—Headers and Truss




At least two people are needed during assembly.

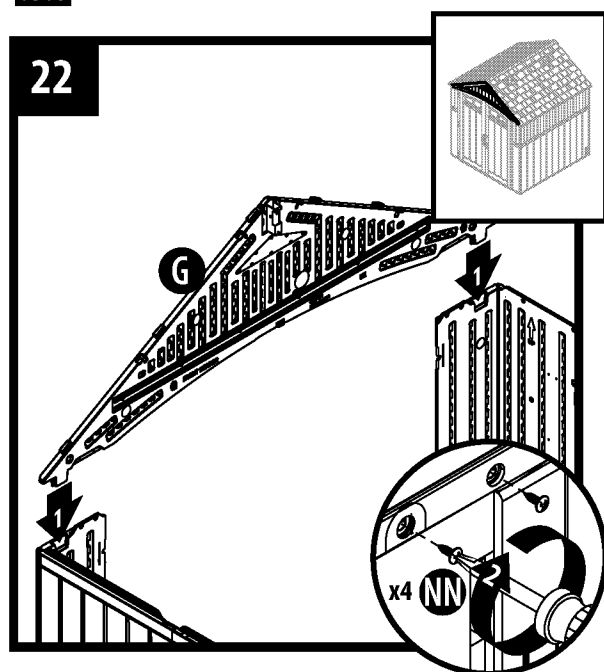

Place front header (**G**) over door opening and fit two protruding support legs into pockets molded in front corners. Secure front header using two screws (**NN**) in each front corner.

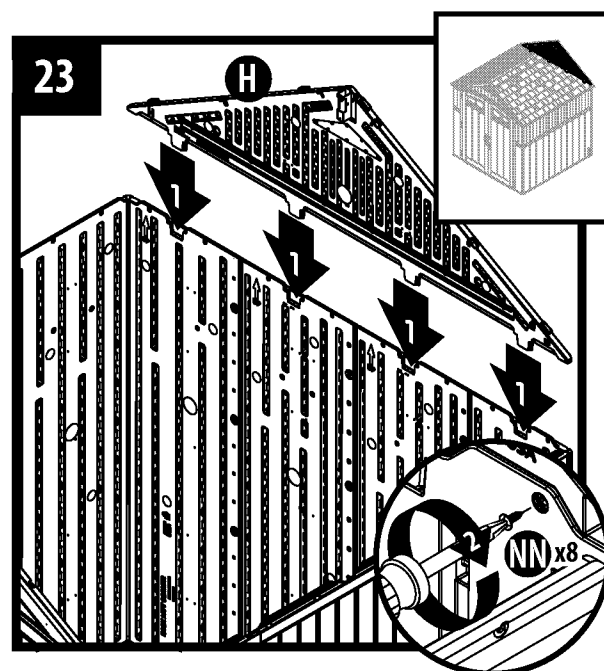

Place rear header (**H**) over back walls and fit four protruding support legs into pockets molded in back walls. Secure rear header using eight screws (**NN**).

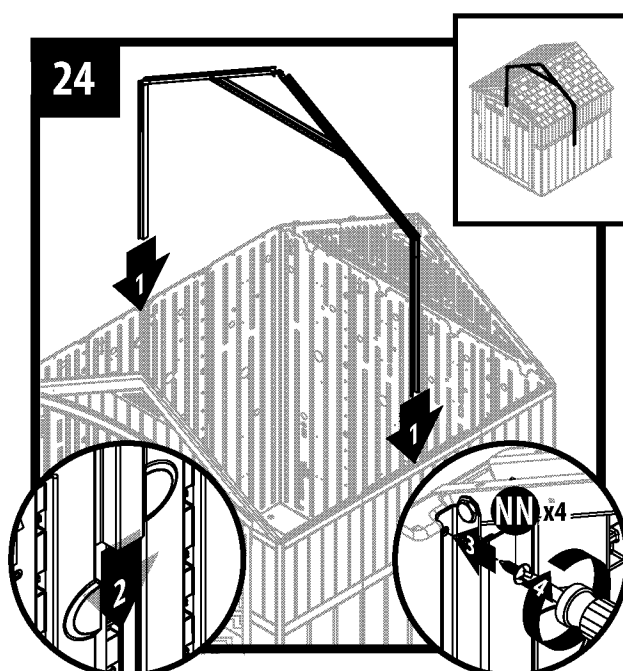


Slide truss assembly into place. Secure with four screws (**NN**) in each side adaptor bracket

Shed Assembly—Headers and Truss




At least two people are needed during assembly.

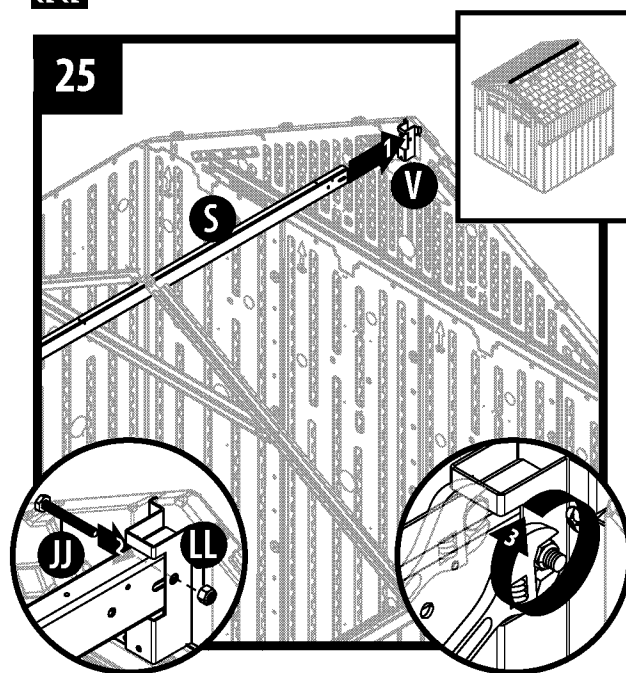


Raise ridge beam (S) up and into rear roof ridge beam bracket (V). Secure with one 2" hex head cap screw (JJ) and one nut (LL). Repeat with front ridge beam bracket.

Note: Make sure open end of ridge beam faces down.

Note: Alignment of ridge beam to bracket may require header panels to be pushed inwards or outwards slightly as ridge beam is slid into place.

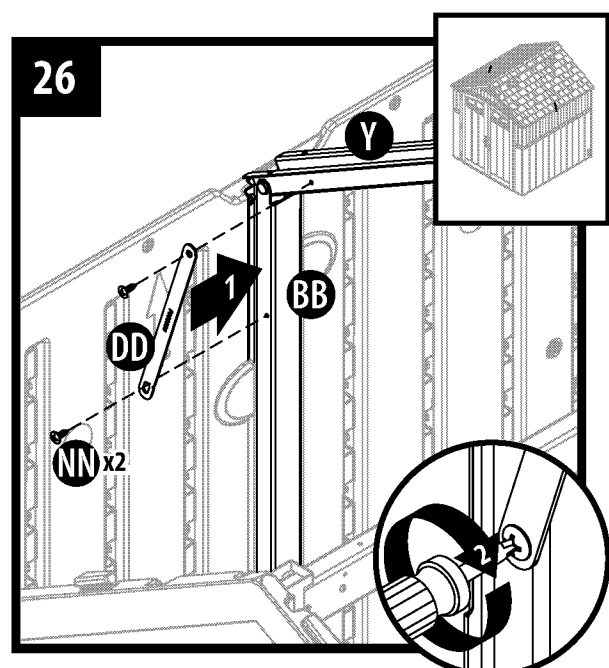

Attach truss strap (DD) to side adapter bracket (BB) and truss leg (Y) with two screws (NN). Repeat for remaining truss strap.

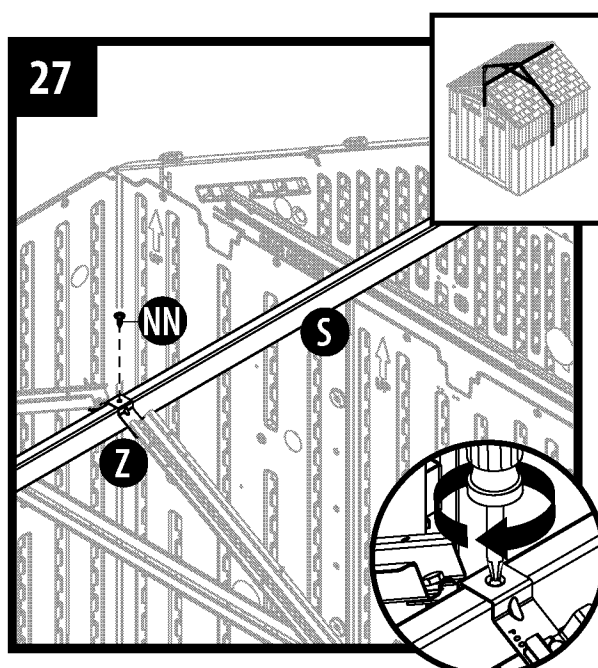


Attach truss bracket (Z) to ridge beam (S) with one screw (NN).

Shed Assembly–Roof




At least two people are needed during assembly.

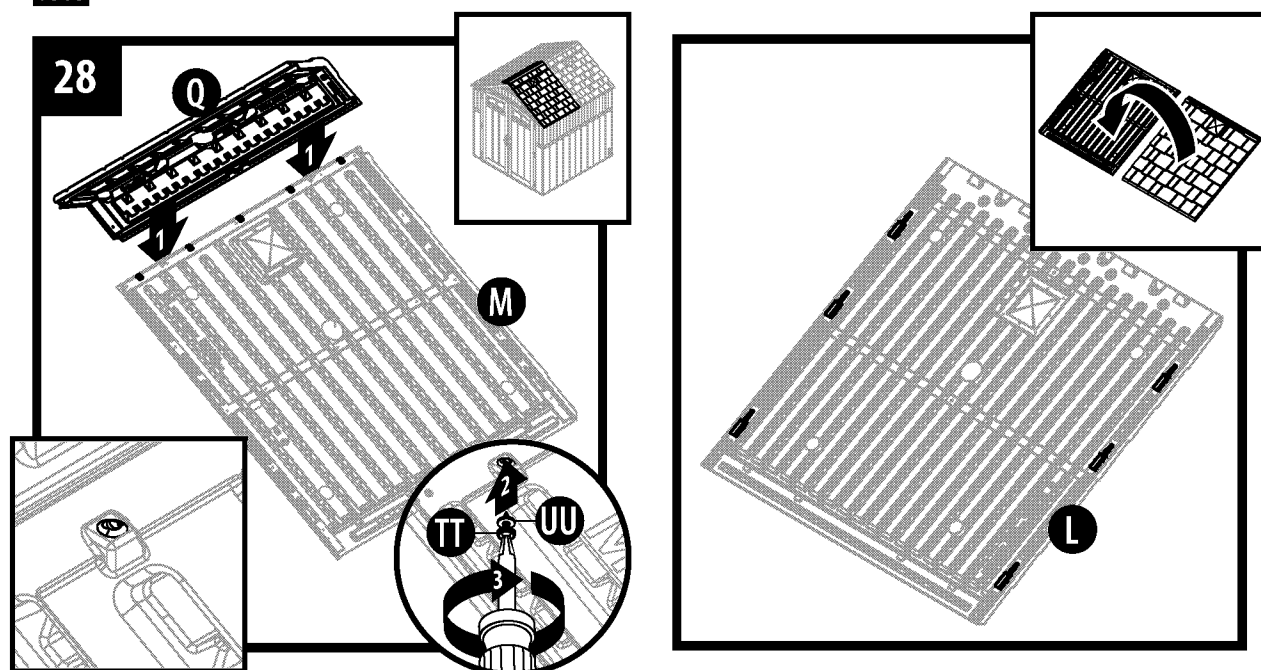

Place the front roof peak (**Q**) onto a right roof panel (**M**). Secure with five rubber washers (**UU**) and five sealing screws (**TT**). Repeat for rear roof peak (**W**) and remaining right roof panel (**M**).

Note: Rubber side of washer should be against plastic panel.

Before proceeding, locate and identify the six slots on interior side of left roof panels (**L**).

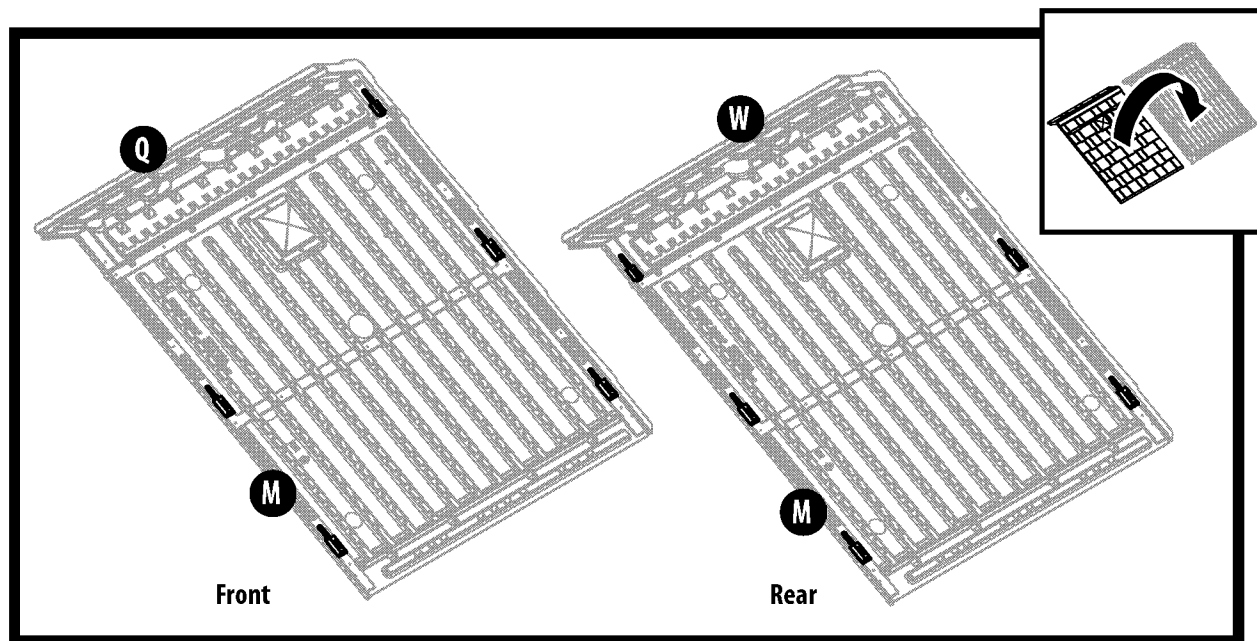


Before proceeding, locate and identify the five slots on interior side of right front (**Q, M**) and right rear (**W, M**) roof panel assemblies.


Shed Assembly–Roof




At least two people are needed during assembly.

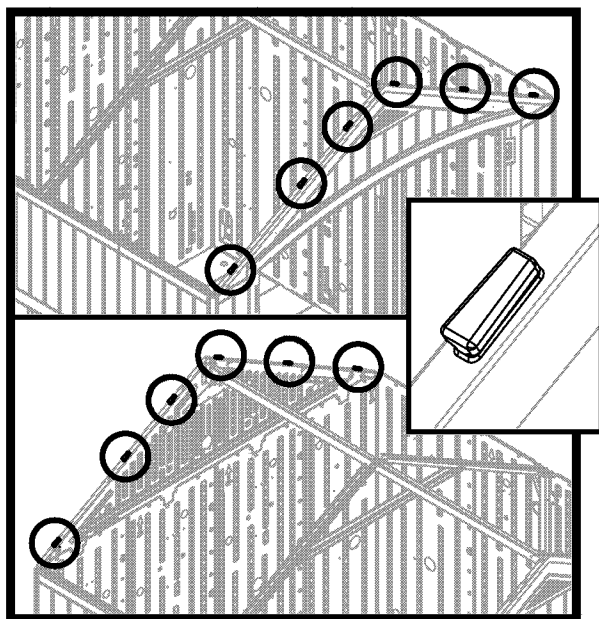


Before proceeding, locate and identify six front header tabs and six rear header tabs.

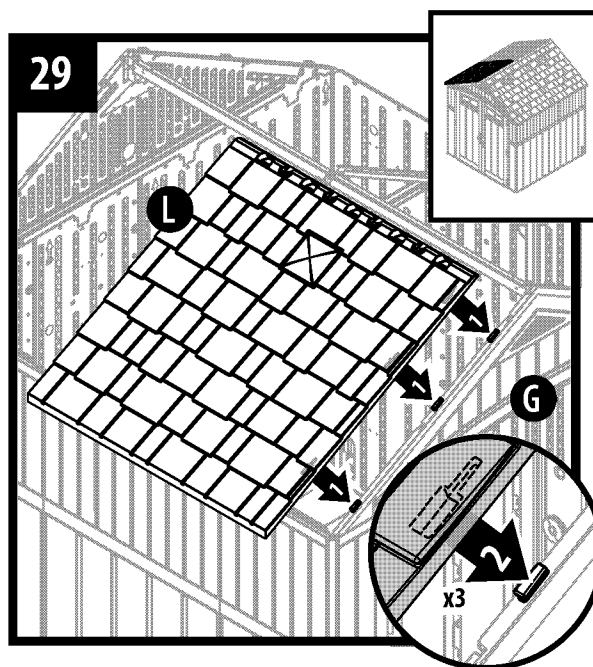

Lay left roof (L) directly over three tabs on left side of front header (G). With left roof slots seated over/on header tabs, check alignment in all three spots.

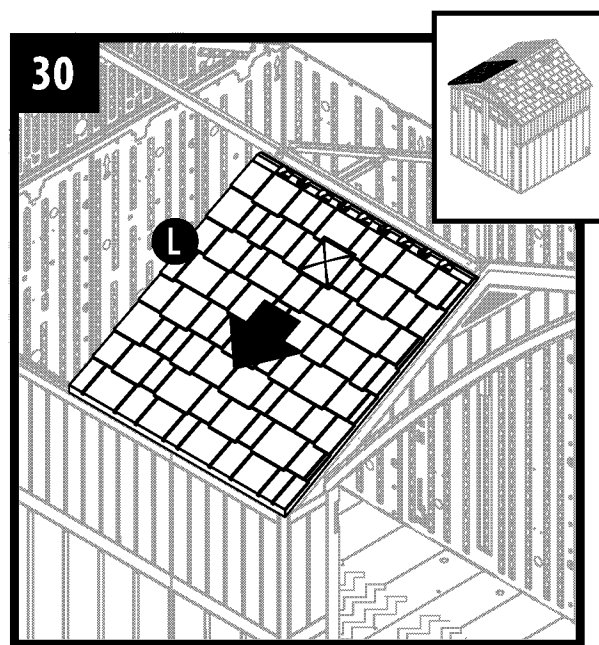

Slide left roof (L) down towards the outside of shed.

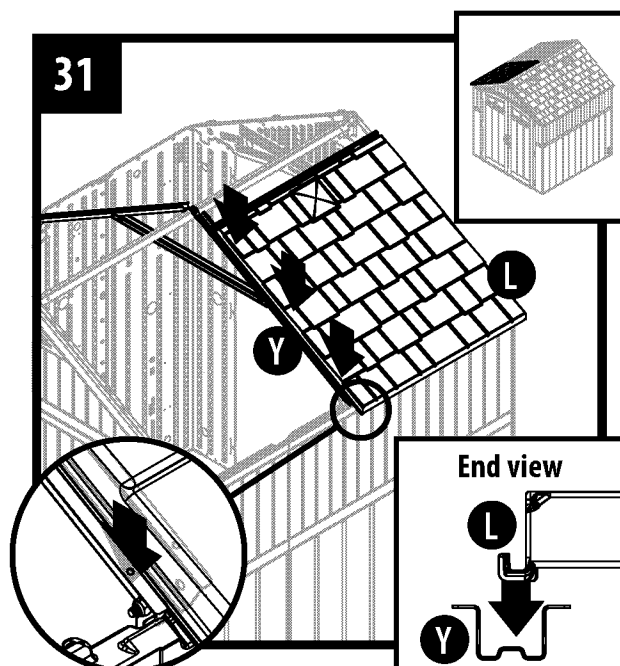


Press edge of left roof (L) into channel on truss leg (Y).


Shed Assembly–Roof




At least two people are needed during assembly.

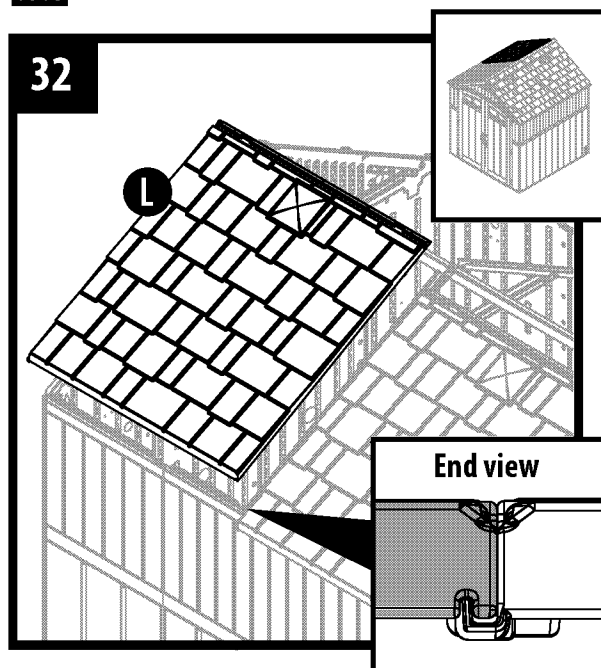


Repeat steps 30-32 for remaining left roof panel (L).

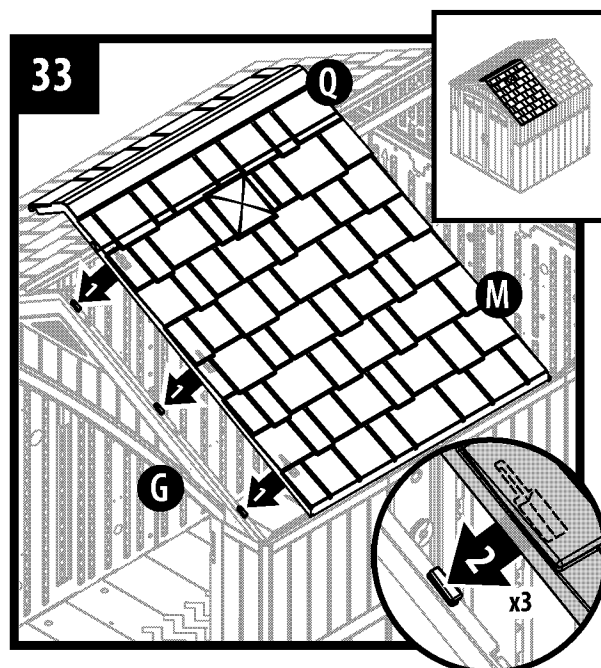

Lay right roof (M) with front roof peak (Q) directly over three tabs on right side of front header (G). With right roof slots seated over/on header tabs, check alignment in all three spots.

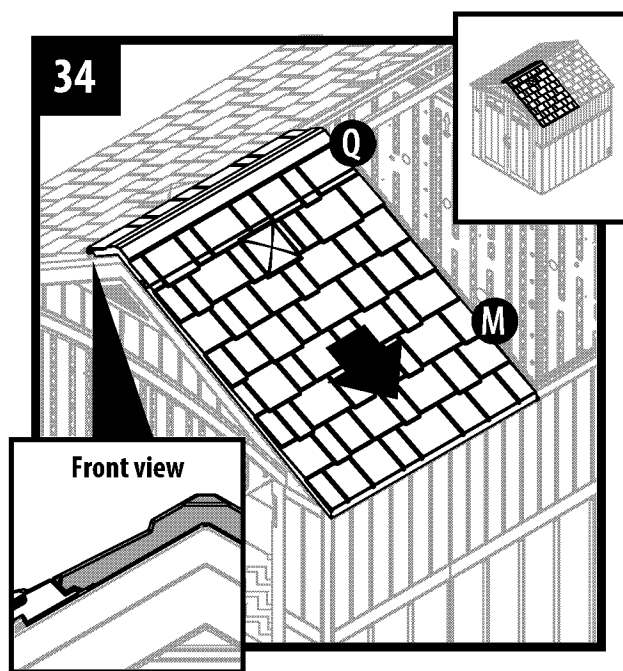

Slide right roof (M) with front roof peak (Q) down towards the outside of shed.

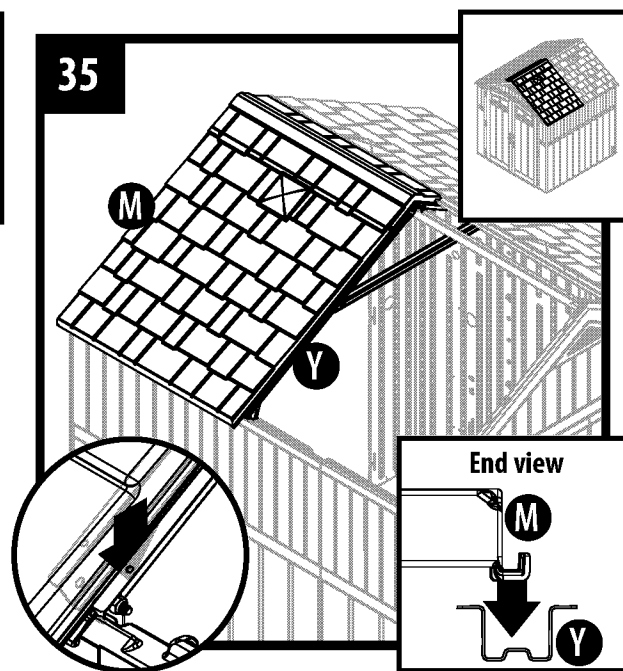


Press edge of right roof (M) into channel on truss leg (Y).


Shed Assembly–Roof



At least two people are needed during assembly.

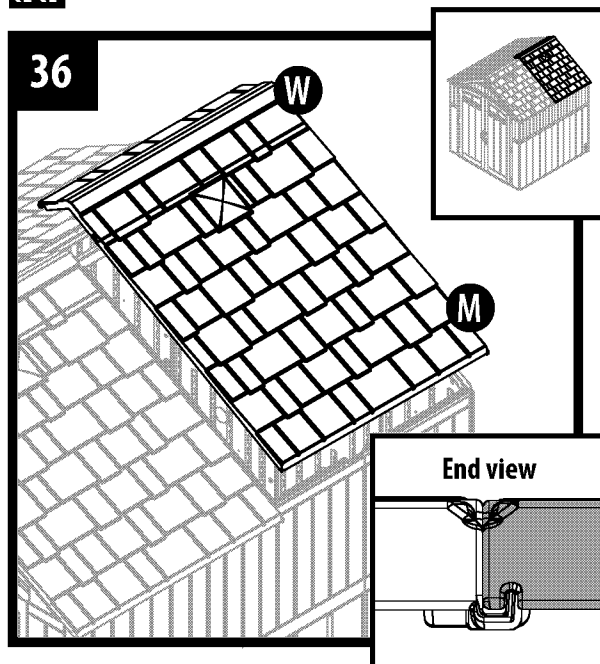


Repeat steps 34-36 for remaining right roof panel (M) and rear roof peak (W).

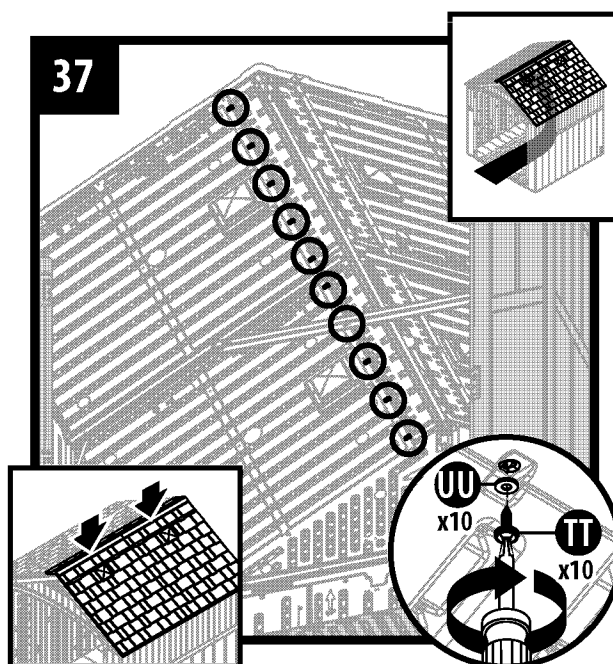


Push down the right roof panels with roof peaks from outside. From inside shed, secure roof peaks to left roof panels together using ten rubber sealing washers (UU) and ten sealing screws (TT).

Note: For clarity, illustration is shown with front header removed.

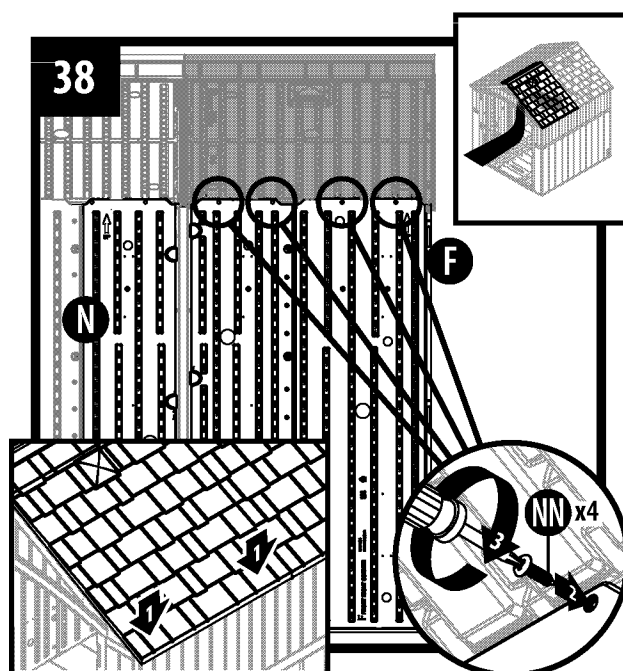

Pull down each lower corner of roof from outside. From inside shed, attach tabs on right front corner (F) and side panel (N) to roof panel with four screws (NN).

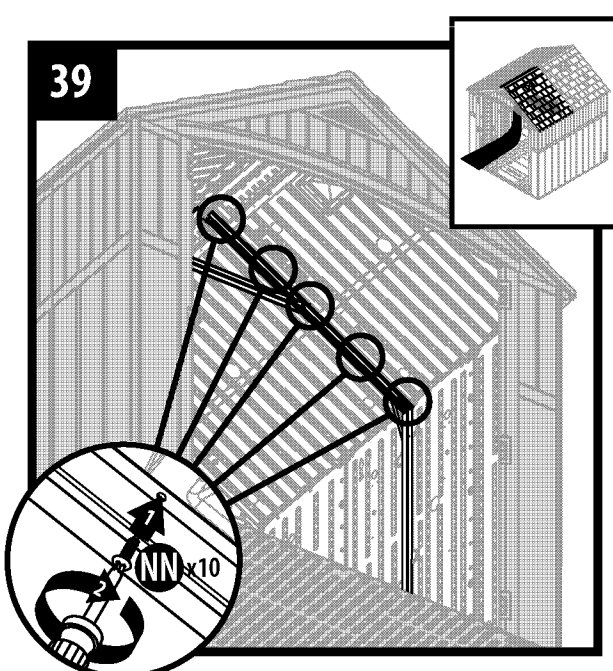


Secure roof to both sides of roof truss using ten screws (NN). Each screw will attach at a corresponding screw boss on the roof. Make sure roof peak is secured (highest screw holes on roof truss).


Shed Assembly–Roof




At least two people are needed during assembly.

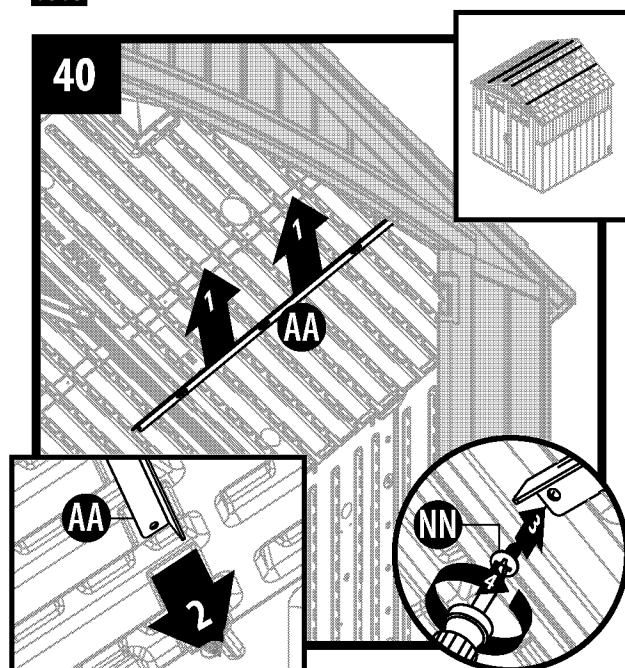


Raise roof support (AA) into position against roof. Slide roof support (AA) into front header. Secure roof support to underside of truss leg with one screw (NN).

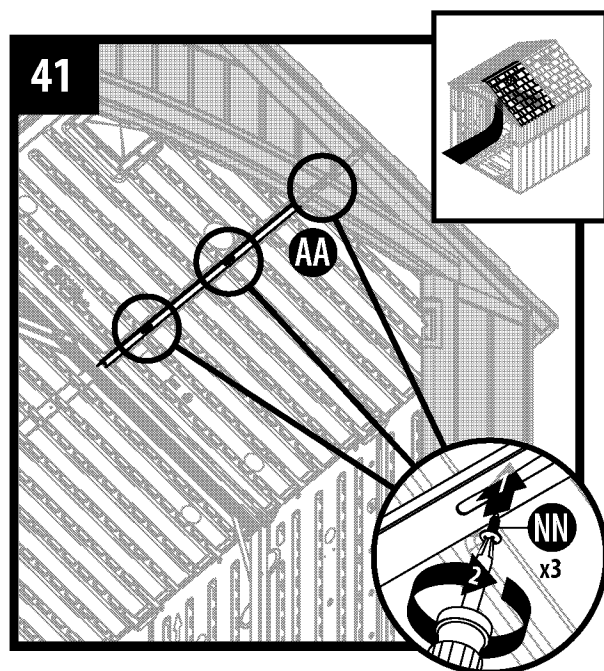

Secure roof support (AA) to roof using three screws (NN).

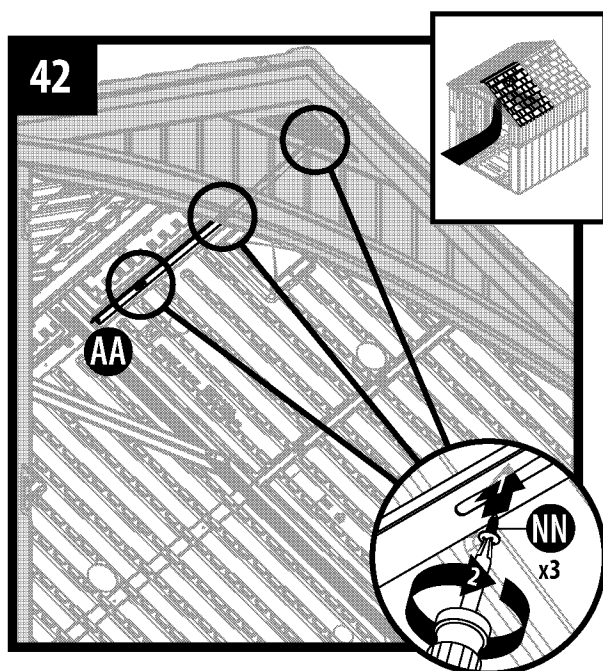

Repeat steps 40 and 41 to attach bracket (AA).

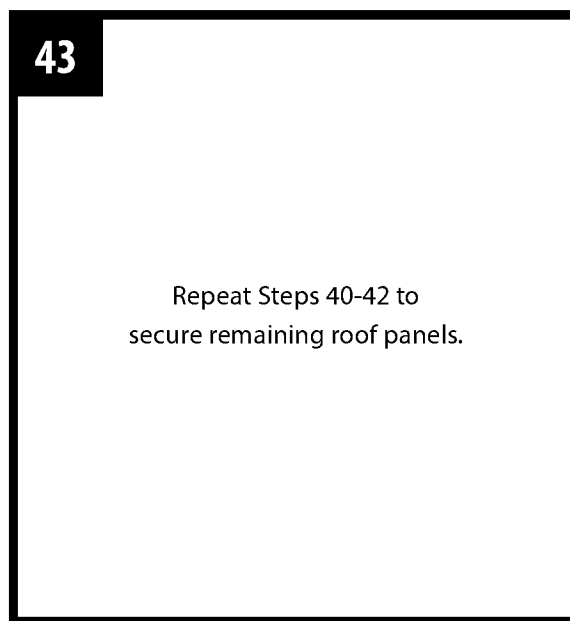


Repeat Steps 40-42 to secure remaining roof panels.


Shed Assembly—Doors



At least two people are needed during assembly.

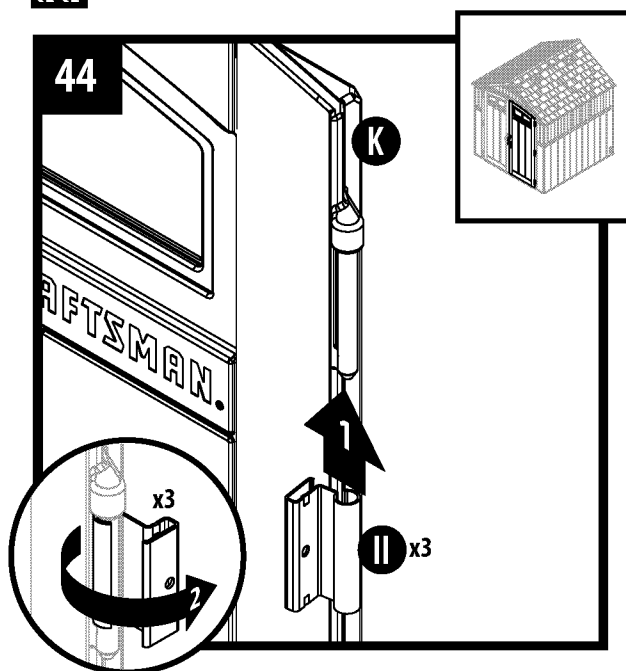


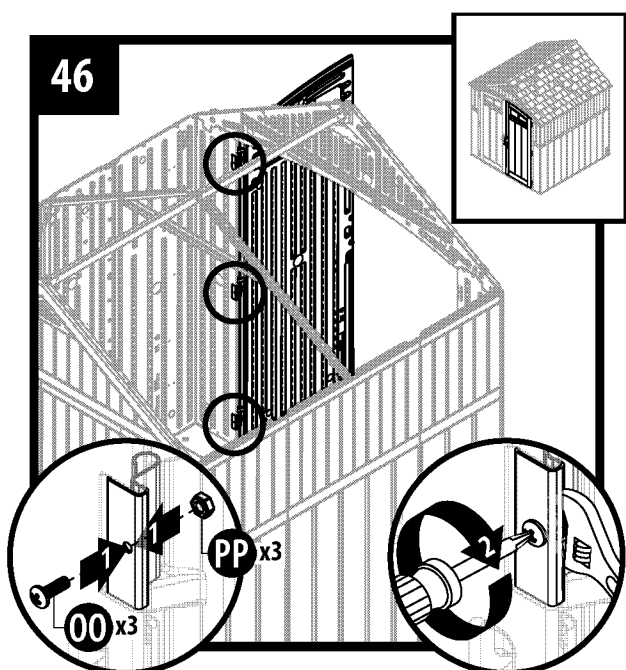
Stand right door (K) upright with three hinge mounts facing right. Slide one metal hinge plate (II) up onto each hinge mount. Rotate hinges to outside of door.

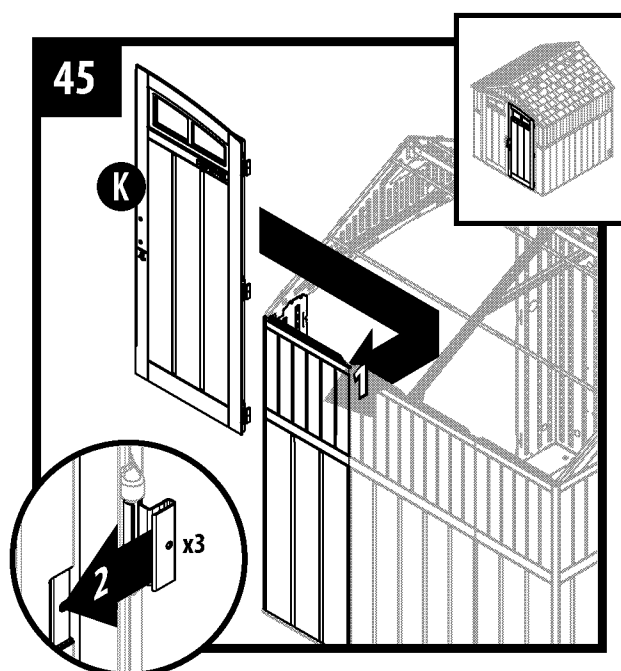

With metal hinge plates in open position, slide one hinge over each hinge receptacle on inside of right front panel.

Note: For clarity, illustration is shown with roof removed.


 **Note:** Use a rubber mallet if needed.



Secure each metal hinge plate with one screw (OO) and one locking nut (PP).

Repeat Steps 44-46 for left door (J).

Note: For clarity, illustration is shown with roof removed.

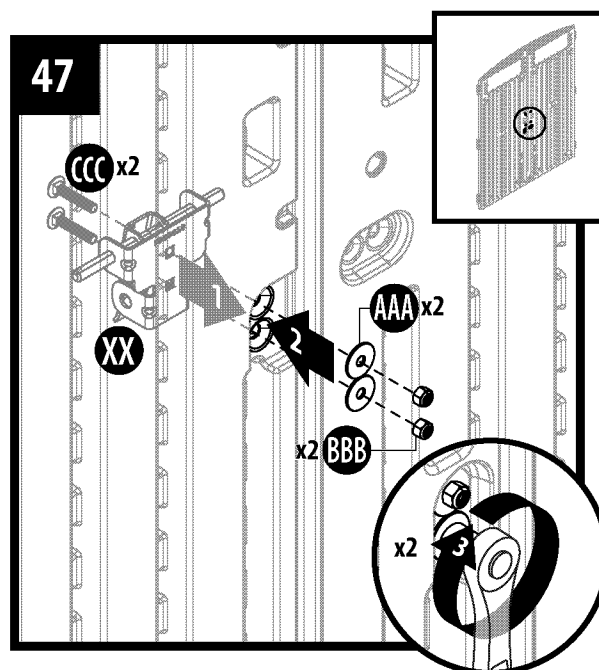


Insert two screws (CCC) into door latch assembly (XX) and through right door. While holding plate in place on exterior of door, secure each screw with two washers (AAA) and two locking nuts (BBB).


Shed Assembly–Doors




At least two people are needed during assembly.

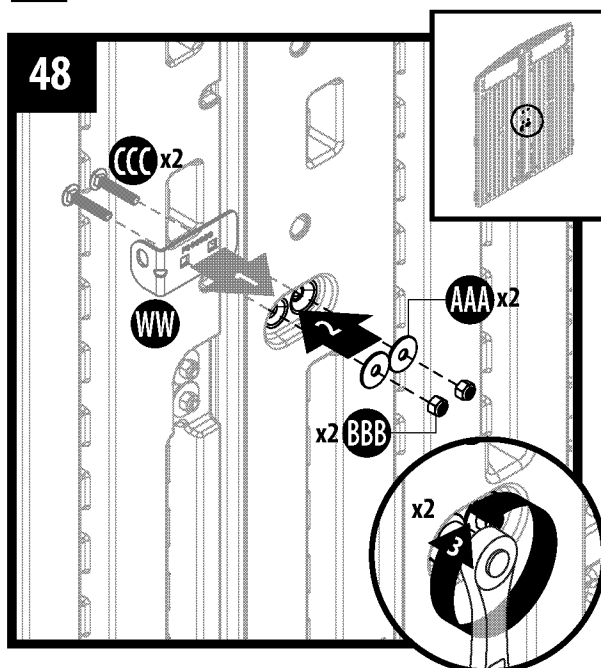


Insert screws (**CCC**) into left latch plate (**WW**) and through left door. While holding plate in place on exterior of door, secure each screw with two washers (**AAA**) and two locking nuts (**BBB**).

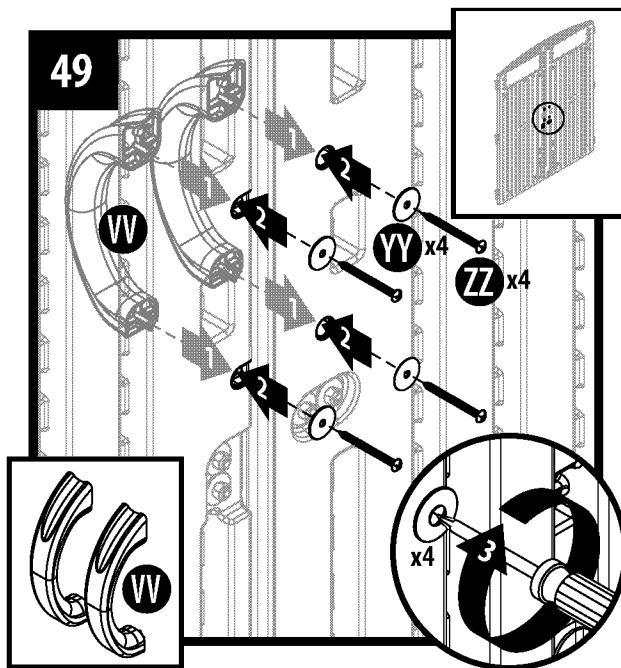

From the outside of doors, insert door handle (**VV**) stems into holes of left and right doors. On inside of doors, place washers (**YY**) on each door handle stem, and secure each with one screw (**ZZ**).

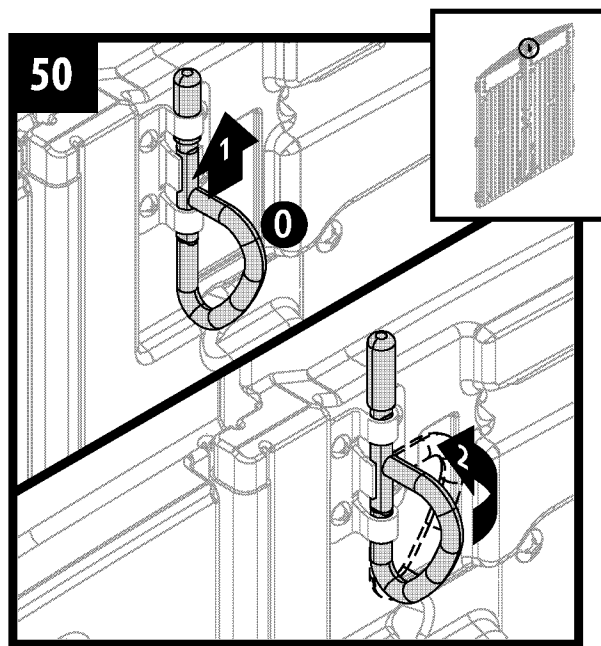


Lift upper D-ring (**O**) up to engage in front of header. Turn D-ring to right for locked position.

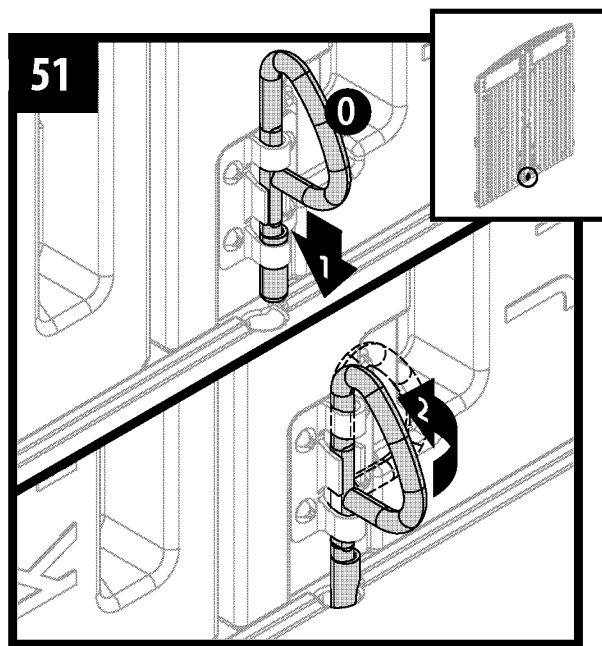


Push lower D-ring (**O**) down to engage with hole in floor. Turn D-ring to right for locked position.

Power Door—Installation

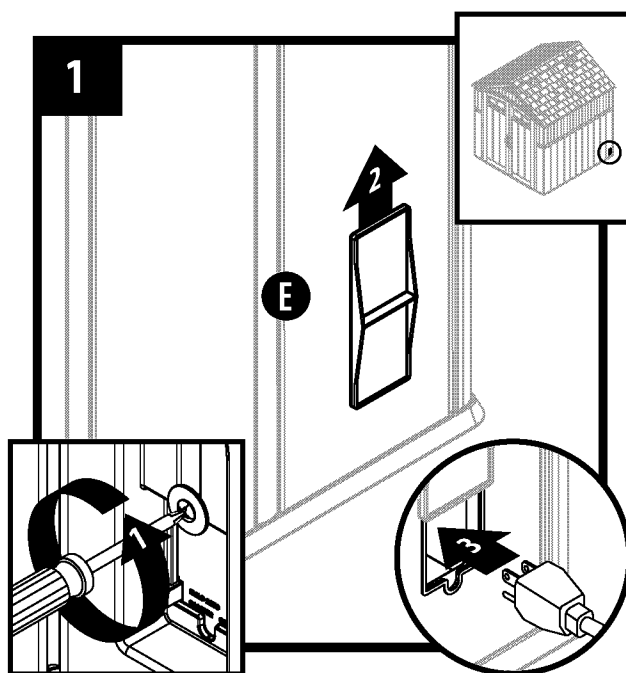


From the inside of the shed, locate the power door. Loosen locking screw with Phillips head screwdriver and slide door up. From outside of shed, thread power cord through opening.

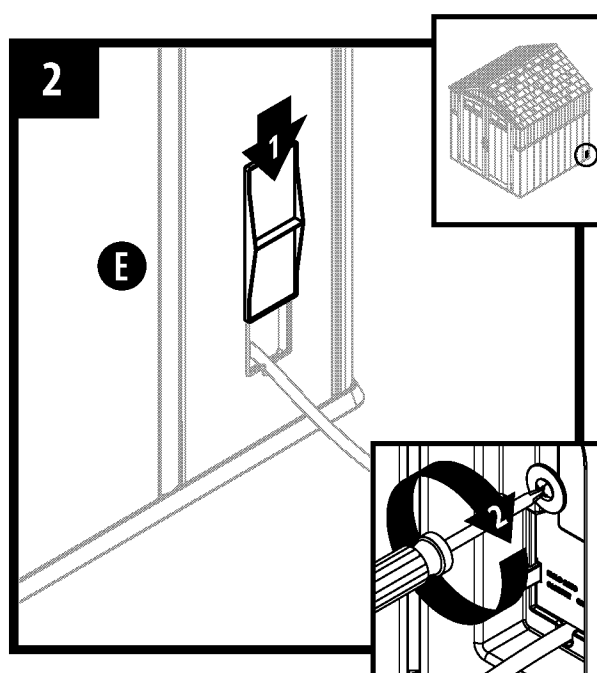

Slide door down to close, making sure cord is seated in notch at bottom. Tighten locking screw.

Note: To reduce the risk of electric shock, use power strip indoors only. **DO NOT** plug into another relocatable power strip.

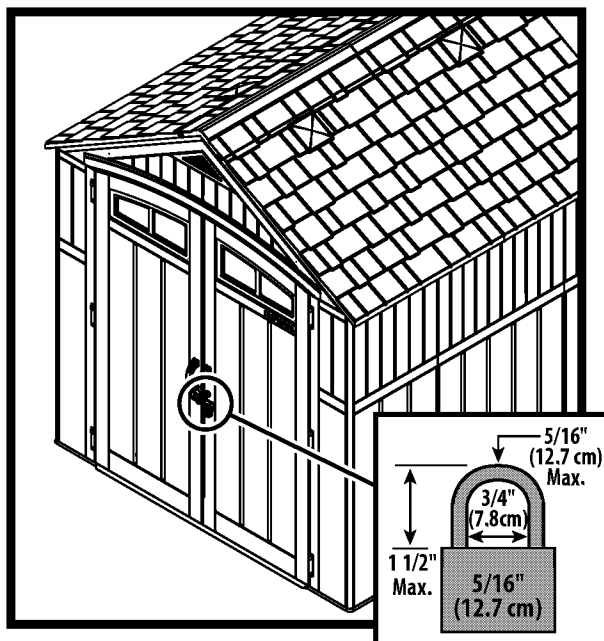

Attach a 5/16" lock (not provided) to door latch to properly secure shed.

CRAFTSMAN SHED 10-YEAR LIMITED WARRANTY

The manufacturer warrants to the original owner (purchaser) that the product will be free from defects in manufacturing or materials at the time of purchase. This warranty only applies to defects that cause a failure in the form, fit, or function of the product.

Warranty Period:

The ten (10) year warranty period starts on the original date of purchase.

Warranty Remedy:

The manufacturer will in its sole discretion repair or replace only the parts that have failed due to a manufacturing or materials defect. In the unlikely event the manufacturer determines the entire unit will need to be replaced, the manufacturer will in its sole discretion either replace the product or refund the original purchase price depreciated on a straight-line basis calculated by the time of ownership divided by the length of the warranty. Replacement parts may not be identical but will be of equal or greater quality.

To make a warranty claim, the original owner (purchaser) must submit the claim to the manufacturer within the product's warranty period and provide proof of purchase along with a full description of the failure or defect and photos of the area of concern. Proof of purchase must include the identification of the product, seller, purchase price and purchase date. The claim can be submitted online to:

CRAFTSMAN, ATTN Contact Center, 701 NORTH KIRK ROAD, BATAVIA, ILLINOIS 60510 (USA)

For additional assistance in submitting a claim or registering your product, please call us TOLL-FREE (800) 846-2345

The manufacturer reserves the right to require photographic proof of defect and other relevant information. The manufacturer may also require shipment of the defective part or product to them at the expense of the owner/purchaser for verification or quality control purposes as conditions of and prior to processing a warranty claim (except to the extent applicable law provides otherwise).

Warranty Limitations, Conditions and Exclusions:

The warranty is non-transferable and only valid to the original owner (purchaser). The warranty is only valid for new CRAFTSMAN products originally purchased directly from CRAFTSMAN or one of its authorized resale channels.

The warranty does not apply to items purchased in "open box", "like new", "used", "damaged" or like condition. The warranty is voided on items purchased on "clearance", items sold as defective or deficient, and floor models or items assembled or used for demonstration or display purposes. The manufacturer reserves the right to request proof that the item was new and in original unopened CRAFTSMAN packaging at the original time of purchase.

The manufacturer does not provide any assurance or guarantee that the product will meet governmental or homeowner association zoning, building code, permit, construction, or placement requirements. The warranty is voided by nonconformance with the product's manual, guides, warnings, foundational requirements, or other instructions for assembly and use.

The warranty excludes any defect, failure, or damage arising from unusual or excessive (high or low) temperatures, reflected sun rays, wind, or other weather conditions or acts of nature (including without limitation: tornadoes, hail, lightening, hurricanes, floods, fires, blizzards, microbursts, and earthquakes). Ordinary wear and tear, natural aging, discoloration, weathering, sunlight fading, rust, staining caused by mold, mildew, tree sap, damage resulting from wildlife or household pets, and damage resulting from third party products are also excluded.

The warranty is voided by any of the following: exposure of the product to painting, sandblasting (and other abrasives), harsh chemicals, product modifications, product disassembly (other than for authorized repair), industrial or commercial use, misuse, intentional or reckless acts, or use other than normal use intended by the manufacturer.

For all Outdoor Storage Sheds: To be eligible for and maintain warranty coverage, the product must be assembled on a foundation as outlined in the product's assembly manual and properly anchored to such foundation. Also, at any time the unit is not in use, the doors must be closed and latched with the latching devices supplied and secured with a padlock. Left and right doors may have different latches, and both must be engaged. Failure to comply will void the warranty. Provided the previously mentioned requirements are met, all CRAFTSMAN outdoor storage sheds are rated to withstand winds up to 65 mph.

THE MANUFACTURER MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, CONCERNING THE PRODUCT OR ITS MERCHANTABILITY OR FITNESS FOR ANY PURPOSE. IN NO EVENT SHALL CRAFTSMAN BE LIABLE FOR ASSEMBLY, INSPECTION, DISPOSAL COSTS, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR ANY LIABILITY EXCEEDING THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. SOME STATES OR JURISDICTIONS MAY NOT ALLOW CERTAIN WARRANTY EXCLUSIONS OR OTHER LIMITATIONS, SO TO THE EXTENT THESE STATES OR JURISDICTIONS PROHIBIT THEM THEY MAY NOT APPLY.

CRAFTSMAN® is a registered trademark of Stanley Black and Decker, Inc. used under license

© 2018 CRAFTSMAN

Product Manufactured by:

Suncast Corporation | 701 N. Kirk Road Batavia, IL 60510

U.S. & Canada Only

Part No. CMXRSSC7750