

SPORTS AFIELD®

E s t a b l i s h e d 1 8 8 7



H O M E D E F E N S E

QUICK ACCESS BIOMETRIC SECURITY VAULT INSTRUCTION MANUAL FOR SA-HD7-BIO

B I O M E T R I C

IMPORTANT:

Please read this information and follow all safety rules carefully before operating your security vault. Failure to do so will void your warranty.

TABLE OF CONTENTS

IMPORTANT INFORMATION 2

1. REGISTRATION 3

2. UNDERSTANDING YOUR VAULT 4

3. UNBOXING & INSPECTION..... 5

4. INITIAL ENTRY 5

5. BATTERY INSTALLATION 5

6. PLACEMENT AND MOUNTING YOUR VAULT 6

7. PROGRAMMING YOUR FINGERPRINT 9

8. OPENING VAULT WITH PROGRAMMED FINGERPRINT 10

9. PROGRAMMING ADDITIONAL FINGERPRINTS 10

10. TROUBLE SHOOTING 11

11. LOCKOUT MODE/TAMPER PROTECTION..... 12

12. CLEARING ALL RECORDED FINGERPRINTS 13

13. SILENT ENTRY MODE 13

14. MAINTAINING HINGES AND INTERNAL MECHANISMS 13

WARRANTY 14

DISCLAIMER - READ BEFORE VAULT SETUP

PLEASE READ THIS INFORMATION CAREFULLY BEFORE OPERATING YOUR SPORTS AFIELD VAULT.

DO NOT LOCK THIS MANUAL OR THE OVERRIDE ACCESS KEYS IN YOUR VAULT.

- Thank you for choosing a Sports Afield vault to protect your valuables. We are committed to securing, organizing and protecting your most important documents, valuables and keepsakes.
- If you experience problems or challenges with your vault, please contact us. Many issues can be quickly resolved without the product being returned.

Contact Customer Service at cs@saproducts.com or (888) 792-4264

SAFETY

- Be sure to keep backup keys stored in a safe place away from unauthorized users
- Do not put anything in your vault that will put pressure against the door when it is closed.

FIREARM STORAGE

- If you choose to utilize this vault to store a firearm always follow proper firearm and local laws when storing a weapon.
- SA Consumer Products strongly recommends that you do not store loaded firearms.
- Always follow the firearm safety rules set out by the firearm's manufacturer.
- Store ammunition separately from valuables.
- A Sports Afield vault or any other firearm storage device cannot take the place of other safety procedures including advising children of the dangers of firearms.
- SA Consumer Products and its distributors of the Sports Afield vaults do not recommend, suggest, advise, promote, or otherwise condone the ownership or use of firearms. We believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision.

1. REGISTRATION

Register your vault at www.saproducts.com

By registering your Sports Afield vault we will be able to expedite and address any problems or challenges you may have which would otherwise require a notary letter and proof of payment.

REGISTRATION INFORMATION

The information you record onto this page will be required in the event you cannot access the contents of your Sports Afield vault. Please fill out all the required information below and retain for your records and safe keeping.

PLEASE HAVE THIS INFORMATION READY PRIOR TO CALLING FOR TECHNICAL ASSISTANCE AT:

Contact Customer Service at cs@saproducts.com or (888) 792-4264

PURCHASE DATE:

PURCHASE PRICE (BEFORE TAX):


MODEL NUMBER:

SERIAL NUMBER:

RETAILER NAME:

KEY NUMBER (IF APPLICABLE):

2. UNDERSTANDING YOUR VAULT

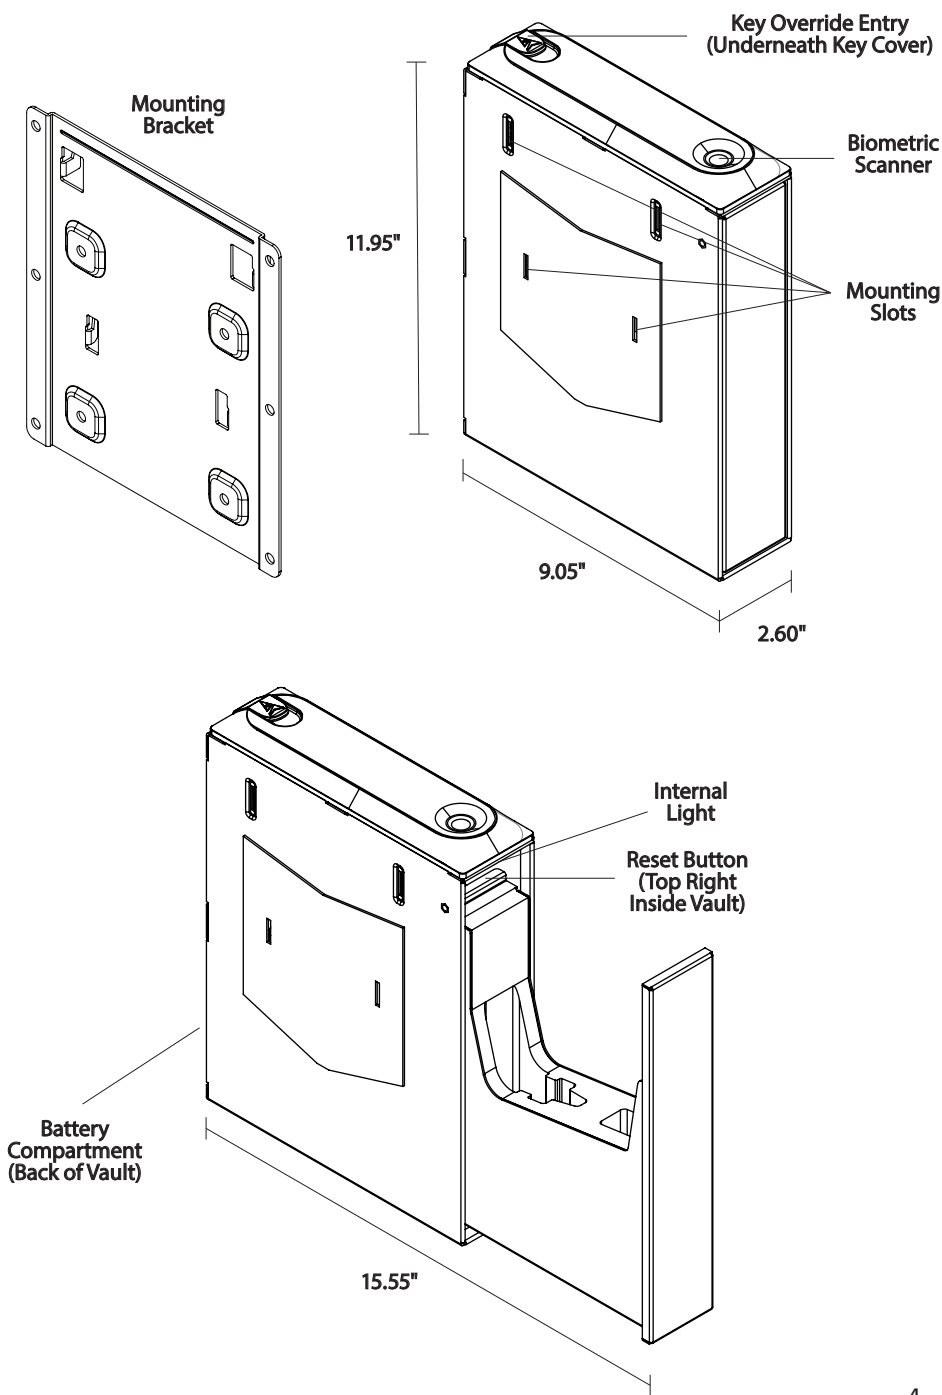


3. UNBOXING & INSPECTION

- Make sure to inspect your vault for shipping damage before accepting delivery. If you find any damage, please contact the delivery company (or carrier) immediately.
- Any damage not noted upon delivery must be reported within fifteen (15) days or there will be no recourse. Any noted damage at the time of delivery must be resolved with the delivery company and/or retailer. Shipping damage is not warrantable by SA Consumer Products.

4. INITIAL ENTRY


1. While unboxing your vault, you will find your manual, mounting bracket, hardware and your backup keys. These keys will be used for initial entry into your vault.

Step 1

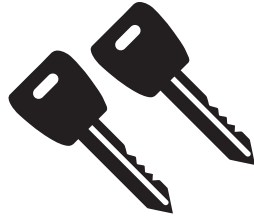

2. Open the safe using one of your backup keys via the keyhole at the back of the safe. Open keyhole cover, push key in and rotate counter clockwise to open safe.


Step 2

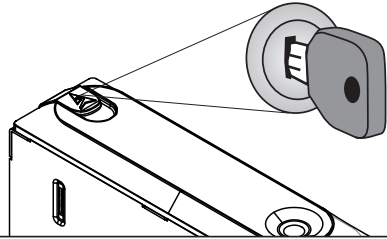

5. BATTERY INSTALLATION

1. Locate the battery door at the back of the safe and open by pressing the tab at the top, allowing the door to open.


Step 1

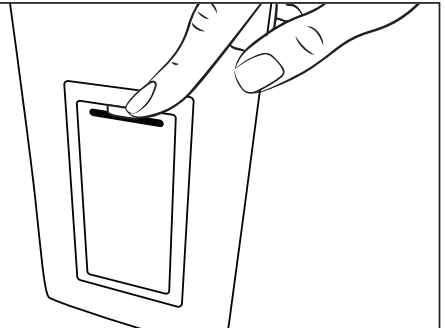

5. BATTERY INSTALLATION (Continued)


2. Remove the empty battery tray from the compartment and insert the batteries in the correct position.

WARNING: The batteries must be inserted with the correct polarity. Exhausted batteries must be removed from the product and discarded safely. Do not mix old and new batteries. Do not mix standard or heavy duty batteries. Do not use rechargeable (nickel – cadmium) batteries.

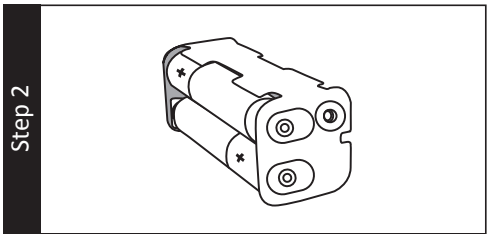

3. Turn the battery pack over to align the notch cut out on the battery tray to the ridge inside of the battery compartment.

Slide the tray back into the battery compartment. The keypad will beep once when batteries are successfully installed.

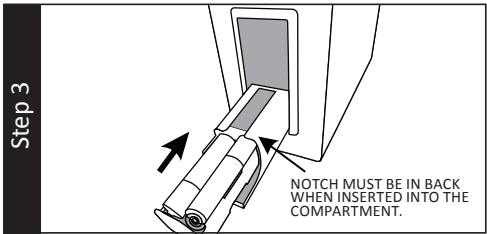

6. PLACEMENT AND MOUNTING YOUR VAULT


Mounting with Provided Hardware

! IMPORTANT: The hardware provided is intended for wood surfaces or hard plastic. If mounting to a different surface, please consult with your local hardware retailer for best hardware and tools to mount your vault.

TOOLS NEEDED:

- MARKING TOOL
- DRILL / HAMMER DRILL
- 3/32" DRILL BIT
- PHILLIPS SCREWDRIVER OR POWER DRILL WITH PHILLIPS BIT
- SAFETY GLASSES
- GLOVES
- OTHER SAFETY EQUIPMENT AS NEEDED


HARDWARE INCLUDED:

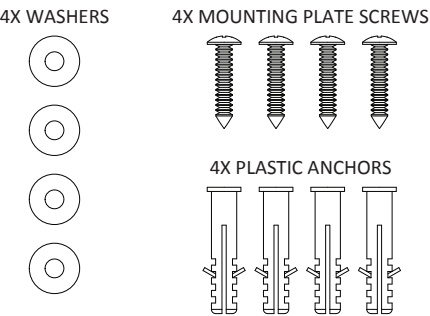

6. PLACEMENT AND MOUNTING YOUR VAULT (Continued)


Planning Your Space

**WARNING: THE BRACKET IS INTENDED TO BE USED WITH THE UNIT STANDING UP**

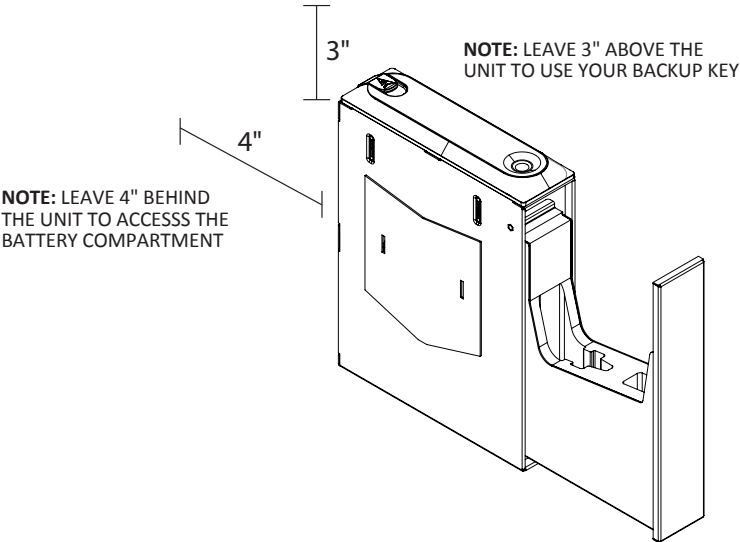


1. Choose the ideal location for the vault on your mounting surface.

Make sure there are no obstructions in front of the unit. The drawer extends about 6.50" from the front.

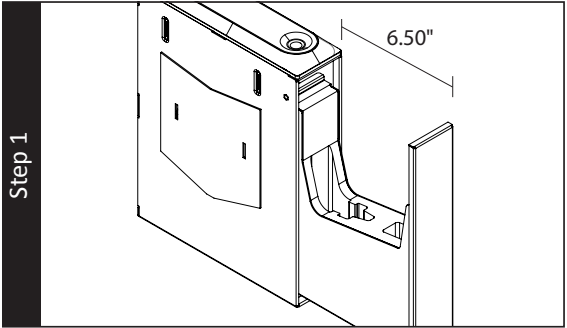


2. Place the mounting bracket on the proposed mounting surface and mark the holes you intend to use. We recommend using at least (4) of the mounting holes.

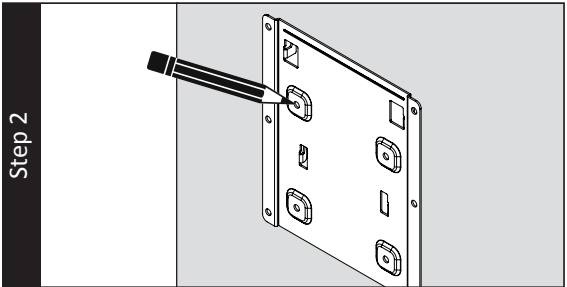


6. PLACEMENT AND MOUNTING YOUR VAULT (Continued)

3. Using a 3/32" drill bit, drill pilot holes at the locations you marked in Step 2.

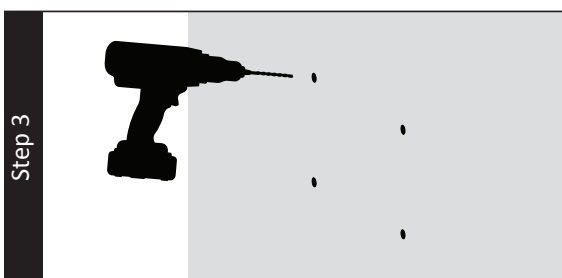


4. Line up the mounting bracket with your pilot holes and use the provided hardware to secure your unit to the surface.

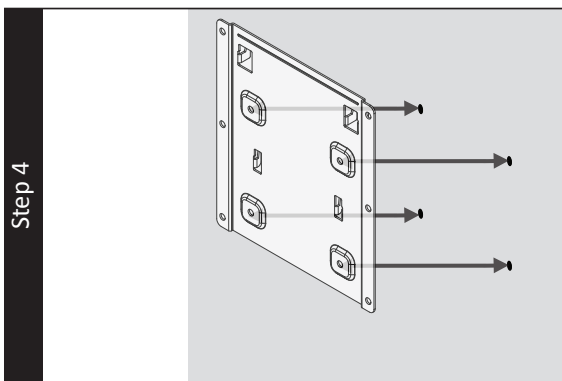

5. With the unit opened, insert the mounting bracket hooks into the rectangular mounting slots on the unit, and press down.

⚠ IMPORTANT: The unit can only be mounted or removed from mounting when it is OPEN.

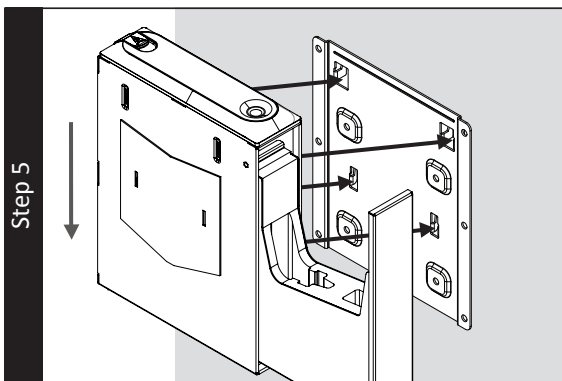


6. Your safe is now mounted and ready for use.

7. PROGRAMMING YOUR FINGERPRINT

1. On the inside of the vault, at the top, you will find a cover for the reset button.


Step 1

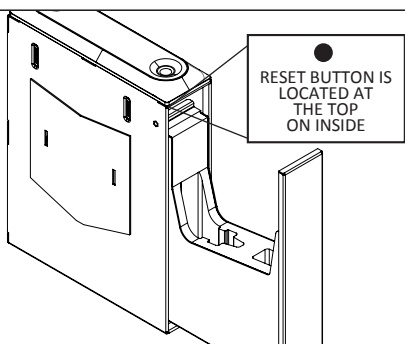

2. Pull the reset button cover down to access the reset button. Press and quickly release the reset button to start the programming process. You will hear one beep and the indicator ring will illuminate purple.

NOTE: Recording mode will time out after 10 seconds of inactivity. If this occurs press reset button and begin again.

Step 2

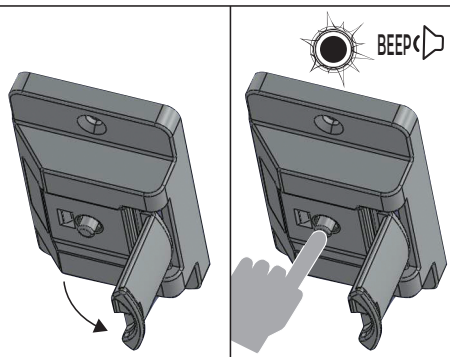

3. **Place and hold** the pad of your finger on the scanner **until it flashes green and beeps one time.**

Remove finger from scanner. Indicator ring will illuminate white.

Step 3

HOLD FOR BEEP



LIFT FINGER



4. **Repeat 3 more times** until there are **2 consecutive beeps** and **2 green flashes.**

⚠ IMPORTANT: Be sure to use the same finger for each recording sequence.

NOTE: Close reset button cover when finished programming.

Step 4



2 BEEPS + 2 GREEN FLASHES = SUCCESS!

8. OPENING VAULT WITH PROGRAMMED FINGERPRINT

With keys in hand, close and lock the door.

Place and hold the **programmed** finger on the scanner and indicator ring will illuminate green and you will hear one beep. **The vault will slide open.**



If your print is not accepted: you will see 5 red flashes with 5 beeps. This means the scanner did not read your fingerprint (try again).

⚠ IMPORTANT: If your fingerprint repeatedly fails, please return to section 7 to reprogram your fingerprint




9. PROGRAMMING ADDITIONAL FINGERPRINTS

When accessing your vault quickly, there is a chance you may touch the scanner with a part of your finger that you have not registered before. For this reason, we recommend programming additional areas of your fingerprint to ensure fast and reliable entry to your vault.

INDIVIDUALLY MAPPING ALL ZONES OF YOUR FINGERPRINT WILL ENSURE A RELIABLE READING BY THE SCANNER.

To ensure each programming sequence is properly captured, it needs to read the exact same place on your finger four times in a row, once successful you can move onto the next zone of your fingerprint. This counts as one programmed fingerprint of 100 fingerprints this unit can keep in memory.

Once programming sequence has been successfully completed, you can move onto the next zone of your fingerprint.

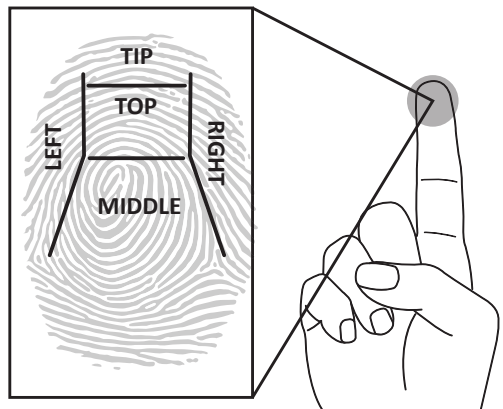

9. PROGRAMMING ADDITIONAL FINGERPRINTS (Continued)

Press the reset button and follow Step 7 instructions again, for each fingerprint zone you would like to program.

If you experience any problems reading your fingerprint, including inconsistent readings, note the area of your fingerprint that doesn't work properly, and specifically re-program that area.

This scanner will hold up to 100 different fingerprints.

HOLD FOR BEEP



LIFT FINGER



2 BEEPS + 2 GREEN FLASHES = SUCCESS!

10. TROUBLE SHOOTING


In the event that you run into issues with programming and accessing your vault, please read through this section for answers to your questions.

PROBLEM	SOLUTION
YOUR PROGRAMMED FINGERPRINT IS NOT READING AT ALL TIMES	Make sure batteries are fresh. We suggest high grade alkaline. Do not mix old and new batteries. Do not use rechargeable batteries.
	Make sure you are placing the same part of your finger print on the scanner that was used for programming. If not, make note of the area that is not scanning and program that area specifically.
	Placing a portion of a fingerprint on the scanner that has not been programmed can result in an error. We recommend programming multiple areas of each fingerprint.

10. TROUBLE SHOOTING (Continued)

PROBLEM	SOLUTION
YOUR FINGERPRINT IS NOT READING	Make sure to hold down your finger on the scanner instead of tapping, as the scanner needs time to complete the scanning process.
	Fingerprints may lack definition due to excessive dryness. We recommend applying moisturizer or slide your finger print against your forehead before scanning process.
WILL PRESSING THE RESET BUTTON CLEAR THE MEMORY	Pressing and releasing the reset button will not erase fingerprints already recorded. It simply places the scanner in programming mode to allow for additional fingerprints to be programmed. This unit will hold up to 100 unique fingerprints.

Low Battery Indicator

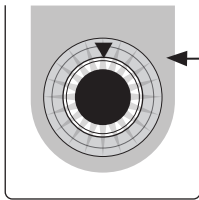

Upon entering, if you notice your indicator light is purple for a few seconds and hear 2 beeps, replace batteries immediately to avoid being locked out of your vault.

NOTE: If scanner is accepting your fingerprint but still not opening, it is highly recommended to replace your batteries and try again.


Locked Out Of Your Vault

In the event you are locked out your vault, use your backup keys to gain access and follow the section 6 Initial Entry instructions.

If you have lost your backup keys, or are still having any difficulties, contact customer service at the number below. Proof of purchase is required to obtain keys.

Contact Customer Service at (888) 792-4264 or cs@saproducts.com

11. LOCKOUT MODE/ TAMPER PROTECTION

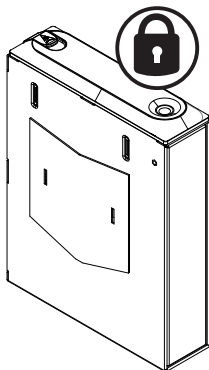


1. Three consecutive incorrect code entries will put the vault in “Basic Lockout” mode. Scanner is deactivated for 30 seconds. Indicator ring will flash red once every 10 seconds
2. After “Basic Lockout” mode has ended, another three consecutive incorrect code entries will result in “Severe Lockout” mode. Scanner is deactivated for 5-minutes. Indicator ring will flash red once every 10 seconds

Once lockout time is over, indicator light will flash green once.


12. CLEARING ALL RECORDED FINGERPRINTS

Hold Reset button. Initially, you will hear one beep. Continue holding reset button for 5 seconds, the indicator ring will flash green two times and beep two times.

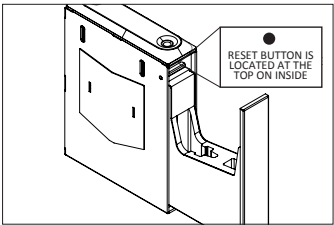

NOTE:
If 100 max fingerprints have already been programmed indicator ring will flash 5 times and beep 5 times. We recommend clearing all programmed fingerprints and starting the programming process over.

13. SILENT ENTRY MODE

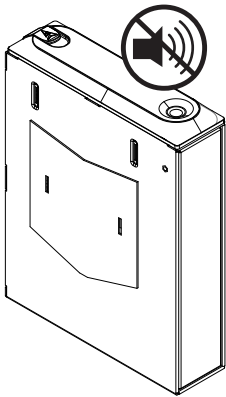

To initiate silent entry mode, hold a programmed finger on the scanner for 5 seconds beyond your fingerprint being accepted. The green indicator ring will turn off and back on, but will not beep, indicating you are now in silent entry mode.

You will not hear any sounds for any functions while the vault is in silent entry mode.

To turn the sound back on, hold a programmed finger on the scanner for 5 seconds beyond your fingerprint being accepted. The green indicator ring will turn off and back on and will beep once indicating you are no longer in silent entry mode.

14. MAINTAINING HINGES AND INTERNAL MECHANISMS

The hinges and internal locking mechanism are permanently lubricated, thus needing no maintenance. Opening the door panel of your vault may void your warranty. Always consult our customer service experts prior to doing so.

THREE YEAR WARRANTY

SA Consumer Products will repair or replace, at their sole discretion, any Sports Afield vault with defective parts, paint or lock for three years of the original owner purchase date.

If SA Consumer Products deems a replacement vault is to be sent, they will pay the freight costs to ship the replacement vault to the original owner.

This three year warranty is limited to the vault and expressly excludes any loss associated with the contents of the vault.

SA Consumer Products reserves the right to receive full evidence of your misfortune, such as a police report and/or homeowner's statement of coverage. This warranty is not valid outside of the United States and Canada.

Proof of registration and copy of sales receipt must be on file at the time of claim. Visit our website at www.saproducts.com to register your vault.

Three year warranty only applies to the original owner of the vault.

SA Consumer Products shall only be responsible and liable when the vault is used in compliance with the directions specified in your new SA Consumer Products owner's manual.

SA Consumer Products requires that specific guidelines be followed for repair. The vault will be repaired in-home if possible (to include parts and labor); however, if factory replacement is necessary (at SA Consumer Products' sole discretion), the replacement will be shipped freight prepaid, curbside delivery.

This warranty is inclusive and is in lieu of any and all other warranties, express or implied. Specifically excluded are the warranties of merchantability and fitness for a particular purpose. This warranty is limited to the vault itself and/or its value and does not include consequential damages of any kind including, but not limited to, the contents in and of the vault.